



**Ford
Bronco 21+ Modular Bumper
20 Inch Light Bar
Installation Instructions**



Heretic

1168 West 500 North Suite 500
Centerville UT, 84014
801-725-4824
Support@hereticstudio.com

Heretic

BEYOND LUMENS

Tools Needed for Install:

Basic tool set

Recommended Items for Install:

Basic Wire Connection Kit

Electrical Tape

Kit Contents: 2x Light Bar Brackets
1x Harness

Step 1: Install the brackets and light bar. Locate the four T-40 bolts on the inside areas of the OEM bull bar. The same bolts will be used if the vehicle does not have the bull bar. Install the brackets loosely followed by the light bar.




Step 2: Route the wiring harness. With the light bar installed, route the end of the harness with the plug down behind the driver side headlight and the over to the light bar harness. Be careful to avoid any hot, sharp, or moving objects.



Continue routing the wiring harness toward the fire wall zip tying the harness along the way. The Upfitter auxiliary wires are bundled up on the harness that runs along the firewall.

Step 3: Connect the harness to the Upfitter wiring. Connect the red wire from light bar harness to the **GREEN/BROWN AUX 2** wire using a wire to wire connection. To connect the black wire, remove the 8mm bolt holding down the factory ground above the aux wire and install the ring terminal around the bolt. Re-install the bolt tightly.

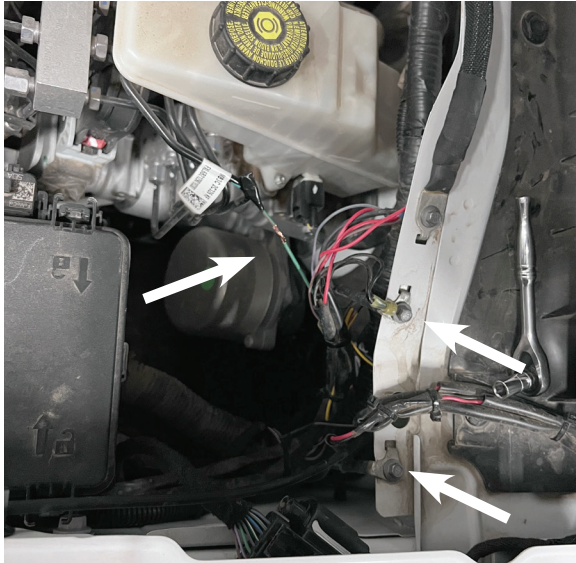

IDENTIFYING THE AUX SWITCH WIRING:

AUX 1	YELLOW	30A
→ AUX 2	GREEN/BROWN	15A
AUX 3	VIOLET/GREEN	10A
AUX 4	BROWN	10A
AUX 5	BLUE/ORANGE	10A
AUX 6	YELLOW/ORANGE	10A

Step 4: With the light bar wired and plugged in, test the functionality. This can be done by turning the vehicle ignition on and flipping the AUX 2 switch. After checking the functionality, tighten the T-40 bolts holding the light bar bracket. Angle the light bar and tighten the nuts holding the light bar to the bracket.

Your install is now complete! Thanks for choosing Heretic!



@hereticstudio

Heretic
BEYOND LUMENS