

Heretic

BEYOND LUMENS

Toyota Tundra 14-Current Behind The Grille 30”



1168 West 500 North Suite 500
Centerville UT, 84014
801-725-4824
Support@hereticstudio.com

Heretic

BEYOND LUMENS

Tools Needed for Install:

Basic tool set

Before starting the installation, we recommend that you disconnect the negative battery terminal. Disconnecting the battery prevents any accidental short-circuiting and any fault codes that may show up from unplugging electrical components.


Step 1: Open the vehicle's hood and remove four 10mm screws and remove two plastic fasteners holding on the grill.




Step 2: If equipped with the front parking sensor, unplug the harness located beneath the panel on top of the grille.



Step 3: To remove the grille, carefully pull the bottom corners with constant force until it unclips. Pull the bumper horizontally away from the front of the vehicle and keep in mind these clips are a bit tough and take a moderate amount of strength and patience. Clip mounting points are indicated with black arrows. Once the grille is removed, please place it in a safe location. Using a 10mm socket wrench, remove the six nuts holding on the inner bumper cross brace. Once the mount is removed, please place it in a safe place.

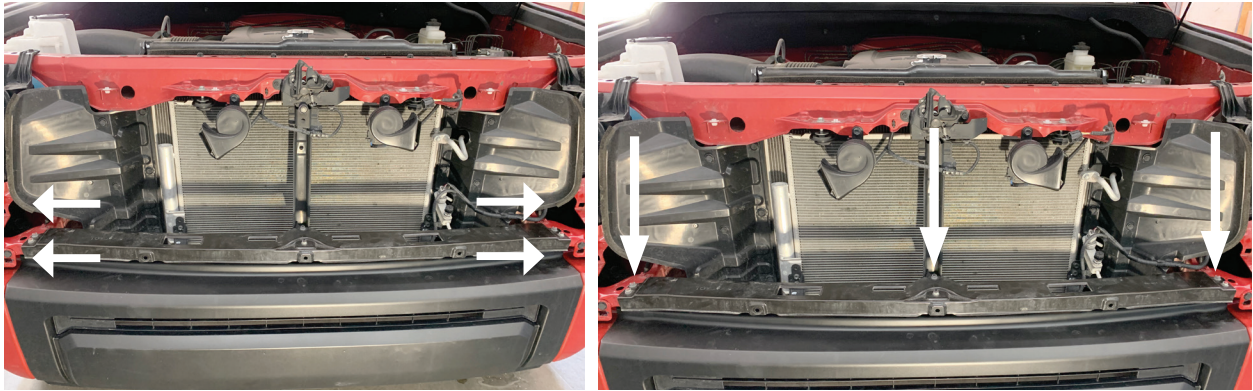

Step 4: Using a 10mm socket wrench or 10mm wrench, remove the six nuts on top of the bumper fascia. Next, remove six 10mm nuts from the fascia's backside, keeping in mind there are three on the left and three on the right. Once these nuts are broken loose, they are effortless to turn by hand. Remove two 10mm nuts on the bottom of the fascia. These nuts can be seen by carefully pulling the fascia away from the vehicle's front and looking up from the bottom. Finally, Release the plastic fasteners holding the fascia onto the skid plate. The fascia should now come away from the vehicle and be placed in a safe location.

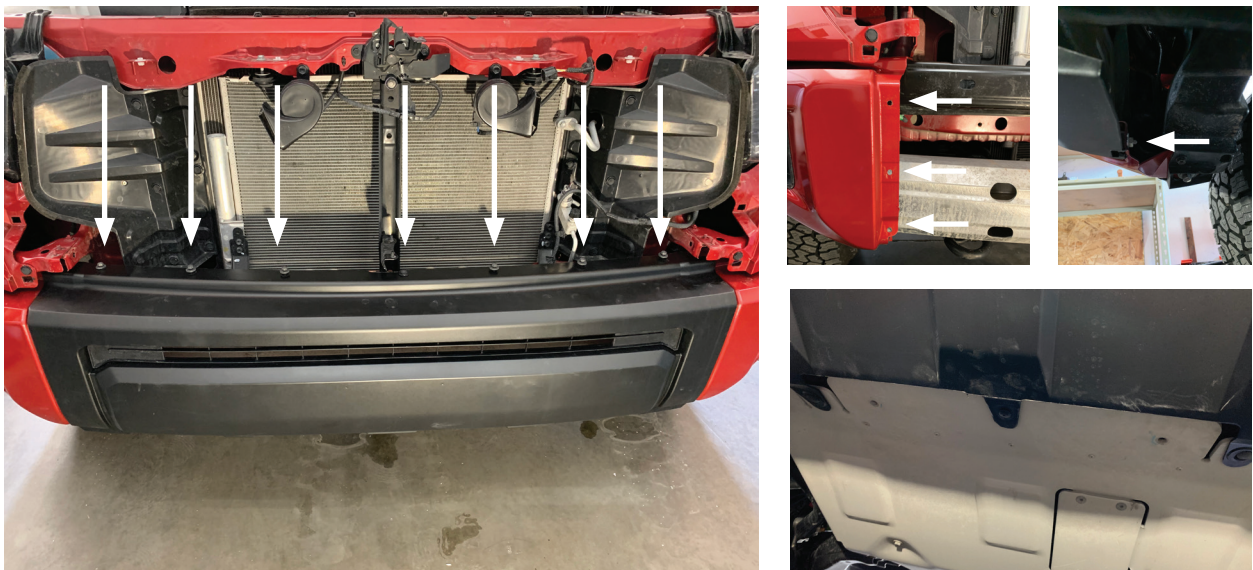

Step 5: With the fascia removed, locate the six 14mm frame bolts, three on each side. These bolts will be removed and reinstalled after the light bar bracket.



Heretic tip

While installing the light bar into the brackets, keep the six 14mm bolts slightly loose. Leaving the bolts loose will allow the light bar to line up to the holes on the bracket better and allow for height adjustment. Don't worry if you make a mistake adjusting the bar. Once the install is completed and the vehicle is put back together, there is enough room to make final adjustments.

Step 6: With the light bar installed, route the wiring, avoiding any hot or moving parts, and use zip ties to keep the wiring in place. Reinstall the removed parts in reverse order, making sure to torque the bolt after driving 100 miles.

Your install is now complete! Thanks for choosing Heretic!



@hereticstudio

Heretic

BEYOND LUMENS

Heretic

1168 West 500 North Suite 500
Centerville UT, 84014
801-725-4824
Support@hereticstudio.com