ALUMINUM 4-PIECE DISH RACK

KTH-6150-86


ASSEMBLY INSTRUCTIONS

IMPORTANT: RETAIN FOR FUTURE REFERENCE, READ CAREFULLY.

For assistance with use, parts and customer service call (800) 431.2133 Monday through Friday, 9AM to 5PM EST, email info@polder.com or visit our website at www.polder.com. Customers in the UK can call +44 (0) 1243 780501 or visit www.polderproducts.co.uk


STEP 1: Insert Drain tray into Aluminum frame

Position drain tray so narrowest section is inserted first into aluminum frame. The drain tray slides into the frame through the center opening at the side opposite the cup holders.

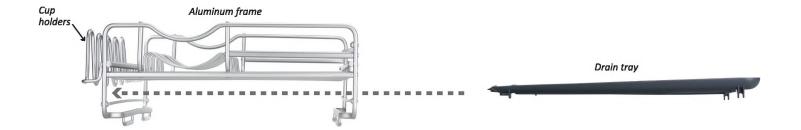

STEP 2: Register drain tray feet on frame

There are two sets of feet on the underside of the drain tray. Be sure these are properly registered on frame. The rear set of feet should straddle the wire while the front set should sit flush up against the wire.

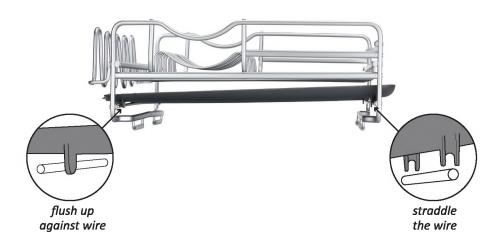

STEP 3: Mount Utensil bin on frame

Be sure to place the Utensil bin on the frame after the drain tray is in place. This will ensure easier assembly.

