

# ZeroFlush Waterless Urinal EnviroSeal BioPur Wonder Wizard Tab Replacement Instructions


**Before commencing replacing of a BioPur Wonder Wizard Tab in a ZeroFlush urinal with an EnviroSeal operating system:**

- Be aware of MSDS sheets
- Always wear surgical or rubber gloves
- Check for visible evidence of any maintenance requirements
- Replacement of the BioPur Wonder Wizard Tab will depend on each individual urinal's usage pattern
- Be aware the Wonder Wizard Tab will slowly dissolve over time with use but will not change colour
- A new Wonder Wizard Tab must be installed into the BioPur holder at intervals not exceeding two months



## Step 1

Unscrew the BioPur holder to completely remove ensuring you place the BioPur holder in the urinal to prevent leakage.

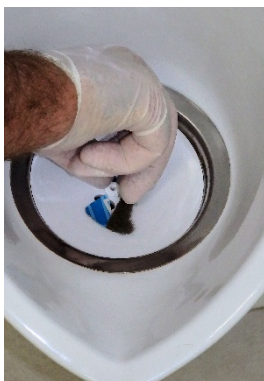

## Step 2

After removal of the BioPur holder remove debris that may have got lodged in the drainage holes normal items such as paper tissue, chewing gum or pubic hair and dispose of in rubbish bag. If necessary pour in a bucket of water to wash through.



### Step 3

Unscrew the BioPur holder holding onto bottom of the holder spin the cover around to remove the BioPur holder from the top cover of the EnviroSeal.



### Step 4

Unscrew the top cover from the BioPur holder to expose what is left of the Wonder Wizard tab if any depending on usage.



### Step 5

Install the new Wonder Wizard Tab into the bottom of the holder then put the remains of the existing Wonder Wizard Tab on top. In urinals that are heavily used you can install two new Tabs if needed.



### Step 6

Reconnect the top cover together with the BioPur holder and screw the two slightly around to lock into place.



### **Step 7**

Screw the BioPur holder back into place ensuring it is firmly fixed in place without over tightening.



### **Step 8**

Pour 1 litre of water over the the BioPur holder to activate the new Wonder Wizard Tab.



### **Step 9**

Wipe clean the inside and outside of the urinal with a soft cloth paper towel then apply Aquatemp Spray & Go urinal cleaner and deodoriser all over the inside and outside of the urinal.



### **Step 9**

Finally wipe clean the entire urinal with a microfibre cloth where you have applied Aquatemp Spray & Go urinal cleaner and deodoriser. This will remove any stubborn stains plus lime scale, calcium, uric salts and other organics from the urinal plus leaving the urinal sparkling clean.