

ZF-101 ENVIROSEAL MODEL PORCELAIN URINAL: INSTALLATION INSTRUCTIONS

Before installing your urinal, ensure:

- There is no trap downstream of the fixture connection point
- The drain line is clear and free flowing
- There is no copper pipe drainage immediately downstream of the urinal

1

Install a 50mm PVC drain at 400mm to centre of pipe from FINISHED floor level. The pipe should extend 50mm through finished wall.



2

Measure 570mm from centre of waste pipe to centre of urinal bracket and mark wall.



3

Install the wall bracket. Ensure the bracket is centred above the drain outlet and level on the wall.



4

Connect the reducing Fernco onto the urinal and tighten, ensuring access to hose clamp after urinal is installed.



5

Carefully hang the urinal on the bracket, levering the Fernco onto the waste pipe outlet. Ensure Fernco does not become pinched.



6

Tighten the Fernco onto the 50mm PVC pipe and perform a water test by pouring a bucket of water into the urinal. Ensure water flows away freely.




7

After checking for leaks, complete installation by securing base of urinal and sealing around the bowl with sanitary grade silicone.



8

Complete installation by commissioning the unit ready for use. Follow the instructions for the commissioning of a ZeroFlush Urinal.

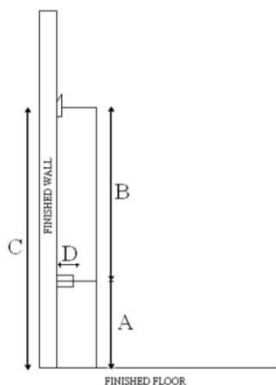

ZF-101 SETUP	
A	400 mm
B	570 mm
C	970 mm
D	50 mm

IN THIS BOX	
	
BioPur Tab Kit	Fernco
	
Trap Key	EnviroSeal
ZF-101 Instructions	

