

## ZF-501 ENVIROSEAL MODEL PORCELAIN URINAL: INSTALLATION INSTRUCTIONS

### Before installing your urinal, ensure:

- There is no trap downstream of the fixture connection point
- The drain line is clear and free flowing
- There is no copper pipe drainage immediately downstream of the urinal

**1**

Install a 50mm PVC drain at 410mm to centre of pipe from FINISHED floor level. The pipe should extend 15mm through finished wall.



**2**

Measure 330mm from centre of waste pipe to centre of urinal bracket and mark wall.



**3**

Install the wall bracket. Ensure the bracket is centred above the drain outlet and level on the wall.



**4**

Connect the reducing Fernco onto the urinal and tighten, ensuring access to hose clamp after urinal is installed.



**5**

Carefully hang the urinal on the bracket, levering the Fernco onto the waste pipe outlet. Ensure Fernco does not become pinched.



**6**

Tighten the Fernco onto the 50mm PVC pipe and perform a water test by pouring a bucket of water into the urinal. Ensure water flows away freely.




**7**

After checking for leaks, complete installation by securing base of urinal and sealing around the bowl with sanitary grade silicone.



**8**

Complete installation by commissioning the unit ready for use. Follow the instructions for the commissioning of a ZeroFlush Urinal.

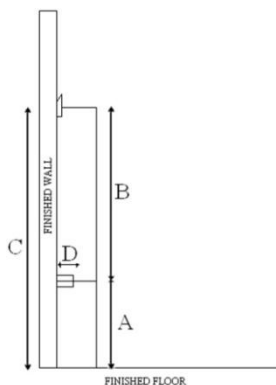

ZF-501 SETUP	
A	410 mm
B	330 mm
C	740 mm
D	15 mm

IN THIS BOX	
	
BioPur Tab Kit	Fernco
	
Trap Key	EnviroSeal
ZF-501 Instructions	

