

### Required tools

TX-10 torx screwdriver  
5 mm stone drill bit (~0.2")  
Spirit level  
Vacuum cleaner (optional)

### Included in this package

10 steel strips 27.5 x 400 mm (1.08" x 15.74")  
20 3 x 30mm TX-10 torx black coated steel screws  
20 5 mm plastic wall plug  
1 5 mm spacer / template  
1 15 mm spacer / template  
370 wooden tiles magnetic  
1 letter and number sticker sheet


- Main dimensions in this documents are in millimetres (inches between parentheses).

- Be careful not to damage the black coating of the screws

- Supplied wall plugs are to be used in brick walls


1

5mm / 0.2"

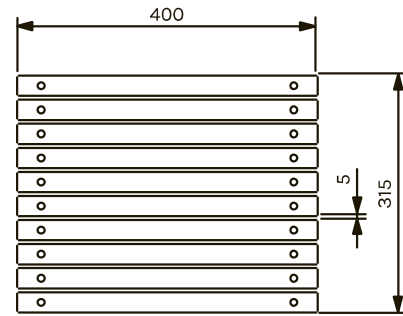


Determine which spacing you want to use. We provide a template for 5 and for 15 mm between the strips (0.2" and 0.6") for a total height of 405 or 315 mm (15.9" and 12.4") respectively.

15mm / 0.6"

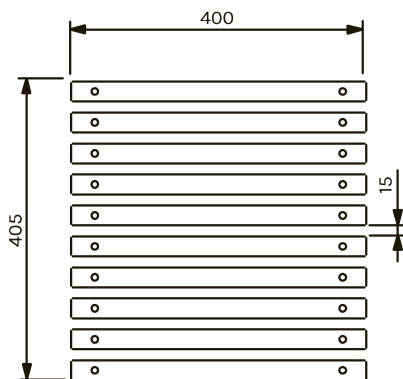


2

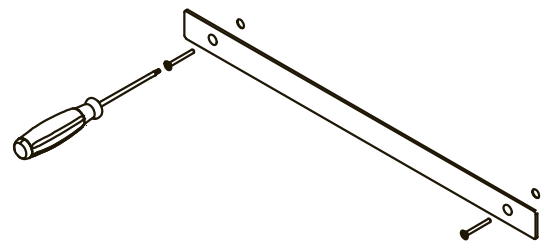


Start with the top strip and mark the holes using a spirit level. Drill holes in the wall at the marked spots and insert the wall plugs. Fasten the screws using a torx (TX-10) screwdriver.

3

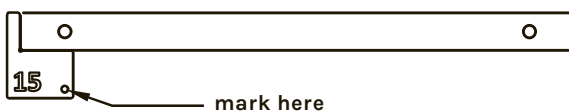

Position the spacing template at the bottom corner of the strip. Using the template, mark the location of the holes on both sides of the strip.

4

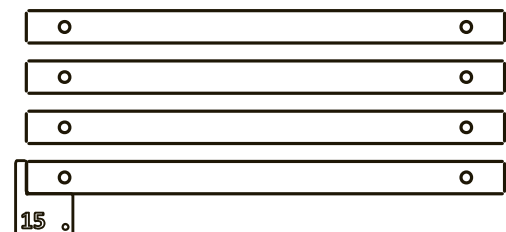

Drill holes at the marked spots and attach the strip. Repeat step 3 until all 10 strips are mounted to the wall. Done! You can now place the magnetic wooden tiles on the strips.