


## Bathroom Cabinet Installation Instructions

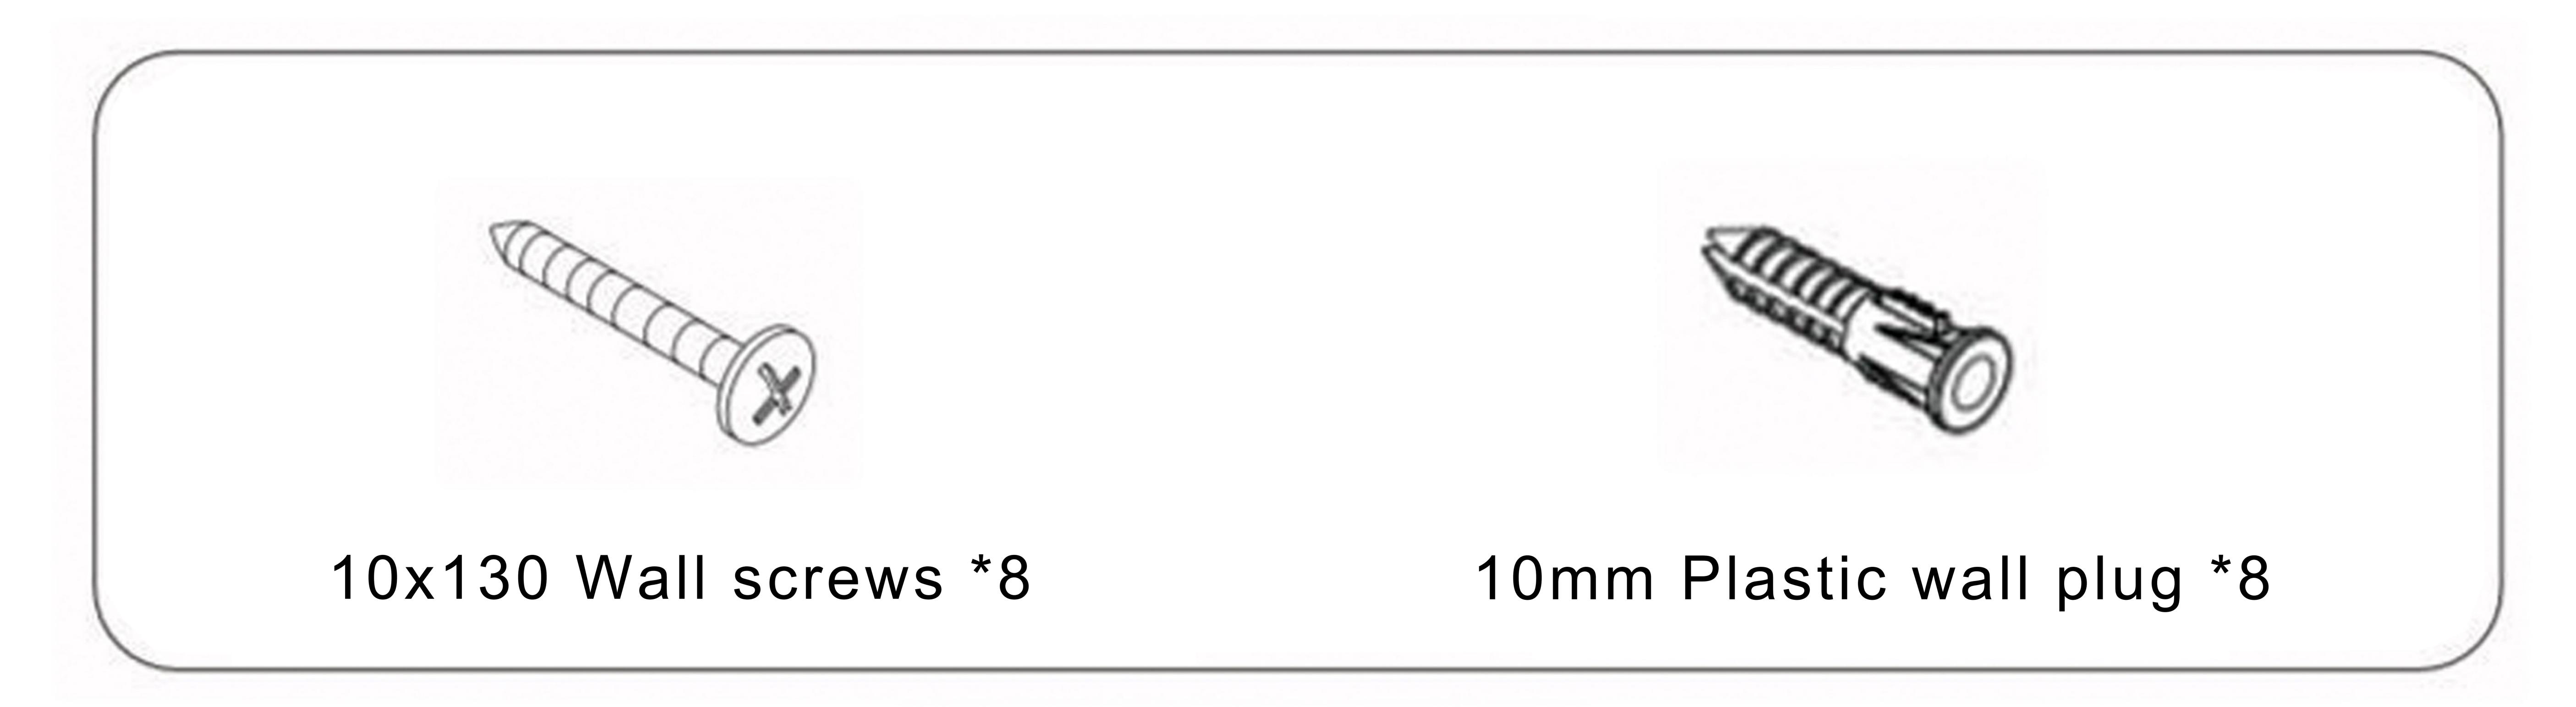


1. Prepare tools and check the level of the wall

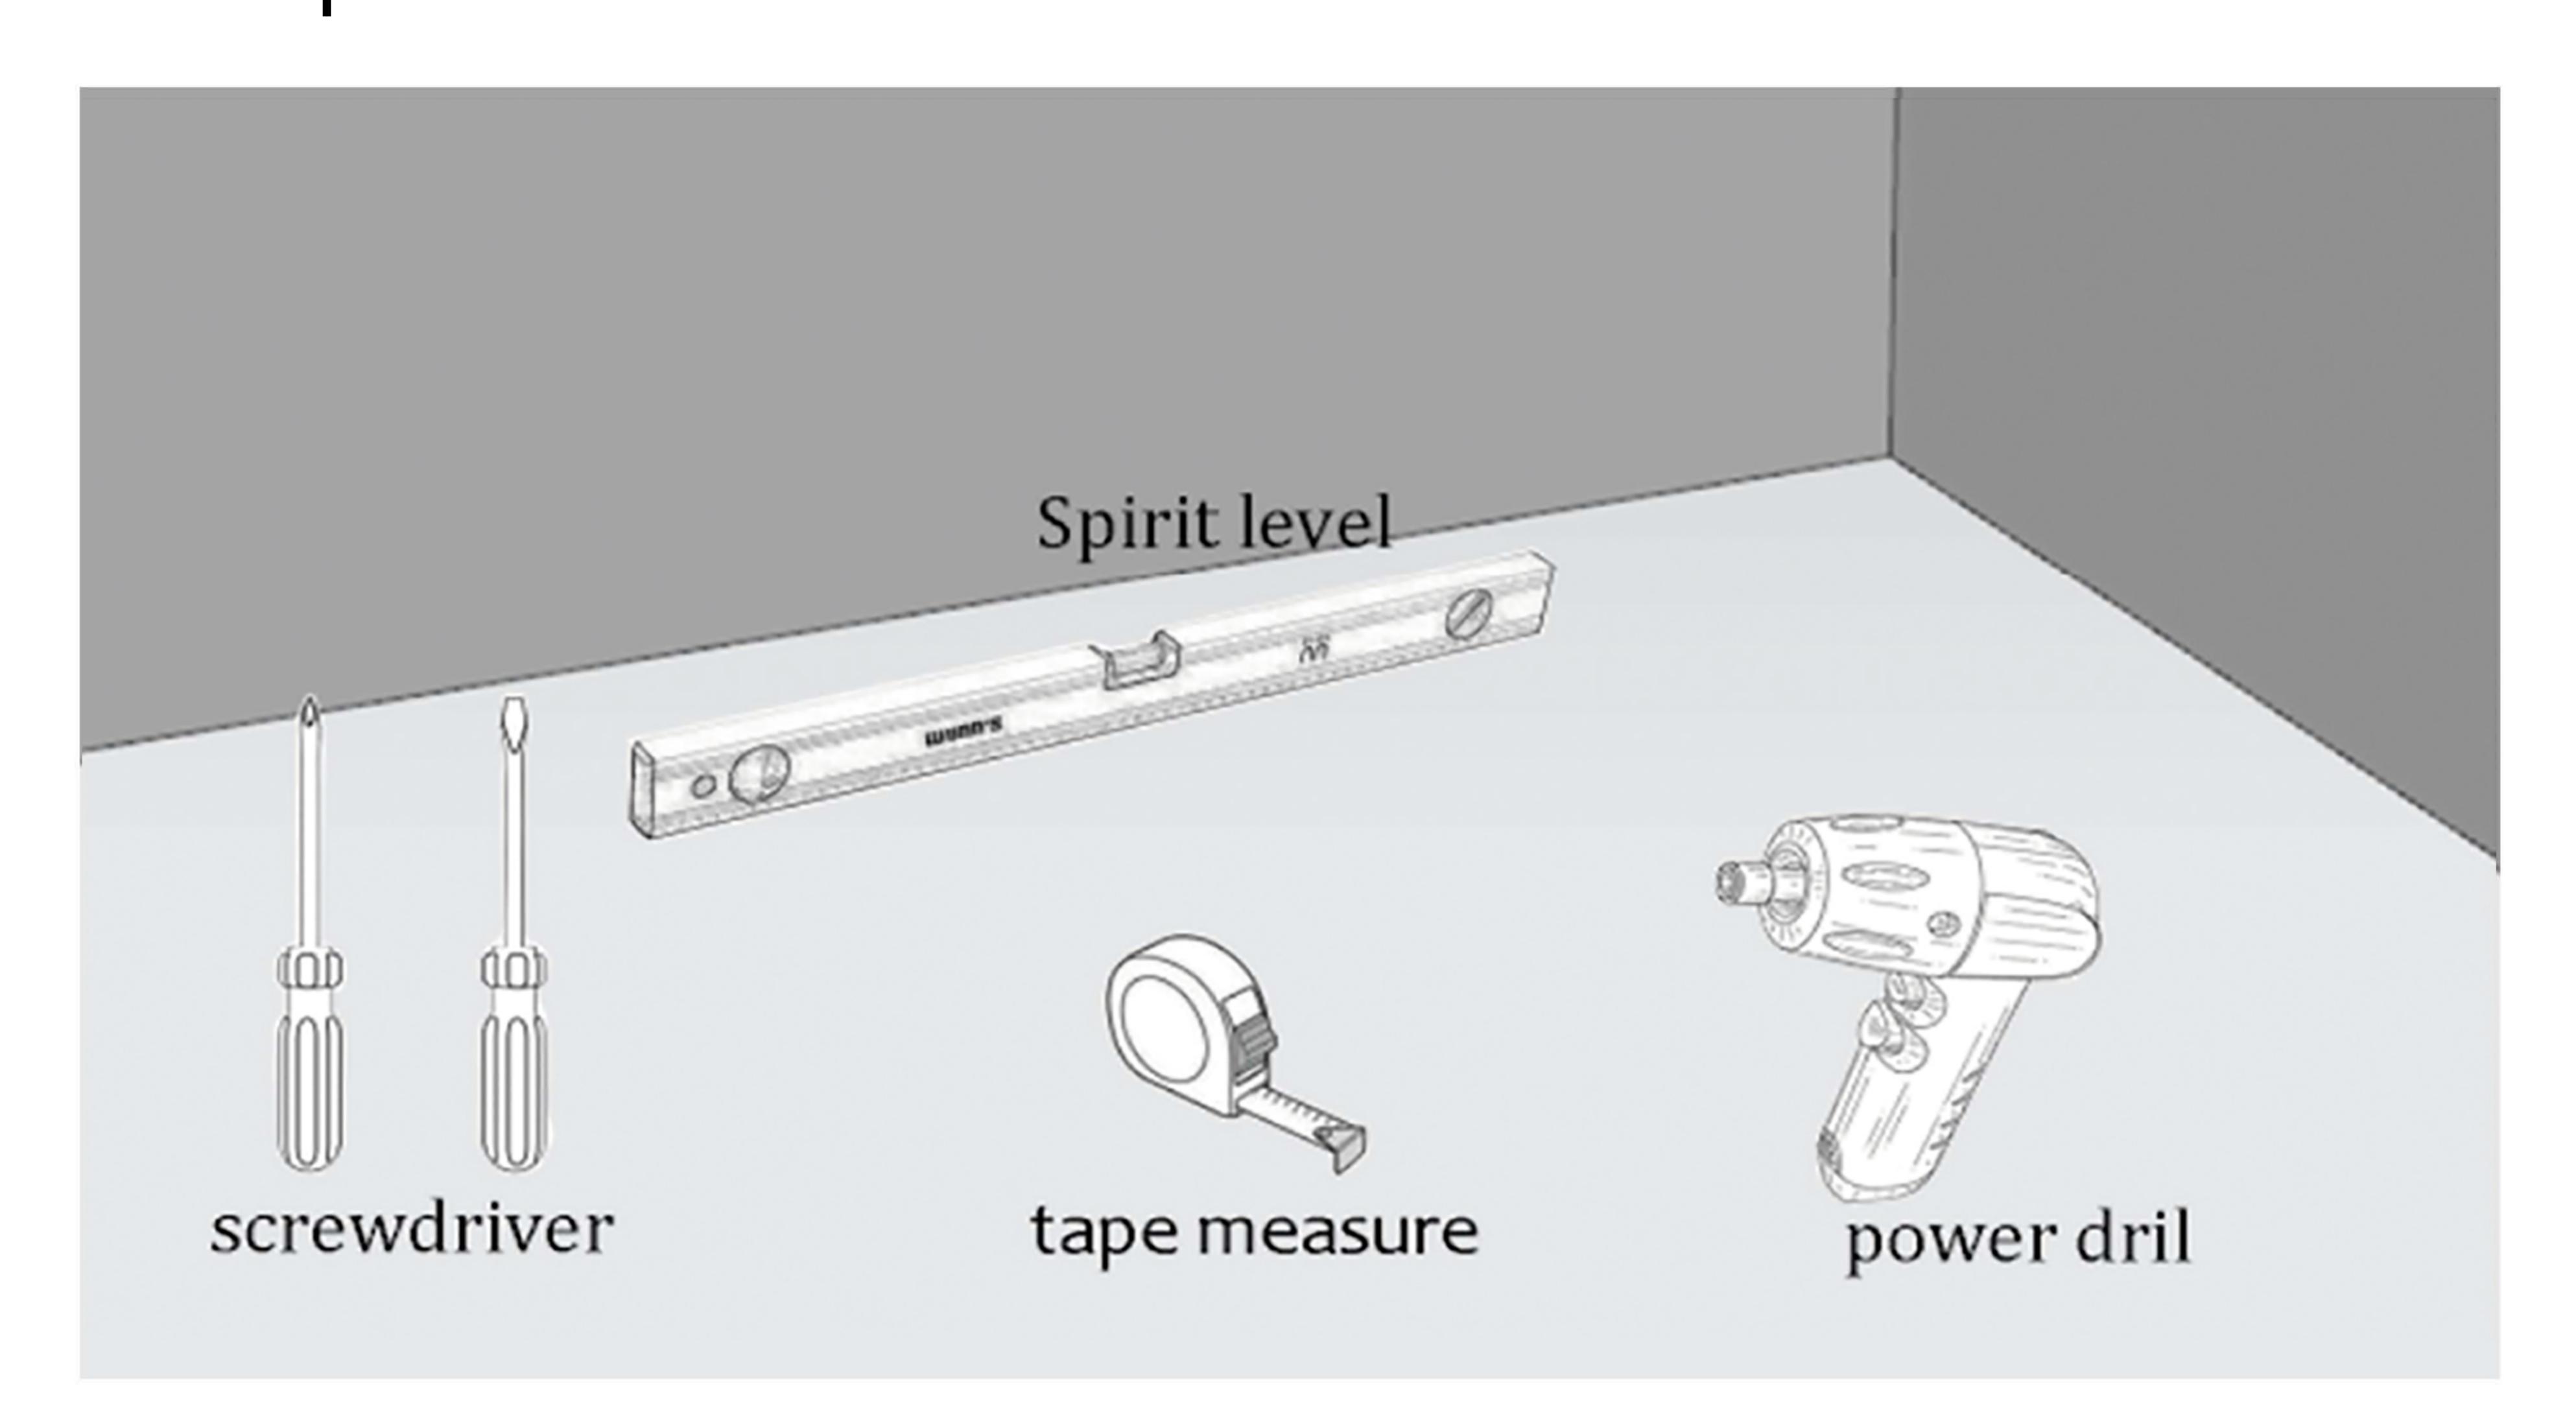


3. Confirm the installation position, use a spirit level to confirm whether the installation holes are at the same level, and then use an power drill to make holes on the wall.

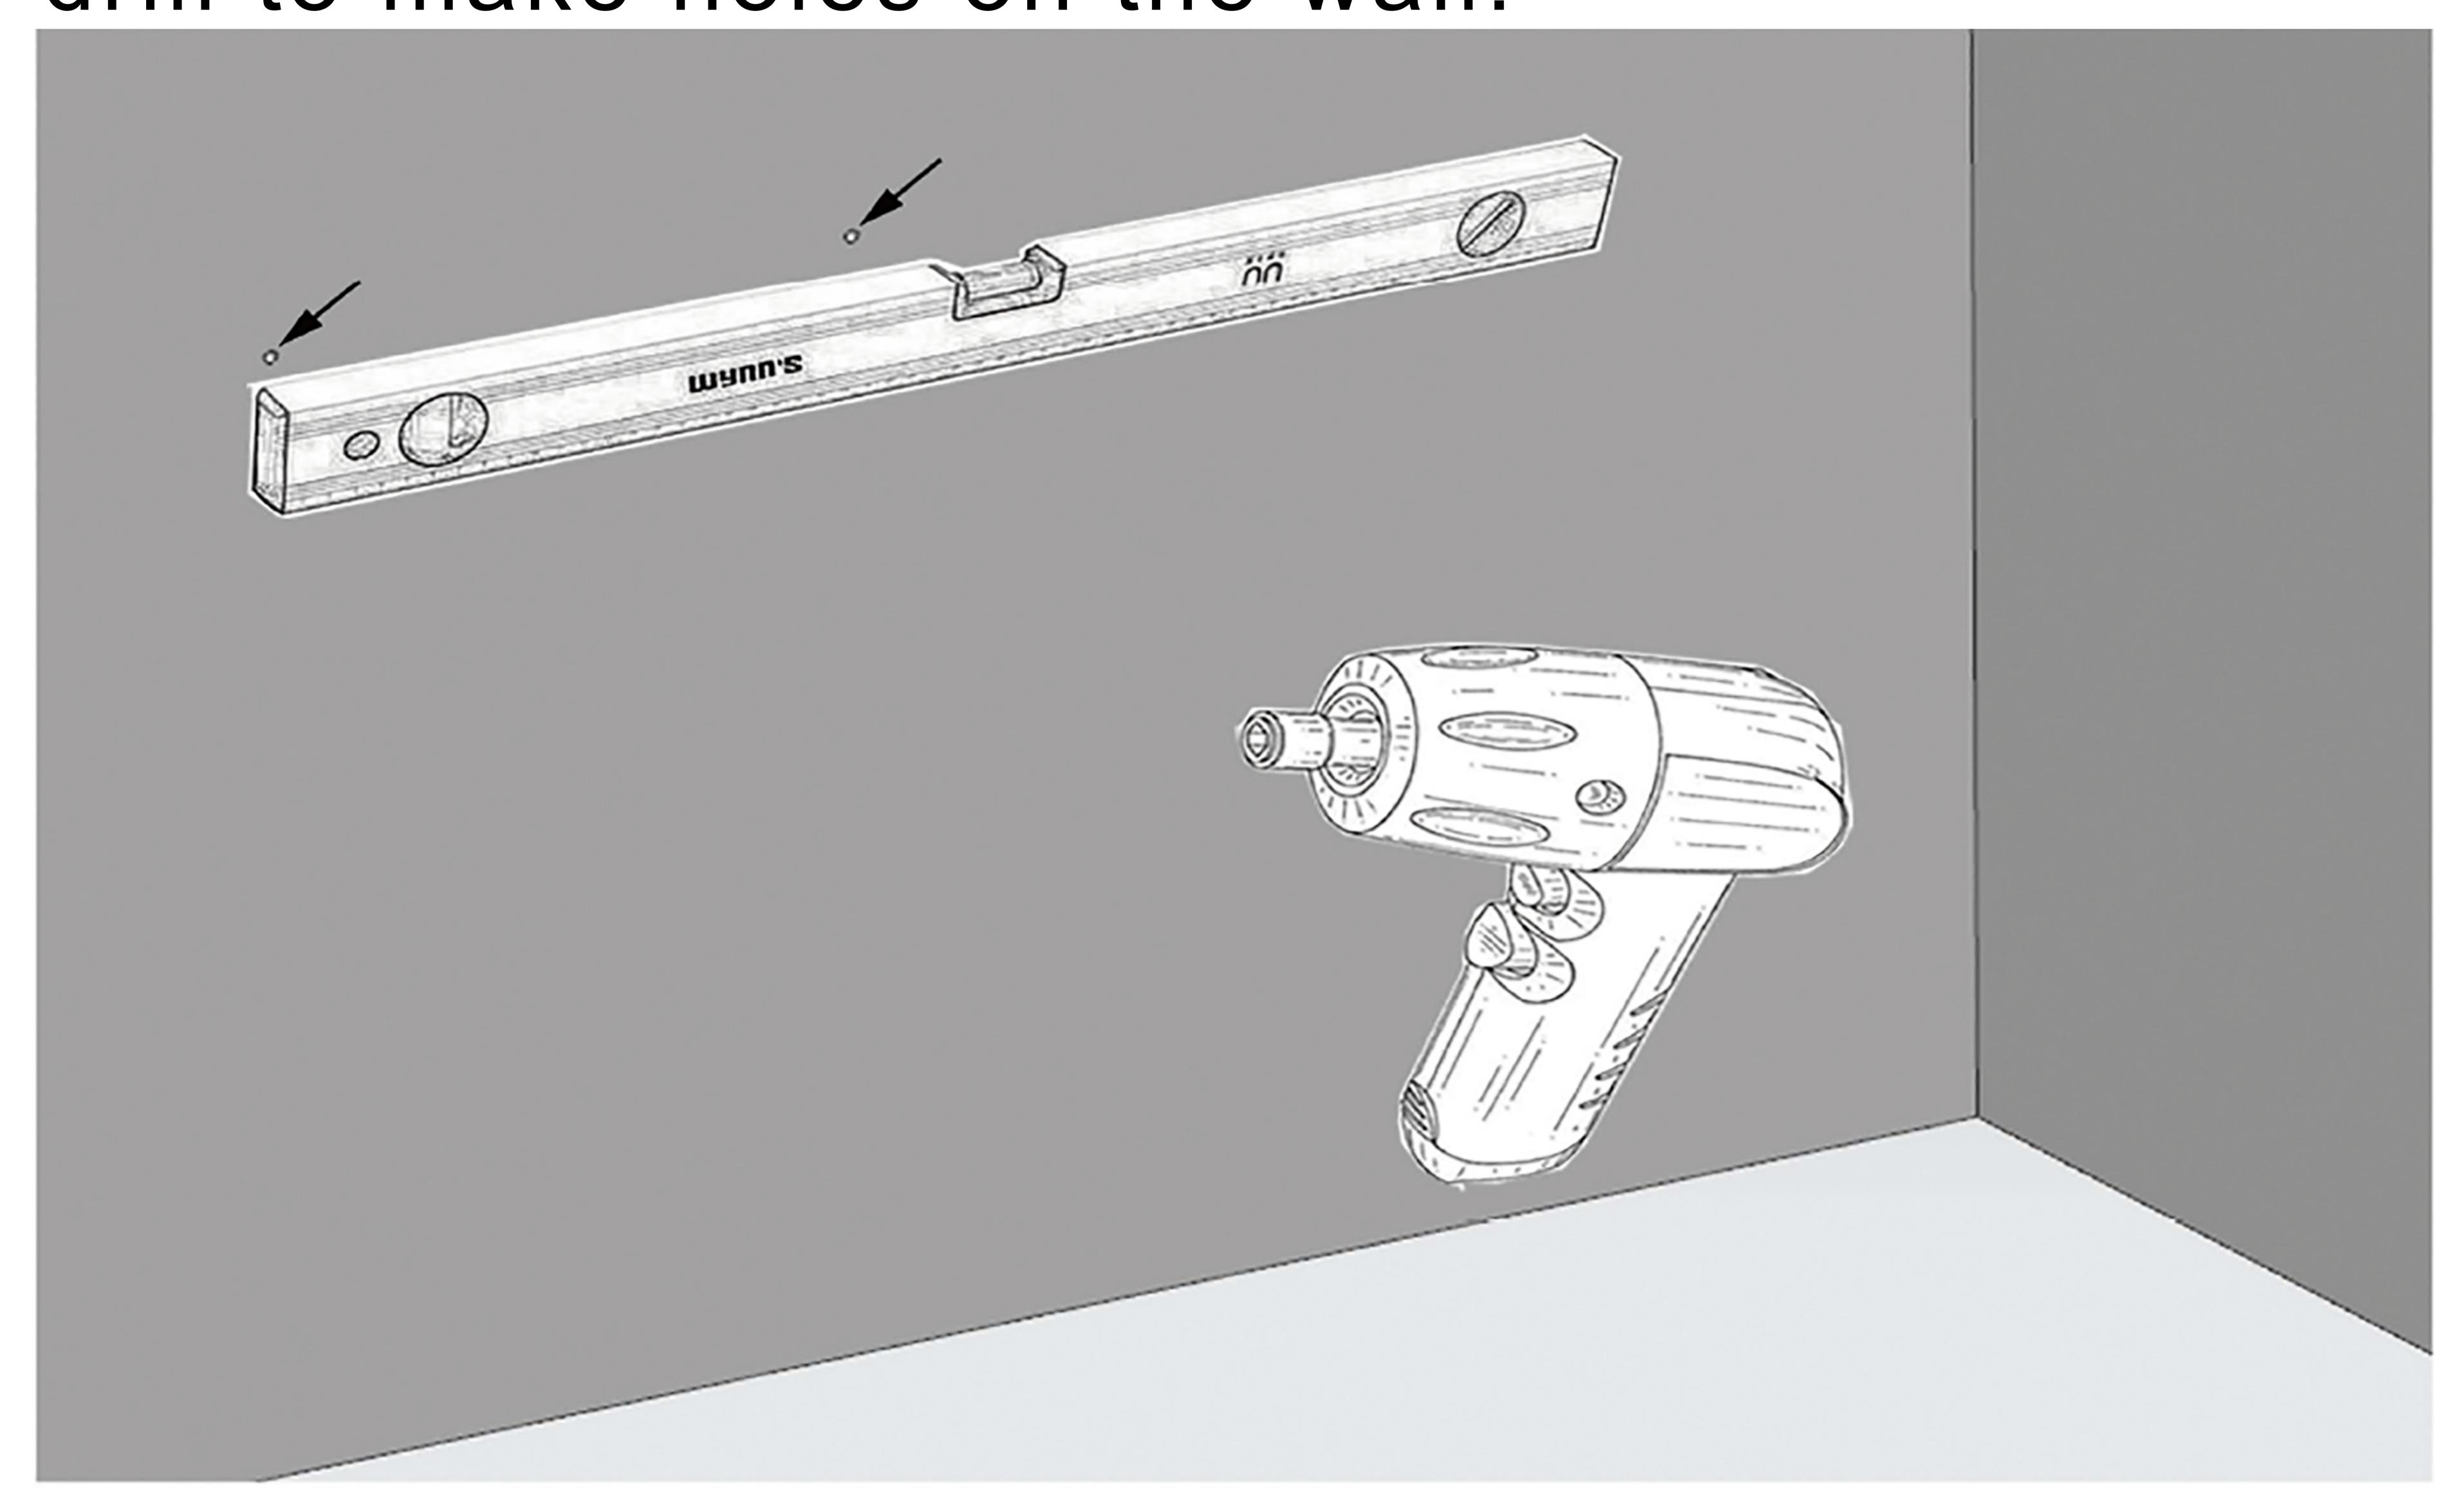


5. Put the wash basin on top of the bathroom cabinet and align it with the four sides of the bathroom cabinet.

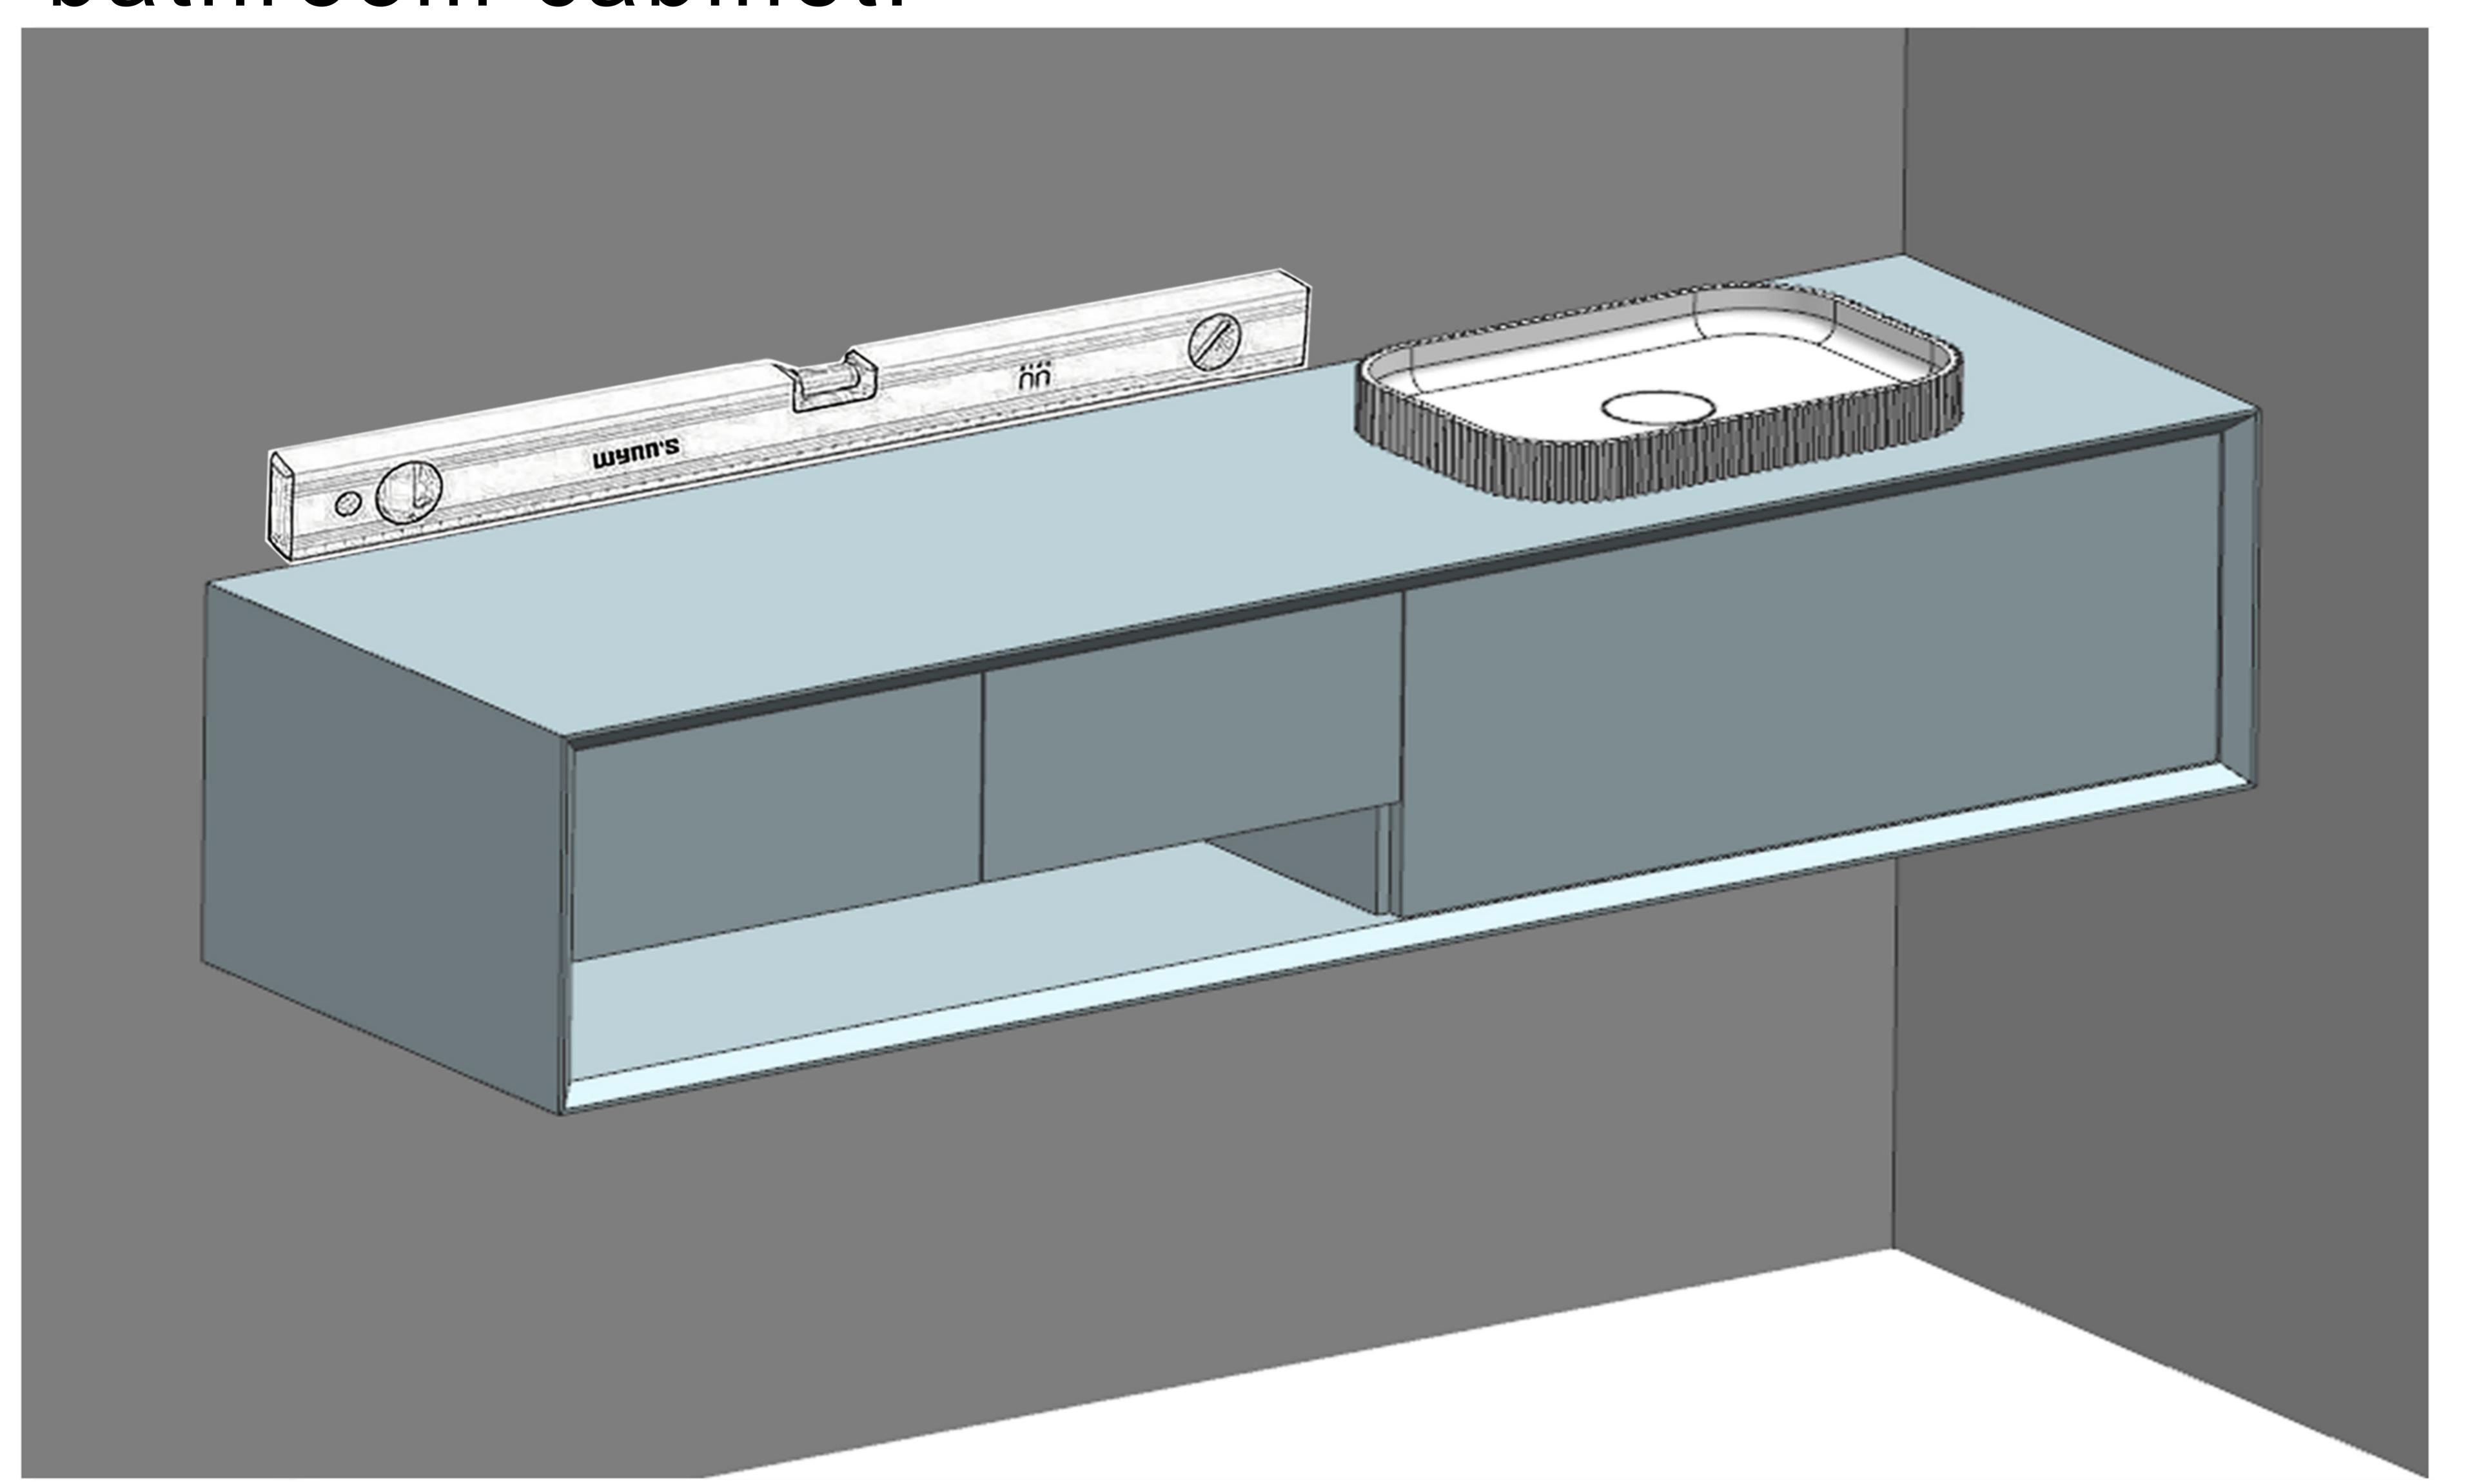

2. Unpacking and taking out the product

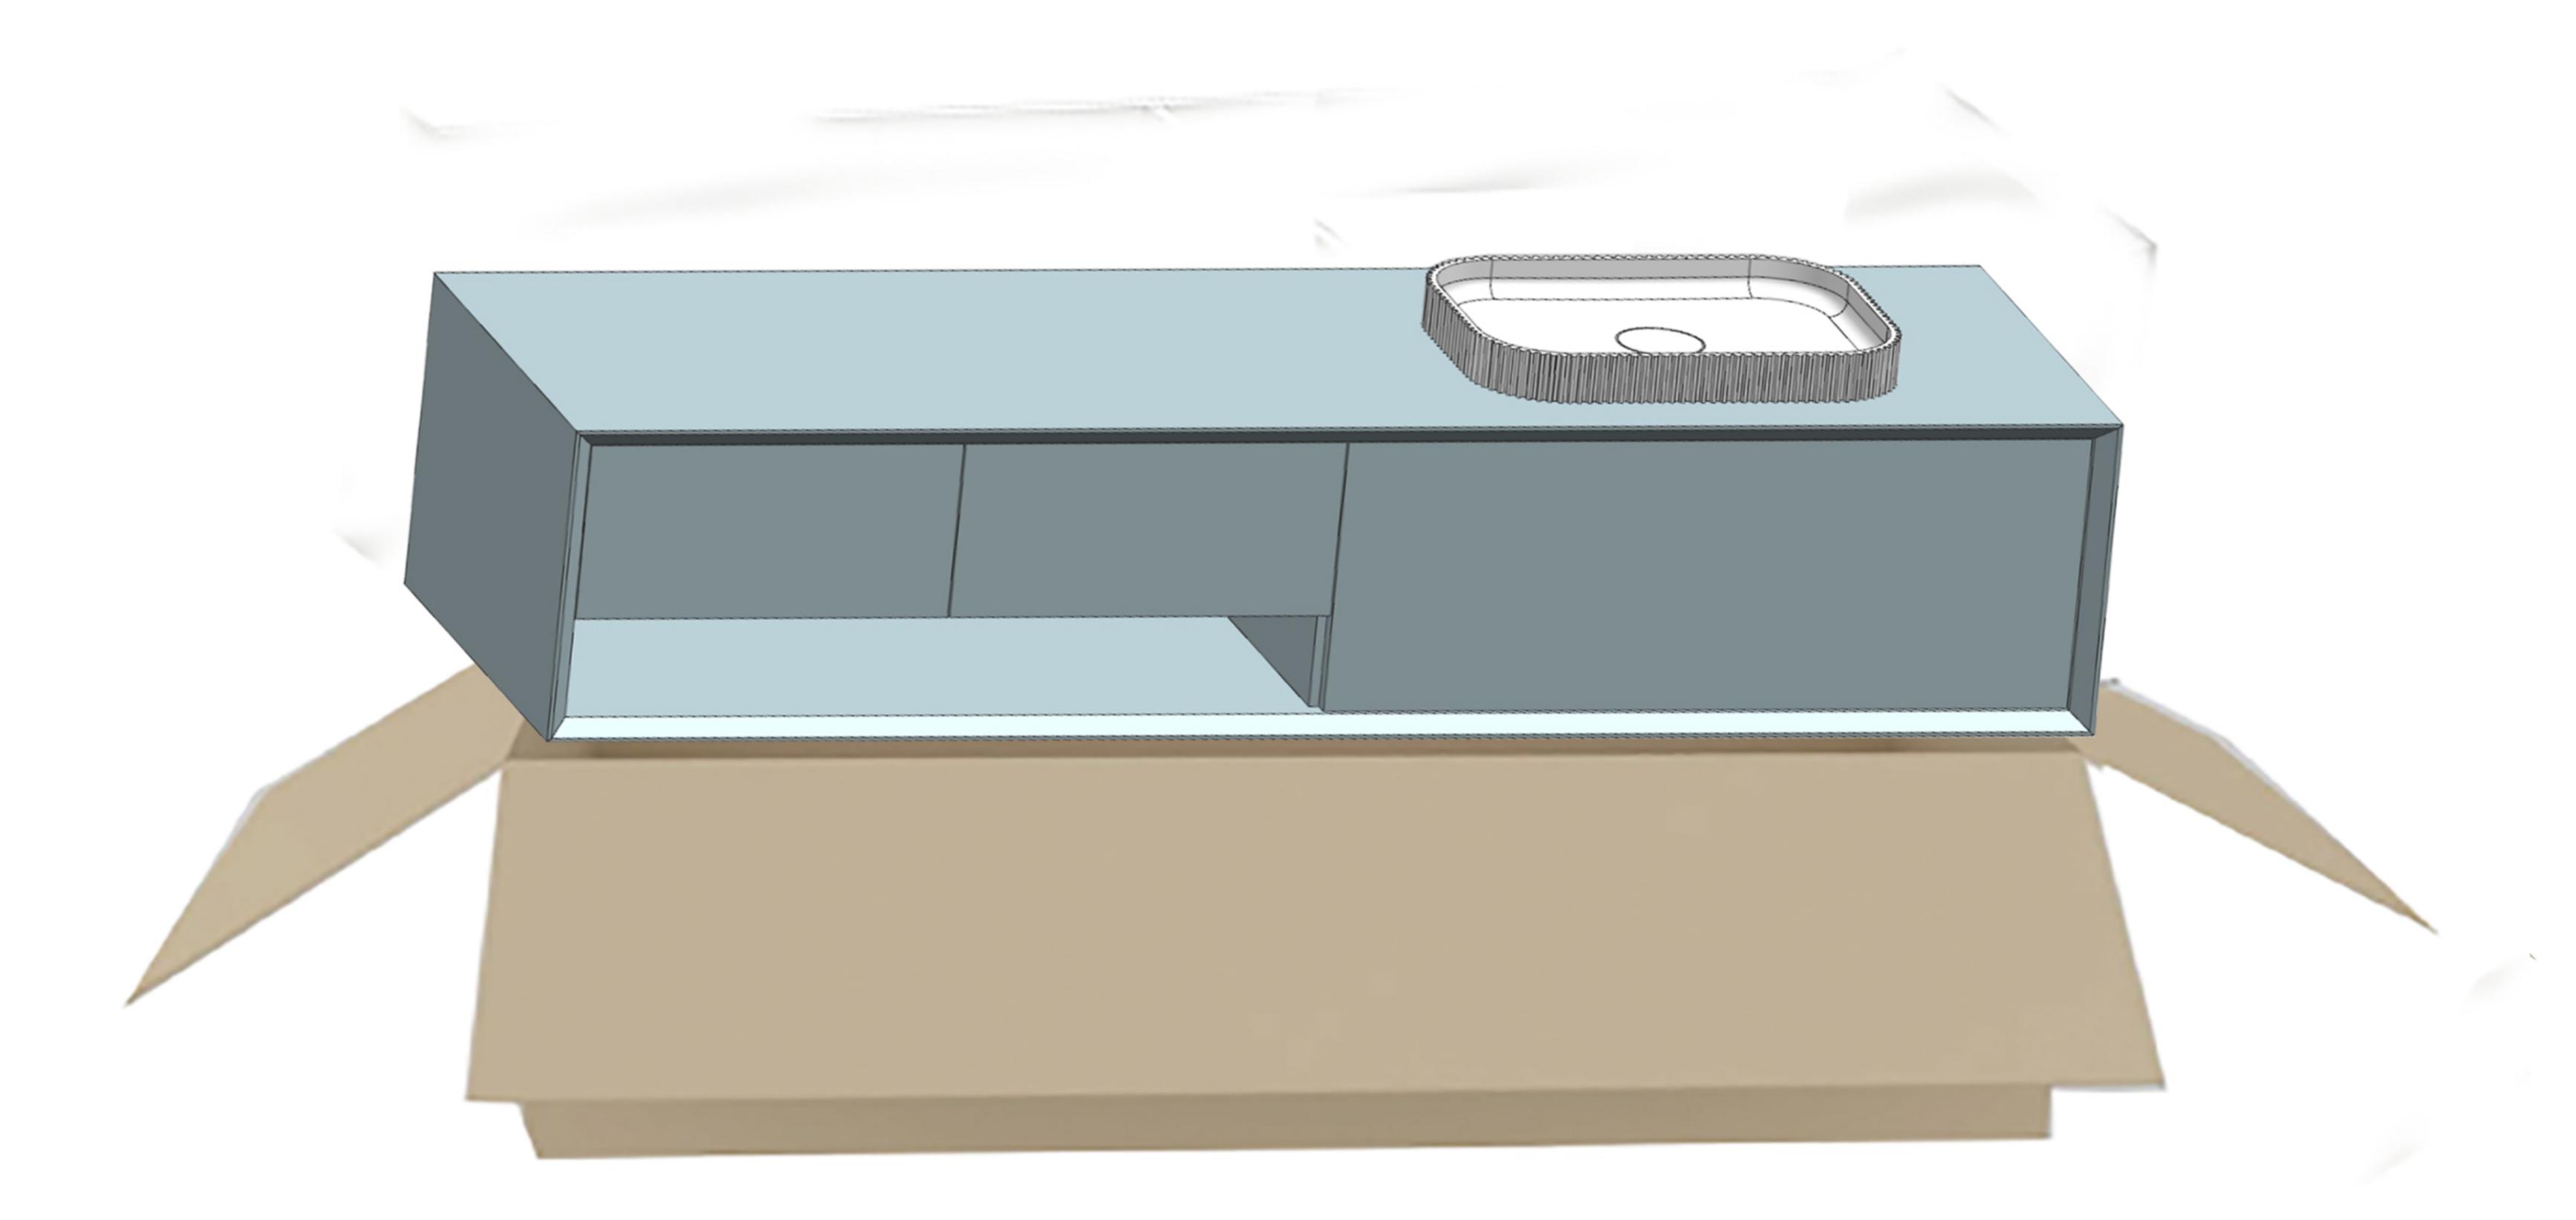

4.Install the bathroom cabinet and tighten the screws with a screwdriver to fix it horizontally on the wall.

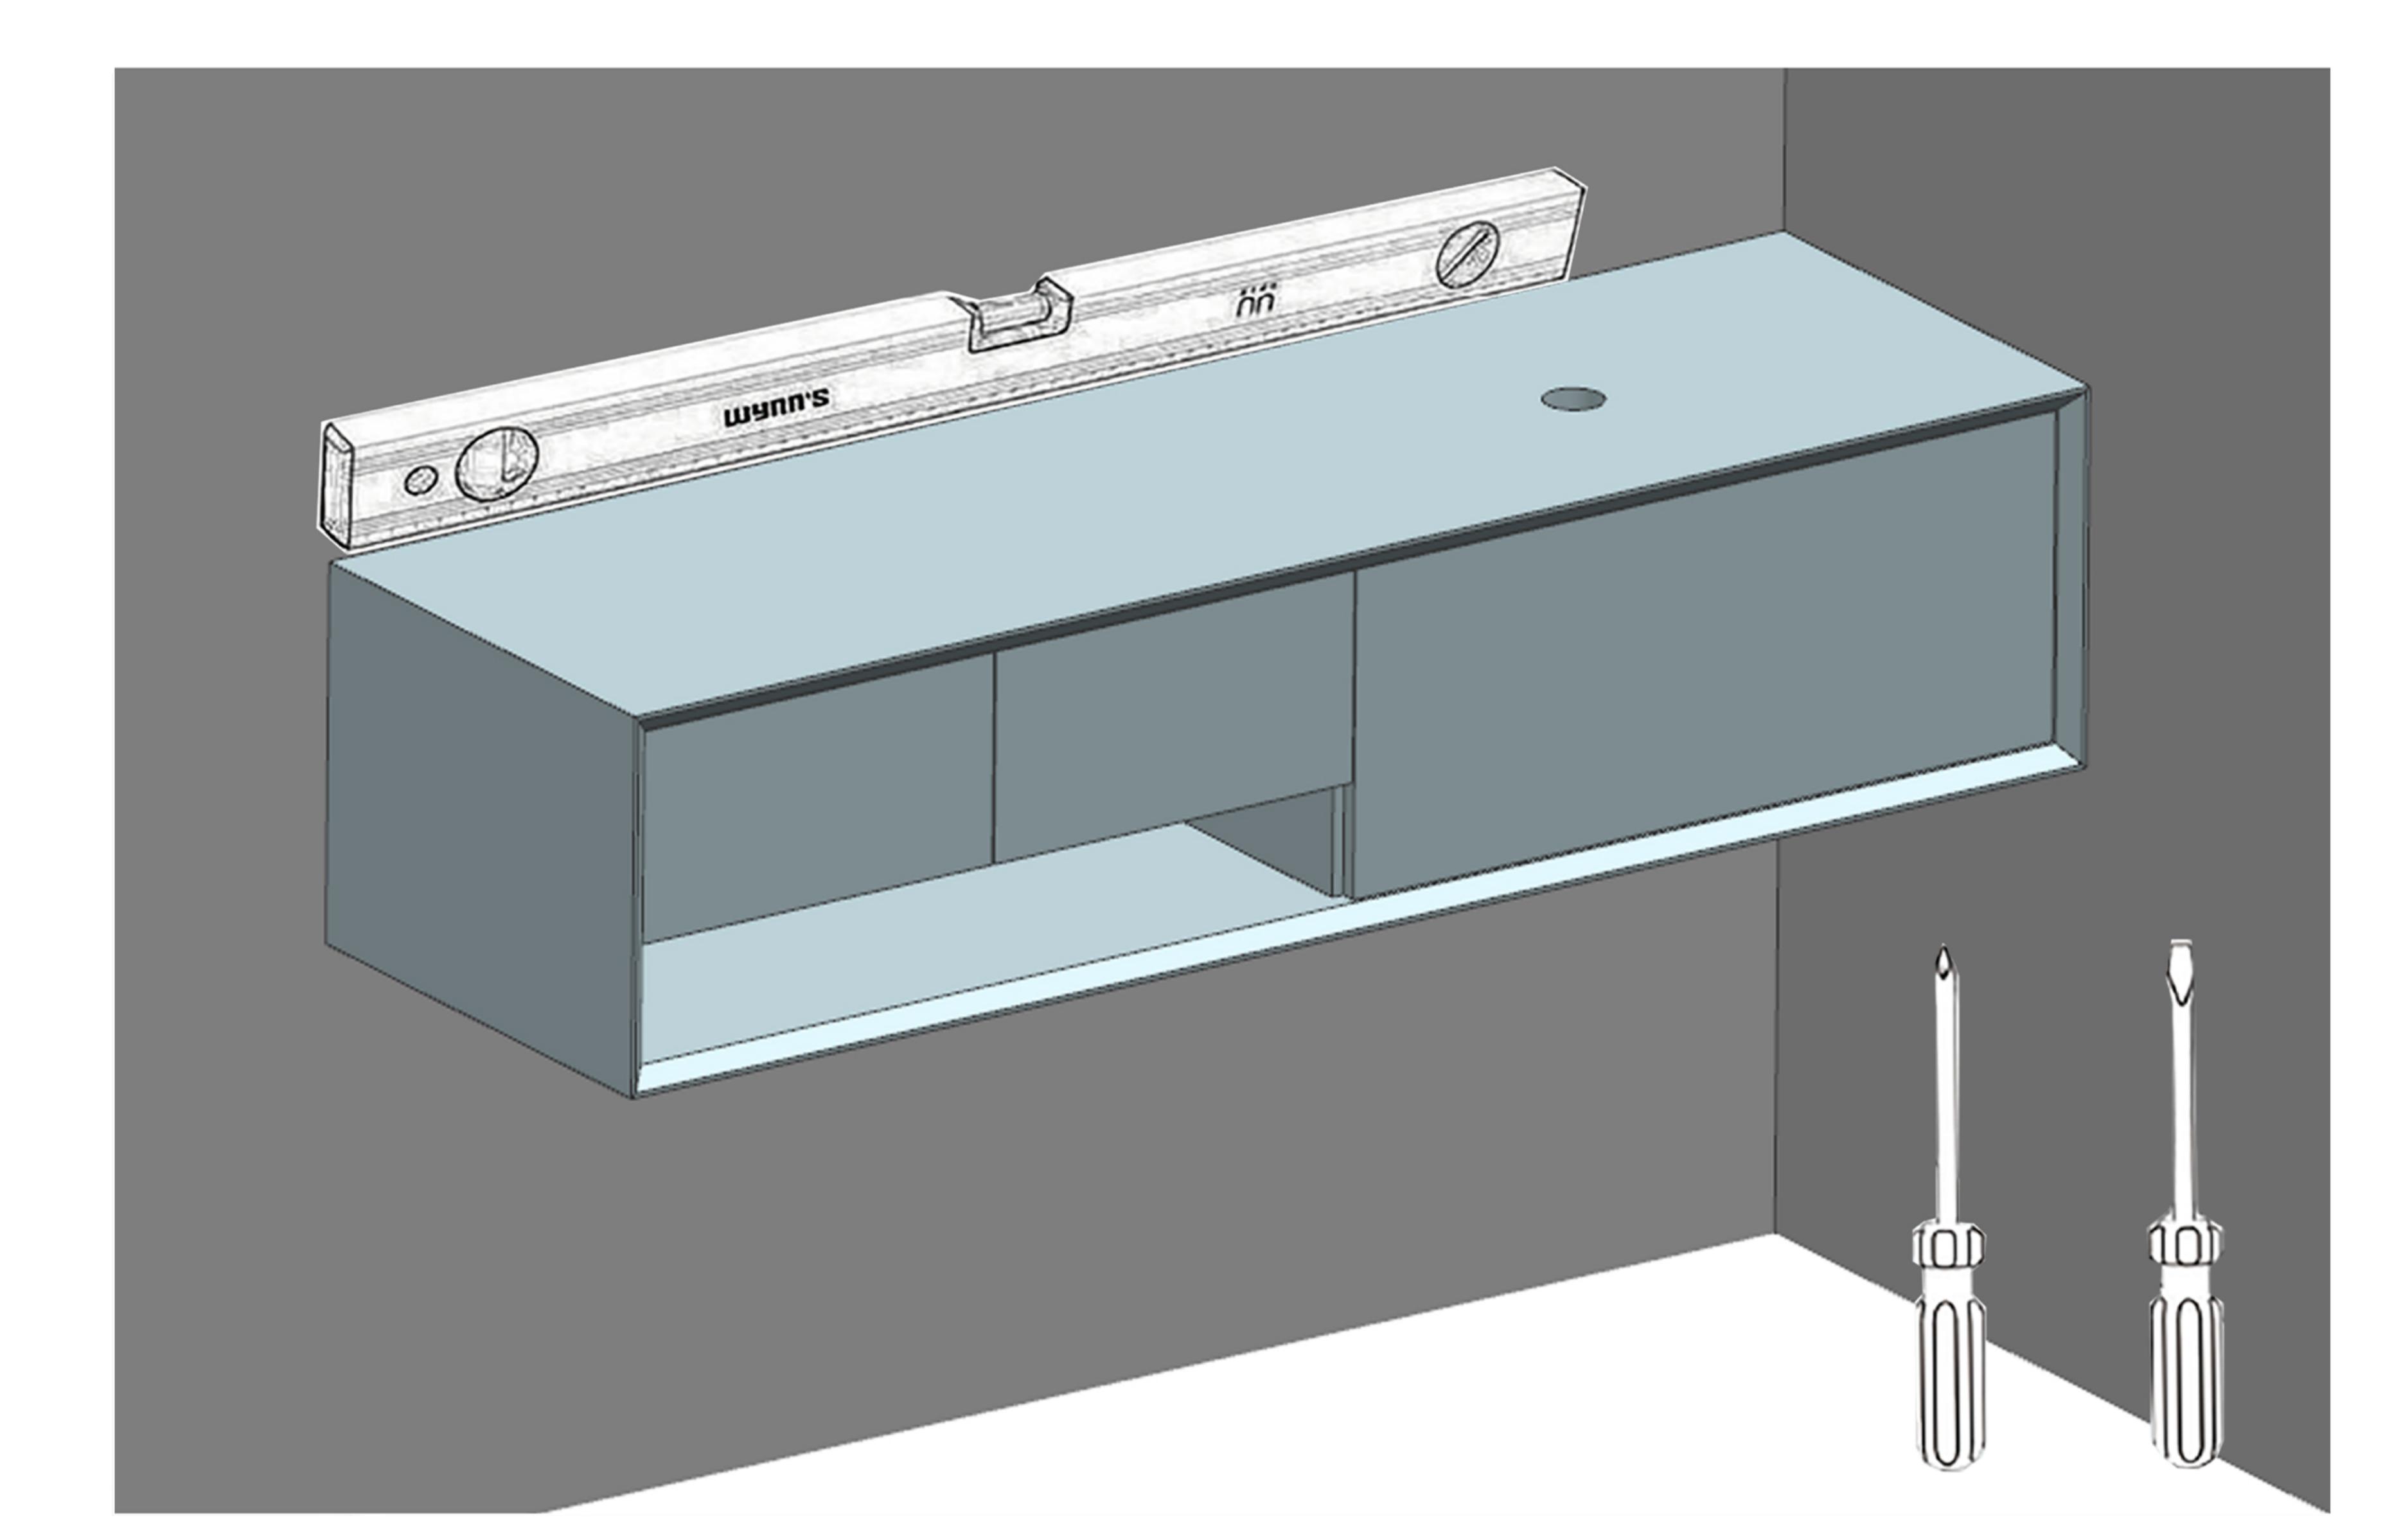

During the installation, please cover (wrap) the product with a soft \_\_\_\_ material to prevent damage the product during the installation.