


INSTALLATION INSTRUCTIONS (Carbon Fiber Bathtub)

Required Tools:



Safety Goggles




Tape Measure



Sealant Tape



Rubber Mallet

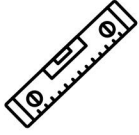

Spirit Level




Silicone Sealant




Pencil


Installation Instructions :

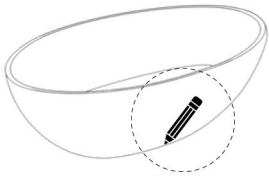


- Unbox the bathtub and carefully place it on a cover or any protective floor covering to prevent damage to both the bathtub and the floor.
- Place the tub in its assigned position and outline its shape using a pencil. Lay a drop cloth or a comparable protective material in the bathtub's interior, taking care not to cause any scratches on the surface.

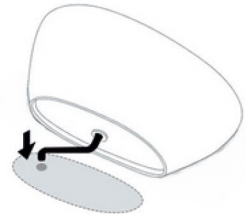

- Organize the flex pipe and link its end to the waste vent, securing the connection with PVC cement.

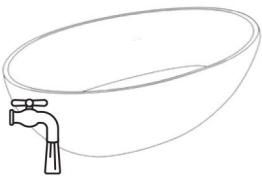

- Fill the bathtub to the brim, allowing water to reach the overflow level, and meticulously examine for any signs of leaks.

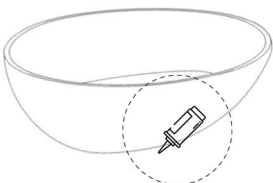

- Ensure the bathtub's stability by applying silicone around the base, allowing it ample time to fully cure.