



Italian Motors Assembly Manual


IM434 Chrome Stiletto Kart Stand

Kart stands are an important tool in transporting and maintaining your karts safely and efficiently. Thank you for trusting that our stands will do the job!

Here are some instructions to help with the assembly. If you have any additional questions, please email us at info@italianmotors.com or call us at 360.988.5104. Enjoy your new stand!

Italian Motors USA

STEP 1

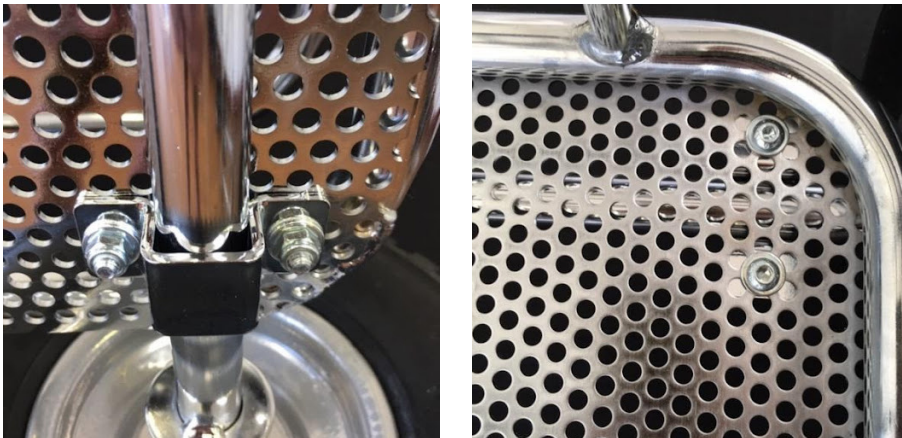

Mount axle to base using axle brackets, 4 short bolts, 8 washers, and 4 nyloc nuts. Choose holes for the bolts that place the axle approximately 2 inches from the end of the base. Make sure the axle is centered side to side and square.

STEP 2



Mount the casters to the base. On the Chrome Stiletto Kart Stand, the longer bolts go through the holes in the cross brace, and the short bolts are used in the remaining holes.



This photo shows how the axle and casters are mounted from under the stand.



STEP 3



Install the wheels to the axle using the large washer and pin.

STEP 4




Slide upright frame into pockets on base.

STEP 5



Mount top frame to upright as shown.

STEP 6

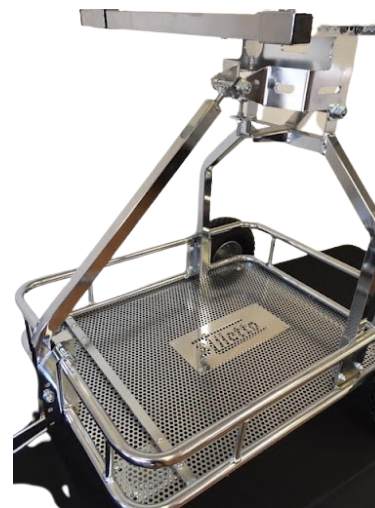

Install locking lever arm to base and top frame as shown.

STEP 7



Install hooks and adjust them to the width of your kart. The hooks will latch on to your rear side pod bars, just outside the frame. NOTE: Hooks must be installed on the wider end of the top frame, above the large wheels.



Italian Motors
360.988.5104

USA - info@italianmotors.com
Canada - imcanada@italianmotors.com