


# INSTALLATION INSTRUCTIONS

## ULTIMATE TOP JL 4 DOOR TOP AND HARDWARE

Fit on:  
Jeep® Wrangler JLU 2018-  
Part n. JLTT . . 4



❗ **TO COMPLETE THE TOP YOU NEED FASTBACK WINDOWS OR CARGO TOP**




❗ **IMPORTANT** CHECK ALL INSTRUCTIONS BEFORE INSTALLING THE PRODUCT

This product is designed to protect from ordinary weather conditions. It's not in any case a protection from falling objects, or in event of an accident. This product is not a retaining system for vehicle occupants and for loaded material.

**WEAR SEAT BELTS AT ALL TIMES**

Failure in product installation could place occupants of the vehicle and other people in possibly dangerous situations.

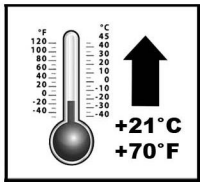

**CHECK AND FOLLOW FITTING INSTRUCTIONS PROPERLY**

This product should be installed not below 70°F (21°C). Below this temperature fabric can contract for 1" (2/3 cm) or more and installation become harder with a risk of breaks. Few days after fitting fabric will relax losing the packaging wrinkles.

❗ **CAUTION** Safety glasses should be worn at all times installing this products.

### COMPONENT LIST


#### HARDWARE



n.1 Windshield bar



n.1 Vertical surround right  
n. 1 Vertical surround left

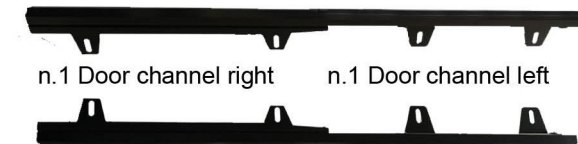


n.1 Door channel right    n.1 Door channel left




n.1 Tailgate bracket right  
n.1 Tailgate bracket left




n.1 Roamerang right  
n.1 Roamerang left



n.1 Top bar



n.1 Tailgate bar with velcro

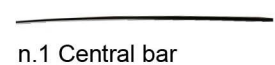

n.1 Central bar



n.2 protective film 12x4 cm  
n.8 protective film 8x4 cm

#### SOFT TOP



n.1 Top

n.2 Bikini Pulling Buckle



n.1 Soft lifter




### BOLTS AND NUTS



Part	Q.ty	Position
Hex Screw 8x75	6	1,3,4
Hex Screw 8x60	2	2
Flat washer 8x24	16	1,2,3,4,6,7,8
Nut nylon insert M8	8	1,2,3,4
Nut flange M8	2	6
Black torx 45 screw M8	8	6,7,8,9
Button screw 5x12 mm	4	5,9
Nut flange M5	2	9
Nut nylon insert M5	2	5
Flat washer 5x10	2	5

### BOLTS POSITION

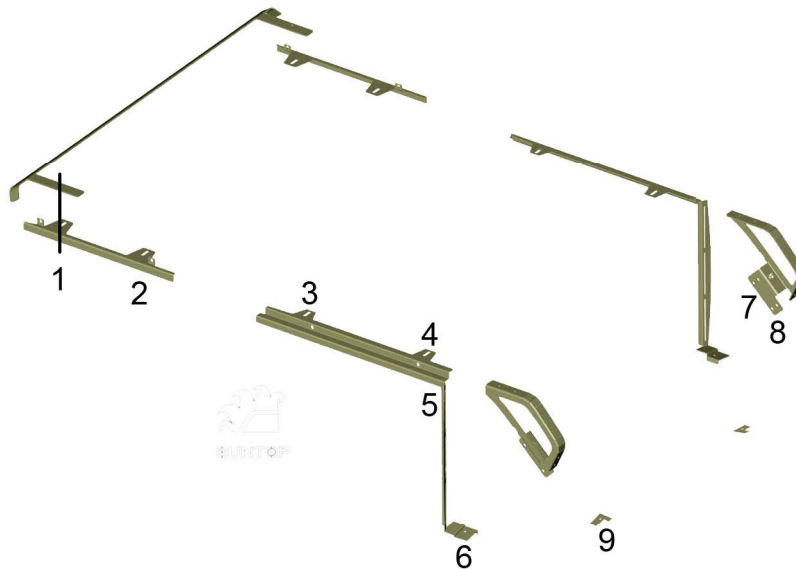

### TOOLS

N. 2 WRENCH 13 mm  
N. 1 WRENCH 8 mm

N. 1 ALLEN WRENCH 3 mm  
N. 1 ALLEN WRENCH 6 mm



N. 1 TORX WRENCH T45



1. Remove Hard Top



2. Open all windows



3. Stick protective tape on points 1,2,3,4,6 (see page 2)



4. Fix vertical surround (M5x12 + washer + SL nut)



5. Position door channels on the car



6. Position door channels on the car



7. **Bolt 2**(M8x60+2wash. + SL nut) Nut up!



8. **Bolt 3-4**(M8x75+2wash. + SL nut) Nut Down!



9. **Bolt 6**



10. Insert windshield bar in front pocket



11. Insert central bar in middle top



12. Position Top on the car and secure it with **Bolt 1** (with nuts, but **do not tighten**)



13. Tighten Bolts 2,3,4 while you pull the door channel out



14. Release Top buckles and verify front fabric on windshield seal



15. Tighten windshield bar nut 30Nm



16. Remove plastic covers from roll cage (pull)



17. Fit Roomerang



18. Fix tailgate plate (help yourself with some tape)



19. Position the top bar at the middle of the front space. Side inserts as in the picture.



20. Fix central bar lifter



21. Pull the top from upper part of rear belts



22. Insert plastic strip into channel

**INSTRUCTIONS CONTINUE**

TOP




FASTBACK WINDOWS

CARGO TOP

**FASTBACK WINDOWS****COMPONENT LIST**n.1 Windows complete  
2 Doors

n. 1 Rear window

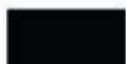

n. 1 Windows storage bag

**1. Insert corner bars****2. Insert upper bars**



**FASTBACK WINDOWS**



2. Zip rear window  
(halfway on the side)



3. Position it on rollage



4. Position vertical  
Velcro



5. Insert plastic stripes on both sides



6. Wrap around  
rollage



7. Fix tailgate bar



8. Position the dustguard inside

**FASTBACK WINDOWS**

9. Use dustguard to fix rear window once you rolled it in

**CARGO WINDOWS**
**COMPONENT LIST**

n.1 Cargo Top 4 door    n.1 Roll Cage cover R    n.1 Roll Cage cover L



Part No. JLCT .. 4

n.1 Metal Bar



1. Fit rollcage covers (safety belts can stay in or out)



2. insert cargo bar



3. Position top on car



4. Attach vertical velcro

**CARGO WINDOWS**



5. Close Belt 1 (do not pull)



6. Position the bar under body sides



7. Temporarily fix velcro around rollcage



8. Close Belt 2 and pull it



9. Insert front part of plastic strip



10. Pull Belt 1 from both sides keeping window centrally

**CARGO WINDOWS**

11. Wrap vertical window around roll cage



12. Close the top upper belt



13. Insert all plastic strip with special attention to corners



14. Place tailgate bar and fix velcro giving to the top the right tension



**For rear safety belts:**  
pass through the reinforced parts on the top making a vertical cut (5cm / 2")

**Att!**  
Belts can work only as fixed belts.