


INSTALLATION INSTRUCTIONS FOR ED5500L TRIM

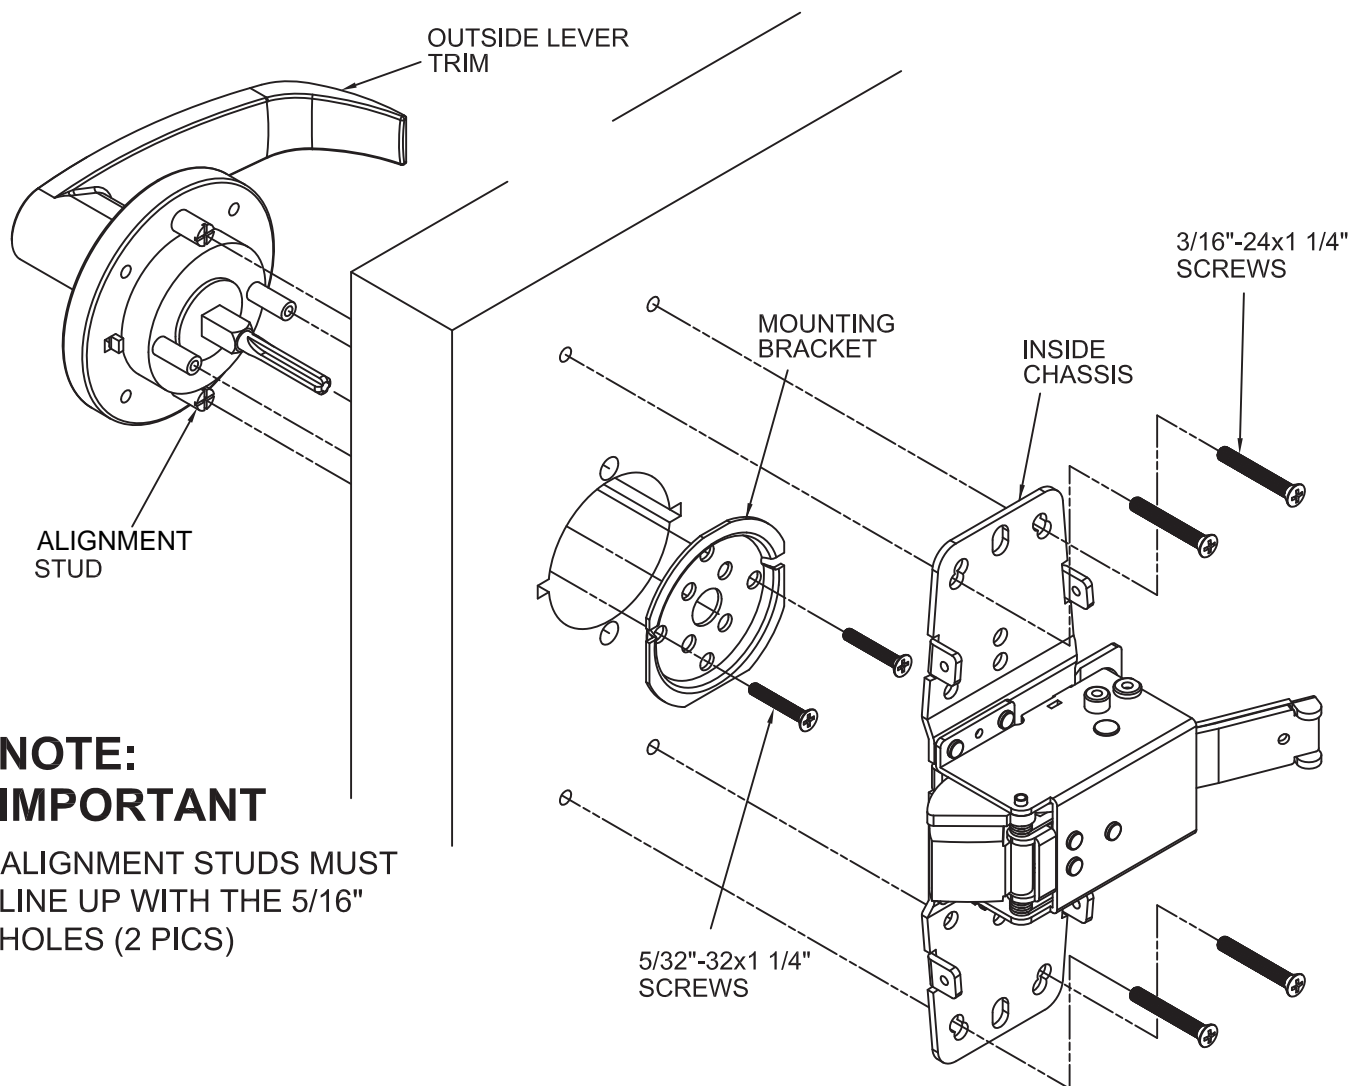

NOTE: IMPORTANT

ALIGNMENT STUDS MUST
LINE UP WITH THE 5/16"
HOLES (2 PICS)

TEMPLATE

