
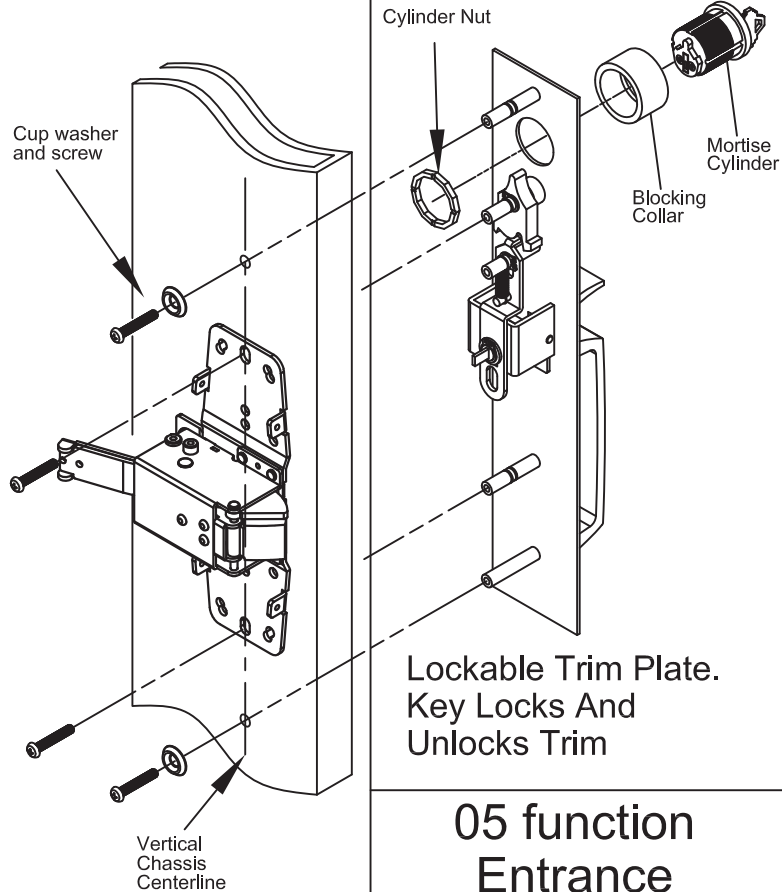
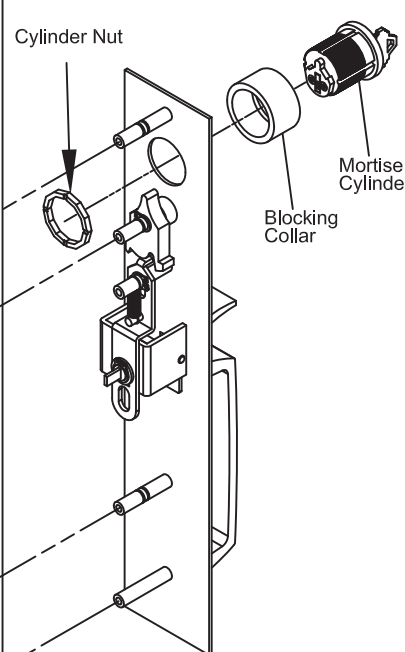
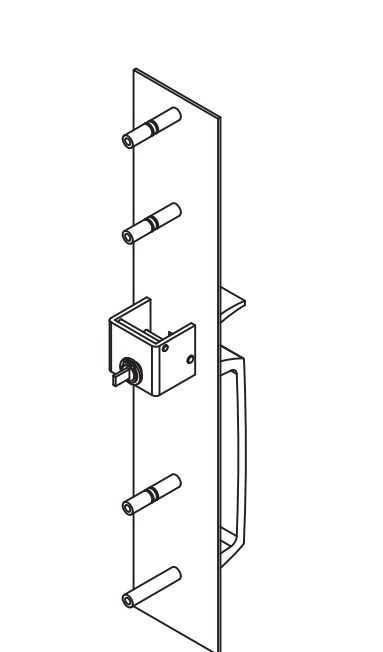
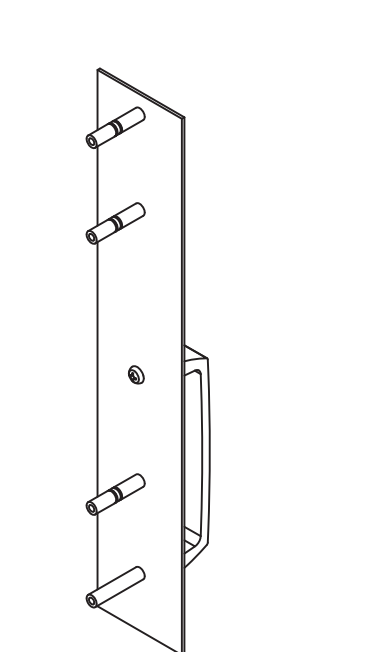


INSTRUCTIONS FOR ED5500T THUMBPIECE TRIM FOR ED5500/5600 SERIES RIM AND VERTICAL ROD DEVICE

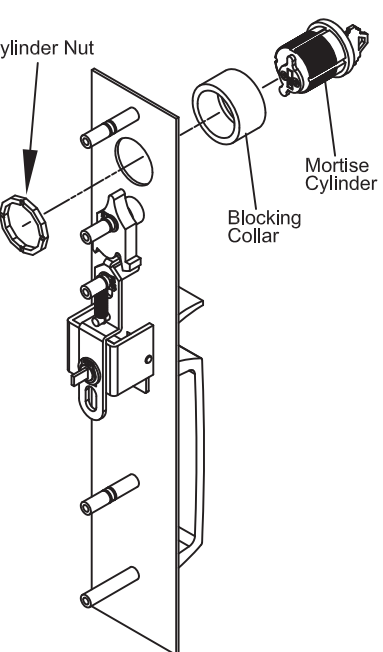

ED5500T-05	ED5500T-15	ED5500T-02	ED5500T-03
 <p>Cylinder Nut</p> <p>Blocking Collar</p> <p>Mortise Cylinder</p> <p>Lockable Trim Plate. Key Locks And Unlocks Trim</p>	 <p>No Cylinder, Trim Always Operable</p>	 <p>Pull Trim Only, Used With Dogged Down Device</p>	 <p>Cylinder Nut</p> <p>Blocking Collar</p> <p>Mortise Cylinder</p> <p>Always Locked Key Unlocks Trim Plate</p>
05 function Entrance	15 function Passage	02 function Dummy	03 function Storeroom
Attach the collar and mortise cylinder to the trim plate with the mortise nut, attach trim to door thru bolting 2 screws to the chassis and the 2 cup washers and screws at the top and bottom to the door.	Attach trim to door thru bolting the 2 screws to the chassis, and 2 cup washers and screws at the top and bottom to the door.	Attach trim to door thru bolting the 2 screws to the chassis, and 2 cup washers and screws at the top and bottom to the door.	Attach the collar and mortise cylinder to the trim plate with the mortise nut, attach trim to door thru bolting 2 screws to the chassis and the 2 cup washers and screws at the top and bottom to the door.