

## INSTALLATION INSTRUCTIONS

## 725ML SFIC Mortise Latch Lock



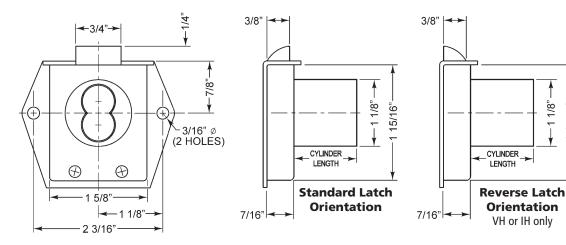


**NOTE:** Dimensions are the same for all handings

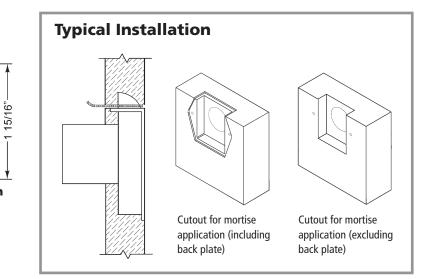

## **Included Accessories:**

- 1 725-1 6-pin spacer
- 1 725-PA plastic thumbturn
- 1 725-SP-ML strike and screws (#5 x 5/8")
- 2 lock mounting screws (#8 x 5/8")

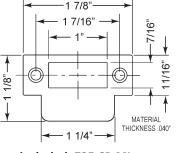

included: 725-SP-ML slotted lip strike

