
# INSTALLATION INSTRUCTIONS


# ME93LM/DM IC Cam Lock

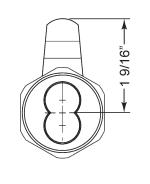


#### **IMPORTANT:**

It is highly recommended that you install the **prong driver** and **lock cylinder** into the lock body and cycle to the locked position before assembling cam, cam shifter and stop pin onto the back of the lock.



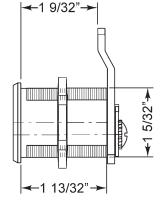

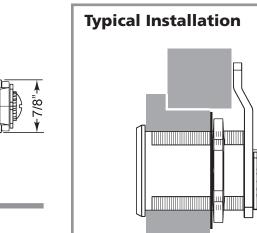


**Included Accessories:** 

- plastic thumbturn
  720-PL3 anti-rotation plate and screws
   720-3-1 short inverted cam
   720-3-2 long vertical cam
   720-CDLM
   720-CDDM
   720-KR

2 3/16"

720-PL3 anti-rotation plate

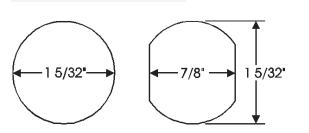


Lock diameter is 1-1/8." Drilled hole should be slightly larger.







5/16"-

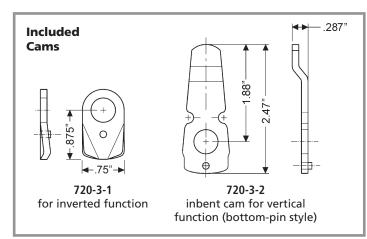


**Optional cams** Note: use of standard and/or optional cams depends on your specific application.

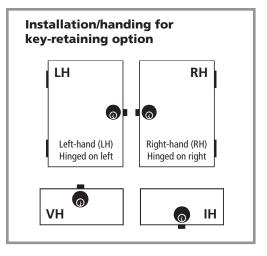

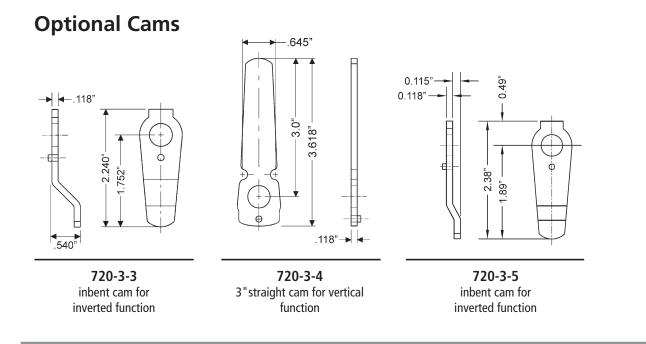

## **Optional TR200 Series Trim Collars**



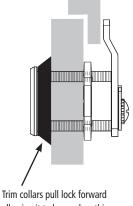

allowing it to be used on thinner gauge material thickness.

# ME93LM/DM — INSTALLATION INSTRUCTIONS/CAM ASSEMBLY




Assembled with: 720-3-2 vertical long cam 720-3-4 extra long 3" cam

#### **Important:**

It is highly recommended that you install the prong driver and lock cylinder into the lock body and cycle to the locked position before assembling cam, cam shifter and stop pin onto the back of the lock.


## **STANDARD** Function Cam Assembly

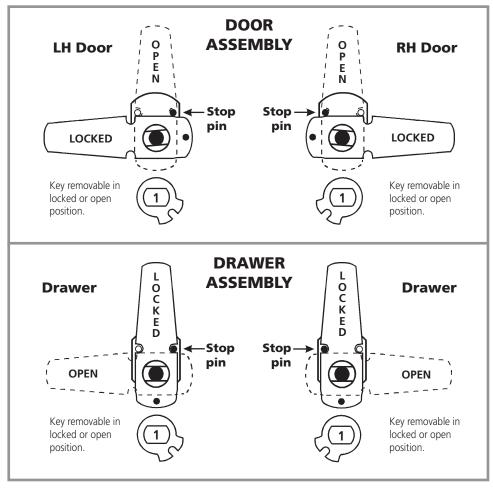


STO

#### These instructions are for bottom-pin style cams only. If your cam has the brass pin in the middle, see the instructions on PAGE 5.

### **Supplied Cam Shifters**




## **KEY-RETAINING** Function Cam Assembly

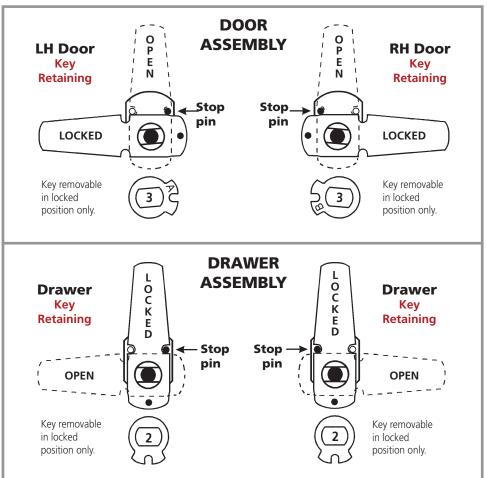




## Assembled with: 720-3-3 inverted long cam 720-3-5 inverted long cam

## **STANDARD** Function Cam Assembly

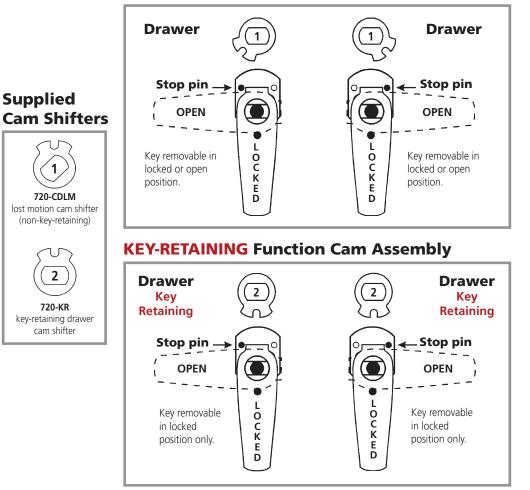

# Assembled with: 720-3-1 inverted short cam

#### KEY-RETAINING (direct drive) Function Cam Assembly

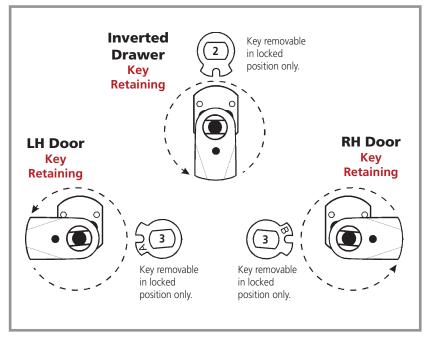

## **Supplied Cam Shifters**



#### Important:

It is highly recommended that you install the prong driver and lock cylinder into the lock body and cycle to the locked position before assembling cam, cam shifter and stop pin onto the back of the lock.

# ME93LM/DM — INSTALLATION INSTRUCTIONS/CAM ASSEMBLY




Assembled with: 720-3-2 vertical long cam 720-3-4 extra long 3" cam

#### **Important:**


It is highly recommended that you install the prong driver and lock cylinder into the lock body and cycle to the locked position before assembling cam, cam shifter and stop pin onto the back of the lock.

#### **STANDARD** Function Cam Assembly

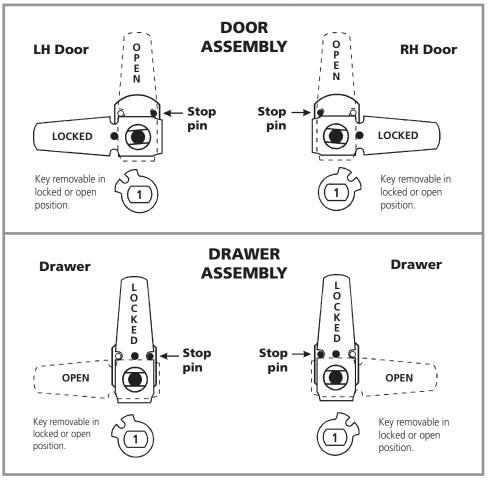

**These instructions are for mid-pin style cams only. If your cam has the brass pin on the bottom, see the instructions on PAGE 3.** 

## **Supplied Cam Shifters**



## **KEY-RETAINING** Function Cam Assembly

