

INSTALLATION INSTRUCTIONS


1. Check lock for correct handing before installation.
2. Check door for proper preparation to be sure door is mortised and drilled to conform to Template.

3. INSTALL LOCK BODY

- a. Fasten with 1" long faceplate screws to hold lock in place.
- b. Be sure cylinder set screw is unscrewed enough to allow cylinder to thread into lock.

4. INSTALL TRIM

- a. Position plates on door. Interior turnpiece should insert into lock body. Next, screw inside knob onto spindle to firmly hold inside plate in place. Then screw outside knob onto spindle to hold plate in place.
- b. Insert cylinder through exterior plate into lock body. Carefully thread cylinder into lock body by hand. Do not use force or threads may strip. With cylinder thread properly started, cylinder will screw in easily to firmly seat in plate recess. Finish by aligning as shown in diagram and tighten cylinder set screw into groove of cylinder. The other cylinder set screw remains flush with the lock face.

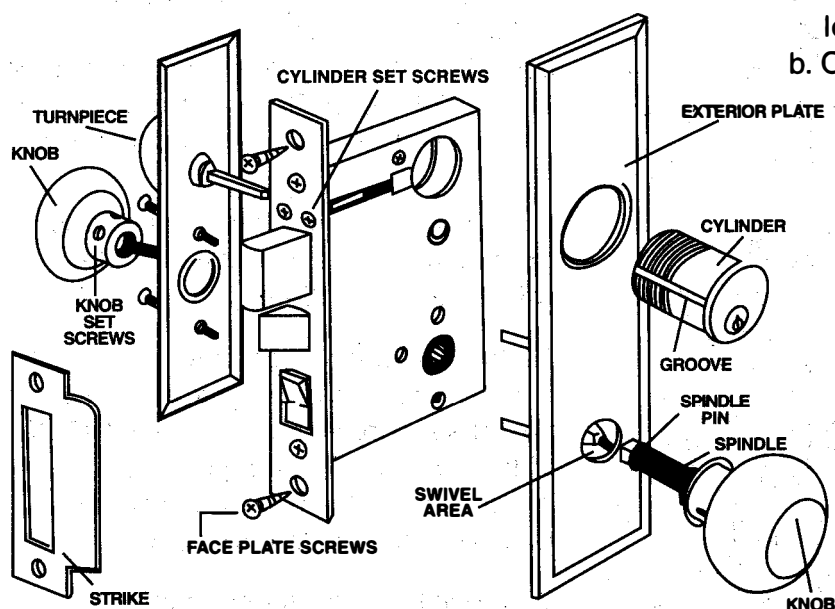

5. INSTALL STRIKE

- a. Refer to Template to determine strike location on jamb.
- b. Outline strike on jamb and chisel recess $\frac{3}{32}$ " deep. Drill open area 1" deep.
- c. Drill screw holes and fasten.

6. Check lock operation with key and turnpiece. Now fasten plates to door with screws supplied.

7. Check lock operation again with knobs, key turnpiece before closing door.