

FOR OPPOSITE
DOOR - TURN
TEMPLATE OVER


2 1/2"
BACKSET

1 3/4"

STRIKE LIP
POSITION

CYLINDER HOLE
1-1/4" DIAMETER
Drill only if cylinder
is on this side

TURNPIECE HOLE
Drill only if turnpiece
is on this side
7/8" DIAMETER

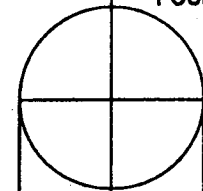

1"

**DRILL
3 3/4"
DEEP**

1. Insert lock
2. Mark outline of lock front
3. Mortise to suit front thickness

ALIGN TEMPLATE WITH
VERTICAL AND HORIZONTAL
CENTER LINES ON DOOR

THRU-BOLT HOLE
1/2" DIAMETER
THRU

KNOB HOLE
7/8" DIAMETER

ALTERNATE KNOB/
THRU-BOLT HOLE
2" DIAMETER
THRU

HORIZONTAL CENTER LINE OF KNOB

↑
KNOB
HEIGHT
ABOVE
FLOOR

VERTICAL
CENTER
LINE OF
BACKSET

VERTICAL CENTER
LINE OF LOCK

