


INSTALLATION INSTRUCTIONS

LR100FCK FIRST CHOICE ELECTRIC LATCH RETRACTION KIT MODELS: 3600 & 3700

Remove the push bar. Remove the dogging assembly. Bend Push Bar Spring Box open as shown, to allow Linkage access. Depress the push bar spring box then slide the ELR unit into the device base. Align the second set of two holes over the two base unit holes and attach with the two #10-32 flat head screws supplied. Attach the Linkage with supplied screw as shown. Re-attach the Push Bar.

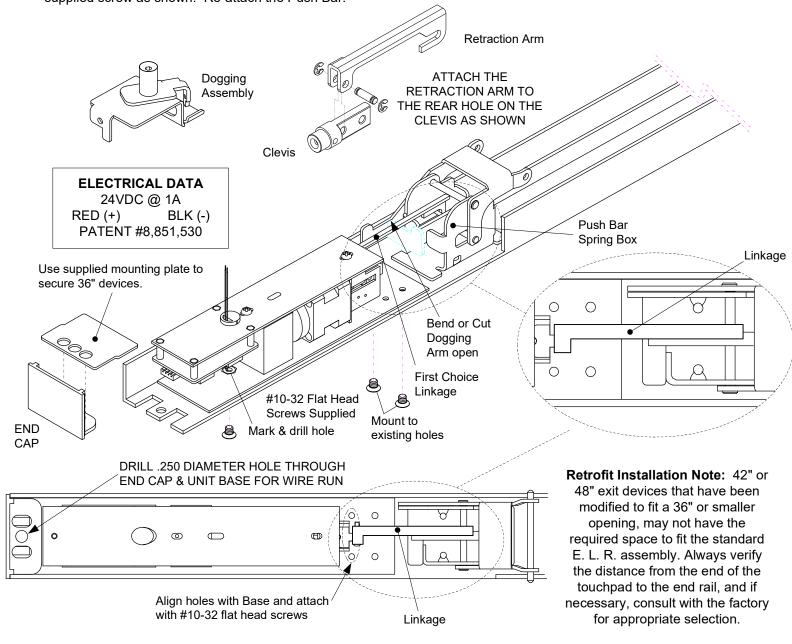

When retrofitting to existing vertical rod devices, adjustment of the rods is required for proper operation of the Electric Latch Retractor. Once the unit is properly installed, energize it so the push pad is dogged down, then reconnect the vertical rods to the device and make the proper adjustments.




ALIGN FOR
FIRST CHOICE DEVICES

ALIGN FOR
FOR 10-32

ALIGN FOR
FALCON/DOR-O-MATIC DEVICES

[t] 800.413.8783 **x** 805.494.0622 **x** E-mail: service@sdcsecurity.com **x** 801 Avenida Acaso, Camarillo, CA 93012 **x** PO Box 3670, Camarillo, CA 93011

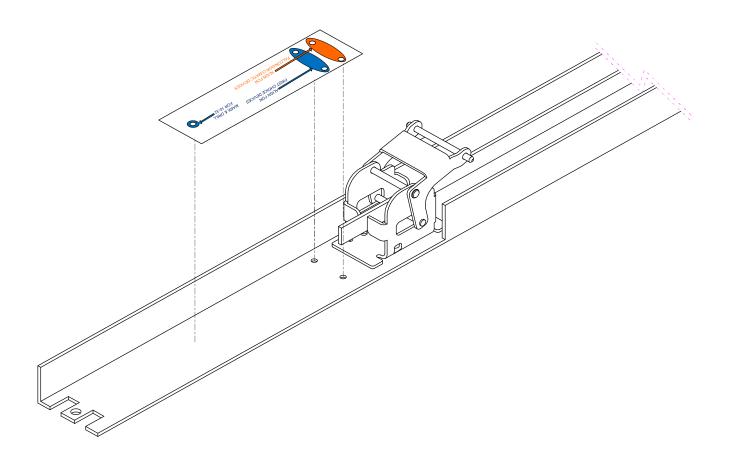

USE TEMPLATE WHEN DEVICES ARE LONGER THAN 36" FOR ADDED STABILITY OF KIT.

ALIGN TEMPLATE TO EXISTING HOLES, FALCON/DOR-O-MATIC or FIRST CHOICE. MARK AND DRILL 1 HOLE FOR 10-32 FLT HD