



# L-Series Door Template Index

Functions	Rose Trim		Escutcheon Trim		HSLR Trim	
	Wood	Metal	Wood	Metal	Wood	Metal
L/LV/LM/LMV 9000 Series Lock Case Dimensions	<a href="#">L1</a>					
L400 Series Lock Case Dimensions	<a href="#">L2</a>					
LM9200 Lock Case Dimensions	<a href="#">L3</a>					
L9000 Series HSLR Lock Case Dimensions	—				<a href="#">L4</a>	
L9010, L9110	<a href="#">L892</a>	<a href="#">L893</a>	<a href="#">L898</a>	<a href="#">L899</a>	<a href="#">L965</a>	<a href="#">L966</a>
LM9310		<a href="#">L893</a>		<a href="#">L899</a>	—	—
L9025	<a href="#">L808</a>	<a href="#">L809</a>	<a href="#">L810</a>	<a href="#">L811</a>	—	—
L9026	<a href="#">L812</a>	<a href="#">L813</a>	<a href="#">L814</a>	<a href="#">L815</a>	—	—
L/LV9040, L/LV9044, L/LV9440, L/LV9444	<a href="#">L894</a>	<a href="#">L895</a>	<a href="#">L900</a>	<a href="#">L901</a>	<a href="#">L965</a>	<a href="#">L966</a>
L0170	<a href="#">L739</a>	<a href="#">L781</a>	<a href="#">L741</a>	<a href="#">L782</a>	—	—
L0172	<a href="#">L743</a>	<a href="#">L744</a>	<a href="#">L745</a>	<a href="#">L746</a>	—	—
L9175	<a href="#">L851</a>	<a href="#">L806</a>	<a href="#">L859</a>	<a href="#">L855</a>	—	—
LM9325		<a href="#">L806</a>		<a href="#">L855</a>	—	—
L9176	<a href="#">L852</a>	<a href="#">L807</a>	<a href="#">L860</a>	<a href="#">L856</a>	—	—
L/LV/LM/LMV9050, L/LV/LM/LMV9056, L/LV9453, L/LV9456, L9473, L/LV9480, L/LV9485	<a href="#">L896</a>	<a href="#">L897</a>	<a href="#">L826</a>	<a href="#">L827</a>	<a href="#">L965</a>	<a href="#">L966</a>
LM/LMV9350, LM/LMV9356		<a href="#">L897</a>		<a href="#">L827</a>	—	—
L/LV9060, L/LV/LM/LMV9071, L/LV9077, L/LV9082 EL/EU, L/LV9457, L/LV9458, L9466, L/LV9482	<a href="#">L816</a>	<a href="#">L817</a>	<a href="#">L828</a>	<a href="#">L829</a>	<a href="#">L965</a>	<a href="#">L966</a>
LM/LMV9371		<a href="#">L817</a>		<a href="#">L829</a>	—	—
L/LV9070, L/LV9076, L/LV9080, L/LV9080 EL/EU, L9465	<a href="#">L905</a>	<a href="#">L906</a>	<a href="#">L907</a>	<a href="#">L908</a>	<a href="#">L965</a>	<a href="#">L966</a>
LM/LMV9370, LM/LMV9380		<a href="#">L906</a>		<a href="#">L908</a>	—	—
L/LV9486, L/LV9496	<a href="#">L820</a>	<a href="#">L821</a>	—	—	—	—
L9460, L9462, L9463, L9464 (Deadbolt only)	<a href="#">L902</a>	<a href="#">L903</a>			—	—
L9412	<a href="#">L967</a>	<a href="#">L968</a>	<a href="#">L911</a>	<a href="#">L912</a>	—	—
L460, L462, L463, L464, L480, L496 (Deadbolt, small chassis)	<a href="#">L909</a>	<a href="#">L910</a>	—	—	—	—
Mounting active trim, one side, L283-150 (use with appropriate lock function template)	<a href="#">L904</a>		—	—	—	—
L9090, L9091	<a href="#">L918</a>	<a href="#">L916</a>	<a href="#">L917</a>	<a href="#">L915</a>	—	—
L9092, L9093	<a href="#">L922</a>	<a href="#">L920</a>	<a href="#">L921</a>	<a href="#">L919</a>	<a href="#">L965</a>	<a href="#">L966</a>
L9094, L9095, L9494, L9495	<a href="#">L926</a>	<a href="#">L924</a>	<a href="#">L925</a>	<a href="#">L923</a>	<a href="#">L965</a>	<a href="#">L966</a>
L9492, L9493	<a href="#">L961</a>	<a href="#">L962</a>	<a href="#">L963</a>	<a href="#">L964</a>	<a href="#">L965</a>	<a href="#">L966</a>
LM9210, LM9210F, LM9210M	<a href="#">L928</a>	<a href="#">L944</a>	<a href="#">L927</a>	<a href="#">L943</a>	—	—
LM9225, LM9225F, LM9225M	<a href="#">L930</a>	<a href="#">L946</a>			—	—
LM9250, LM9250F, LM9250M, LM9256, LM9256F, LM9256M	<a href="#">L932</a>	<a href="#">L948</a>	<a href="#">L931</a>	<a href="#">L947</a>	—	—
LM9270, LM9270F, LM9270M, LM9280, LM9280F, LM9280M	<a href="#">L934</a>	<a href="#">L950</a>	<a href="#">L933</a>	<a href="#">L949</a>	—	—
LM9271, LM9271F, LM9271M	<a href="#">L936</a>	<a href="#">L952</a>	<a href="#">L935</a>	<a href="#">L951</a>	—	—
LM9290 EL/EU, LM9290F EL/EU, LM9290M EL/EU, LM9291 EL/EU, LM9291F EL/EU, LM9291M EL/EU	<a href="#">L938</a>	<a href="#">L954</a>	<a href="#">L937</a>	<a href="#">L953</a>	—	—
LM9292 EL/EU, LM9292F EL/EU, LM9292M EL/EU, LM9293 EL/EU, LM9293F EL/EU, LM9293M EL/EU	<a href="#">L940</a>	<a href="#">L956</a>	<a href="#">L939</a>	<a href="#">L955</a>	—	—
LM9294 EL/EU, LM9294F EL/EU, LM9294M EL/EU, LM9295 EL/EU, LM9295F EL/EU, LM9295M EL/EU	<a href="#">L942</a>	<a href="#">L958</a>	<a href="#">L941</a>	<a href="#">L957</a>	—	—
LM9200 LBL (less bottom latch)	<a href="#">L959</a>	<a href="#">L960</a>	<a href="#">L959</a>	<a href="#">L960</a>	—	—




# L/LV/LM/LMV9000-Series

## Lock Case Dimensions



**ALLEGION™**

Case Size:	4 <sup>7</sup> / <sub>16</sub> " x 6 <sup>1</sup> / <sub>16</sub> " x 1" (113 mm x 154 mm x 25 mm)	Knob or Lever to Cylinder:	3 <sup>55</sup> / <sub>64</sub> " (98 mm)
Backset:	2 <sup>3</sup> / <sub>4</sub> " (70 mm)	Knob or Lever to Turn Piece:	2 <sup>23</sup> / <sub>32</sub> " (69 mm)
Door Range:	1 <sup>3</sup> / <sub>8</sub> " – 2 <sup>1</sup> / <sub>2</sub> " (35 mm – 64 mm)	Height Line to Center of Deadbolt:	3 <sup>1</sup> / <sub>32</sub> " (77 mm)
Lock Front:	1 <sup>1</sup> / <sub>4</sub> " x 8" x <sup>7</sup> / <sub>32</sub> " (32 mm x 203 mm x 6 mm) Standard		
	1 <sup>1</sup> / <sub>16</sub> " x 8" x <sup>7</sup> / <sub>32</sub> " (27 mm x 203 mm x 6 mm)		

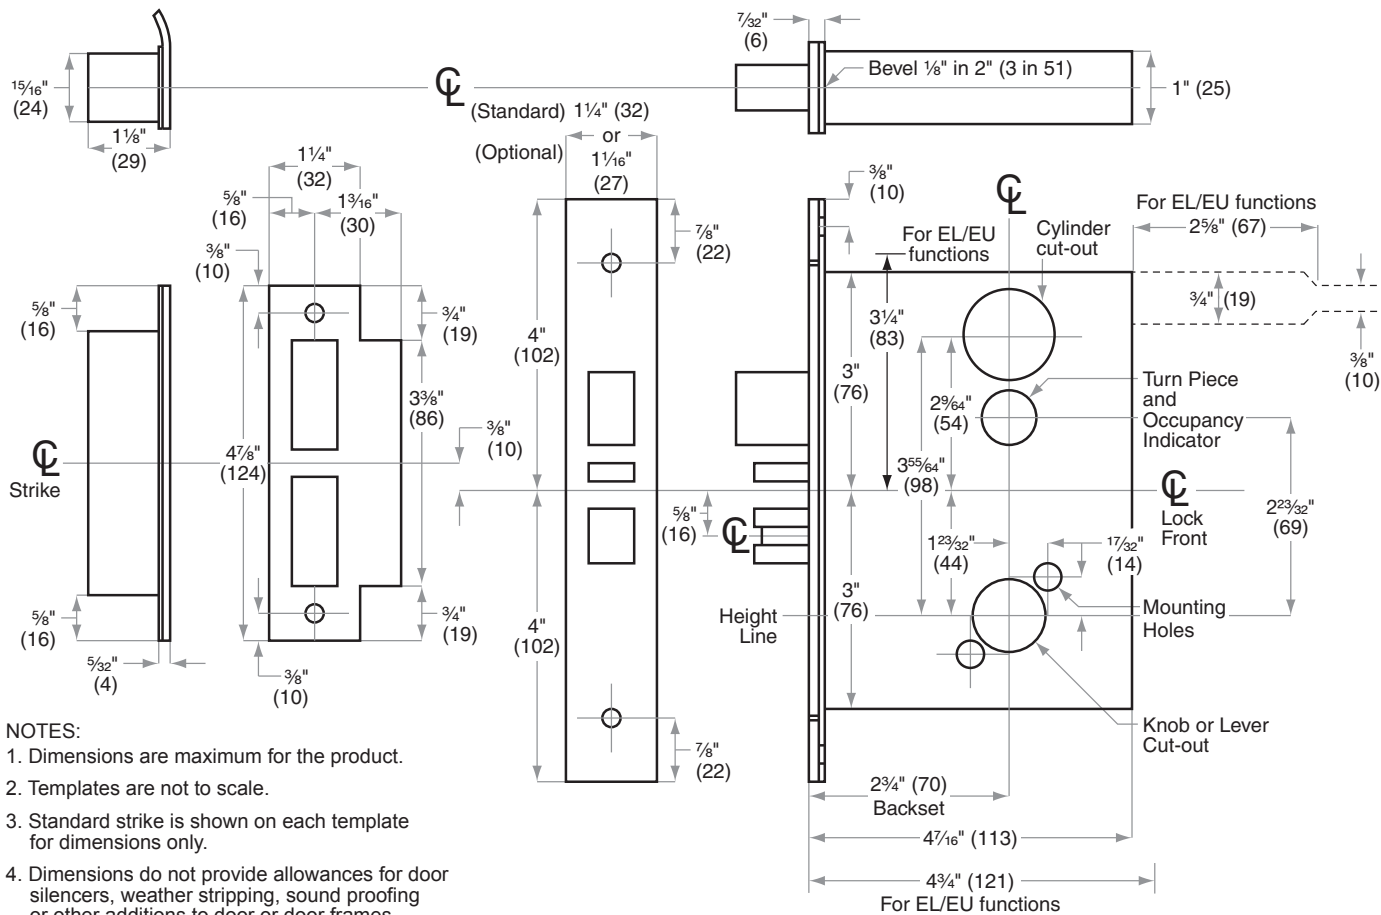

- NOTES:**
1. Dimensions are maximum for the product.
  2. Templates are not to scale.
  3. Standard strike is shown on each template for dimensions only.
  4. Dimensions do not provide allowances for door silencers, weather stripping, sound proofing or other additions to door or door frames.

- ANSI Standards:** L9000-Series locks meet all requirements for installations in doors and frames prepared in accordance with ANSI specifications A156.13, 2012.
- Metal Doors:** Suitable reinforcement is required to support lock case in center of door and to prevent door from compressing when trim is tightened. (See ANSI A115.1)
- Thick Doors:** Locks for non-standard door thickness may require special instructions.
- Lead Lining:** When L9000-Series or L400-Series locks are ordered with lead lining, add 1/8" (3) to the width of the mortise cut-out on the lock case cover side of installation.
- Electrified Locks:** Provisions must be made to route low voltage wire to the lock. Power transfer unit and low voltage wiring are not furnished.

Dimensions shown in parentheses ( ) are in millimeters.

**DRAWING IS NOT TO SCALE!**

**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template






# L400-Series

## Lock Case Dimensions



Case Size:	4 <sup>7</sup> / <sub>16</sub> " x 3 <sup>5</sup> / <sub>8</sub> " x 1" (113 mm x 92 mm x 25 mm)	Knob or Lever to Turn Piece:	1 <sup>9</sup> / <sub>64</sub> " (29 mm)
Backset:	2 <sup>3</sup> / <sub>4</sub> " (70 mm)	Height Line to Center of Deadbolt:	1 <sup>13</sup> / <sub>16</sub> " (46 mm)
Door Range:	1 <sup>3</sup> / <sub>4</sub> " – 3" (44 mm – 76 mm)		
Lock Front:	1 <sup>1</sup> / <sub>4</sub> " x 5 <sup>19</sup> / <sub>32</sub> " x 7 <sup>3</sup> / <sub>32</sub> " (32 mm x 142 mm x 6 mm)		

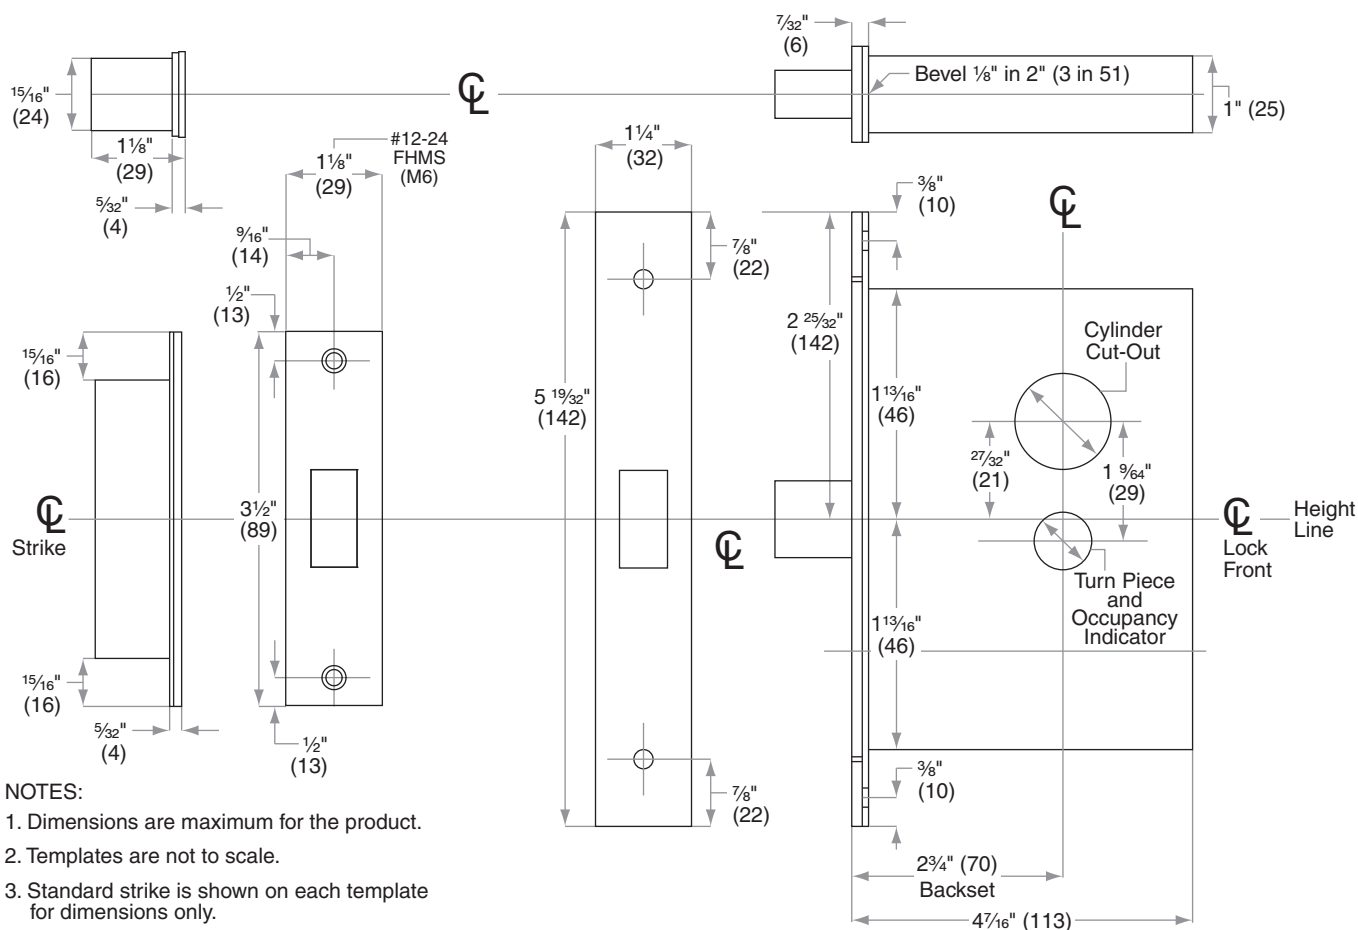

**NOTES:**

1. Dimensions are maximum for the product.
2. Templates are not to scale.
3. Standard strike is shown on each template for dimensions only.
4. Dimensions do not provide allowances for door silencers, weather stripping, sound proofing or other additions to door or door frames.

**ANSI Standards:** L400-Series locks meet all requirements for installations in doors and frames prepared in accordance with ANSI specifications A156.13, 2010.

**Metal Doors:** Suitable reinforcement is required to support lock case in center of door and to prevent door from compressing when trim is tightened. (See ANSI A115.1)

**Thick Doors:** Locks for non-standard door thickness may require special instructions.

**Lead Lining:** When L9000-Series or L400-Series locks are ordered with lead lining, add 1/8" (3) to the width of the mortise cut-out on the lock case cover side of installation.

Dimensions shown in parentheses ( ) are in millimeters.

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**


Door preparation template



# LM9200-Series

## Lock Case Dimensions

Case Size:	4 <sup>29</sup> / <sub>64</sub> " x 12 <sup>19</sup> / <sub>32</sub> " x 1" (113 mm x 319 mm x 25 mm)
Backset:	2 <sup>3</sup> / <sub>4</sub> " (70 mm)
Door Range:	1 <sup>3</sup> / <sub>4</sub> " – 2 <sup>1</sup> / <sub>2</sub> " (44 mm – 64 mm)
Lock Front:	1 <sup>1</sup> / <sub>4</sub> " x 15 <sup>7</sup> / <sub>8</sub> " x <sup>3</sup> / <sub>32</sub> " (32 mm x 403 mm x 2 mm)
Lever to Cylinder:	3 <sup>55</sup> / <sub>64</sub> " (98 mm)
Lever to Turn Piece:	2 <sup>23</sup> / <sub>32</sub> " (69 mm)

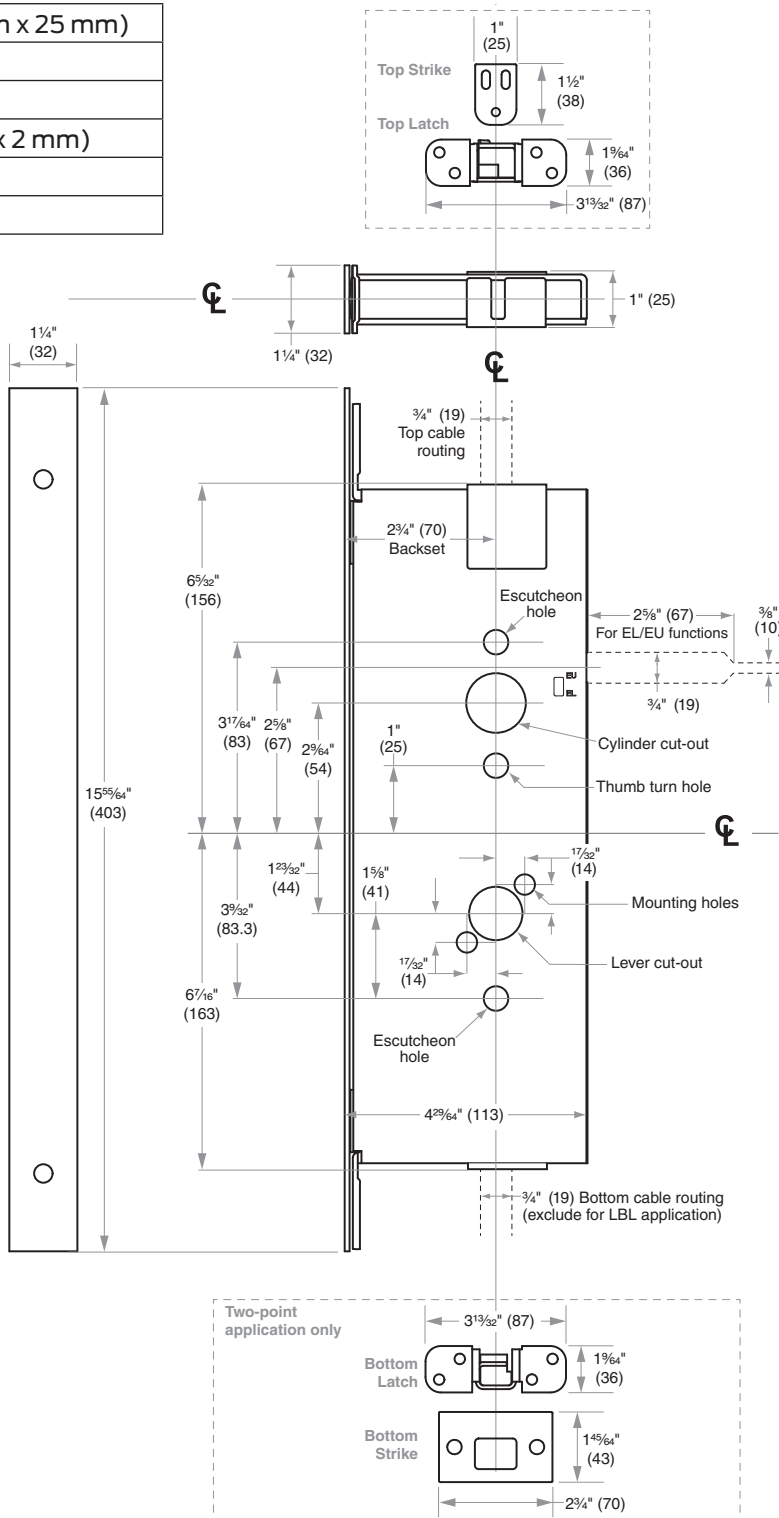

### NOTES:

1. Dimensions are maximum for the product.
2. Templates are not to scale.
3. Dimensions do not provide allowances for door silencers, weather stripping, sound proofing or other additions to door or door frames.

### ANSI Standards:

LM9200-Series locks meet all requirements for installations in doors and frames prepared in accordance with ANSI specifications A 156.37, 2014.

### Electrified Locks:

Provisions must be made to route low voltage wire to the lock. Power transfer unit and low voltage wiring are not furnished.

Dimensions shown in parentheses ( ) are in millimeters.

**DRAWING IS NOT TO SCALE!**

**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template


**L3**



# L9000-Series HSLR

## Lock Dimensions

Case Size:	Standard: 4 7/16" x 6 1/16" x 1" (113 mm x 154 mm x 25 mm) EL/EU: 4 3/4" x 6 1/16" x 1" (121 mm x 154 mm x 25 mm)
Backset:	2 3/4" (70 mm)
Door Range:	1 3/4" (44 mm)
Lock Front:	1 1/4" x 8" x 3/32" (32 mm x 203 mm x 2 mm)

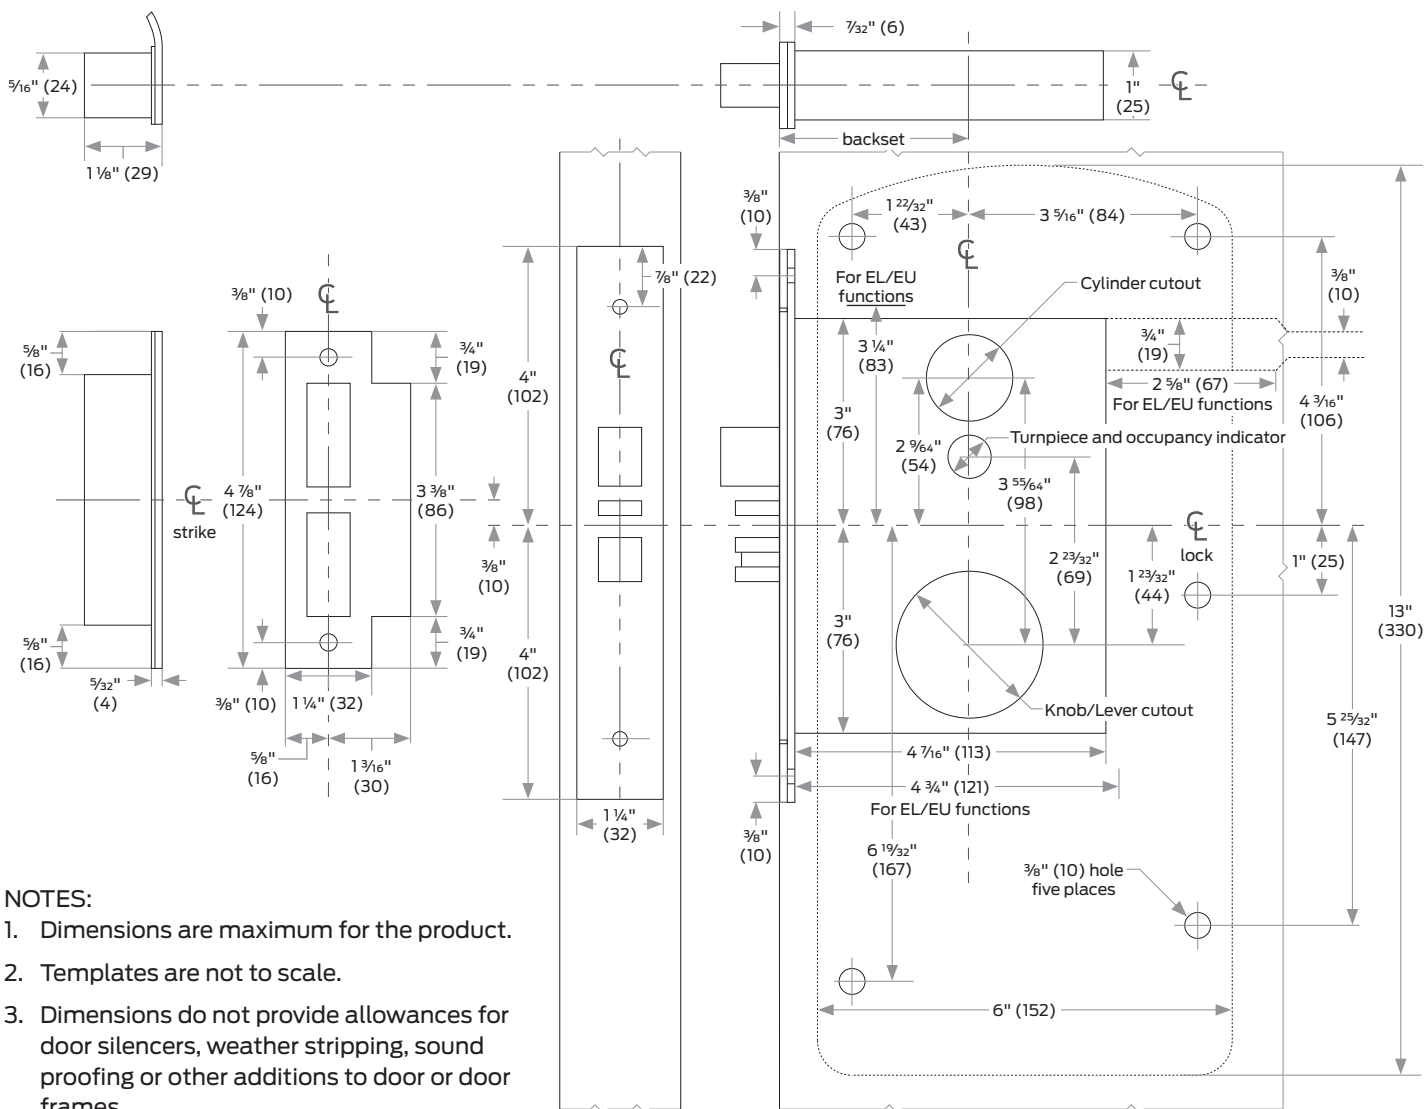

**NOTES:**

1. Dimensions are maximum for the product.
2. Templates are not to scale.
3. Dimensions do not provide allowances for door silencers, weather stripping, sound proofing or other additions to door or door frames.

Dimensions shown in parentheses ( ) are in millimeters.

**DRAWING IS NOT TO SCALE!**

**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template




# L/LV/LM/LMV-Series

## Model L0170



Door Type: Wood or composite, flat  
Trim: Rose

Trim is mounted on one side only

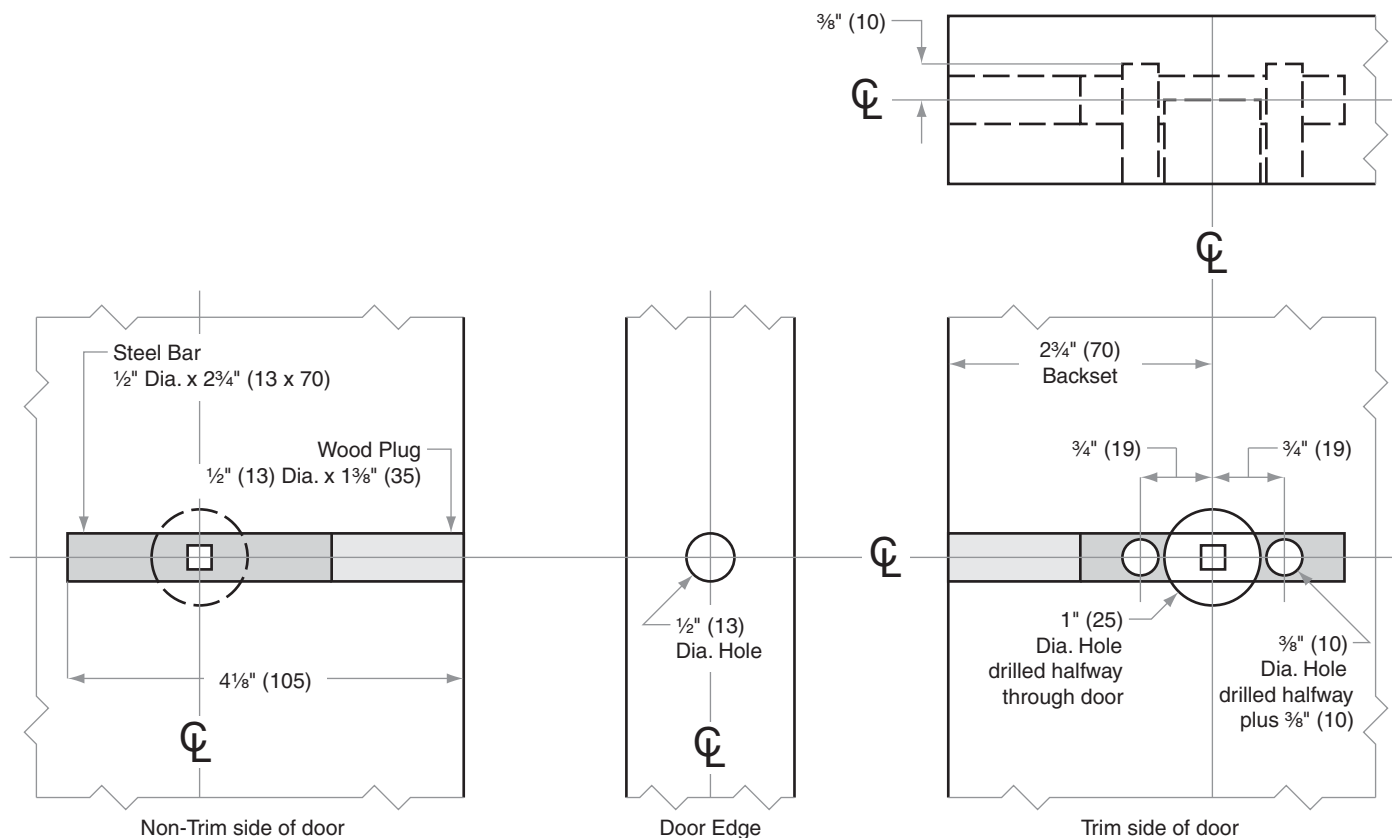

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L739 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**  
**We can help you find the correct guide for your product and application!**

Door preparation template

# L739




# L/LV/LM/LMV-Series

## Model L0170

**Door Type:** Wood or composite, flat  
**Trim:** N Escutcheon  
**Notes:** Not to be used with L Escutcheon

Trim is mounted on one side only

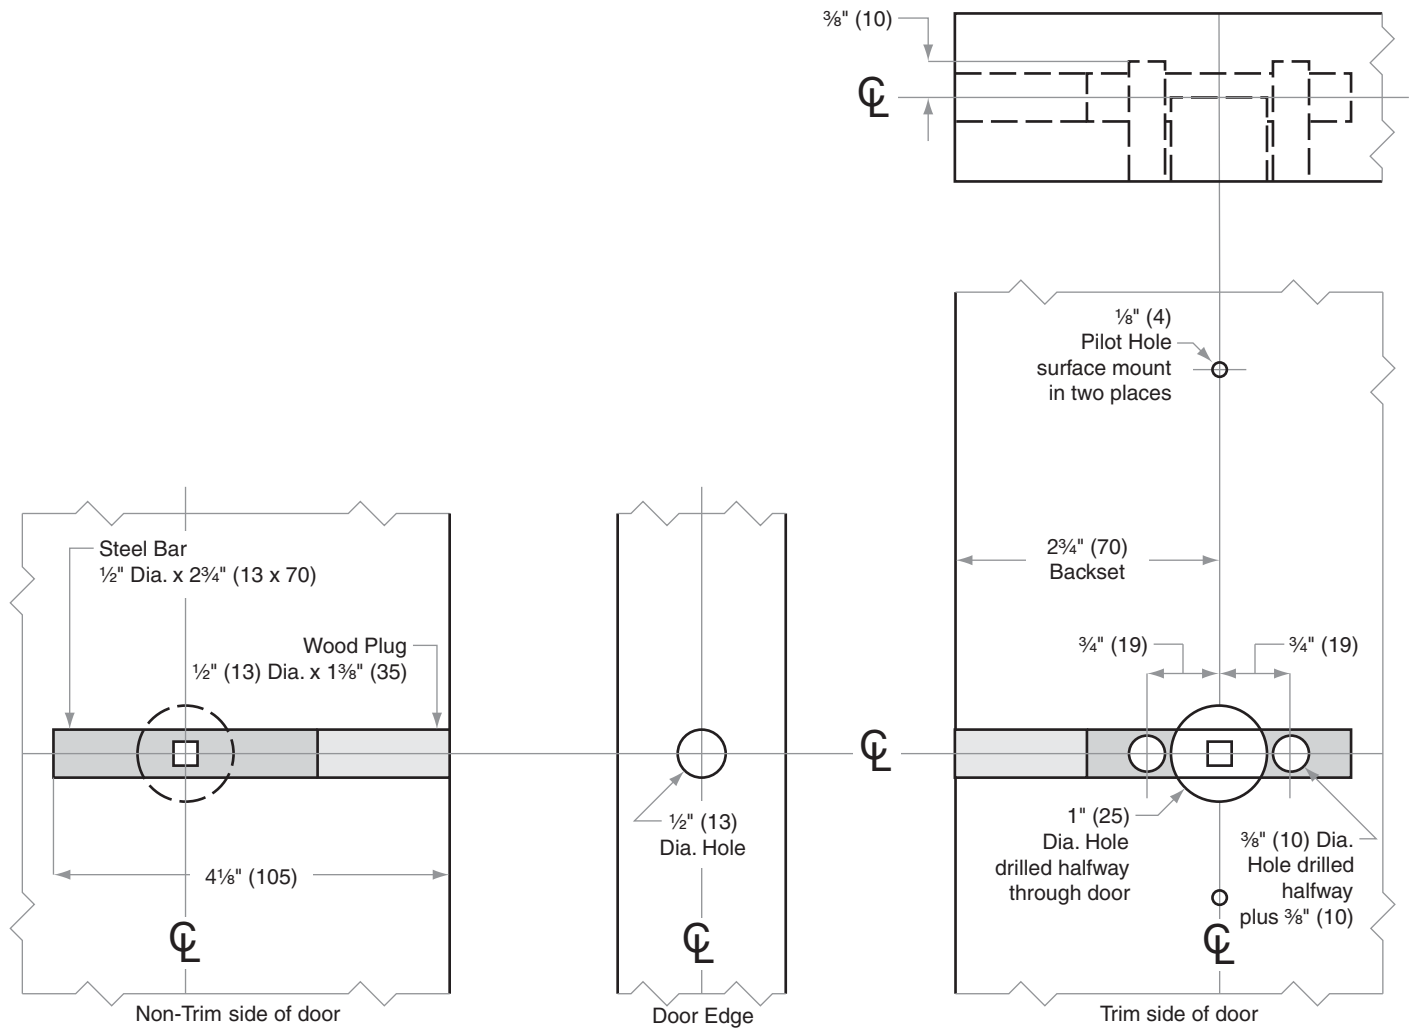

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L741 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**  
**We can help you find the correct guide for your product and application!**

Door preparation template  
**L741**





# L/LV/LM/LMV-Series

## Model L0172

Door Type: Wood or composite, flat  
Trim: Rose

Left Hand (LH) door shown

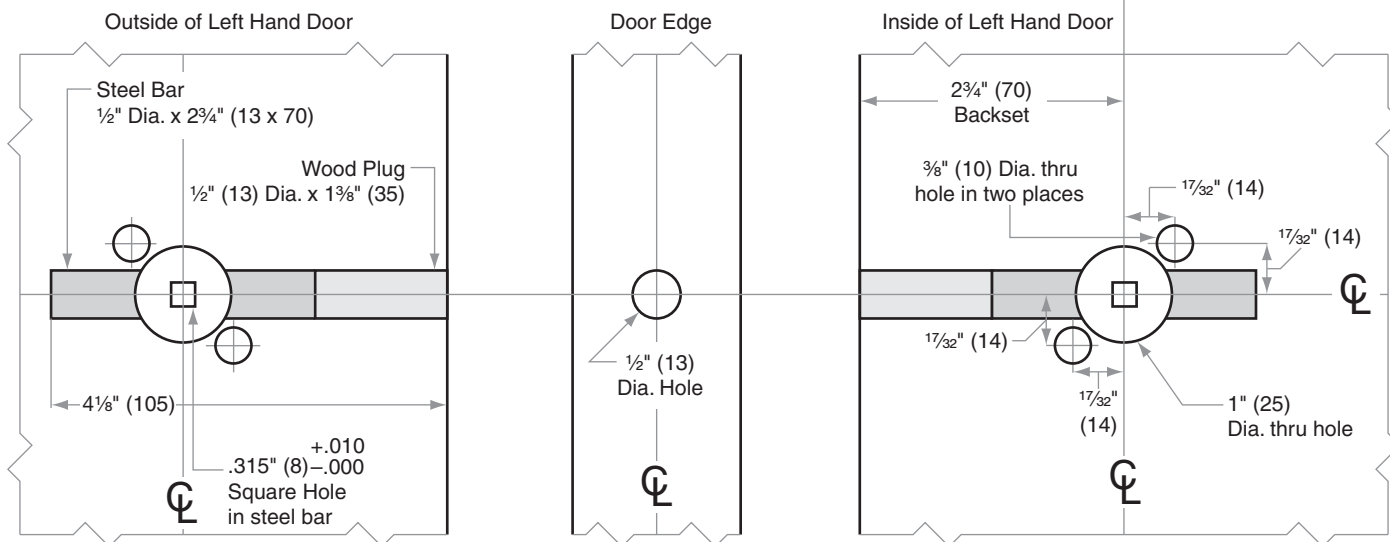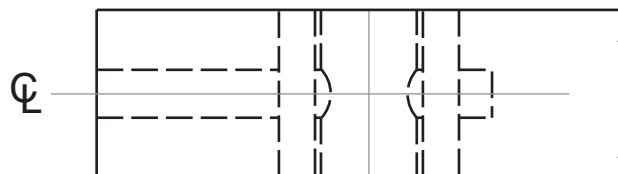

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L743 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**  
**We can help you find the correct guide for your product and application!**

Door preparation template

# L743






# L/LV/LM/LMV-Series

## Model L0172

Door Type: Metal, flat or beveled  
Trim: Rose

**IMPORTANT! Suitable reinforcement required for metal door installation**

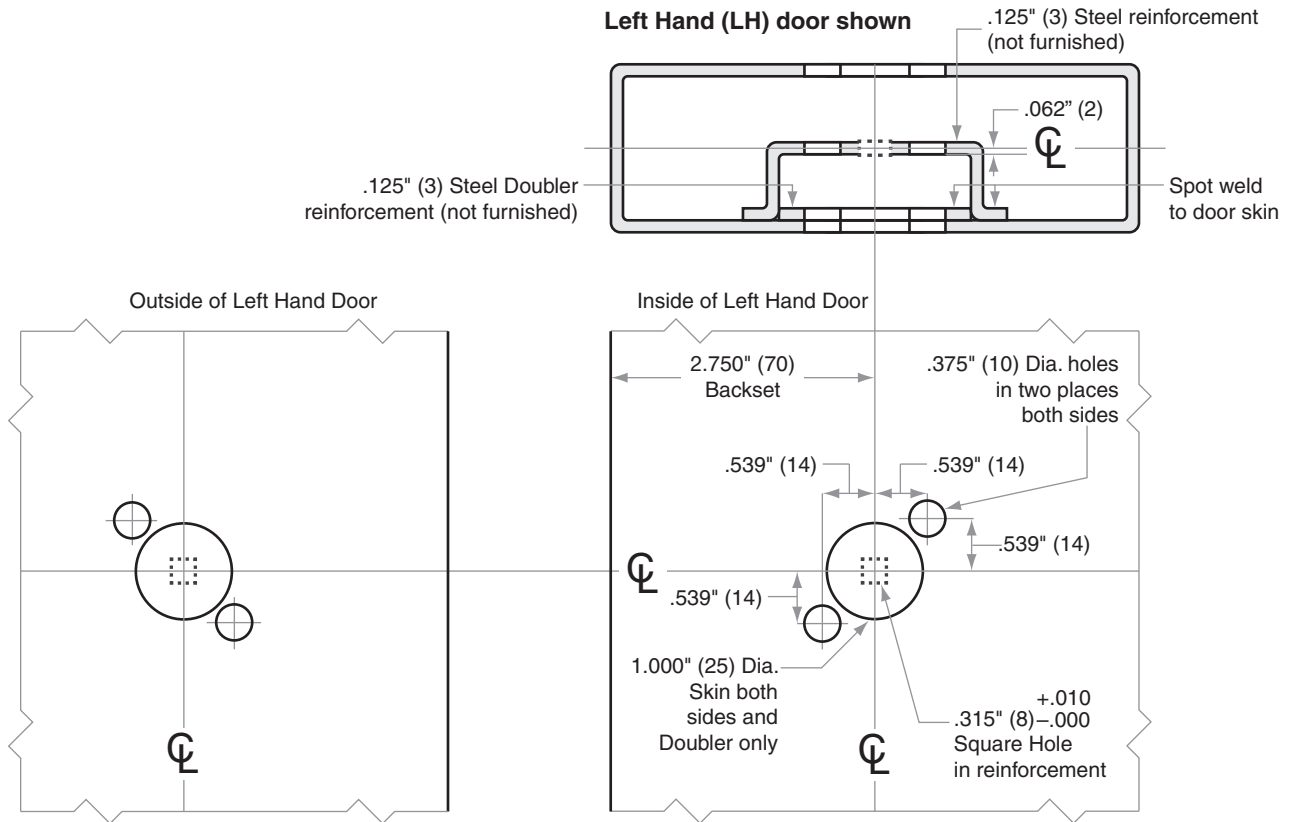

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L744 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**  
**We can help you find the correct guide for your product and application!**

Door preparation template

# L744




# L/LV/LM/LMV-Series

## Model L0172

Door Type: Wood or composite, flat  
 Trim: Escutcheon

Left Hand (LH) door shown

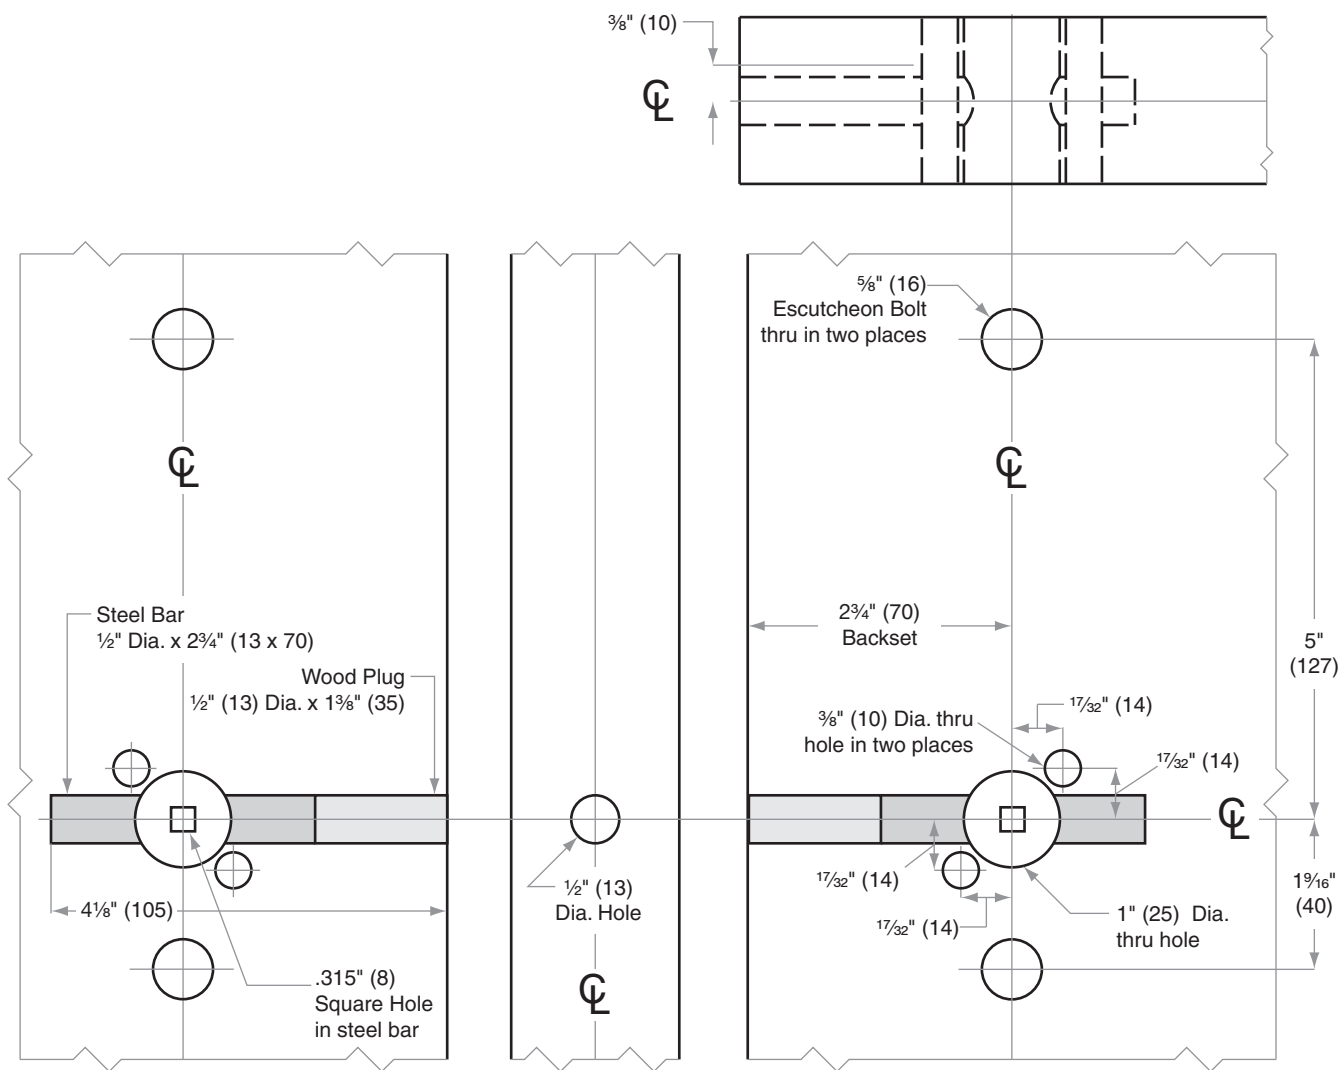

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L745 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
 Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L745




# L/LV/LM/LMV-Series

## Model L0172

Door Type: Metal, flat or beveled  
Trim: Escutcheon

**IMPORTANT! Suitable reinforcement required for metal door installation**

Left Hand (LH) door shown

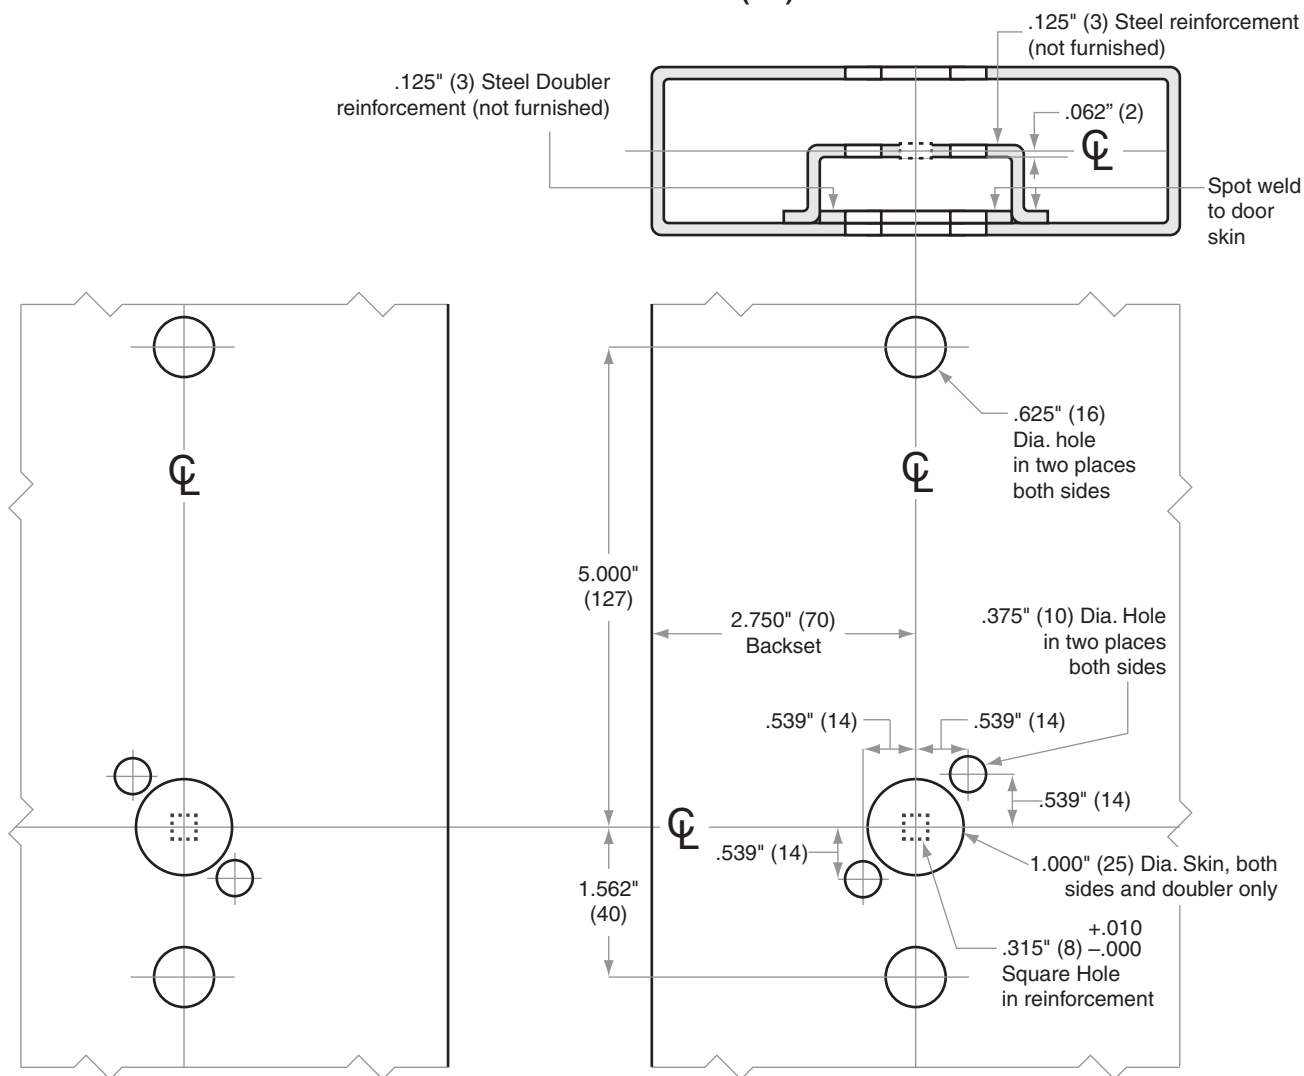

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L746 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**  
**We can help you find the correct guide for your product and application!**

Door preparation template  
**L746**




# L/LV/LM/LMV-Series

## Model L0170



Door Type: Metal, flat or beveled  
Trim: Rose

**IMPORTANT! Suitable reinforcement required for metal door installation**

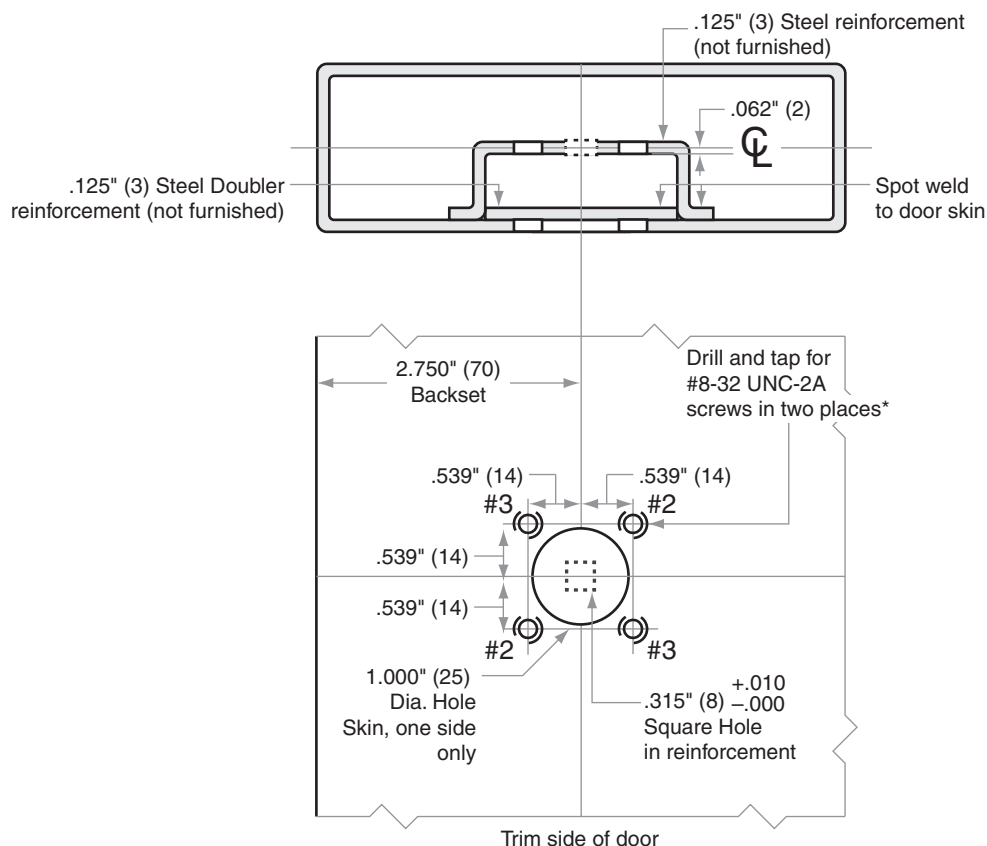

**\* Drill and tap two holes at locations #2 for outside RH/RHR or inside LH/LHR doors or Drill and tap two holes at locations #3 for outside LH/LHR or inside RH/RHR doors**

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L781 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**  
**We can help you find the correct guide for your product and application!**

Door preparation template

# L781




# L/LV/LM/LMV-Series

## Model L0170



Door Type: Metal, flat or beveled  
 Trim: Escutcheon

**IMPORTANT! Suitable reinforcement required for metal door installation**

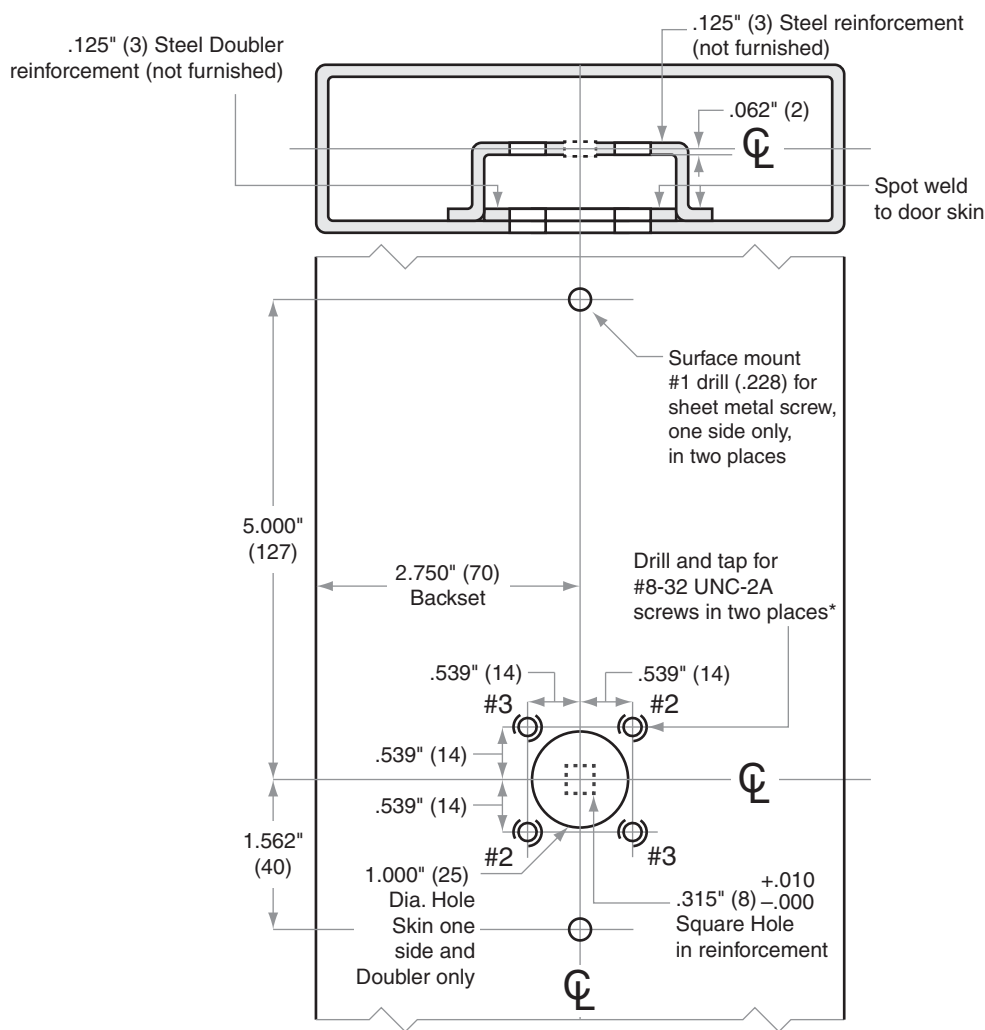

**\*Drill two holes at locations #2 for outside RH/RHR or  
 Drill two holes at locations #3 for outside LH/LHR**

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L782 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for  
 your product and application!**

Door preparation template

# L782




# L/LV/LM/LMV-Series

## Model L9175, LM9325

Door Type: Metal, flat or beveled  
 Trim: Rose

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

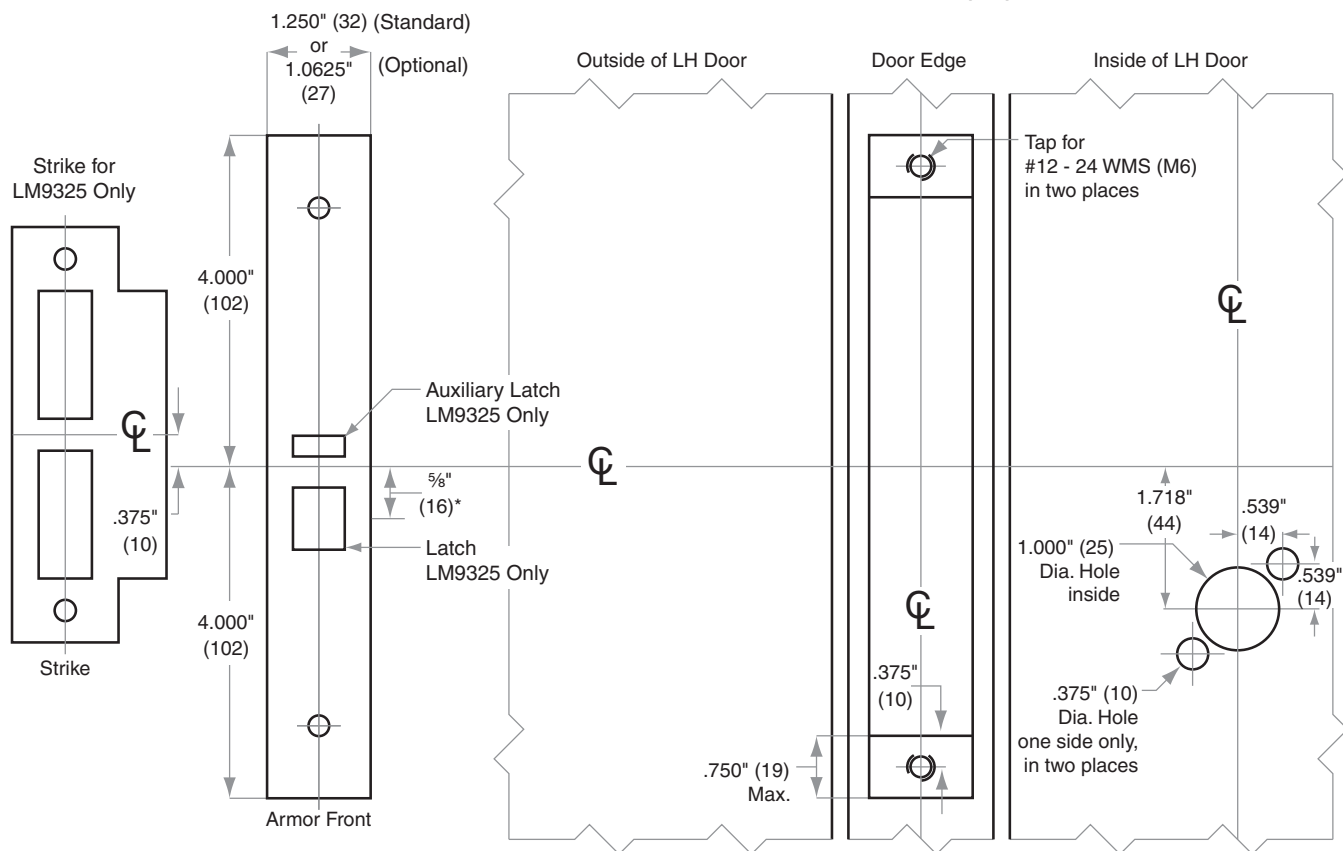

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L806 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L806




# L/LV/LM/LMV-Series

## Model L9176

Door Type: Metal, flat or beveled  
Trim: Rose

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

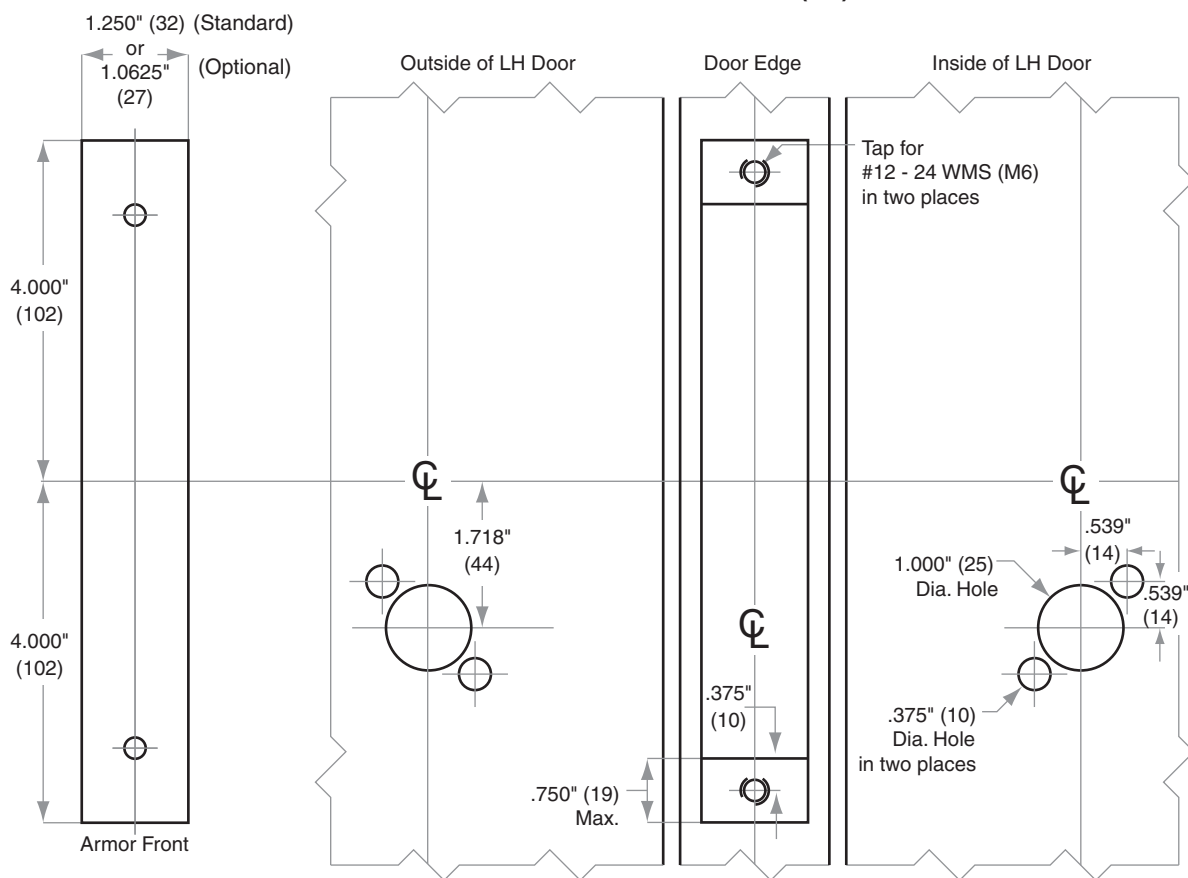

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L807 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**  
**We can help you find the correct guide for your product and application!**

Door preparation template

# L807




# L/LV/LM/LMV-Series

## Model L9025

Door Type: Wood or composite, flat  
 Trim: Rose

For Case dimensions see Template L1

Left Hand (LH) Door Shown

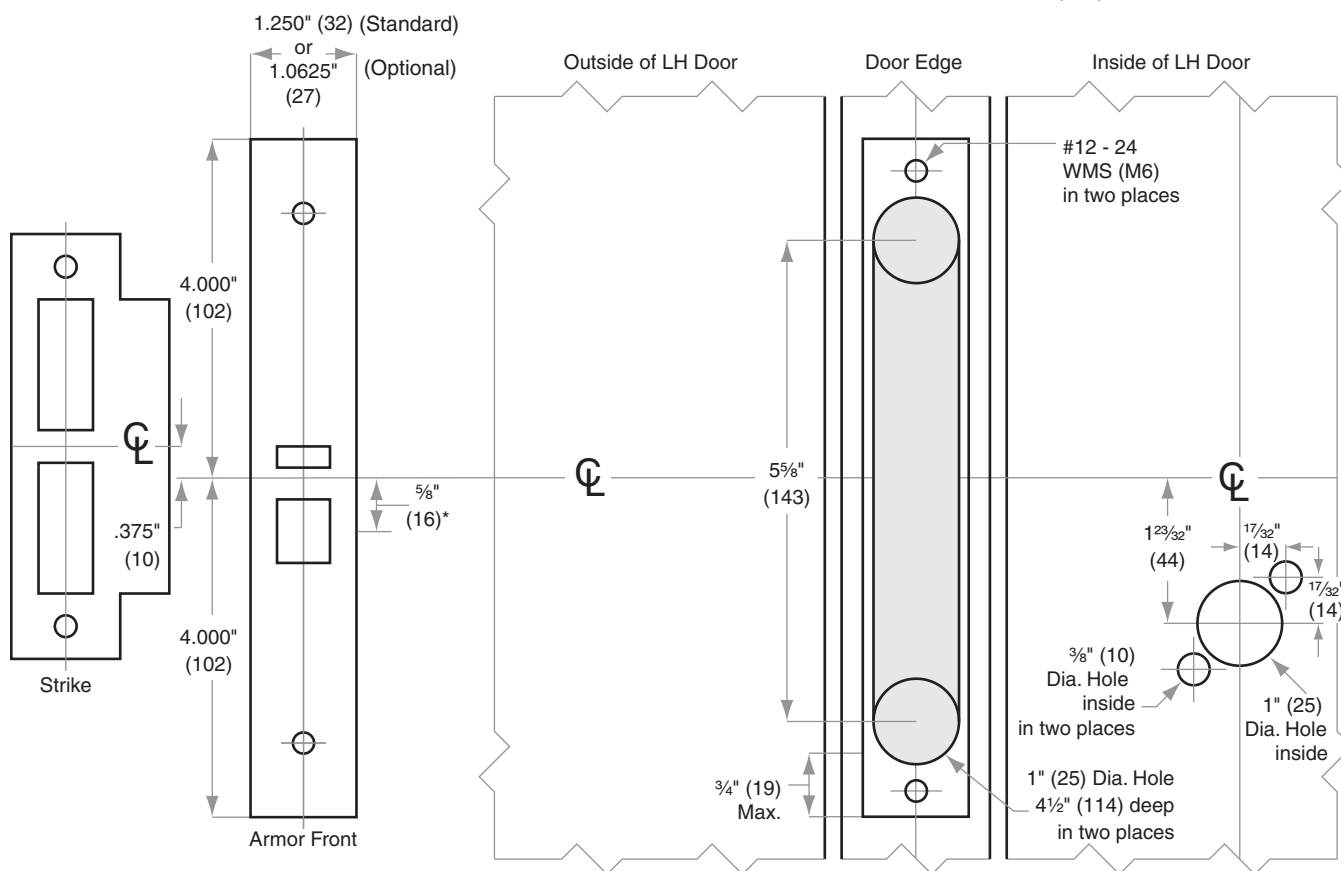

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L808 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
 Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L808






# L/LV/LM/LMV-Series

## Model L9025

Door Type: Metal, flat or beveled  
 Trim: Rose

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

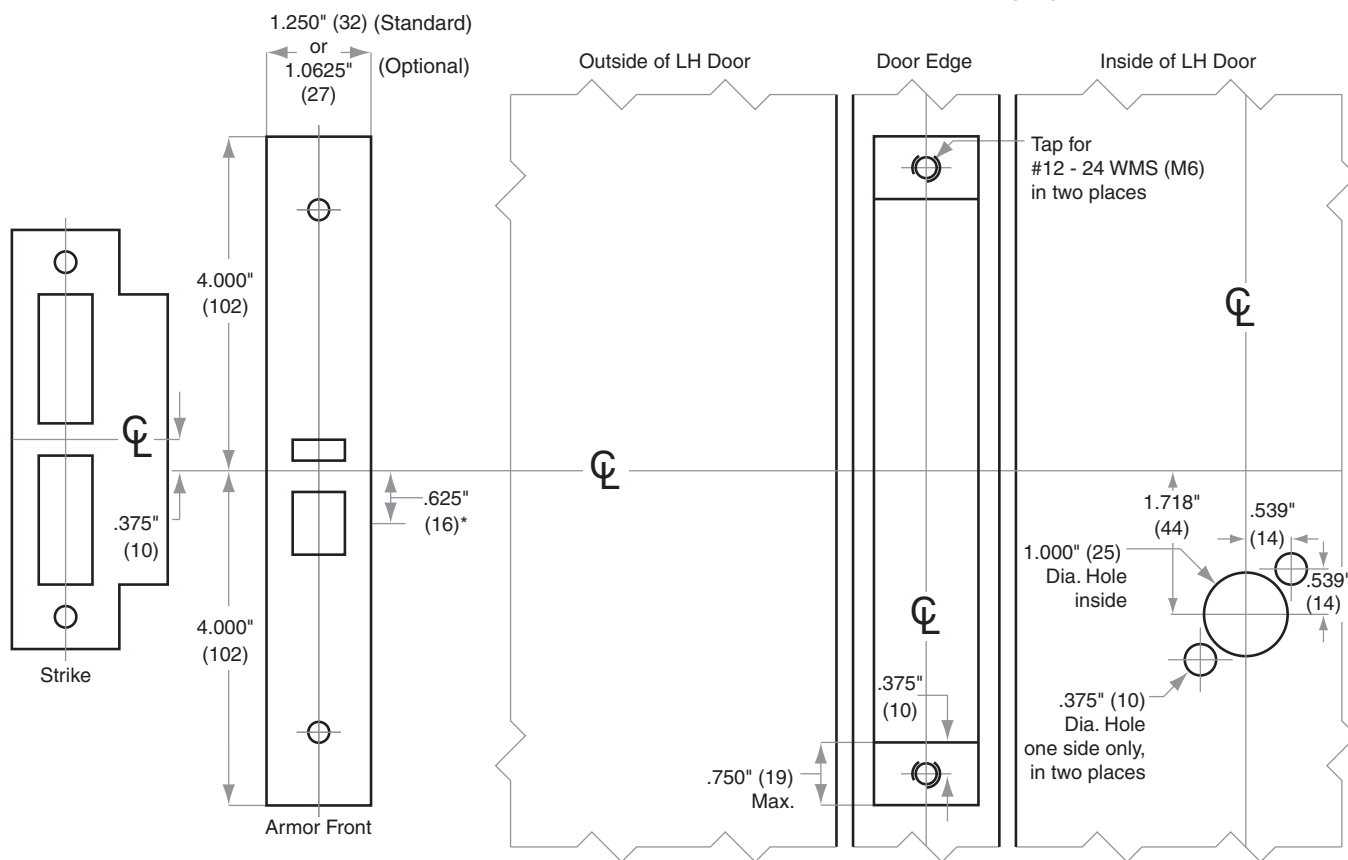

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L809 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
 Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L809




# L/LV/LM/LMV-Series

## Model L9025

Door Type: Wood or composite, flat  
 Trim: Escutcheon

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

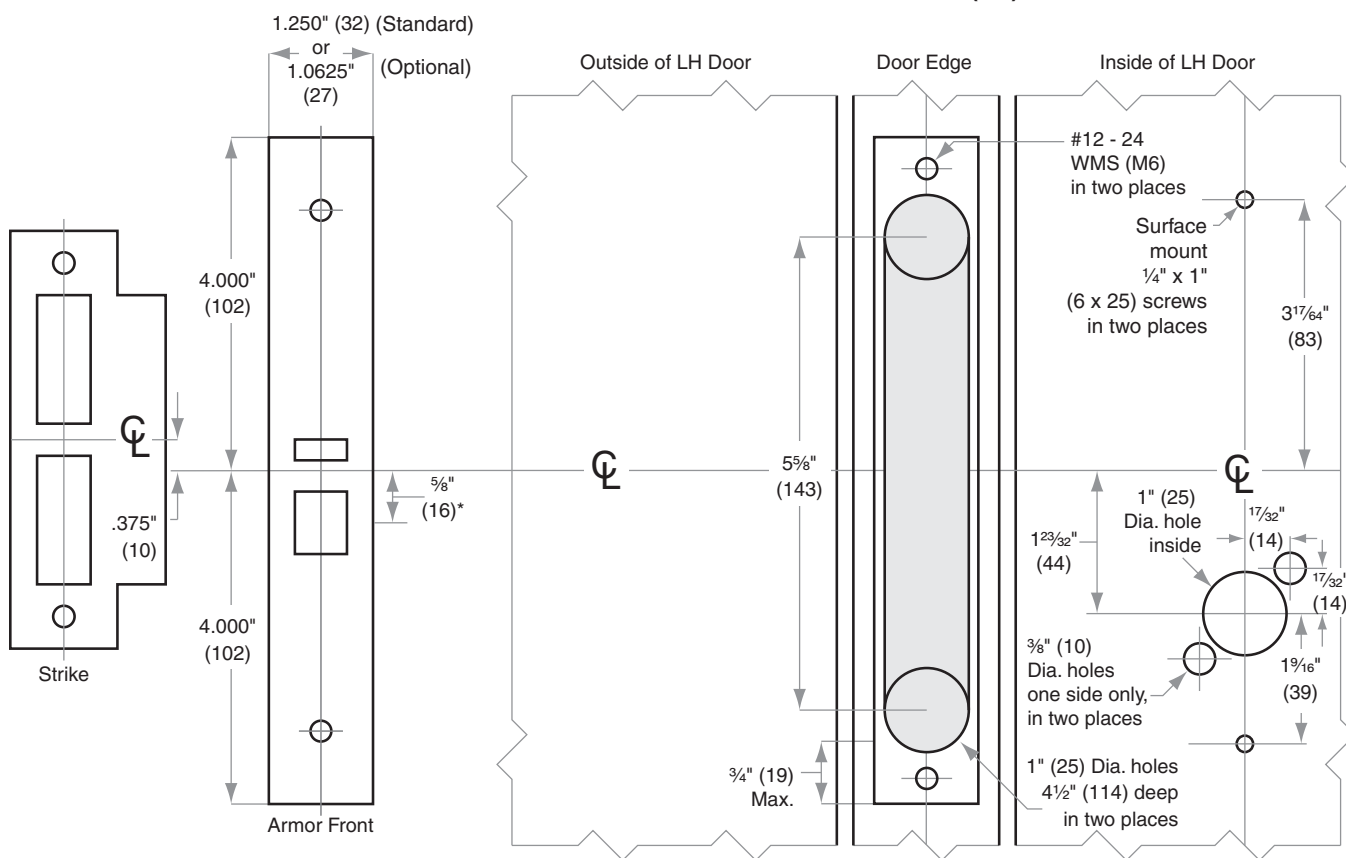

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L810 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
 Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L810




# L/LV/LM/LMV-Series Model L9025

Door Type: Metal, flat or beveled  
Trim: Escutcheon

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

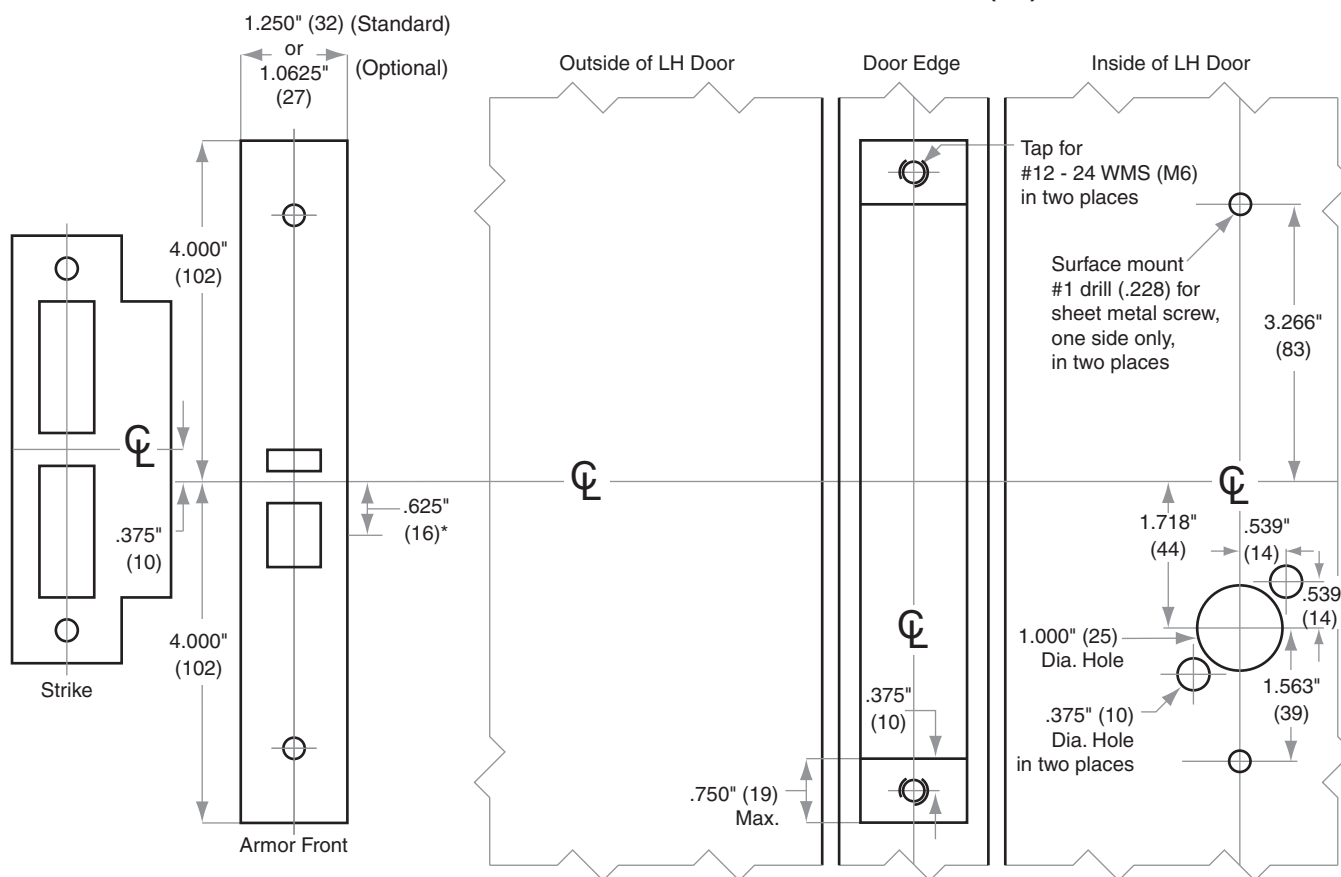

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L811 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L811



# L/LV/LM/LMV-Series


## Model L9026



Door Type: Wood or composite, flat  
 Trim: Rose

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

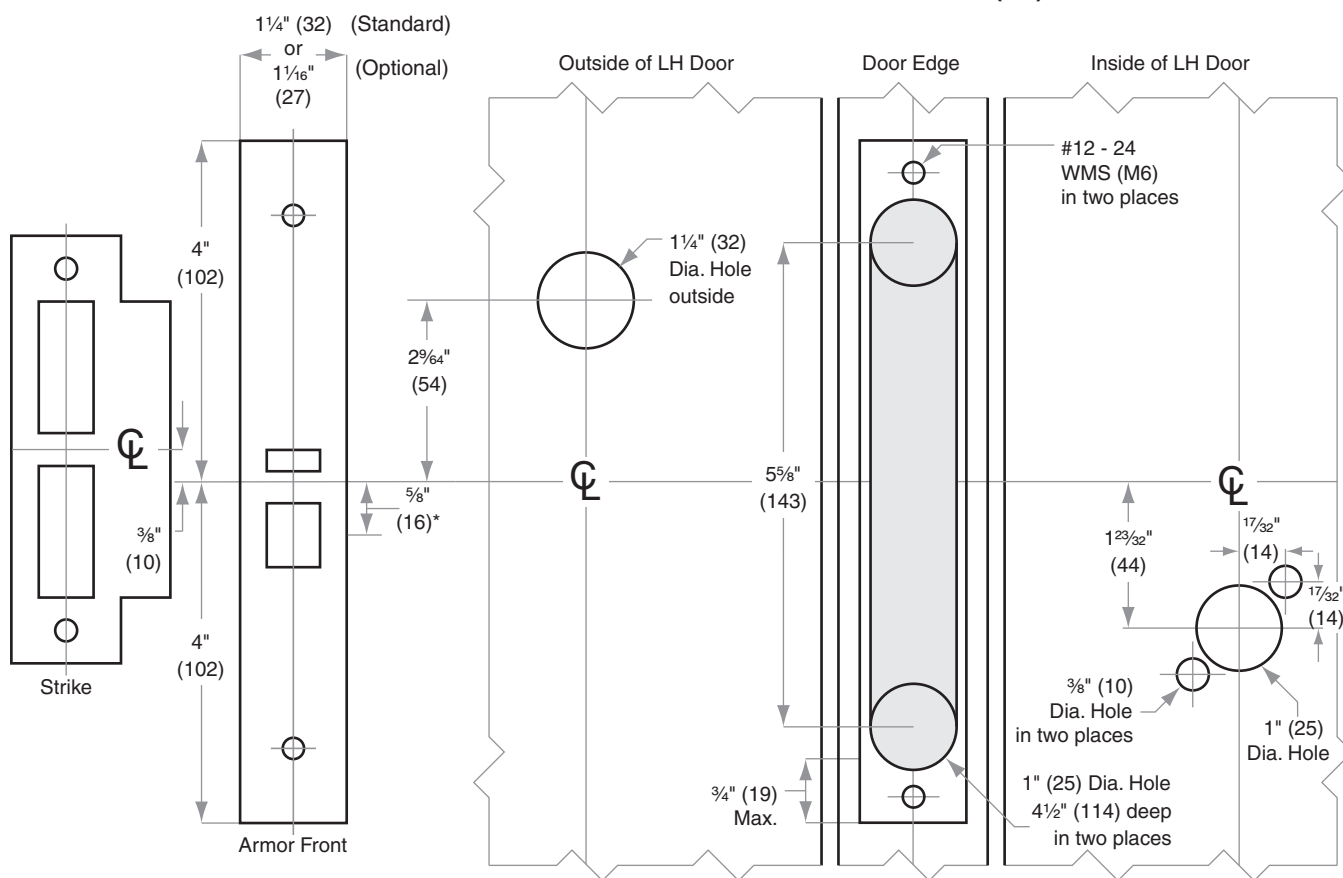

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L812 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
 Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L812




# L/LV/LM/LMV-Series

## Model L9026

Door Type: Metal, flat or beveled  
 Trim: Rose

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

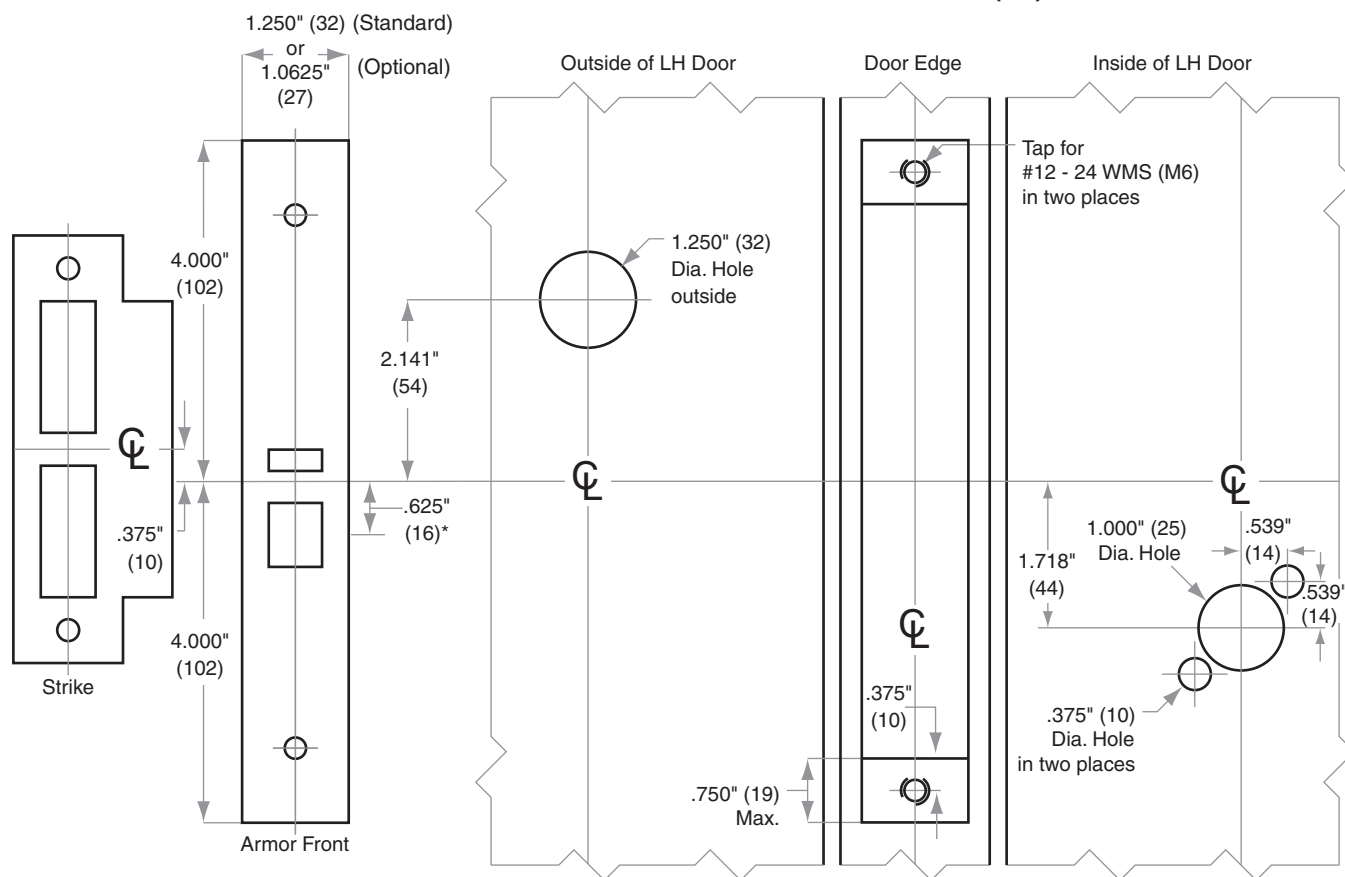

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L813 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
 Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L813




# L/LV/LM/LMV-Series

## Model L9026

Door Type: Wood or composite, flat  
 Trim: Escutcheon

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

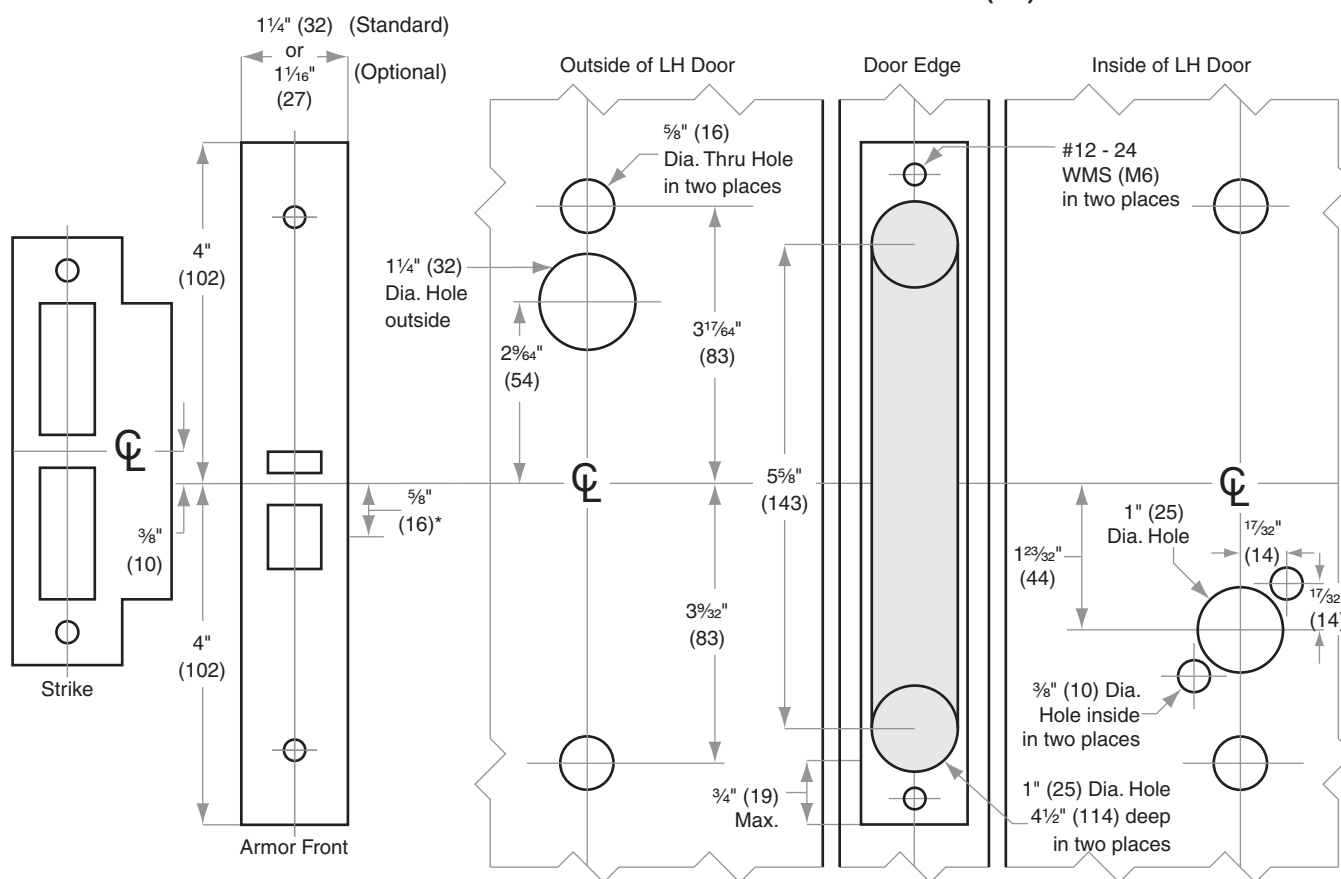

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L814 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
 Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L814




# L/LV/LM/LMV-Series

## Model L9026

Door Type: Metal, flat or beveled  
 Trim: Escutcheon

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

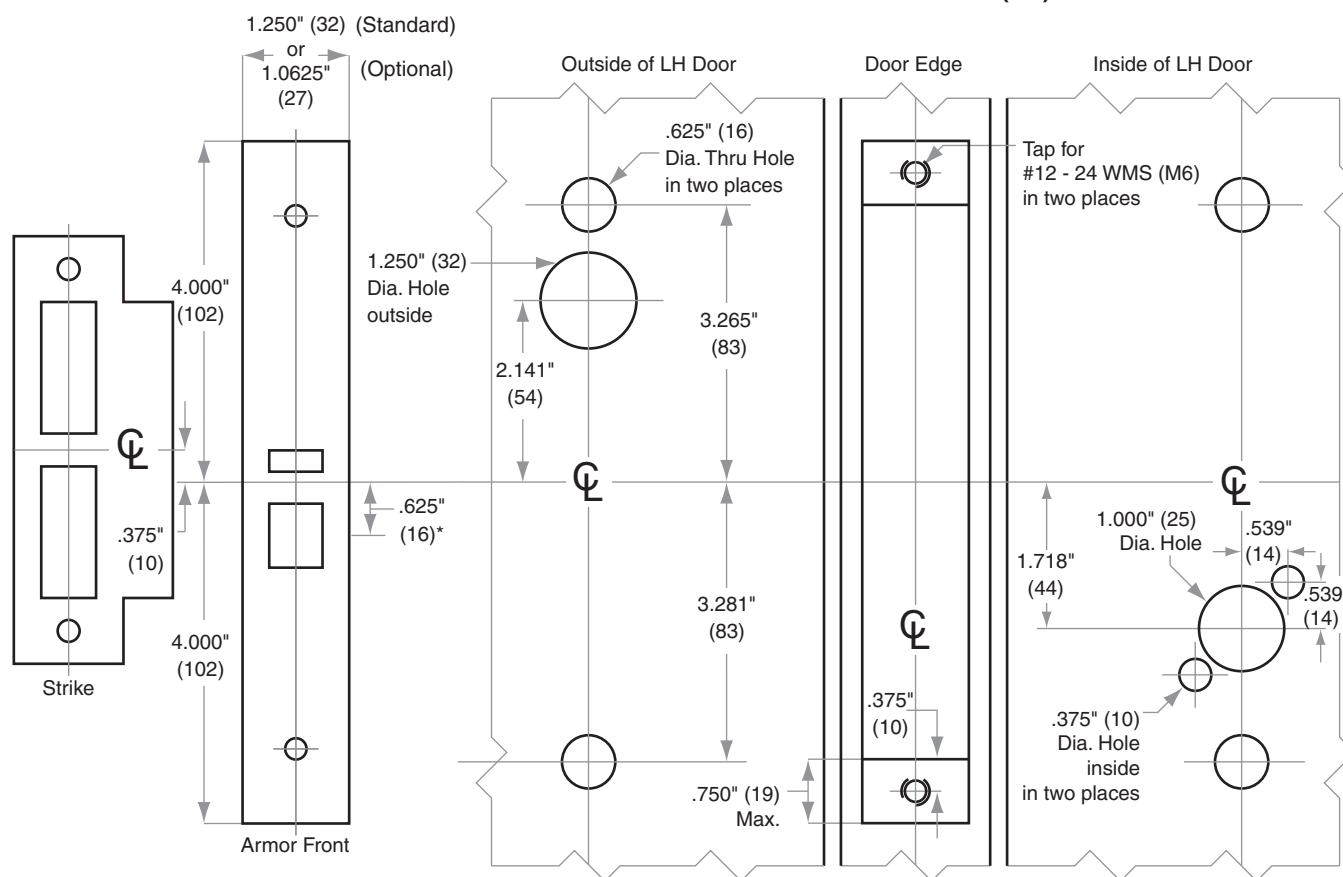

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L815 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
 Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L815



# L/LV/LM/LMV-Series

Model L/LV9060, L/LV/LM/LMV9071, L/LV9077,  
L/LV9082/EL/EU, L/LV9457, L/LV9458, L9466, L/LV9482


Door Type: Wood or composite, flat or beveled

Trim: Rose

This template should not be used for HSLR trim. Use template L965 for HSLR trim.

**For Case and Strike dimensions, see Template L1**  
**Refer to Template L1 for information to prepare**  
**the door for wire routing**

### Left Hand (LH) Door Shown

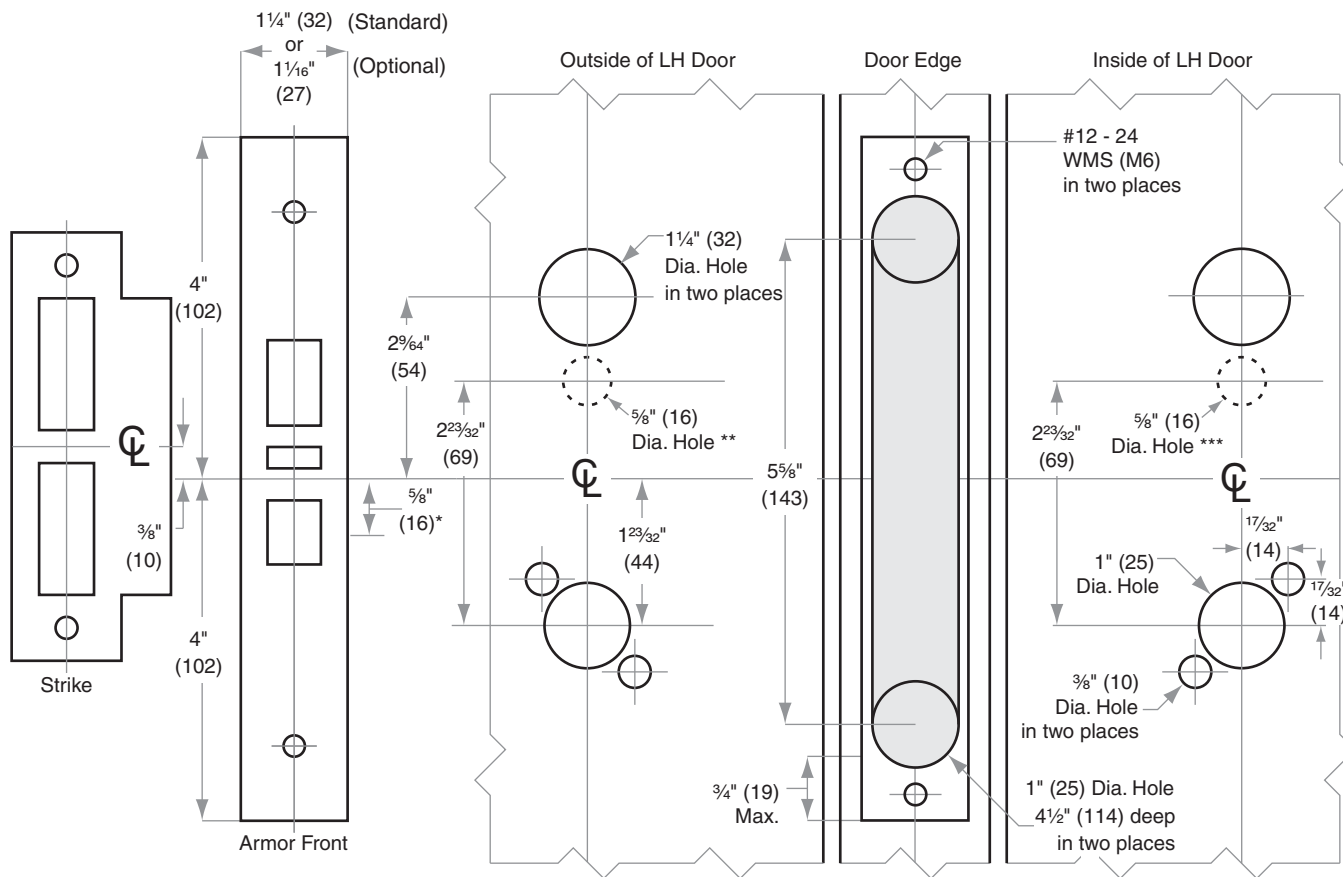

- \* Centerline of Armor Front to Centerline of Latch dimension
- \*\* Additional preparation for L283-721, L283-722, L283-723, L283-724
- \*\*\* Additional preparation for L283-711, L283-712, L283-713, L283-714

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L816 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for**  
**your product and application!**

Door preparation template

# L816





# L/LV/LM/LMV-Series

Model L/LV9060, L/LV/LM/LMV9071, L/LV9077,  
L/LV9082/EL/EU, L/LV9457, L/LV9458, L9466,  
L/LV9482, LM/LMV9371


Door Type: Metal, flat or beveled

Trim: Rose

This template should not be used for HSLR trim. Use template L966 for HSLR trim.

**For Case and Strike dimensions, see Template L1**  
**Refer to Template L1 for information to prepare**  
**the door for wire routing**

## Left Hand (LH) Door Shown

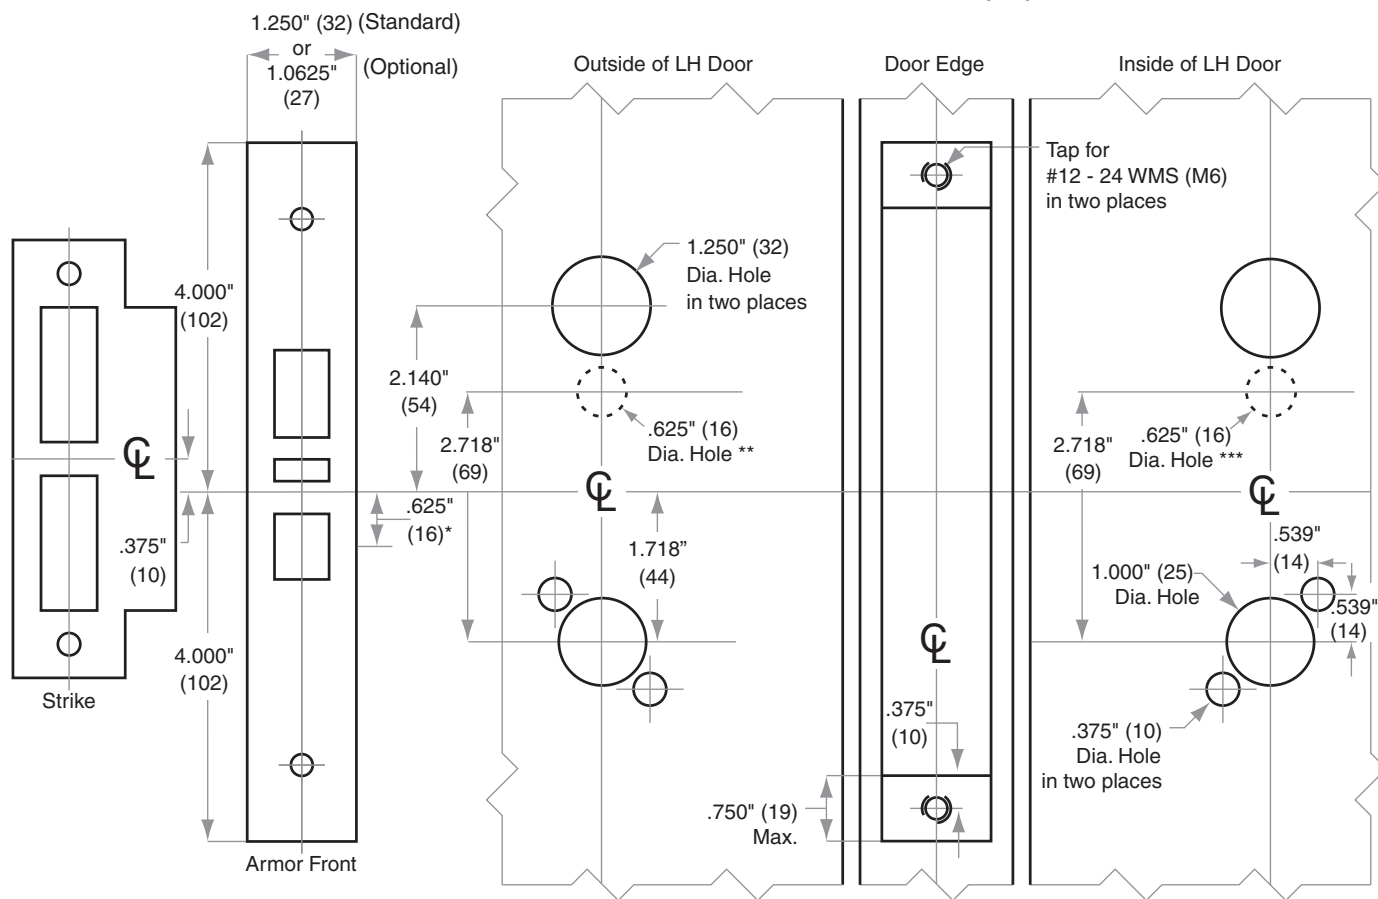

- \* Centerline of Armor Front to Centerline of Latch dimension
- \*\* Additional preparation for L283-721, L283-722, L283-723, L283-724
- \*\*\* Additional preparation for L283-711, L283-712, L283-713, L283-714

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L817 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L817



# L/LV/LM/LMV-Series


Model L/LV9486, L/LV9496



Door Type: Wood or composite, flat or beveled  
 Trim: Rose

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

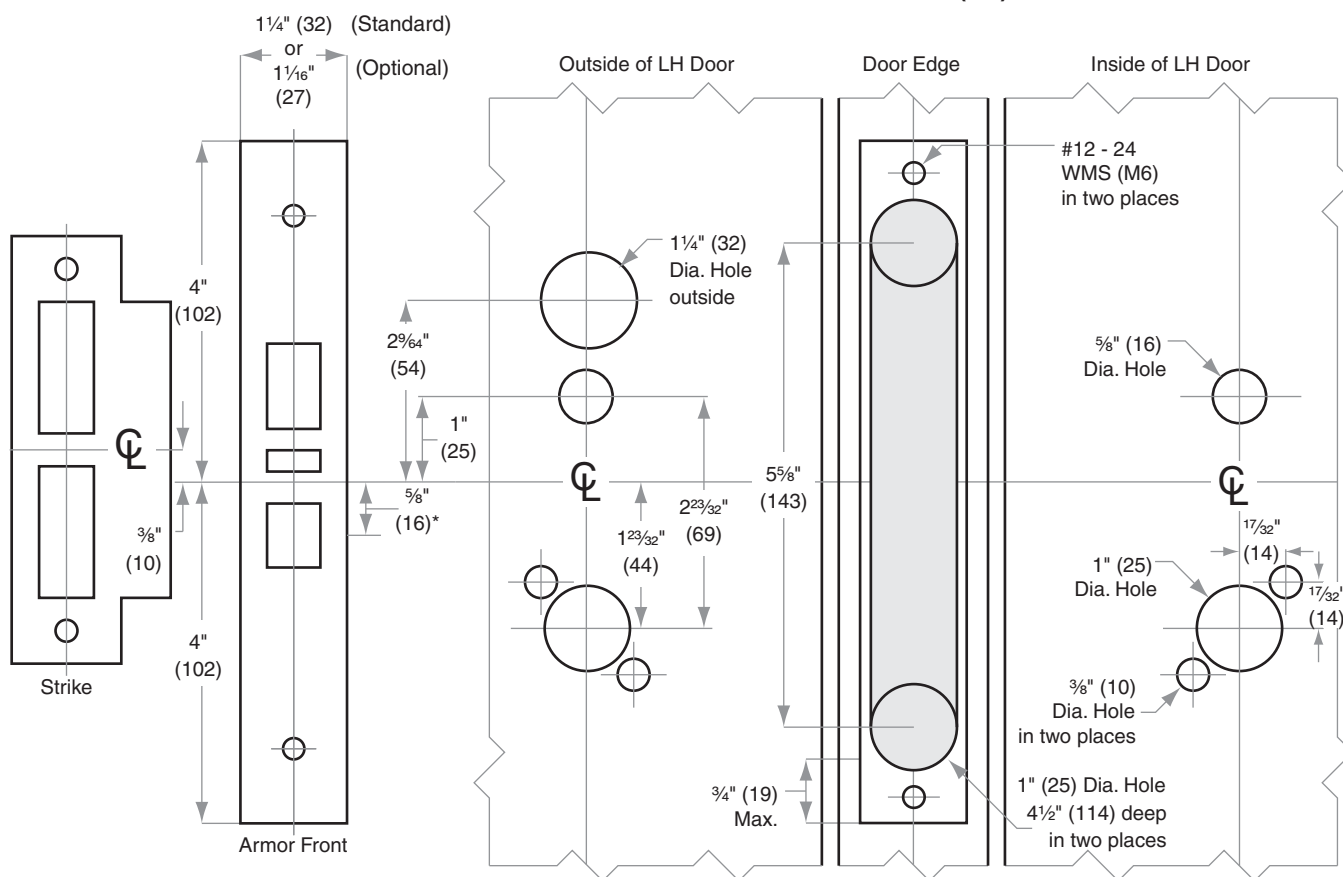

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L820 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
 Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L820




# L/LV/LM/LMV-Series

Model L/LV9486, L/LV9496

Door Type: Metal, flat or beveled  
Trim: Rose

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

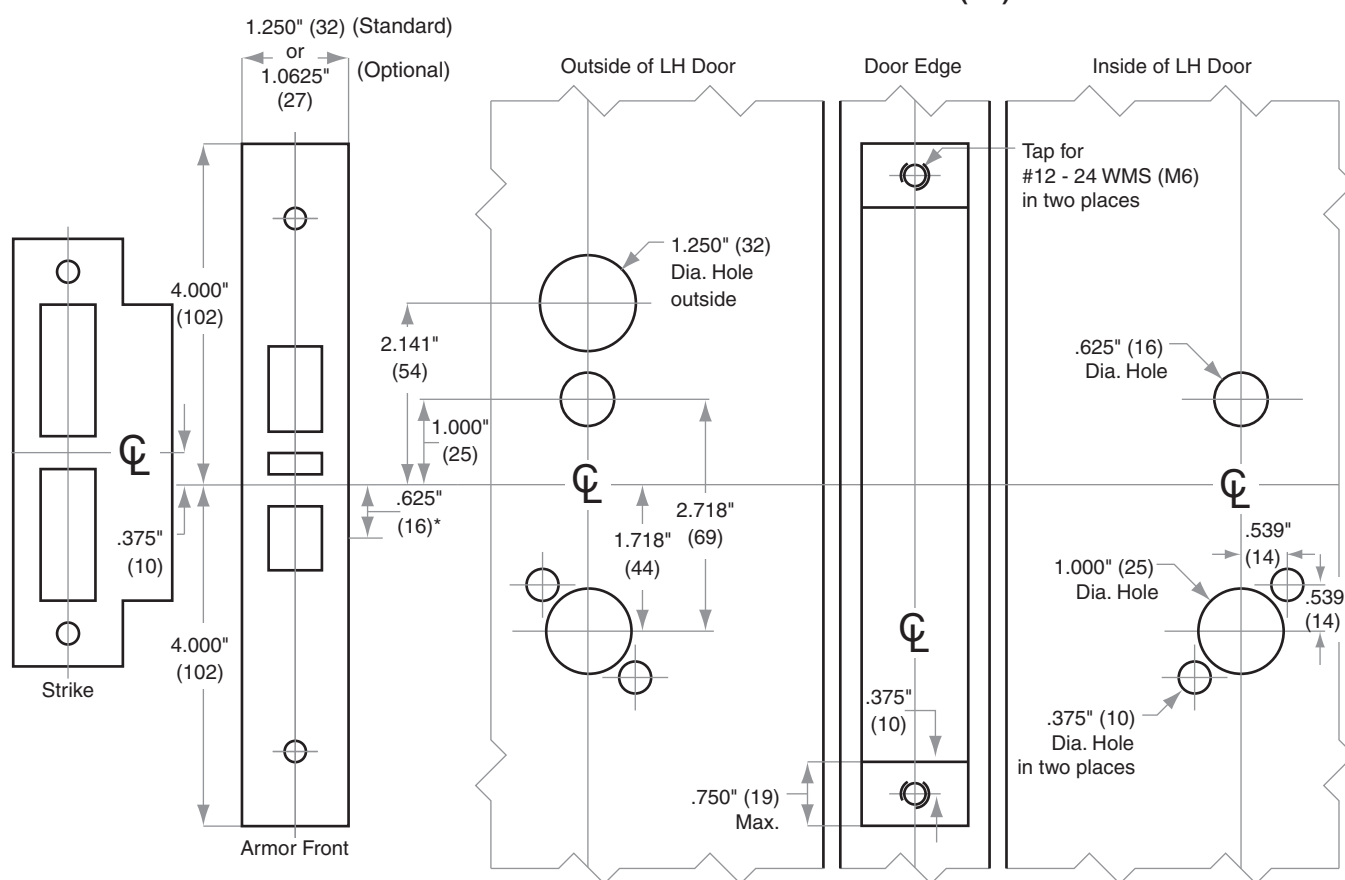

\*Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L821 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L821



# L/LV/LM/LMV-Series

Model L/LV9050, L/LV9056, L/LV9453, L/LV9456, L9473, L/LV9480, L/LV9485


Door Type: Wood or composite, flat or beveled

Trim: Escutcheon

This template should not be used for HSLR trim. Use template L965 for HSLR trim.

**For Case and Strike dimensions, see Template L1**

## Left Hand (LH) Door Shown

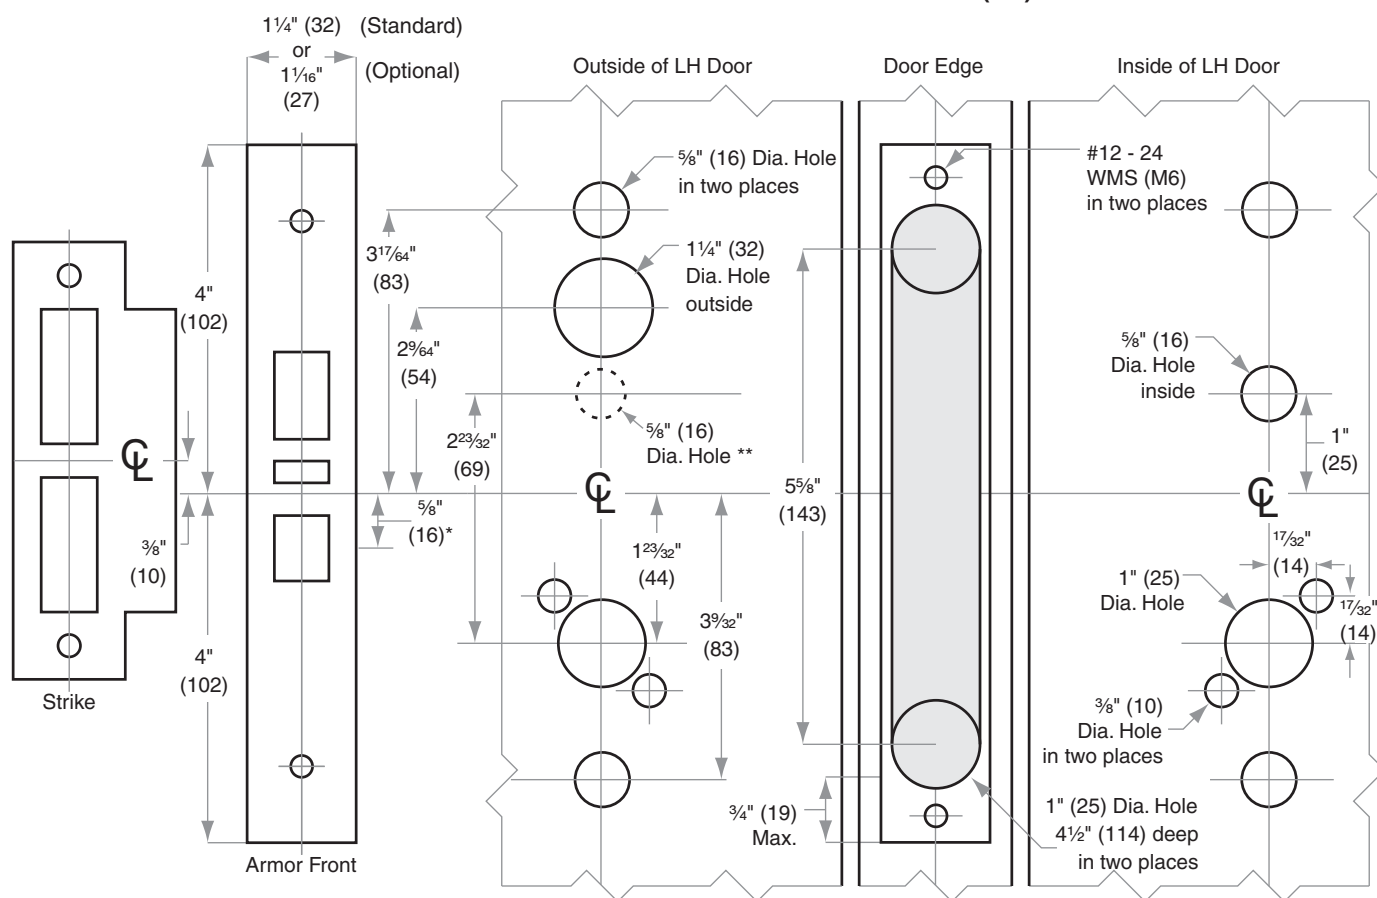

\* Centerline of Armor Front to Centerline of Latch dimension  
 \*\* Additional preparation for L283-721, L283-722, L283-723, L283-724

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L826 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**  
**We can help you find the correct guide for your product and application!**

Door preparation template

# L826



# L/LV/LM/LMV-Series

Model L/LV/LM/LMV9050, L/LV/LM/LMV9056, L/LV9453, L/LV9456, L9473, L/LV9480, L/LV9485, LM/LMV9350, LM/LMV9356


Door Type: Metal, flat or beveled

Trim: Escutcheon

This template should not be used for HSLR trim. Use template L966 for HSLR trim.

For Case and Strike dimensions, see Template L1

## Left Hand (LH) Door Shown

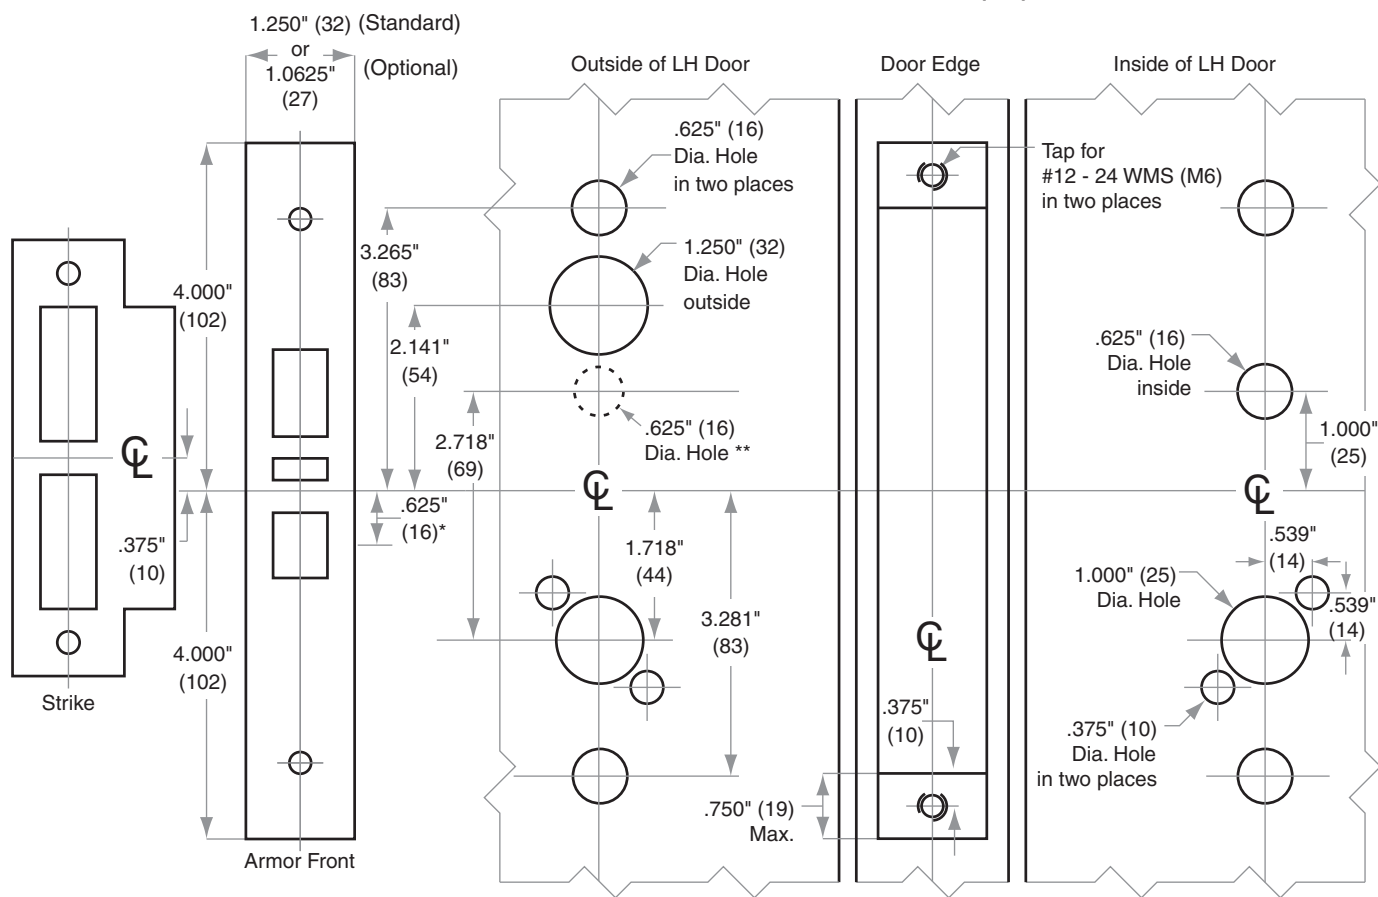

- \* Centerline of Armor Front to Centerline of Latch dimension
- \*\* Additional preparation for L283-721, L283-722, L283-723, L283-724

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L827 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L827



# L/LV/LM/LMV-Series

Model L/LV9060, L/LV9071, L/LV9077, L/LV9082/EL/EU,  
L/LV9457, L/LV9458, L9466, L/LV9482


Door Type: Wood or composite, flat or beveled

Trim: Escutcheon

This template should not be used for HSLR trim. Use template L965 for HSLR trim.

**For Case and Strike dimensions, see Template L1  
Refer to Template L1 for information to prepare  
the door for wire routing**

## Left Hand (LH) Door Shown

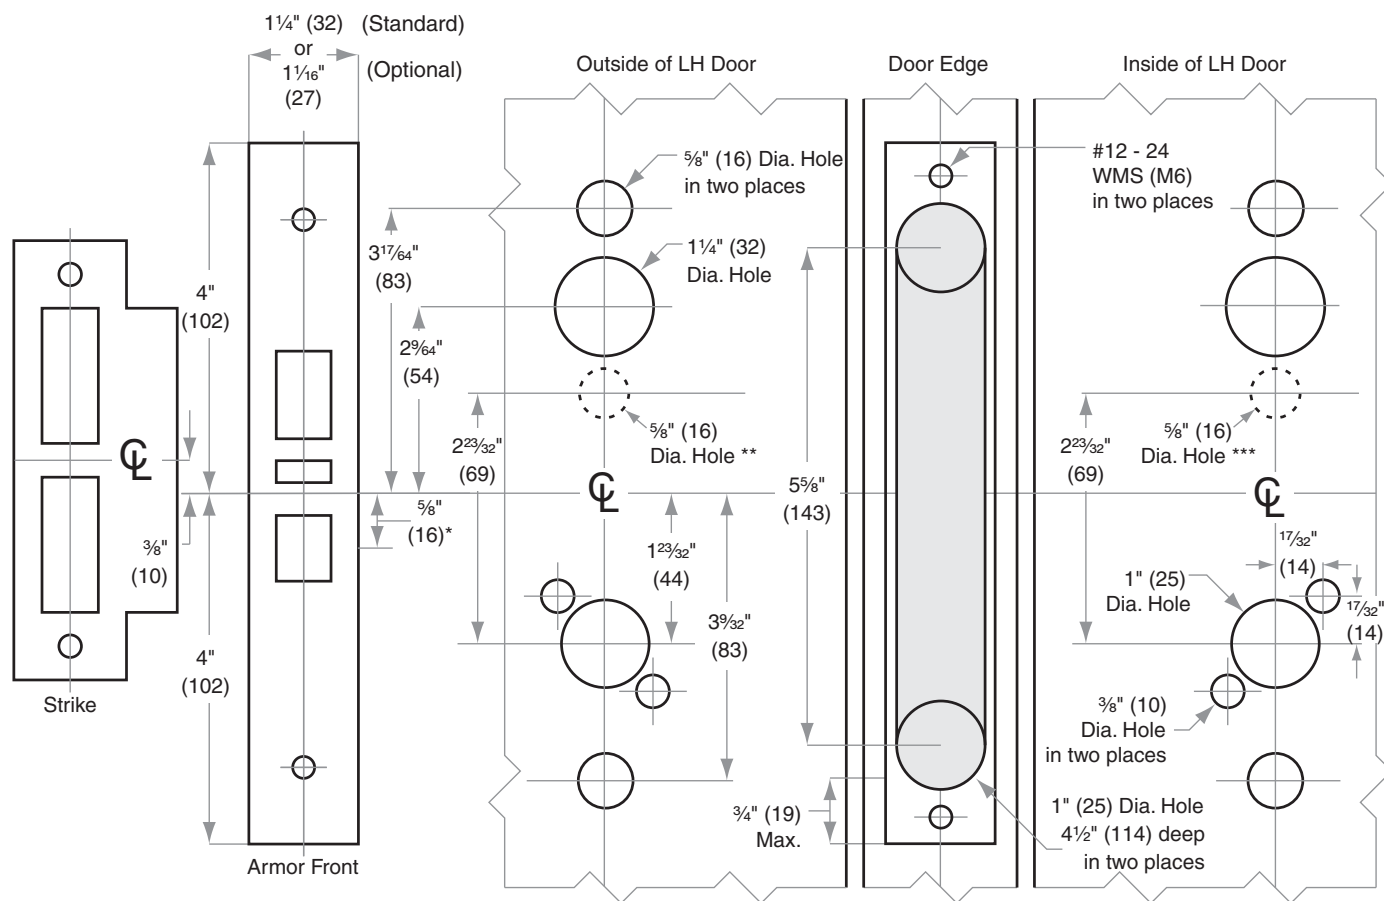

- \* Centerline of Armor Front to Centerline of Latch dimension
- \*\* Additional preparation for L283-721, L283-722, L283-723, L283-724
- \*\*\* Additional preparation for L283-711, L283-712, L283-713, L283-714

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L828 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for  
your product and application!**

Door preparation template

# L828



# L/LV/LM/LMV-Series

Model L/LV9060, L/LV/LM/LMV9071, L/LV9077, L/LV9082EL/EU, L/LV9457, L/LV9458, L9466, L/LV9482, LM/LMV9371


Door Type: Metal, flat or beveled

Trim: Escutcheon

This template should not be used for HSLR trim. Use template L966 for HSLR trim.

**For Case and Strike dimensions, see Template L1**  
**Refer to Template L1 for information to prepare the door for wire routing**

## Left Hand (LH) Door Shown

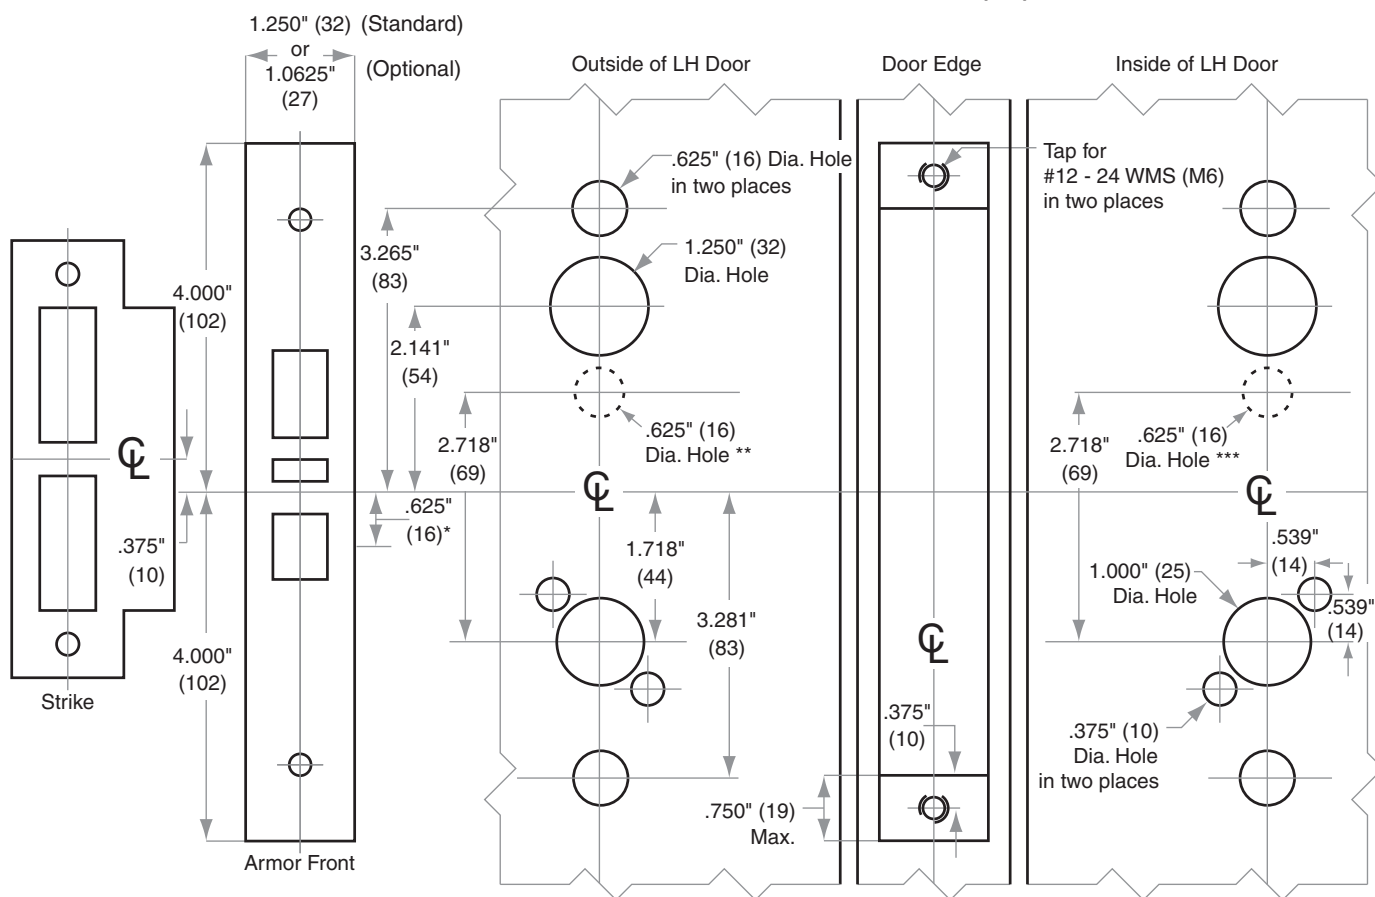

- \* Centerline of Armor Front to Centerline of Latch dimension
- \*\* Additional preparation for L283-721, L283-722, L283-723, L283-724
- \*\*\* Additional preparation for L283-711, L283-712, L283-713, L283-714

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L829 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L829




# L/LV/LM/LMV-Series

## Model L9175

Door Type: Wood or composite, flat or beveled  
Trim: Rose

For Case dimensions see Template L1

### Left Hand (LH) Door Shown

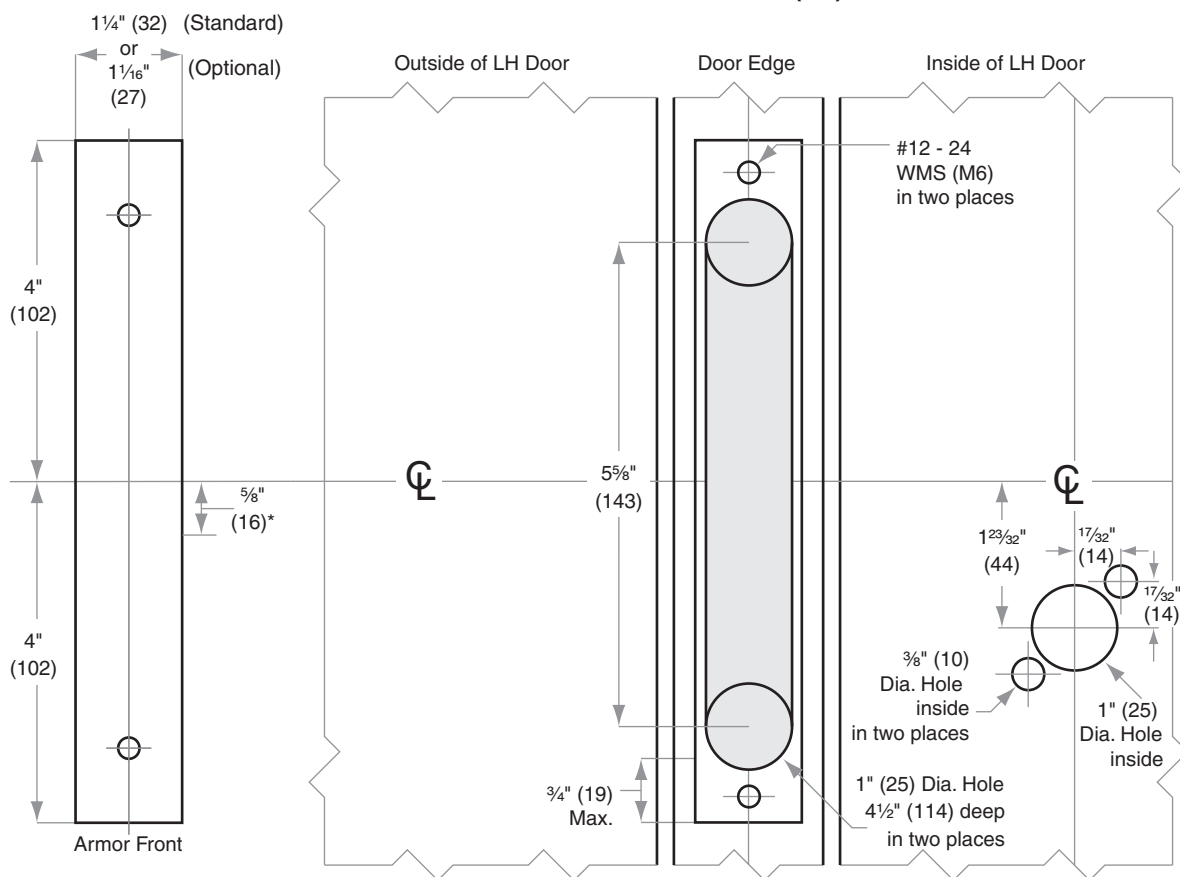

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L851 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
Customer service: 877-671-7011

We can help you find the correct guide for  
your product and application!

Door preparation template

# L851






# L/LV/LM/LMV-Series

## Model L9176

Door Type: Wood or composite, flat or beveled  
 Trim: Rose

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

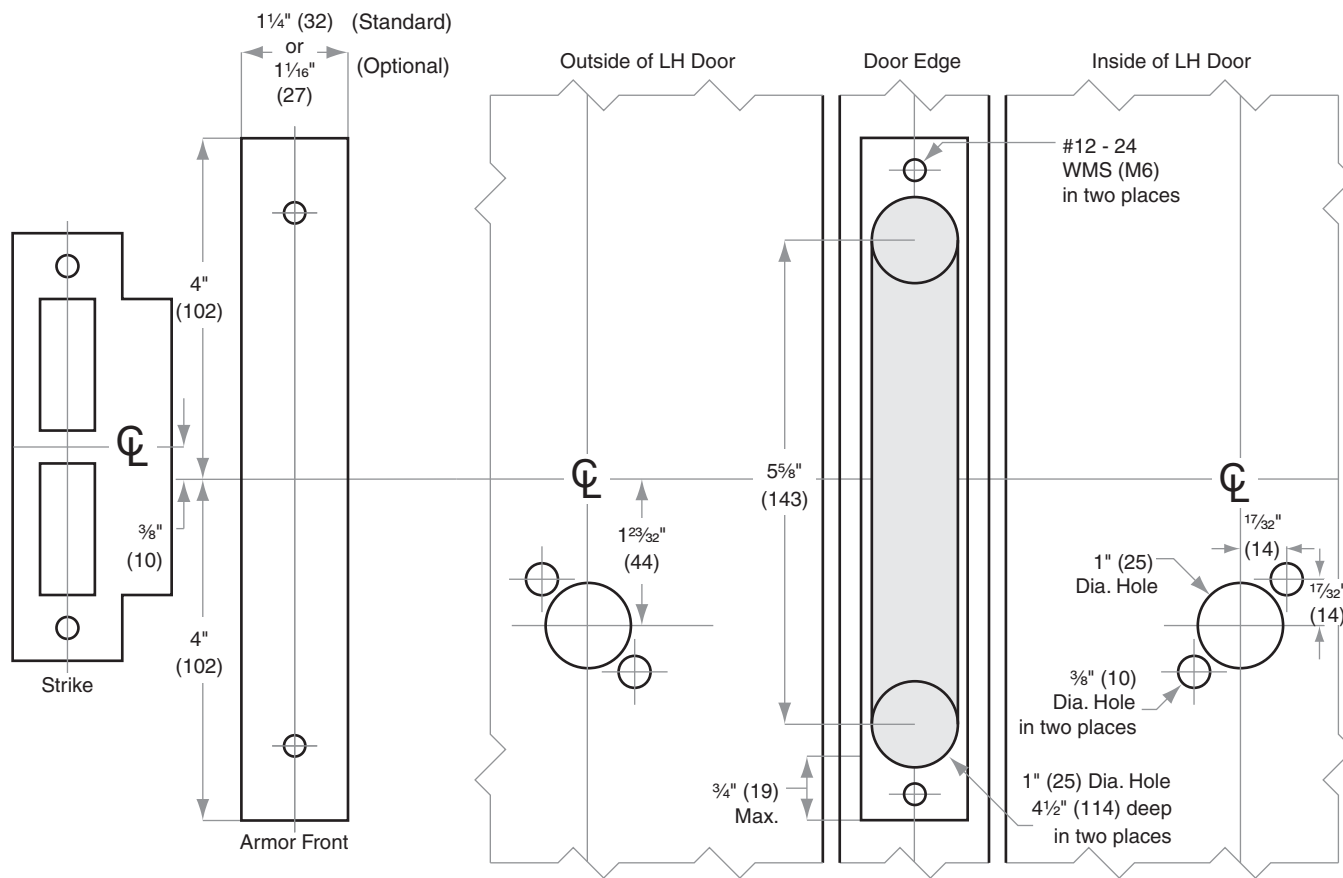

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L852 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**  
**We can help you find the correct guide for your product and application!**

Door preparation template  
**L852**



# L/LV/LM/LMV-Series


Model L9175, LM9325



Door Type: Metal, flat or beveled  
Trim: Escutcheon

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

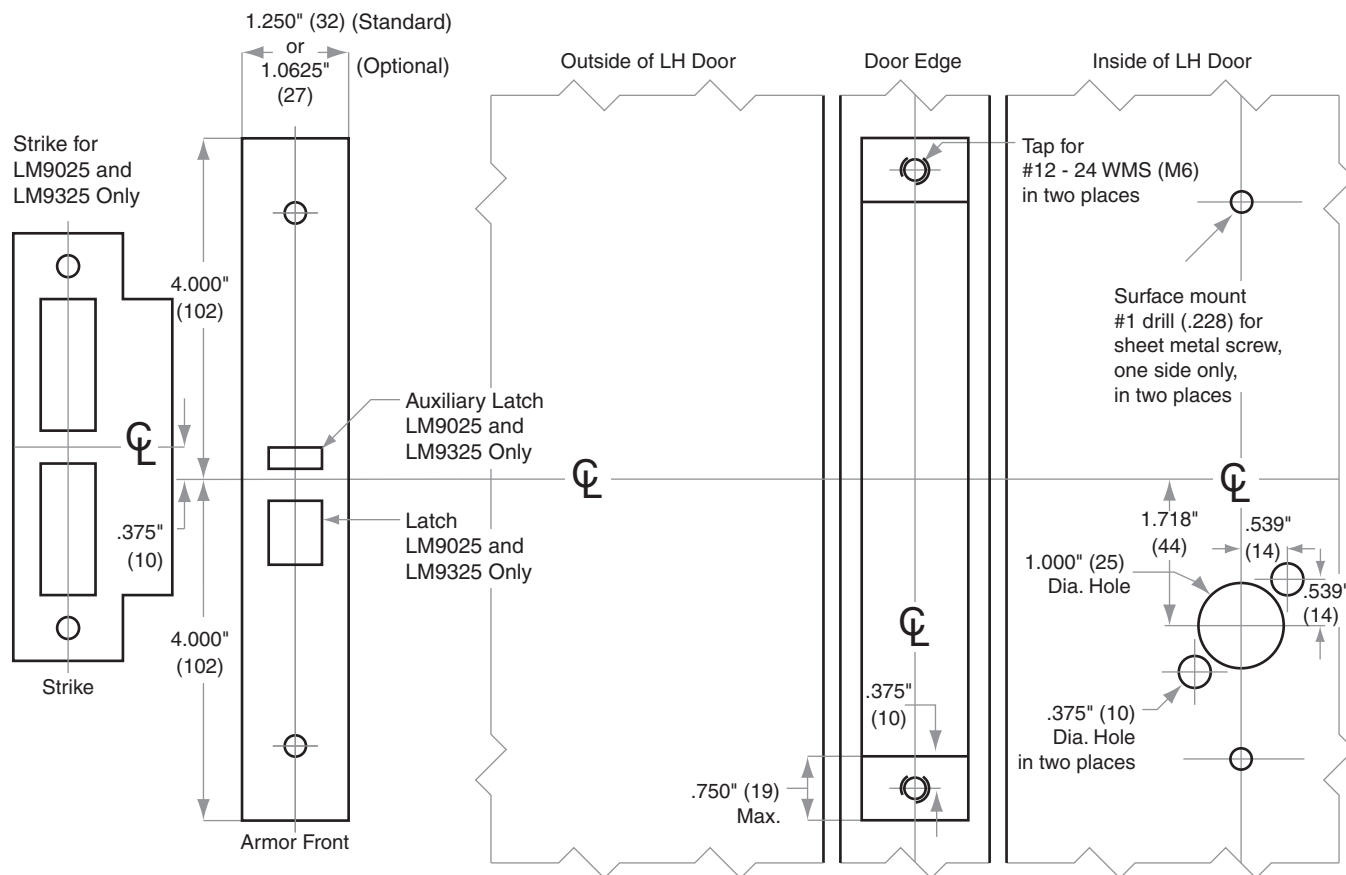

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L855 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**  
**We can help you find the correct guide for your product and application!**

Door preparation template  
**L855**




# L/LV/LM/LMV-Series

## Model L9176

Door Type: Metal, flat or beveled  
 Trim: Escutcheon

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

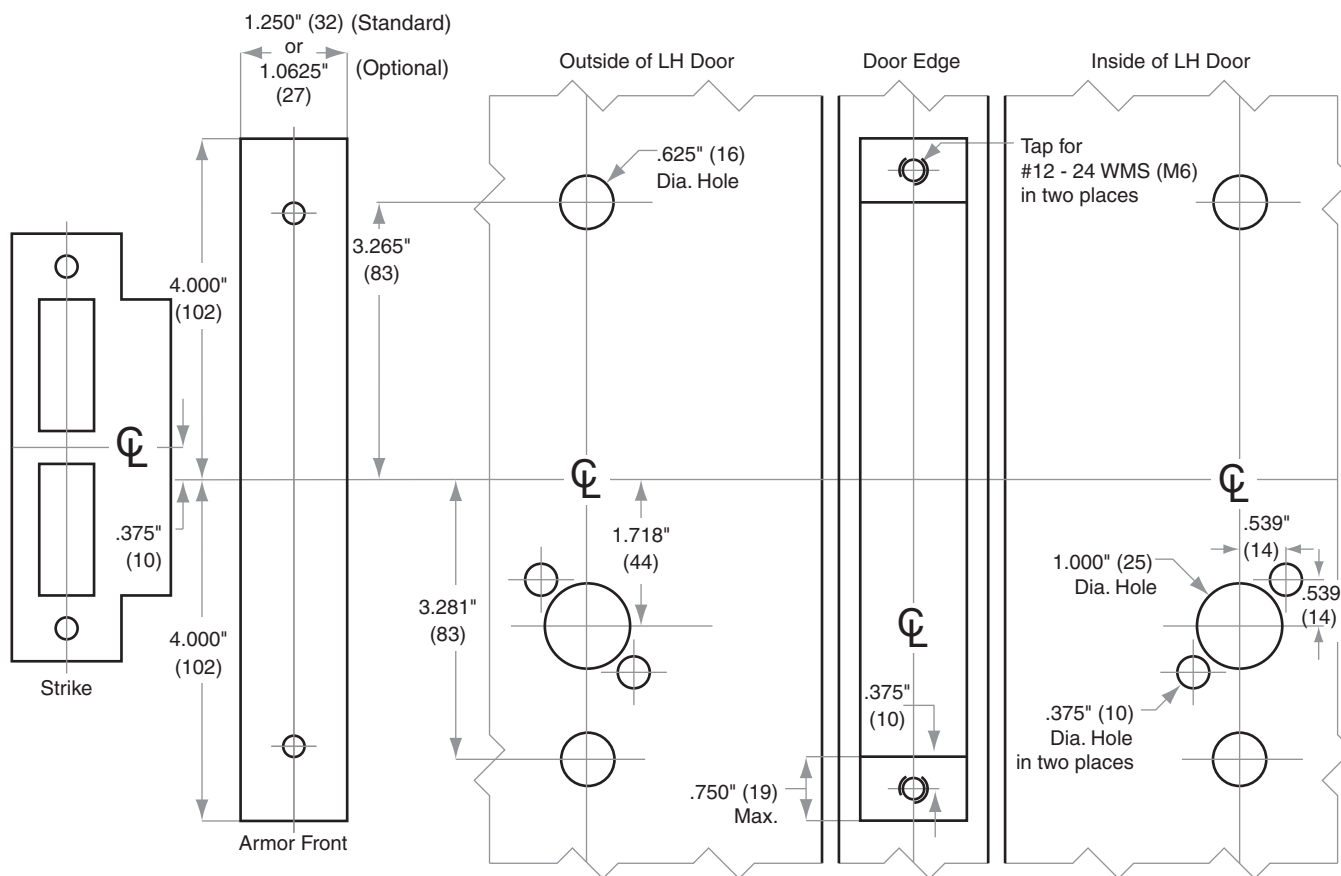

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L856 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**  
**We can help you find the correct guide for your product and application!**

Door preparation template  
**L856**




# L/LV/LM/LMV-Series

## Model L9175

**Door Type:** Wood or composite, flat or beveled  
**Trim:** Escutcheon

**For Case and Strike dimensions, see Template L1**

### Left Hand (LH) Door Shown

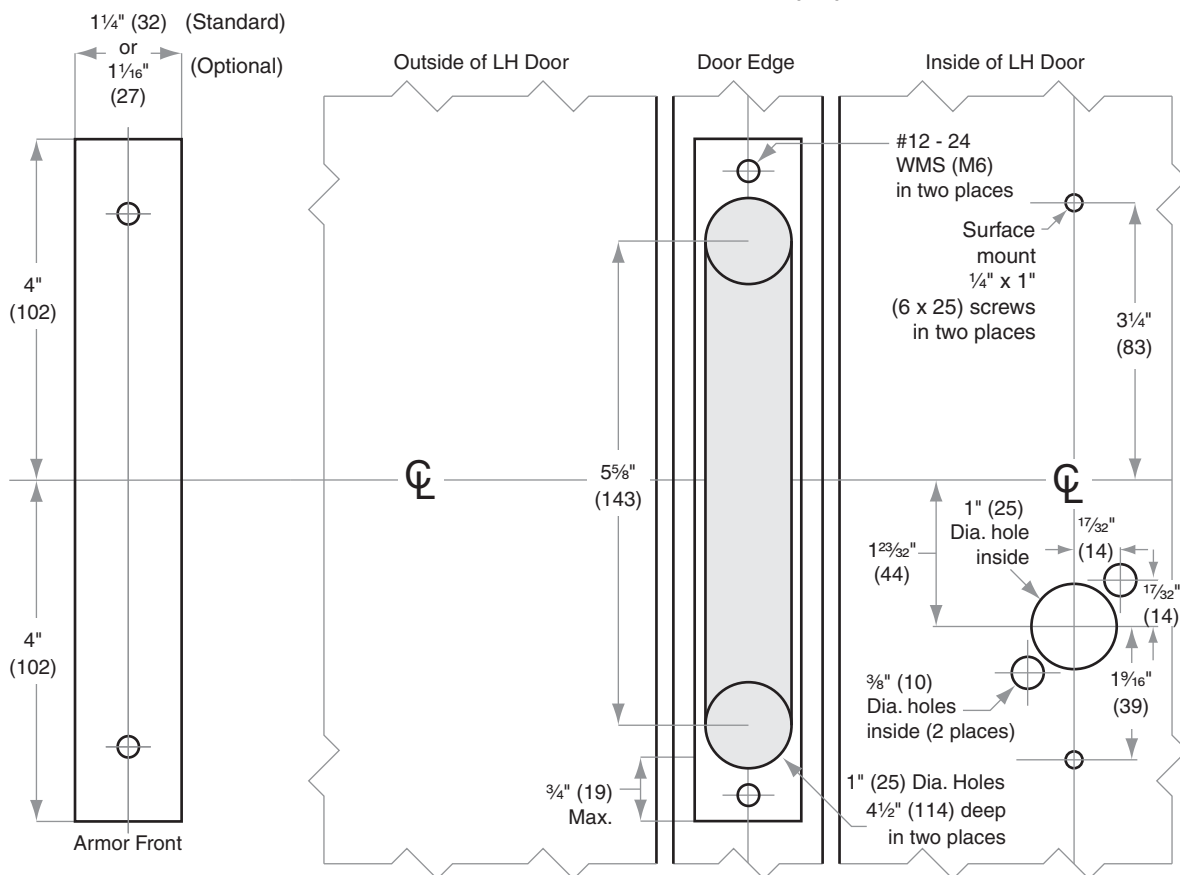

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L859 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L859




# L/LV/LM/LMV-Series

## Model L9176

Door Type: Wood or composite, flat or beveled  
 Trim: Escutcheon

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

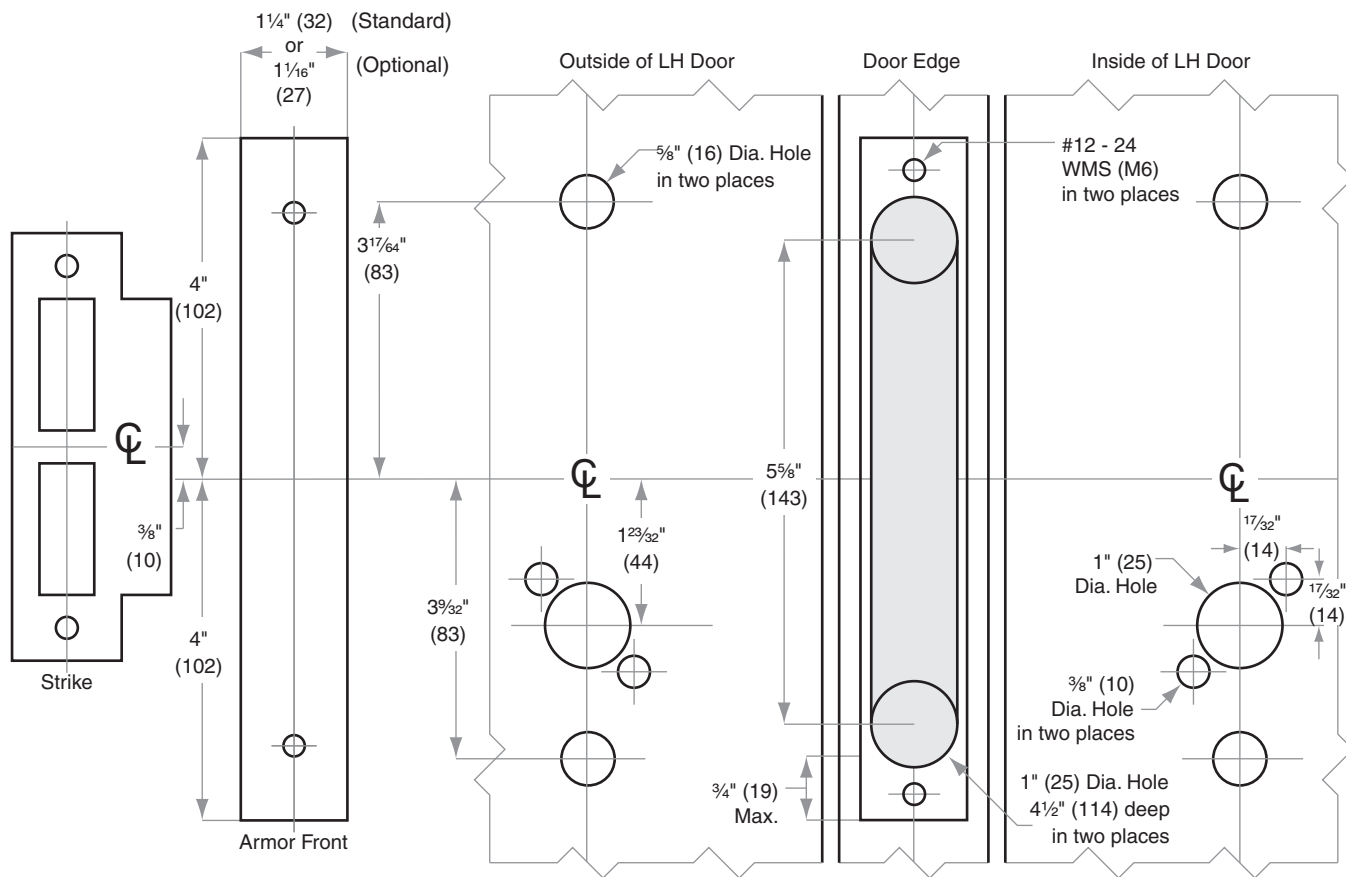

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L860 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**  
**We can help you find the correct guide for your product and application!**

Door preparation template  
**L860**



# L/LV/LM/LMV-Series


## Model L9010, L9110

Door Type: Wood or composite, flat or beveled  
 Trim: Rose

This template should not be used for HSLR trim. Use template L965 for HSLR trim.

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

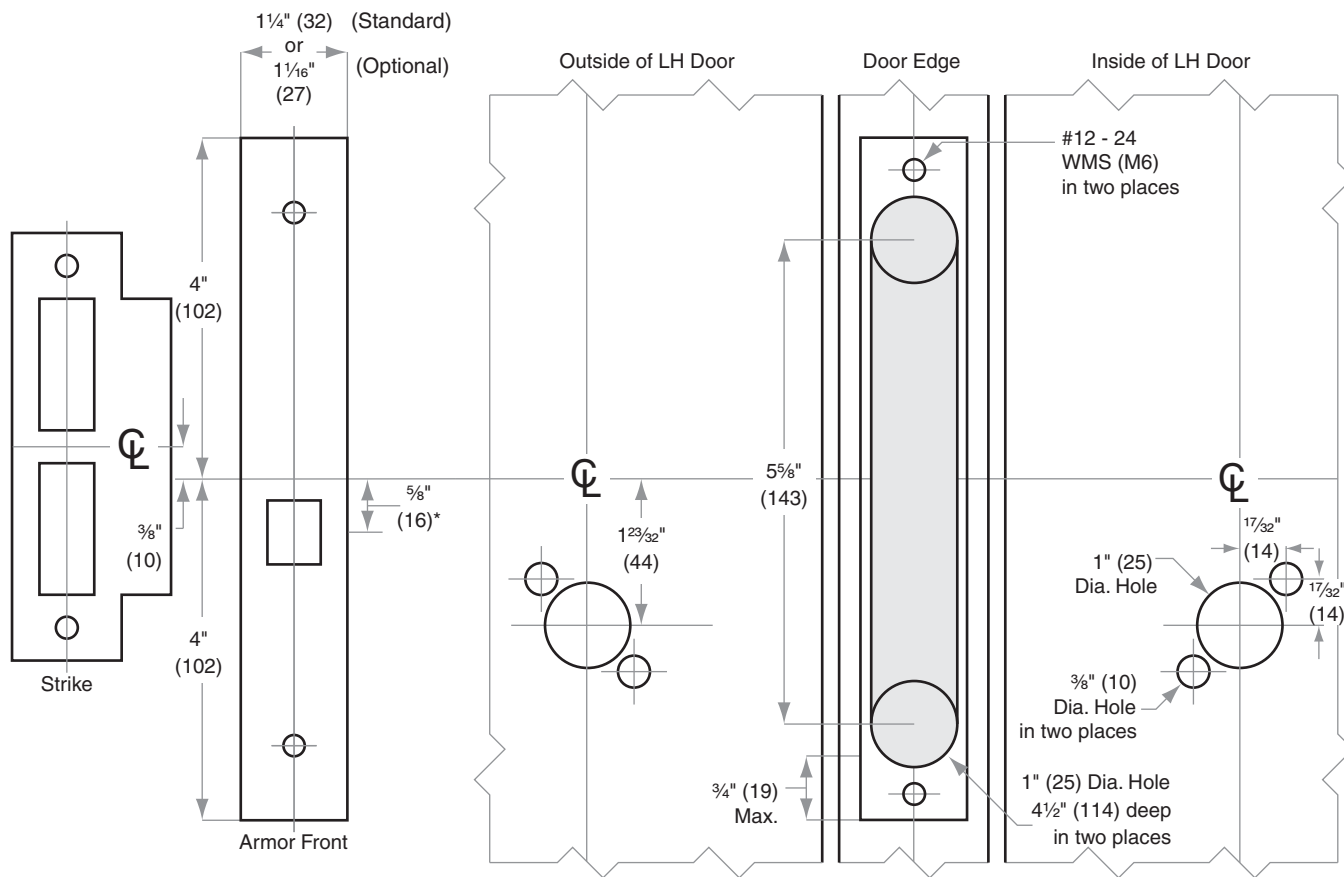

\*Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L892 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**  
**We can help you find the correct guide for your product and application!**

Door preparation template

# L892



# L/LV/LM/LMV-Series


Model L9010, L9110, LM9310

Door Type: Metal, flat or beveled  
Trim: Rose

This template should not be used for HSLR trim. Use template L966 for HSLR trim.

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

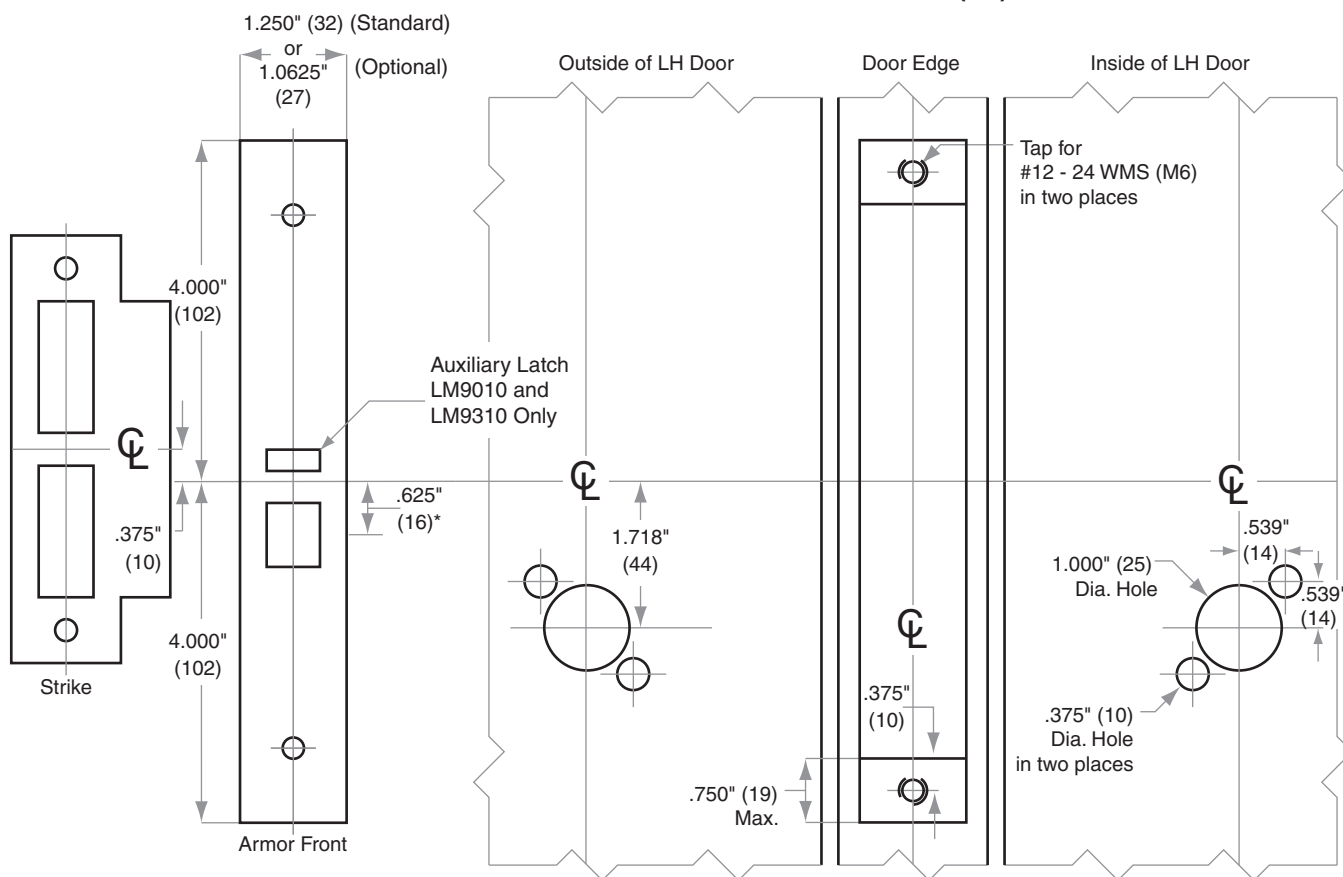

\*Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L893 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
Customer service: 877-671-7011

We can help you find the correct guide for your product and application!

Door preparation template

# L893



# L/LV/LM/LMV-Series


Model L/LV9040, L/LV9044, L/LV9440, L/LV9444

Door Type: Wood or composite, flat or beveled  
 Trim: Rose

This template should not be used for HSLR trim. Use template L965 for HSLR trim.

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

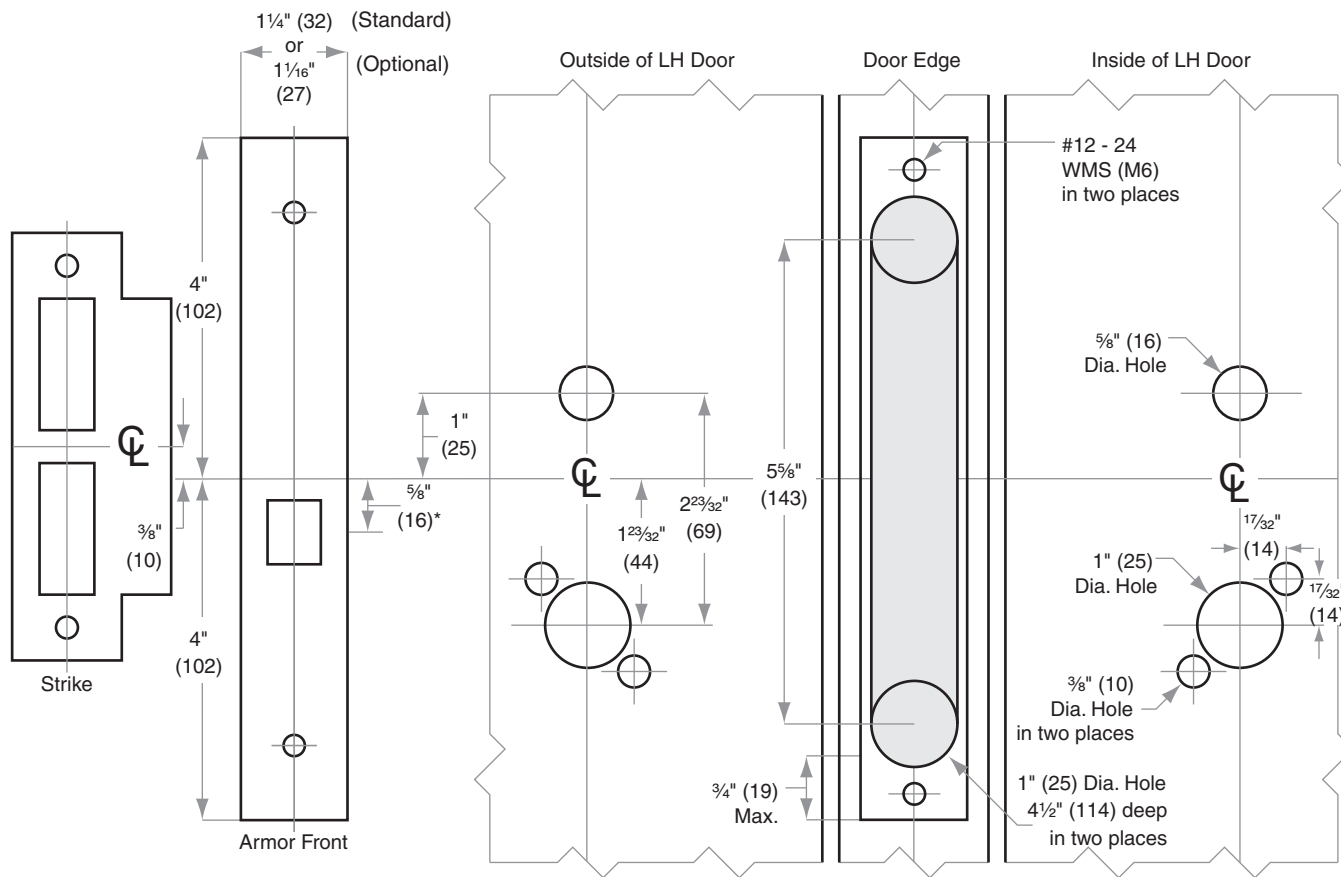

\*Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L894 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
 Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L894





# L/LV/LM/LMV-Series

Model L/LV9040, L/LV9044, L/LV9440, L/LV9444


Door Type: Metal flat or beveled

Trim: Rose

This template should not be used for HSLR trim. Use template L966 for HSLR trim.

**For Case and Strike dimensions, see Template L1**

### Left Hand (LH) Door Shown

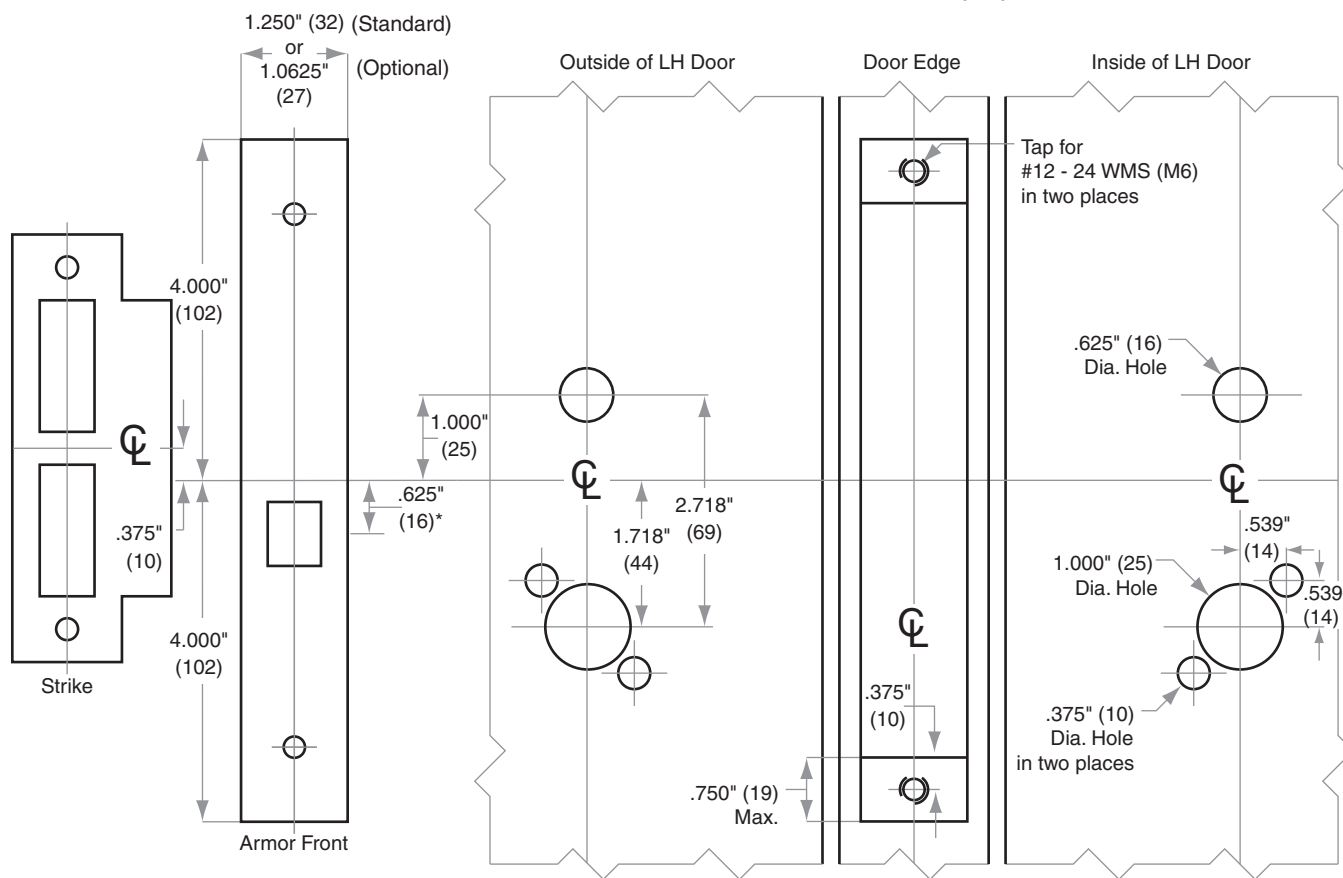

\*Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L895 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**  
**We can help you find the correct guide for your product and application!**

Door preparation template

# L895



# L/LV/LM/LMV-Series

Model L/LV9050, L/LV9056, L/LV9453, L/LV9456, L9473, L/LV9480, L/LV9485


Door Type: Wood or composite, flat or beveled

Trim: Rose

This template should not be used for HSLR trim. Use template L965 for HSLR trim.

For Case and Strike dimensions, see Template L1

## Left Hand (LH) Door Shown

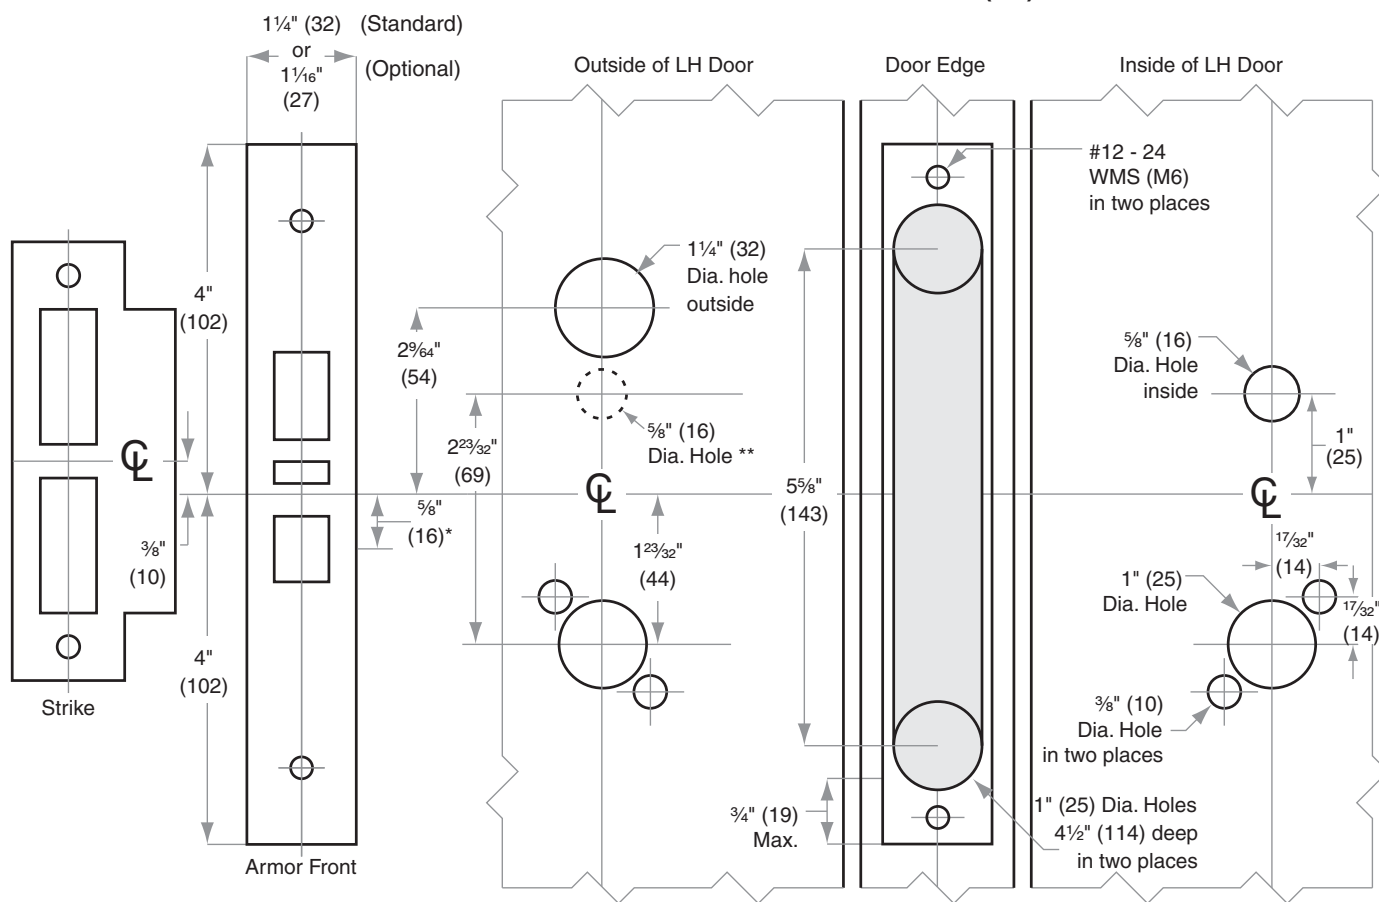

\* Centerline of Armor Front to Centerline of Latch dimension

\*\* Additional preparation for L283-721, L283-722, L283-723, L283-724

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L896 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**

**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L896



# L/LV/LM/LMV-Series

Model L/LV/LM/LMV9050, L/LV/LM/LMV9056, L/LV9453, L/LV9456, L9473, L/LV9480, L/LV9485, LM/LMV9350, LM/LMV9356


Door Type: Metal, flat or beveled

Trim: Rose

This template should not be used for HSLR trim. Use template L966 for HSLR trim.

**For Case and Strike dimensions, see Template L1**

## Left Hand (LH) Door Shown

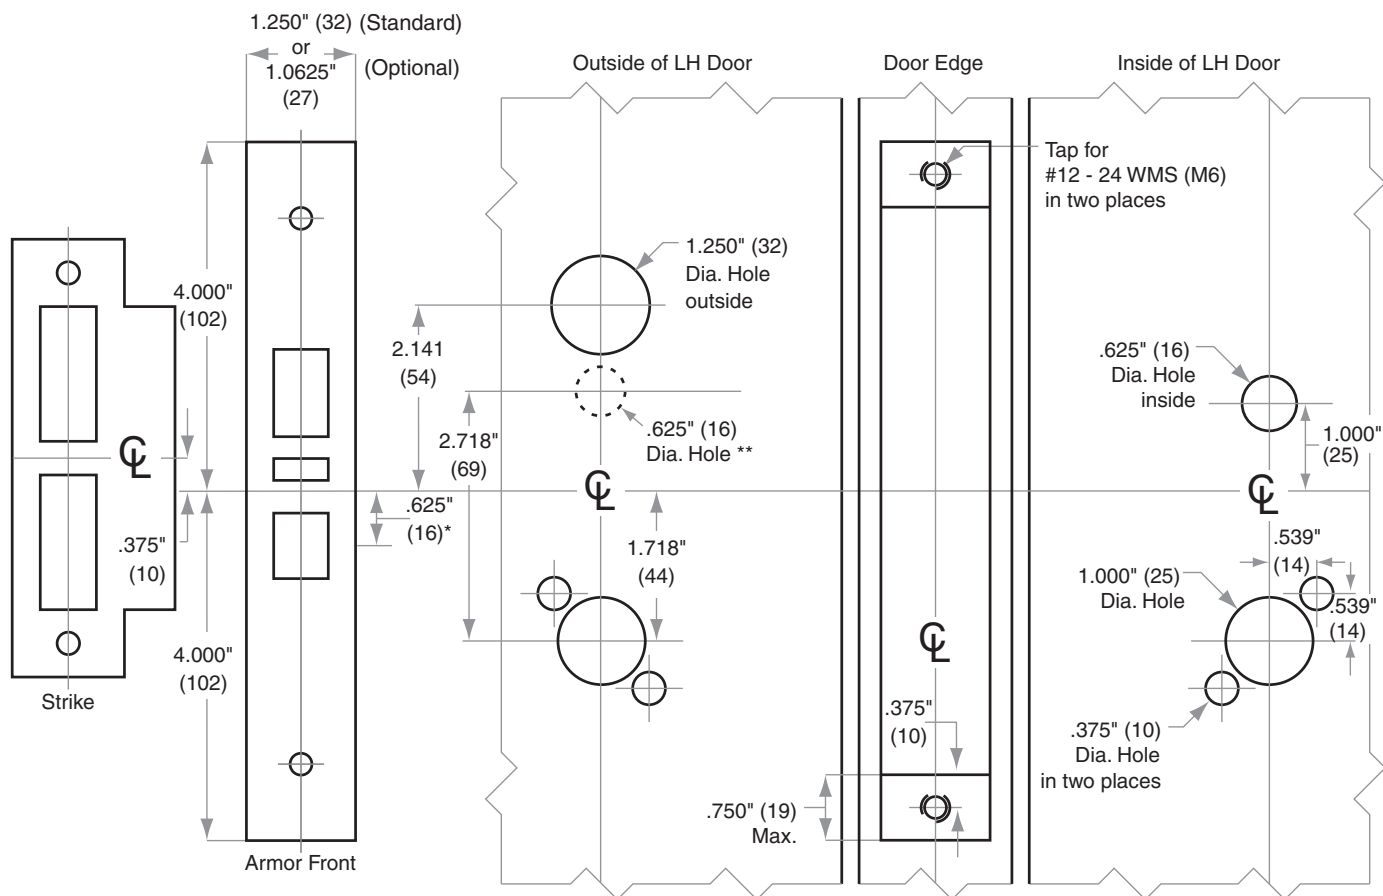

\* Centerline of Armor Front to Centerline of Latch dimension  
 \*\* Additional preparation for L283-721, L283-722, L283-723, L283-724

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L897 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L897



# L/LV/LM/LMV-Series


## Model L9010, L9110

Door Type: Wood or composite, flat or beveled  
 Trim: Escutcheon

This template should not be used for HSLR trim. Use template L965 for HSLR trim.

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

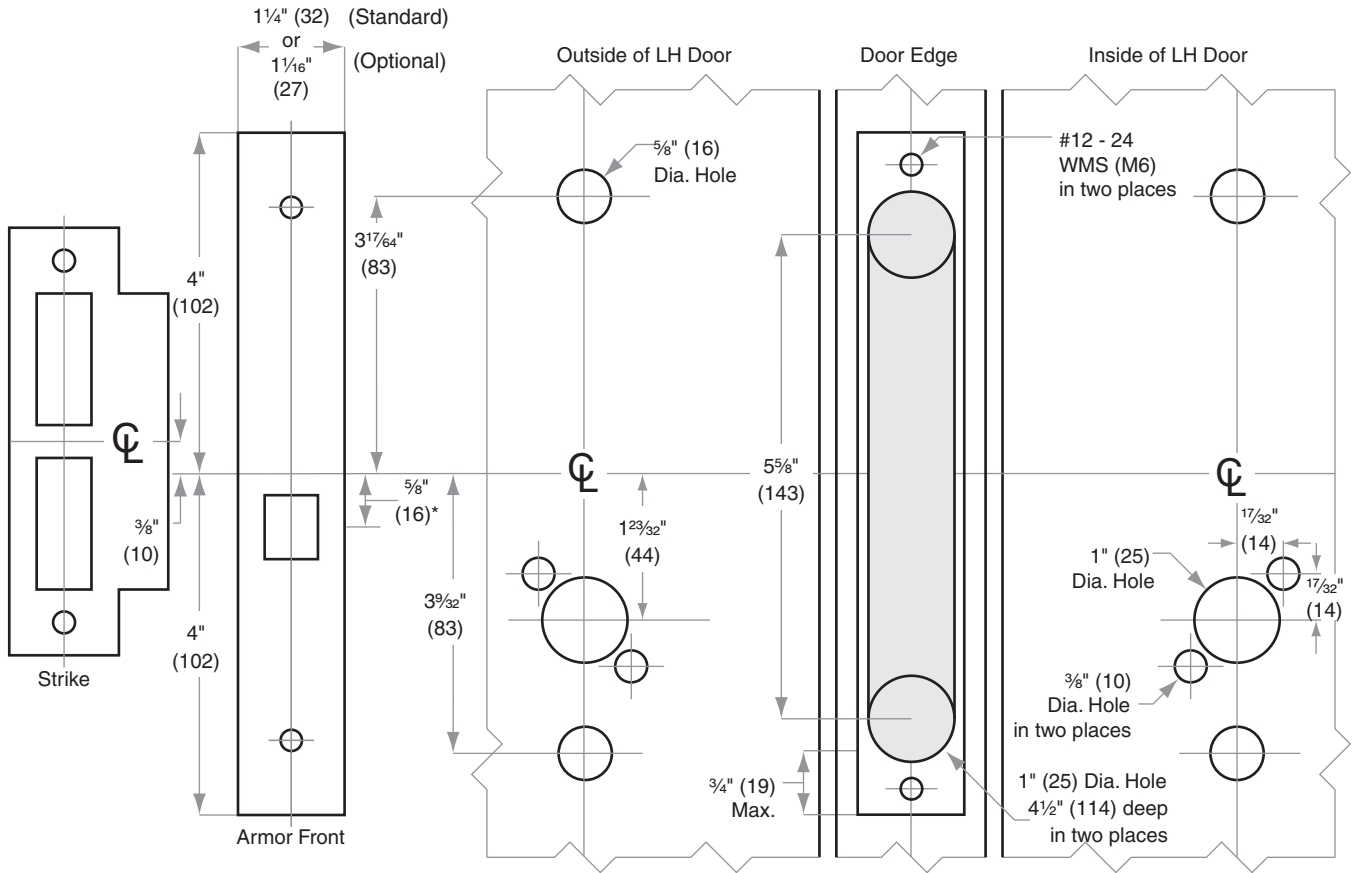

\*Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L898 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L898



# L/LV/LM/LMV-Series


Model L9010, L9110, LM9310

Door Type: Metal, flat or beveled  
 Trim: Escutcheon

This template should not be used for HSLR trim. Use template L966 for HSLR trim.

**For Case and Strike dimensions, see Template L1**

### Left Hand (LH) Door Shown

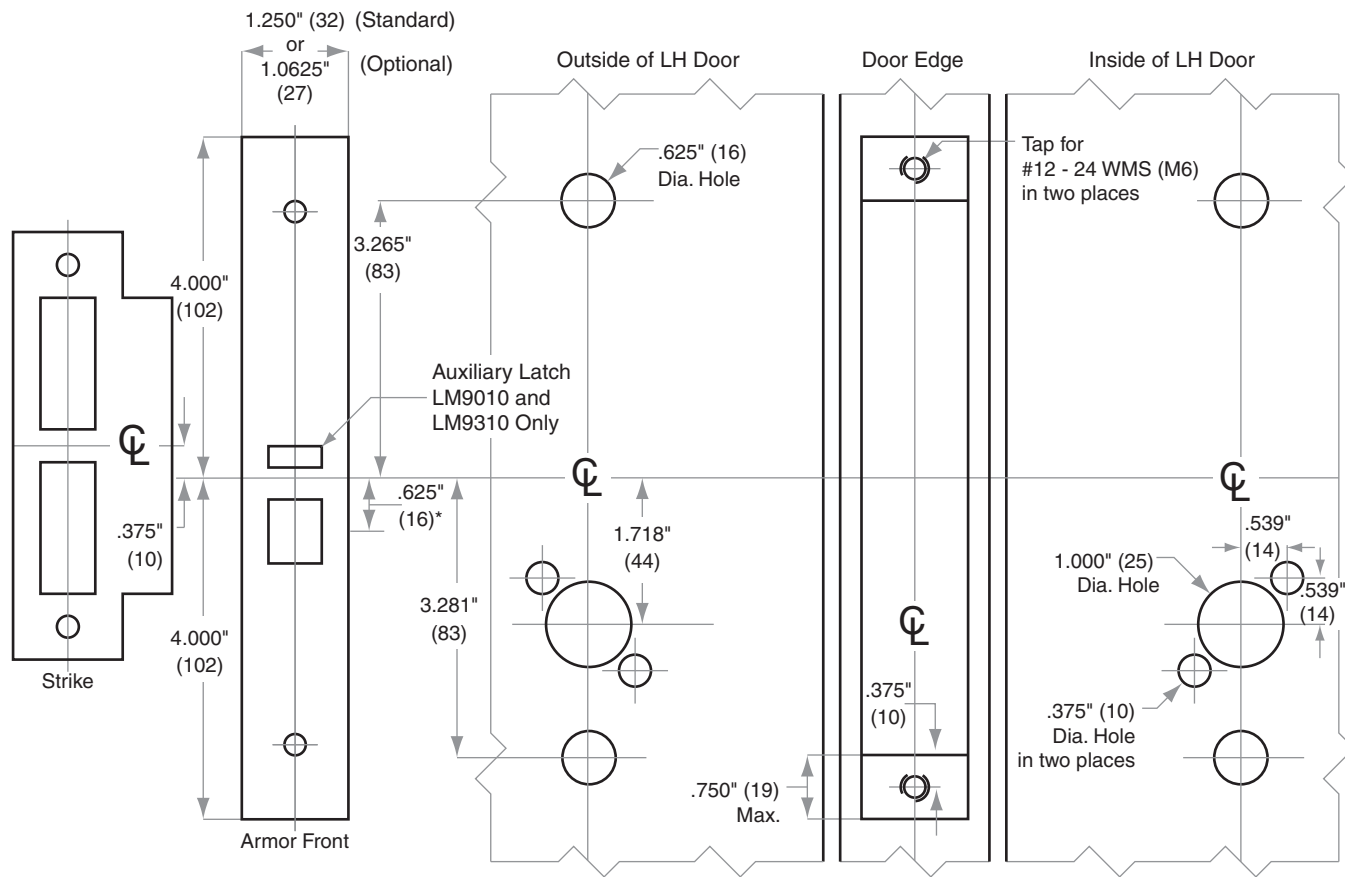

\*Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L899 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L899



# L/LV/LM/LMV-Series


Model L/LV9040, L/LV9440, L/LV9444

Door Type: Wood or composite, flat or beveled  
 Trim: Escutcheon

This template should not be used for HSLR trim. Use template L965 for HSLR trim.

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

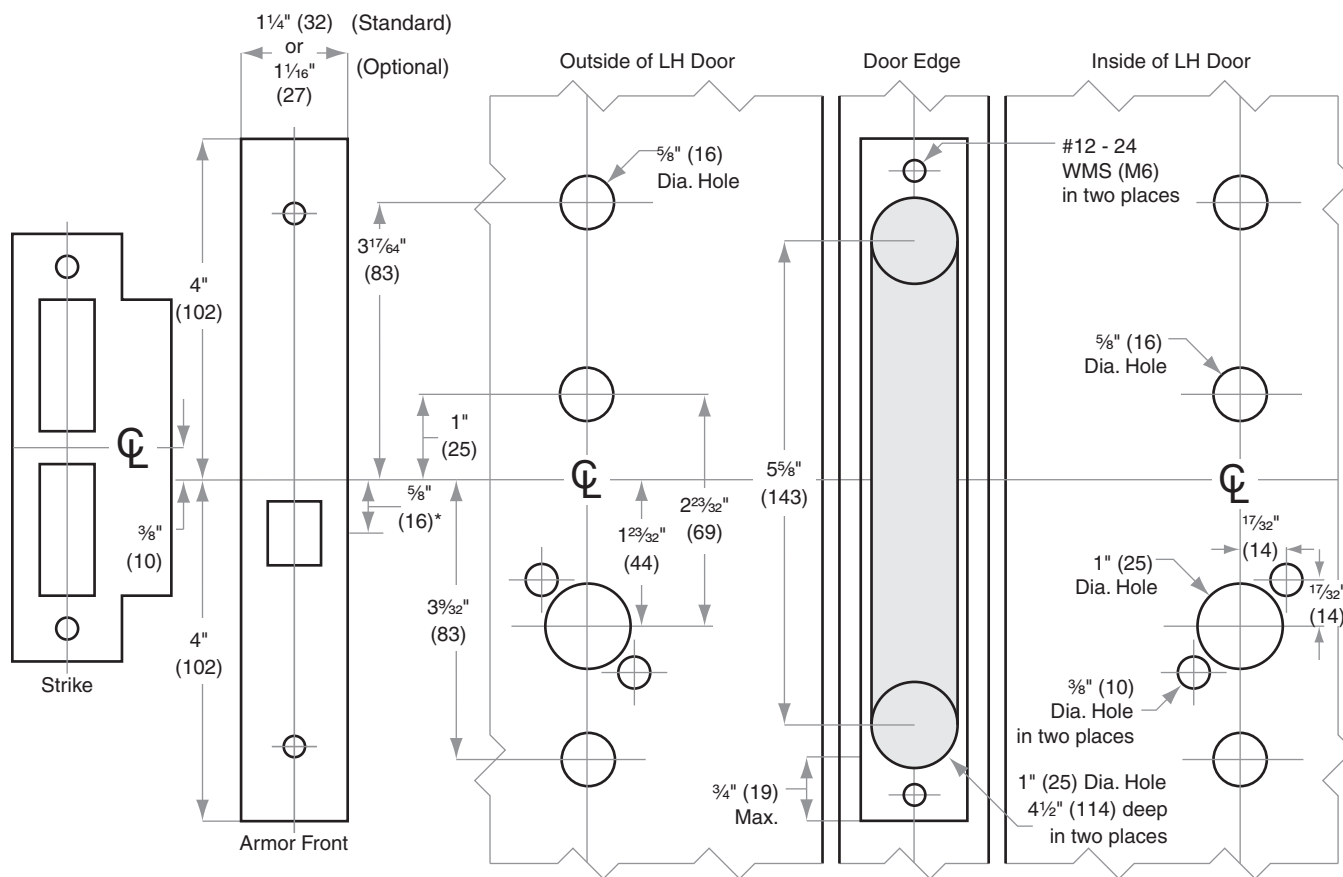

\*Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L900 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**  
**We can help you find the correct guide for your product and application!**

Door preparation template  
**L900**



# L/LV/LM/LMV-Series

Model L/LV9040, L/LV9440, L/LV9444


Door Type: Metal, flat or beveled

Trim: Escutcheon

This template should not be used for HSLR trim. Use template L966 for HSLR trim.

For Case and Strike dimensions, see Template L1

## Left Hand (LH) Door Shown

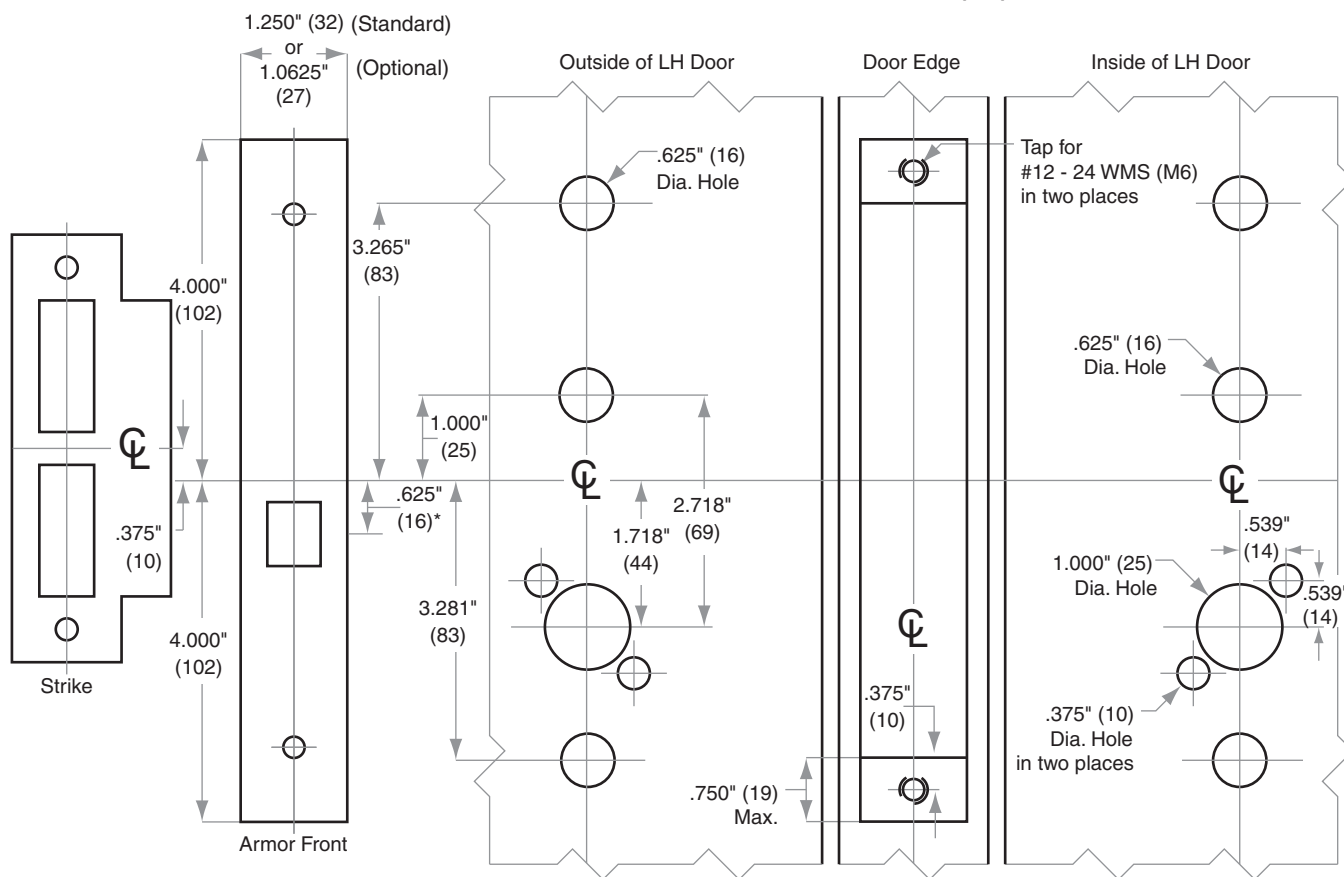

\*Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L901 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**

**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L901



# L/LV/LM/LMV-Series


Model L9460, L9462, L9463, L9464

Door Type: Wood or composite, flat or beveled  
 Trim: Deadbolt

For Case dimensions, see Template L1

FUNCTION	DRILL HOLE		
	1	2	3
L9460	X		X
L9462, L9463	X	X	***
L9464	X		

### Left Hand (LH) Door Shown

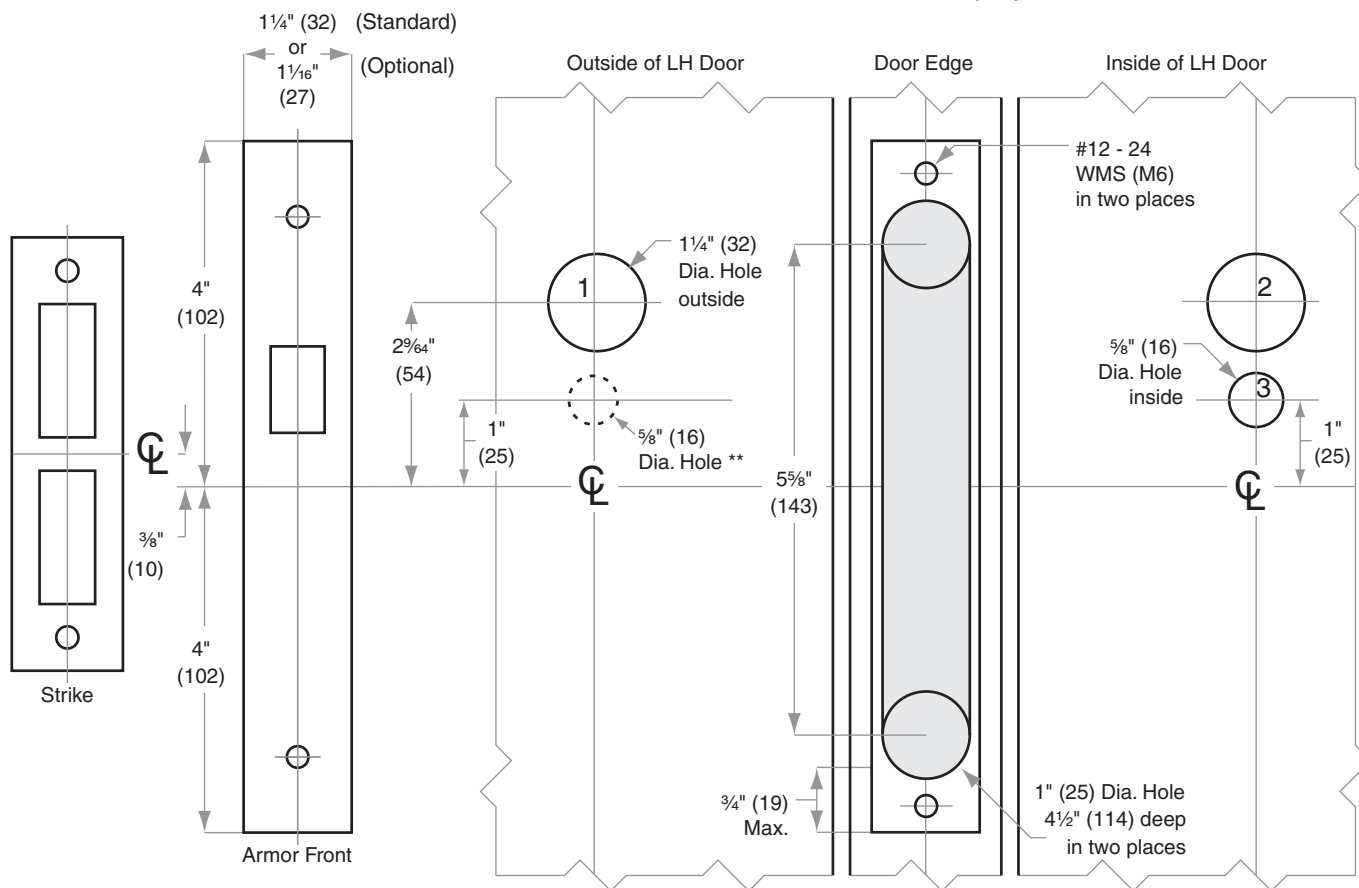

- \* Centerline of Armor Front to Centerline of Latch dimension
- \*\* Additional preparation for L283-721, L283-722, L283-723, L283-724
- \*\*\* Additional preparation for L283-711, L283-712, L283-713, L283-714

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L902 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
 Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L902





# L/LV/LM/LMV-Series


Model L9460, L9462, L9463, L9464

Door Type: Metal, flat or beveled  
 Trim: Deadbolt

For Case and Strike dimensions, see Template L1

FUNCTION	DRILL HOLE		
	1	2	3
L9460	X		X
L9462, L9463	X	X	***
L9464	X		

### Left Hand (LH) Door Shown

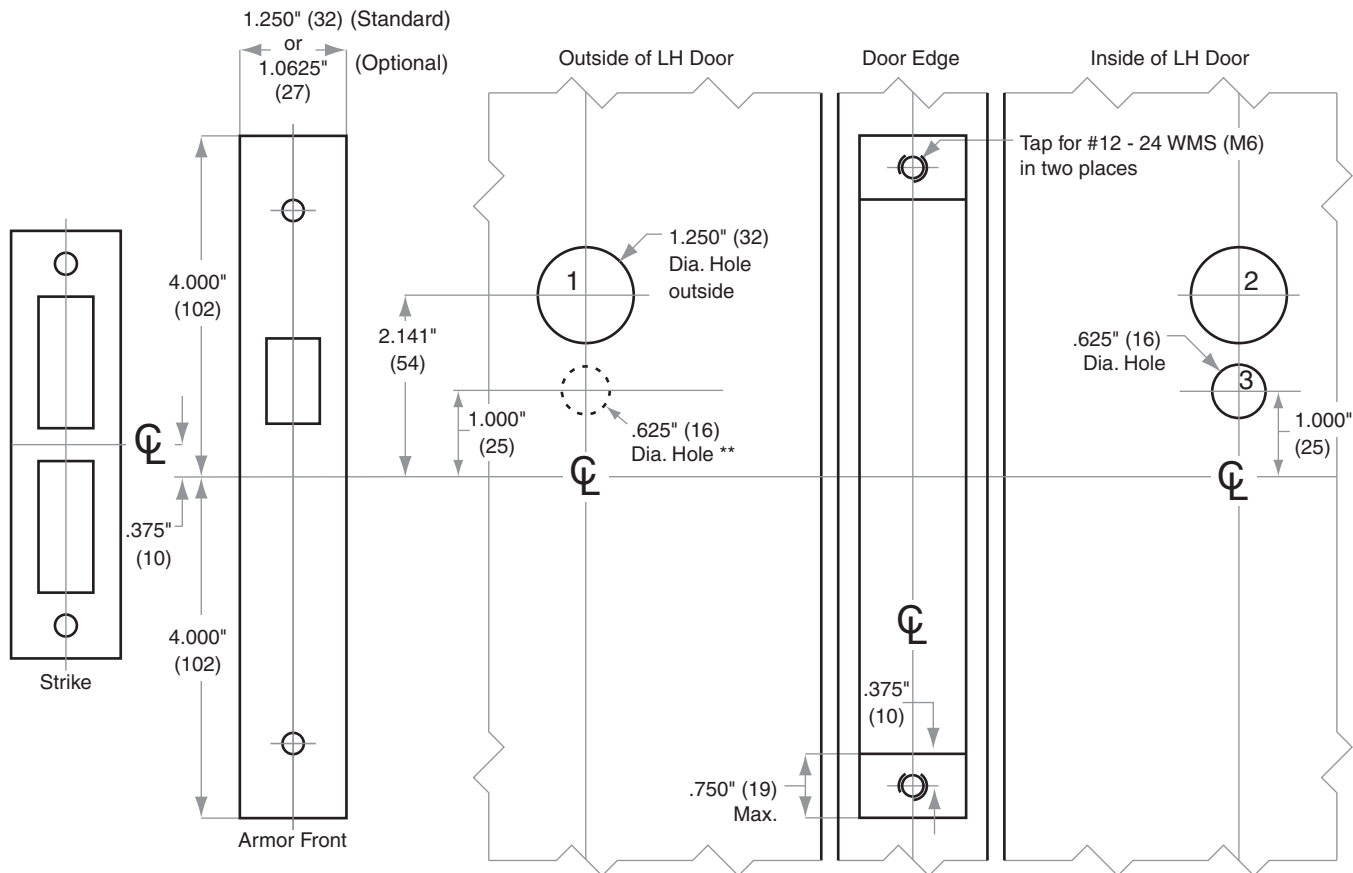

- \* Centerline of Armor Front to Centerline of Latch dimension
- \*\* Additional preparation for L283-721, L283-722, L283-723, L283-724
- \*\*\* Additional preparation for L283-711, L283-712, L283-713, L283-714

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L903 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L903




ALLEGION™

# L/LV/LM/LMV-Series

Model L283-150

Door Type: Any

Trim: Mounting plate, rose, one side only

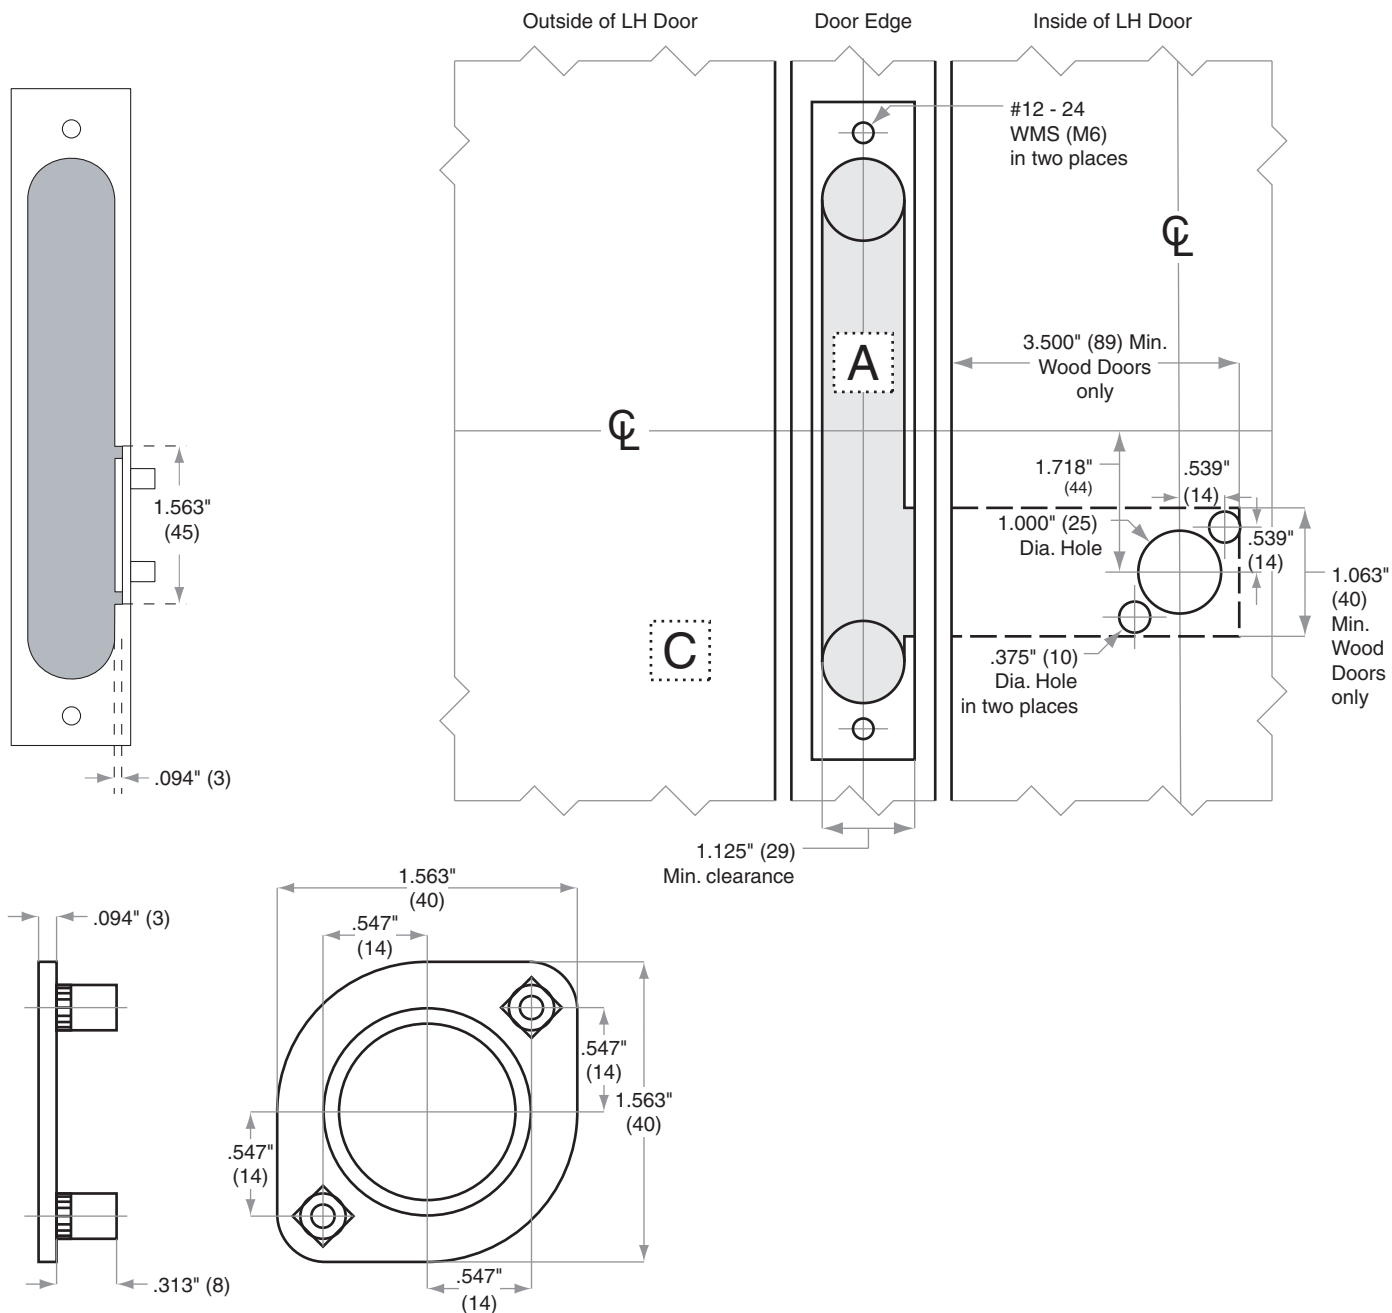

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L904 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L904



# L/LV/LM/LMV-Series

Model L/LV9070, L/LV9076, L/LV9080,  
L/LV9080EL/EU, L9465


Door Type: Wood or composite, flat or beveled

Trim: Rose

This template should not be used for HSLR trim. Use template L965 for HSLR trim.

**For Case and Strike dimensions, see Template L1**  
**Refer to Template L1 for information to prepare the door for wire routing**

### Left Hand (LH) Door Shown

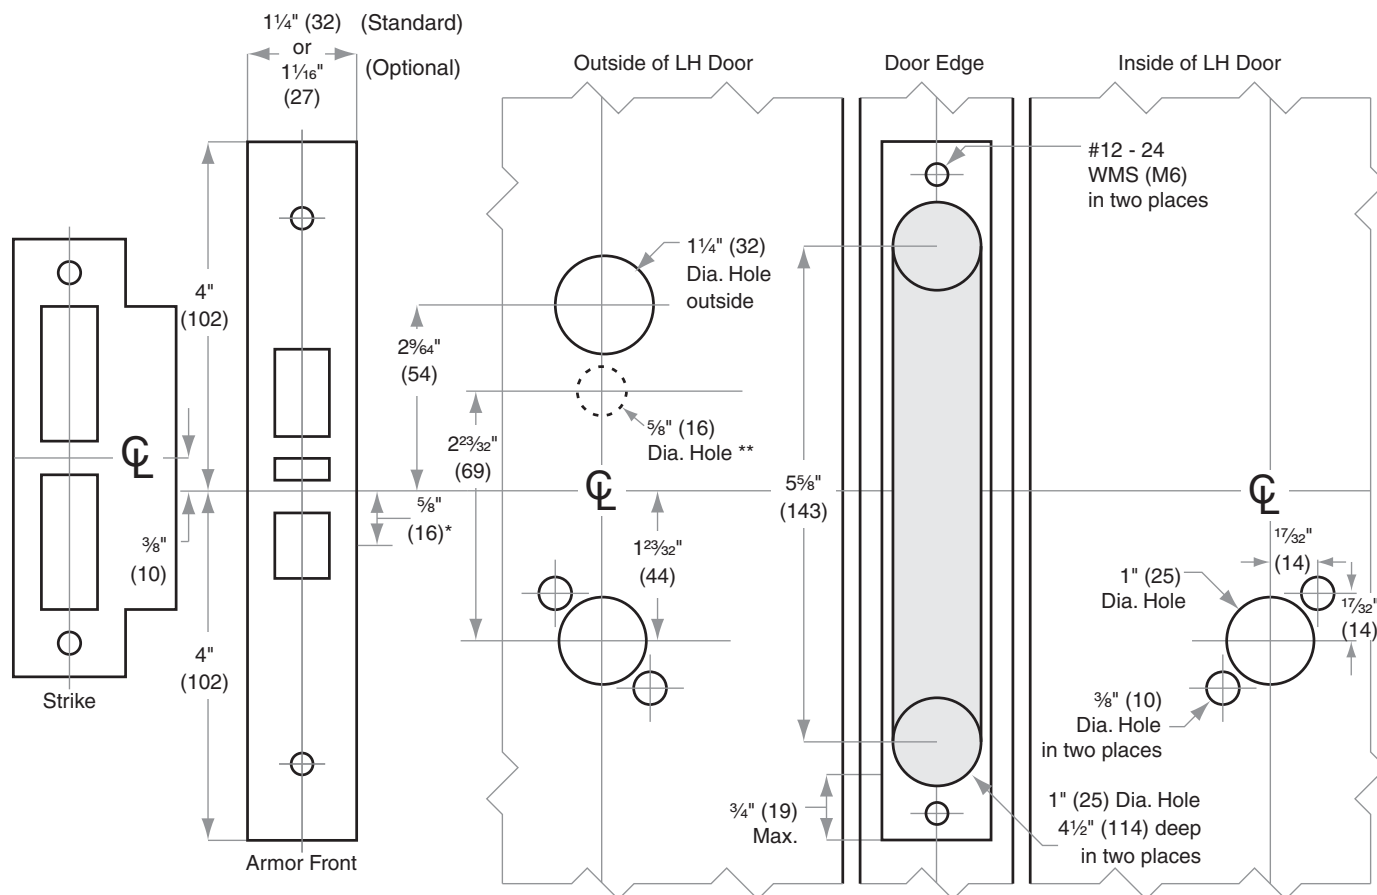

\* Centerline of Armor Front to Centerline of Latch dimension  
\*\* Additional preparation for L283-721, L283-722, L283-723, L283-724

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L905 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L905



# L/LV/LM/LMV-Series

Model L/LV9070, L/LV9076, L/LV9080,  
L/LV9080EL/EU, L9465, LM/LMV9370, LM/LMV9380


Door Type: Metal, flat or beveled

Trim: Rose

This template should not be used for HSLR trim. Use template L966 for HSLR trim.

**For Case and Strike dimensions, see Template L1**  
**Refer to Template L1 for information to prepare the door for wire routing**

## Left Hand (LH) Door Shown

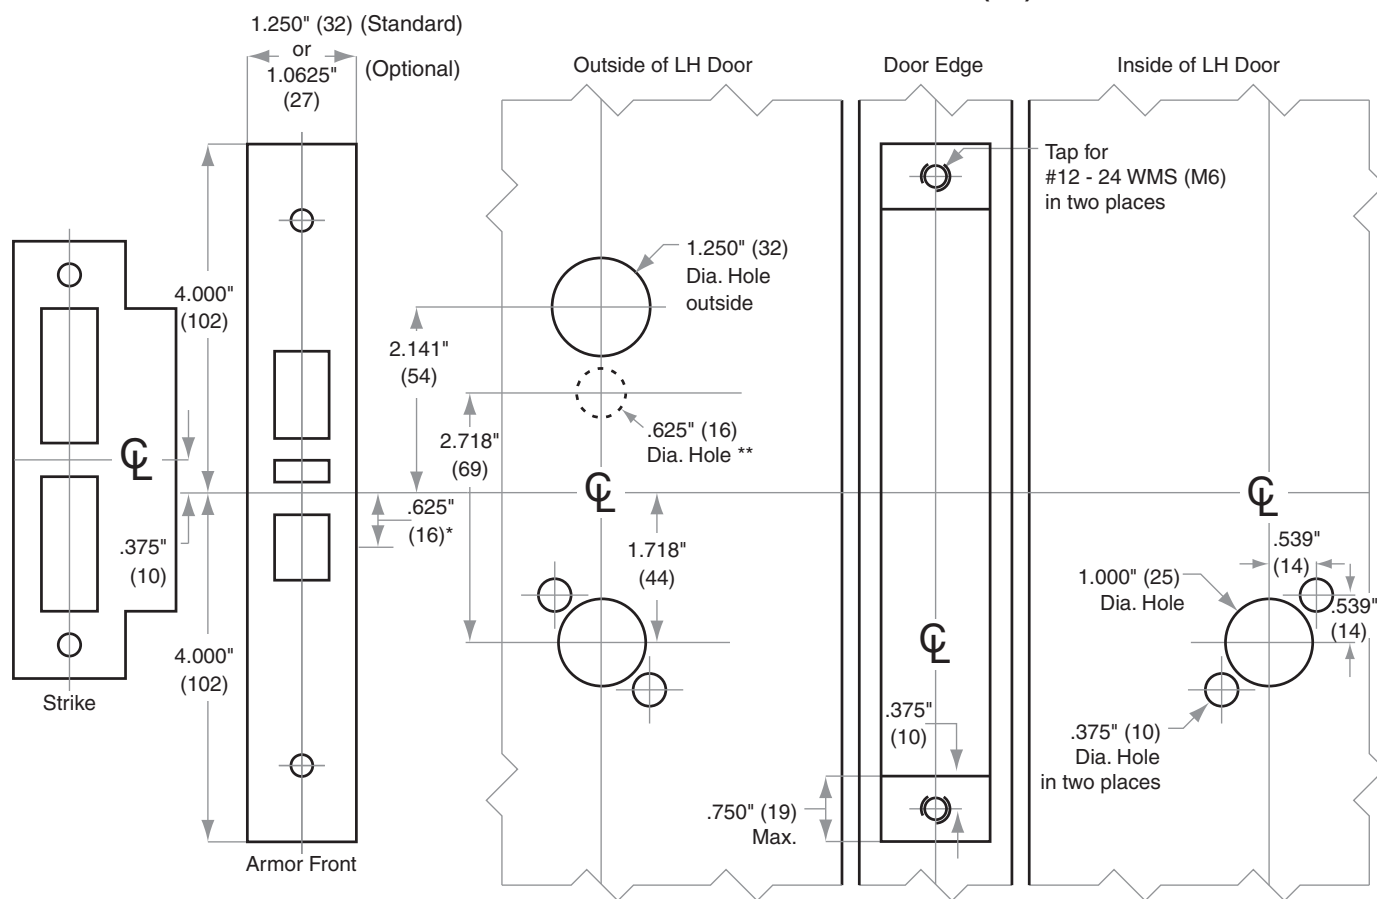

\* Centerline of Armor Front to Centerline of Latch dimension  
\*\* Additional preparation for L283-721, L283-722, L283-723, L283-724

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L906 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L906



# L/LV/LM/LMV-Series

Model L/LV9070, L/LV9076, L/LV9080,  
L/LV9080EL/EU, L9465


Door Type: Wood or composite, flat or beveled

Trim: Escutcheon

This template should not be used for HSLR trim. Use template L965 for HSLR trim.

**For Case and Strike dimensions, see Template L1**  
**Refer to Template L1 for information to prepare the door for wire routing**

## Left Hand (LH) Door Shown

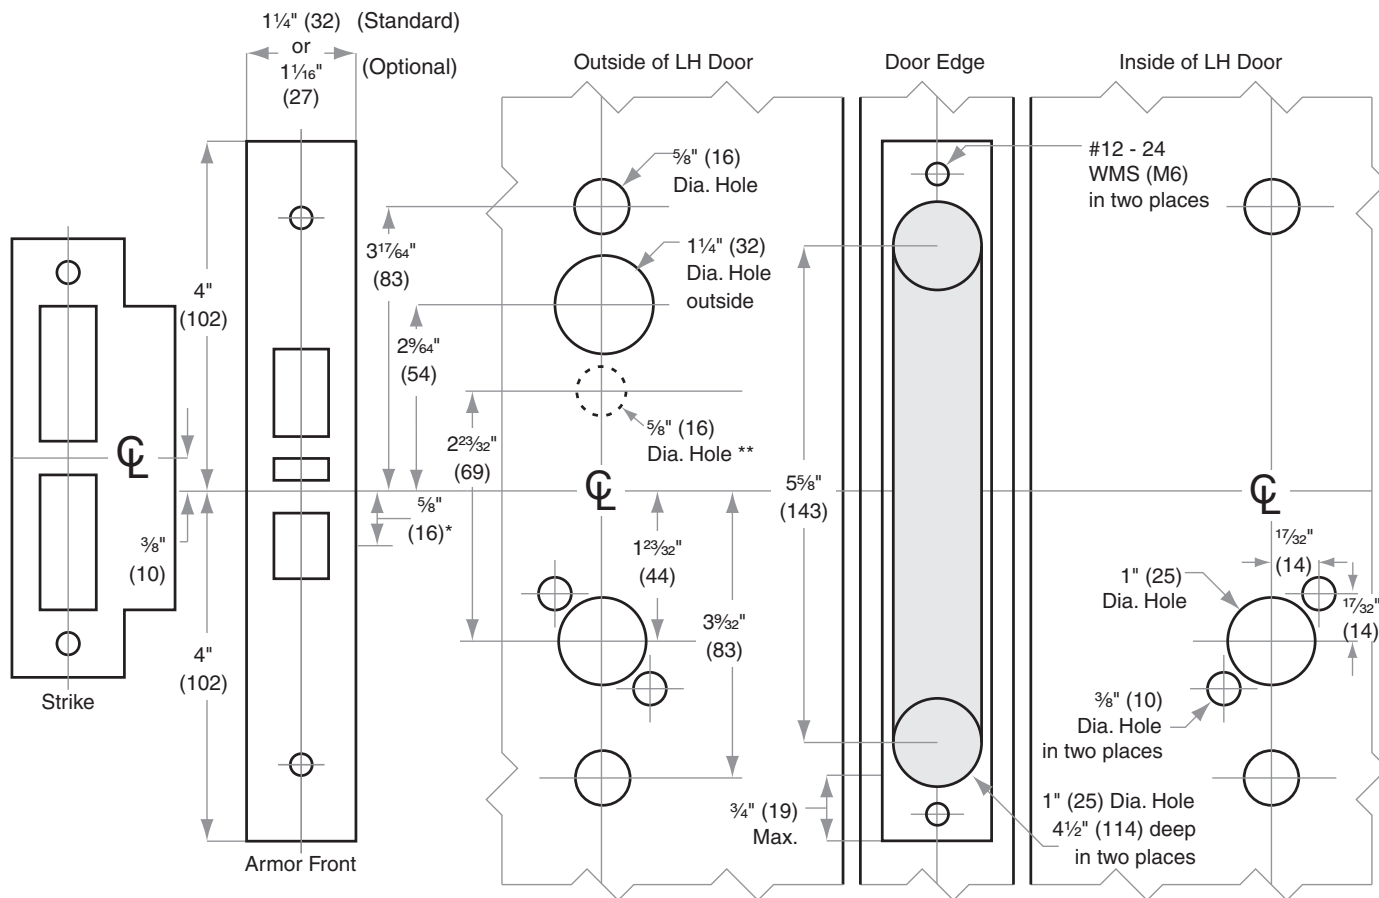

\* Centerline of Armor Front to Centerline of Latch dimension  
\*\* Additional preparation for L283-721, L283-722, L283-723, L283-724

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L907 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L907



# L/LV/LM/LMV-Series

Model L/LV9070, L/LV9076, L/LV9080, L/LV9080EL/EU, L9465, LM/LMV9370, LM/LMV9380


Door Type: Metal, flat or beveled

Trim: Escutcheon

This template should not be used for HSLR trim. Use template L966 for HSLR trim.

**For Case and Strike dimensions, see Template L1**  
**Refer to Template L1 for information to prepare the door for wire routing**

## Left Hand (LH) Door Shown

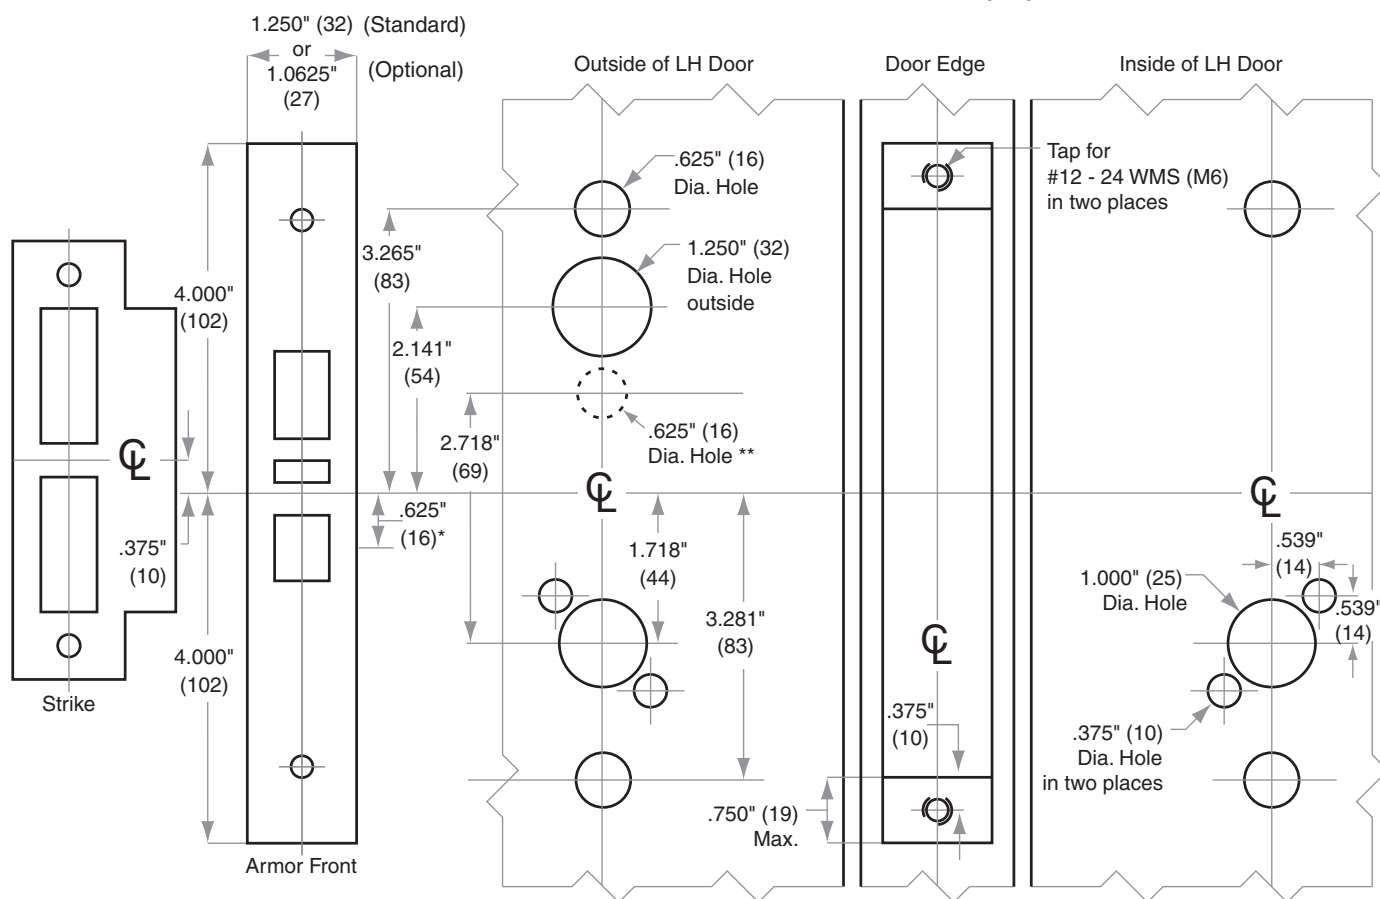

\* Centerline of Armor Front to Centerline of Latch dimension  
 \*\* Additional preparation for L283-721, L283-722, L283-723, L283-724

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L908 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L908



# L/LV/LM/LMV-Series

Model L460, L462, L463, L464, L480, L496

Door Type: Wood or composite, flat or beveled

Trim: Small case deadbolt

For case and strike dimensions, see Template L2.


FUNCTION	DRILL			
	1	2	3	4
L460	X		X	**
L462, L463	X	X	***	**
L464	X			**
L480			X	
L496*	X		X	X

\* Drill through-hole from 3 to 4 for L496

\*\* Additional preparation for L283-721, L283-722, L283-723, L283-724

\*\*\* Additional preparation for L283-711, L283-712, L283-713, L283-714

### Left Hand (LH) Door Shown

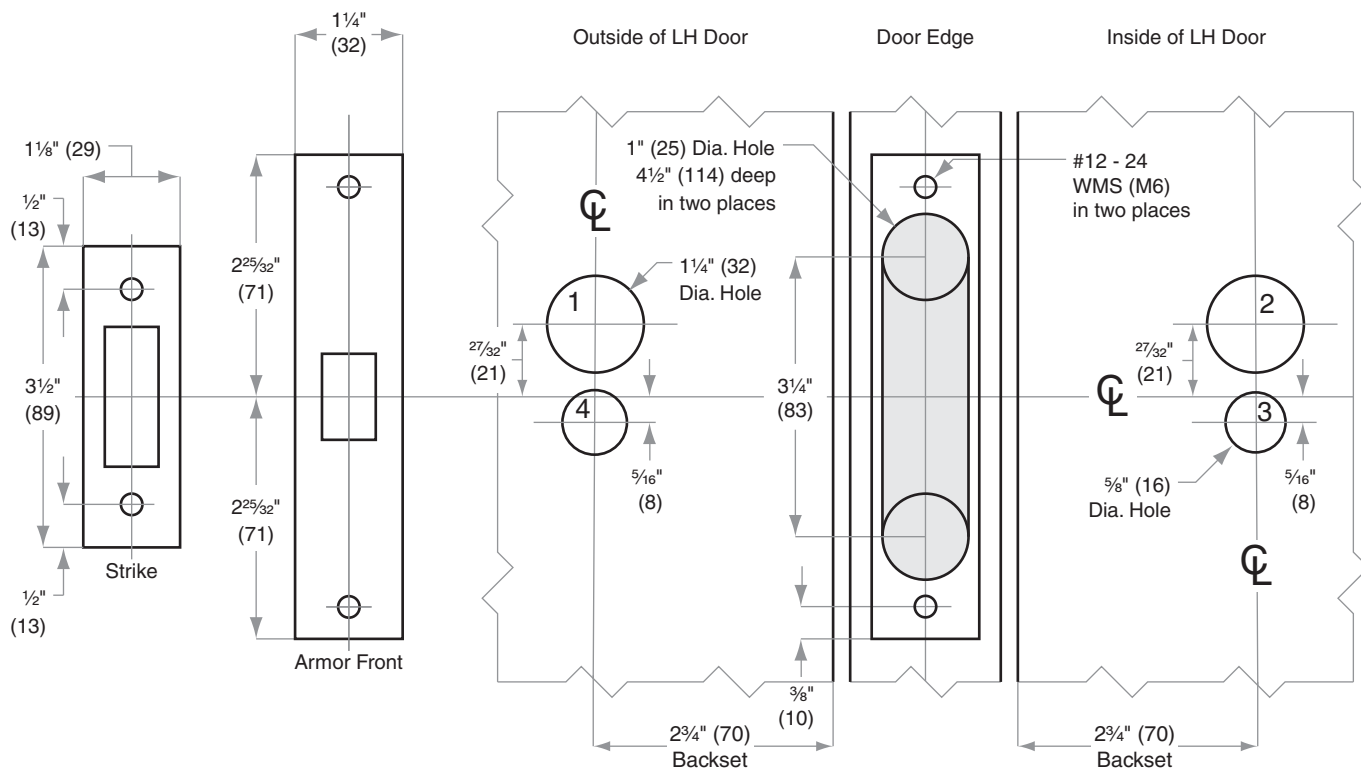

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L909 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**  
**We can help you find the correct guide for your product and application!**

Door preparation template

# L909



# L/LV/LM/LMV-Series

Model L460, L462, L463, L464, L480, L496

Door Type: Metal, flat or beveled

Trim: Small case deadbolt

For case and strike dimensions, see Template L2.


FUNCTION	DRILL			
	1	2	3	4
L460	X		X	**
L462, L463	X	X	***	**
L464	X			**
L480			X	
L496*	X		X	X

\* Drill through-hole from 3 to 4 for L496

\*\* Additional preparation for L283-721, L283-722, L283-723, L283-724

\*\*\* Additional preparation for L283-711, L283-712, L283-713, L283-714

### Left Hand (LH) Door Shown

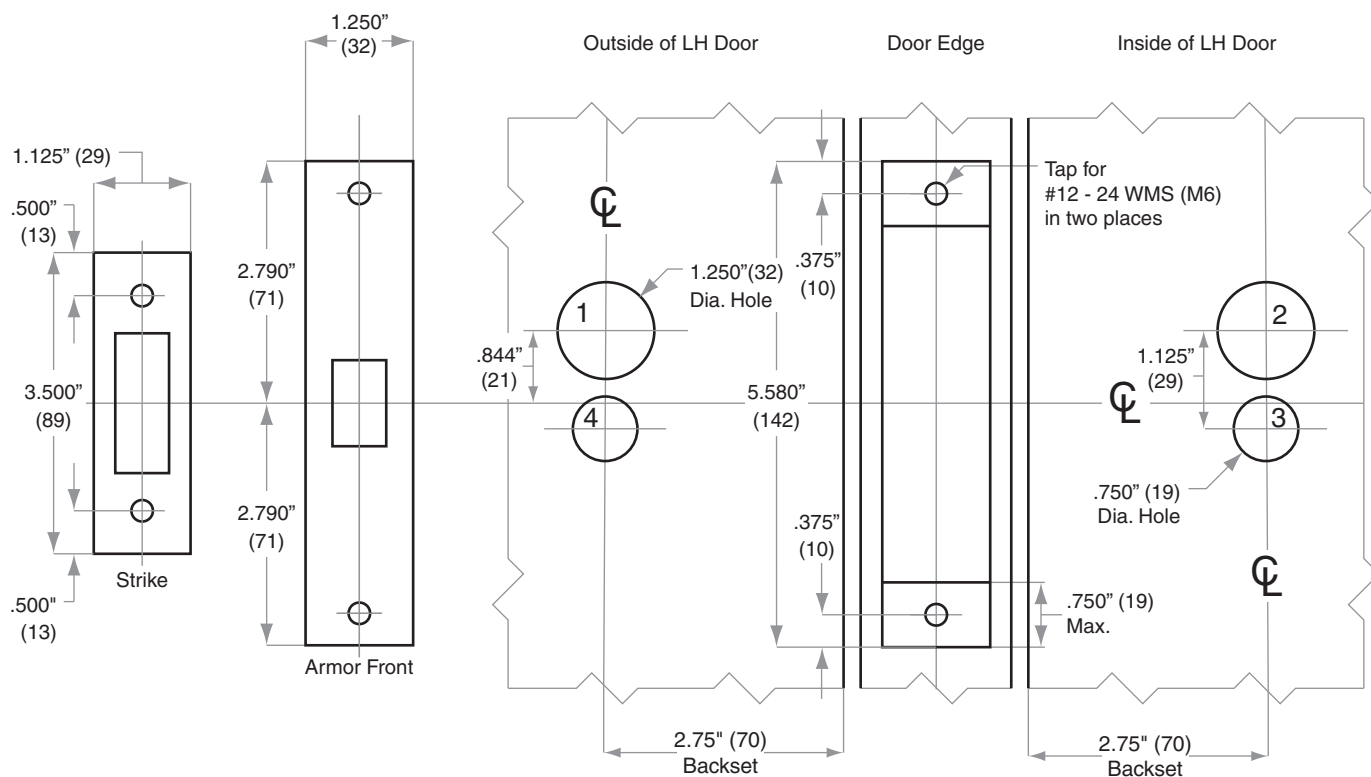

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L910 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**

**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L910






# L/LV/LM/LMV-Series

## Model L9412

Door Type: Wood or composite, flat or beveled  
 Trim: Escutcheon

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

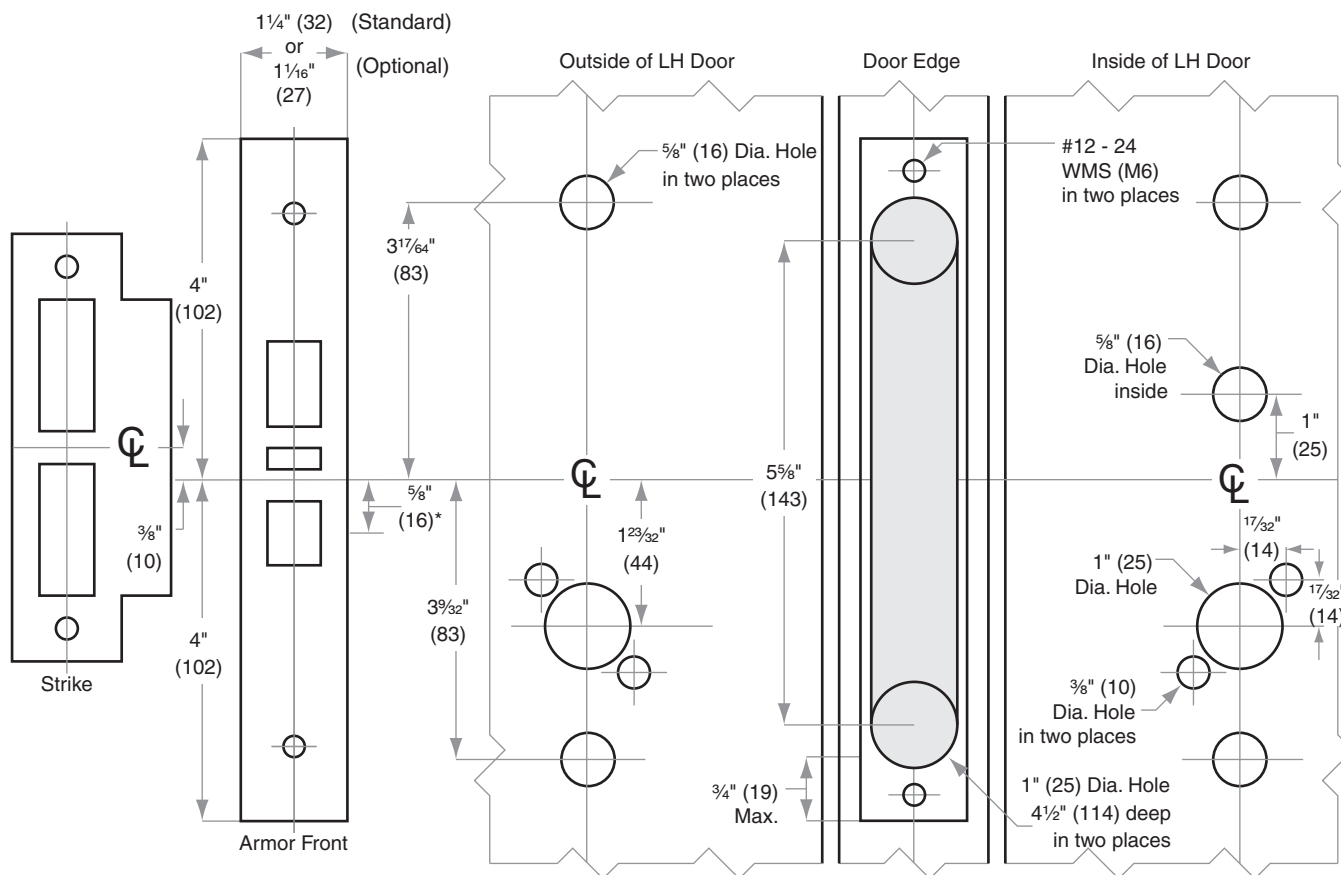

\*Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L911 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
 Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L911



# L/LV/LM/LMV-Series


## Model L9412



Door Type: Metal, flat or beveled  
 Trim: Escutcheon

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

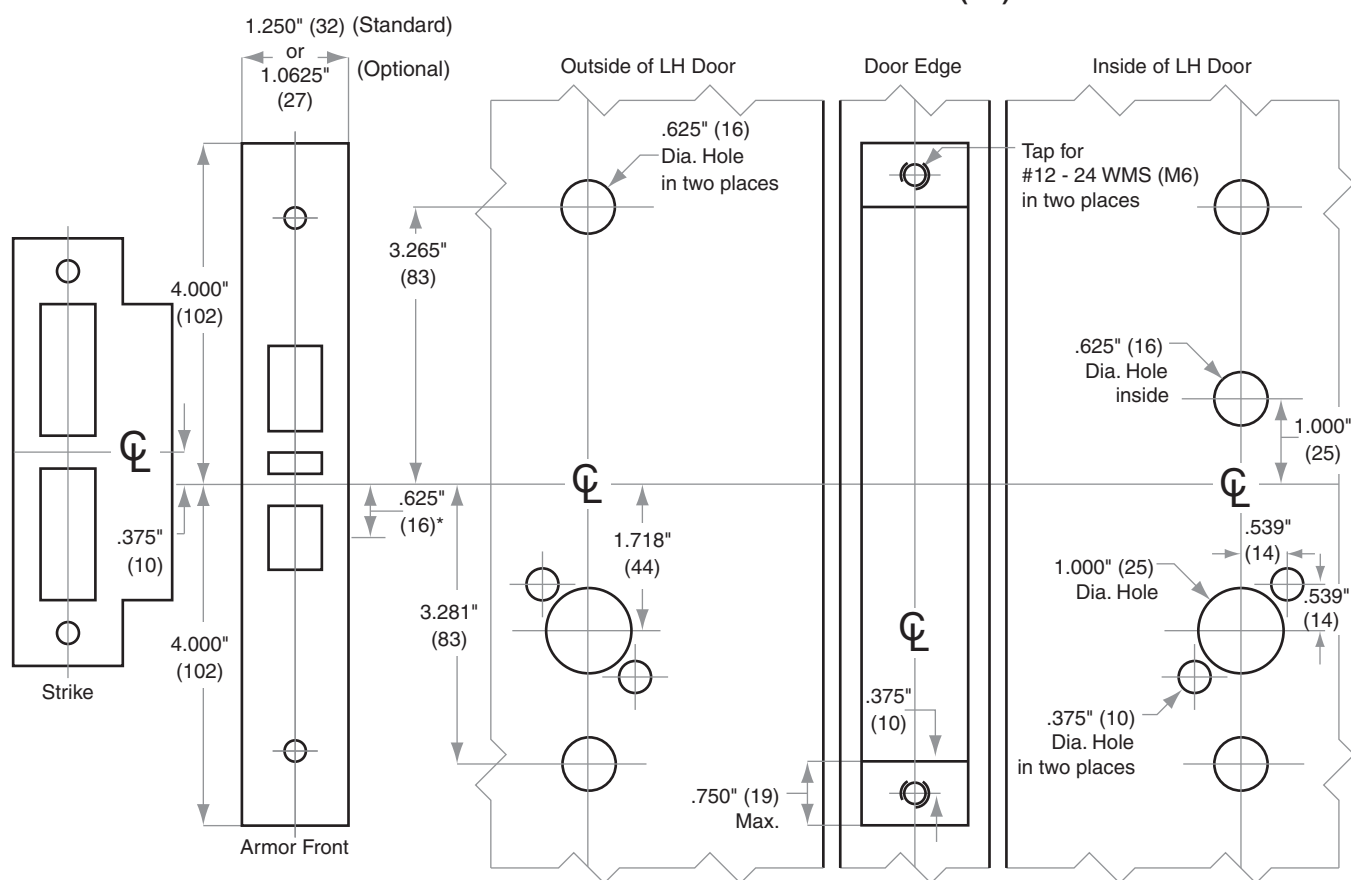

\*Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L912 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L912




# L/LV/LM/LMV-Series

## Models L9090, L9091 Electrified Locks

Door Type: Metal, flat or beveled  
 Trim: Escutcheon

**For Case and Strike dimensions, see Template L1  
 Refer to Template L1 (revised October 2014 or  
 later) for information to prepare the door for  
 wire routing**

**Left Hand (LH) Door Shown**

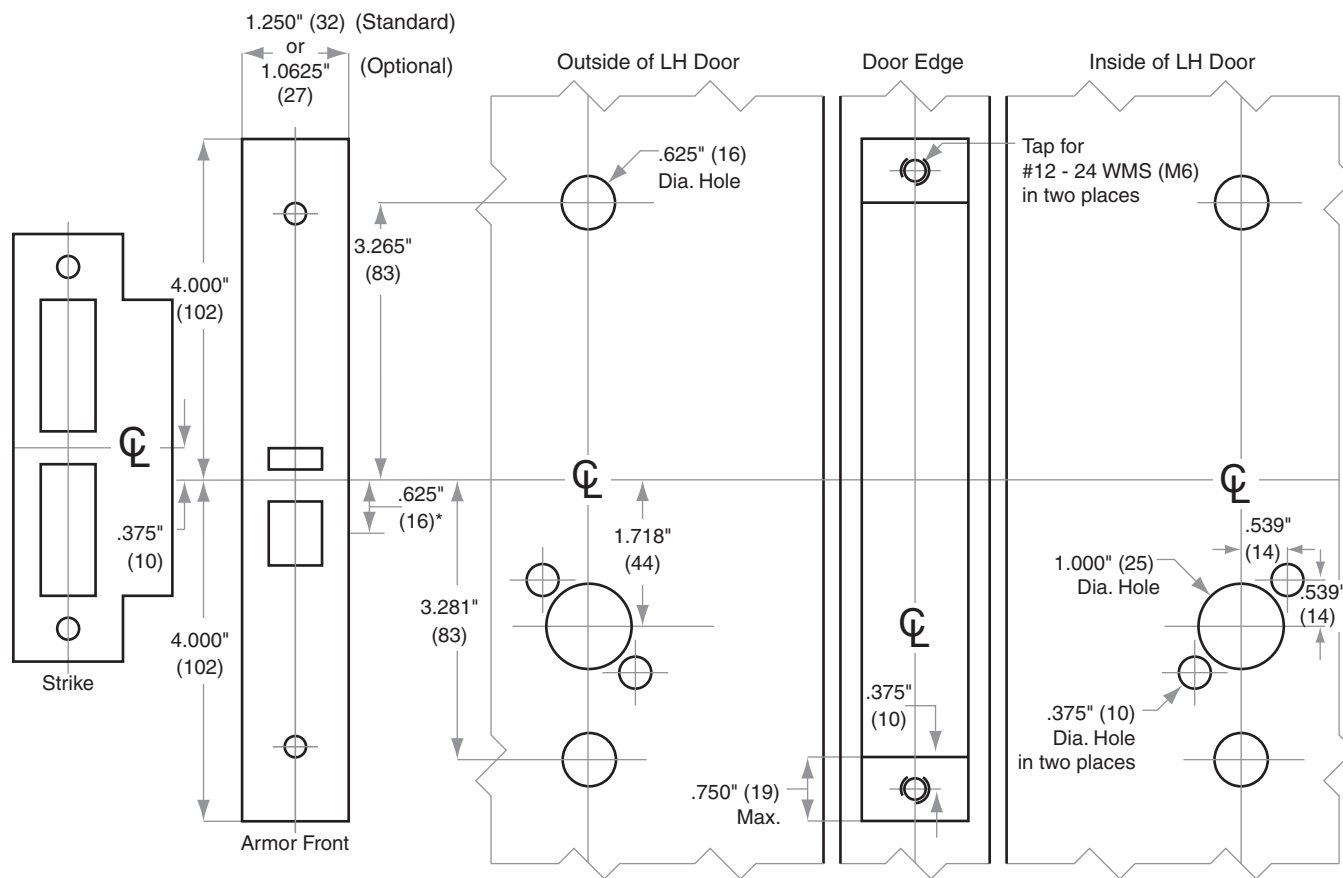

\*Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L915 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for  
 your product and application!**

Door preparation template

# L915




# L/LV/LM/LMV-Series

## Models L9090, L9091 Electrified Locks

Door Type: Metal, flat or beveled  
 Trim: Rose

**For Case and Strike dimensions, see Template L1  
 Refer to Template L1 (revised October 2014 or  
 later) for information to prepare the door for  
 wire routing**

### Left Hand (LH) Door Shown

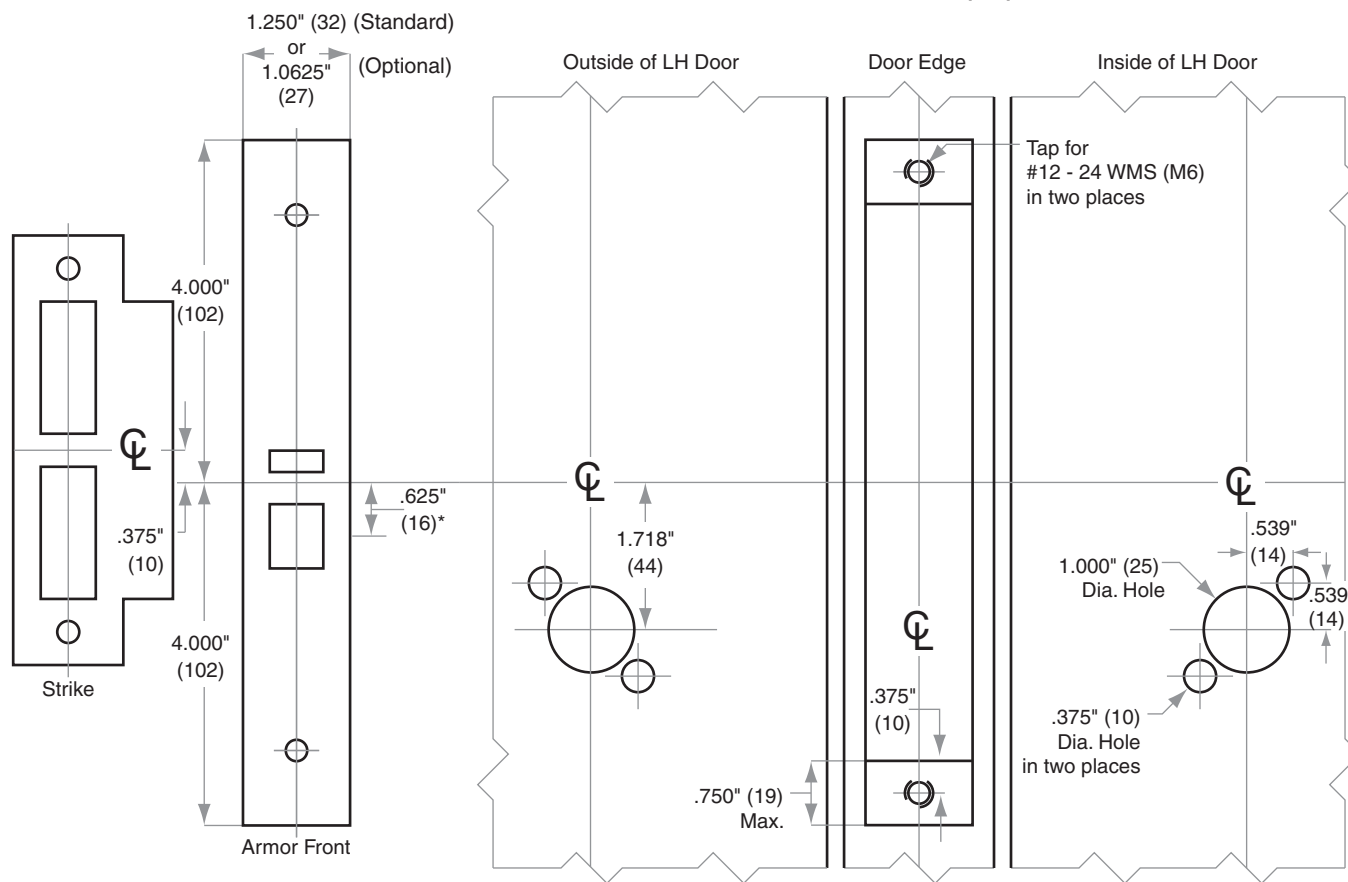

\*Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L916 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**  
**We can help you find the correct guide for  
 your product and application!**

Door preparation template

# L916




# L/LV/LM/LMV-Series

## Models L9090, L9091 Electrified Locks

Door Type: Wood or composite, flat or beveled  
 Trim: Escutcheon

**For Case and Strike dimensions, see Template L1  
 Refer to Template L1 (revised October 2014 or  
 later) for information to prepare the door for  
 wire routing**

### Left Hand (LH) Door Shown

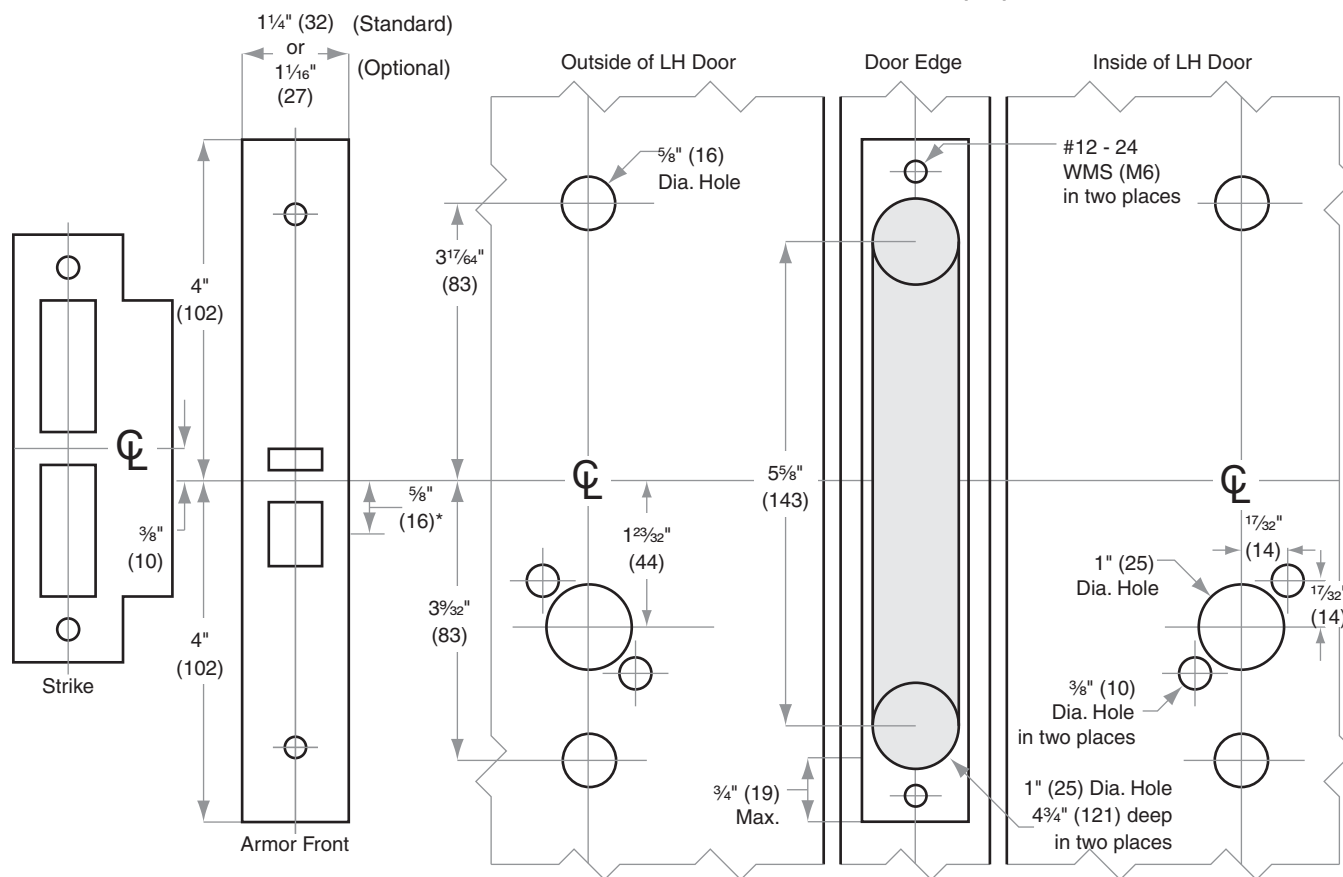

\*Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L917 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for  
 your product and application!**

Door preparation template

# L917




# L/LV/LM/LMV-Series

## Models L9090, L9091 Electrified Locks

Door Type: Wood or composite, flat or beveled  
 Trim: Rose

**For Case and Strike dimensions, see Template L1**  
**Refer to Template L1 (revised October 2014 or later) for information to prepare the door for wire routing**

### Left Hand (LH) Door Shown

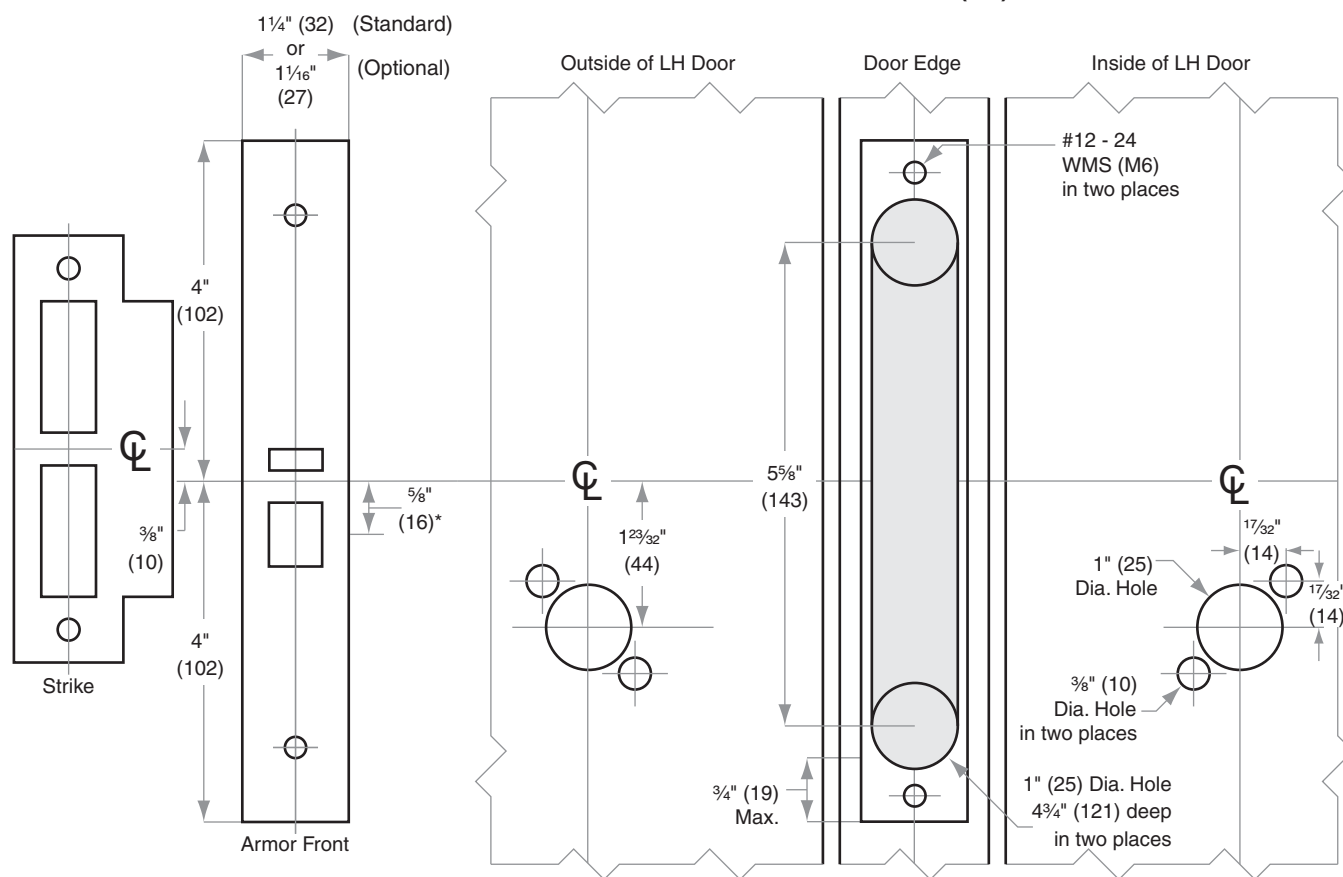

\*Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L918 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L918



# L/LV/LM/LMV-Series


## Models L9092, L9093 Electrified Locks

Door Type: Metal, flat or beveled  
 Trim: Escutcheon

This template should not be used for HSLR trim. Use template L966 for HSLR trim.

**For Case and Strike dimensions, see Template L1  
 Refer to Template L1 (revised October 2014 or  
 later) for information to prepare the door for  
 wire routing**

### Left Hand (LH) Door Shown

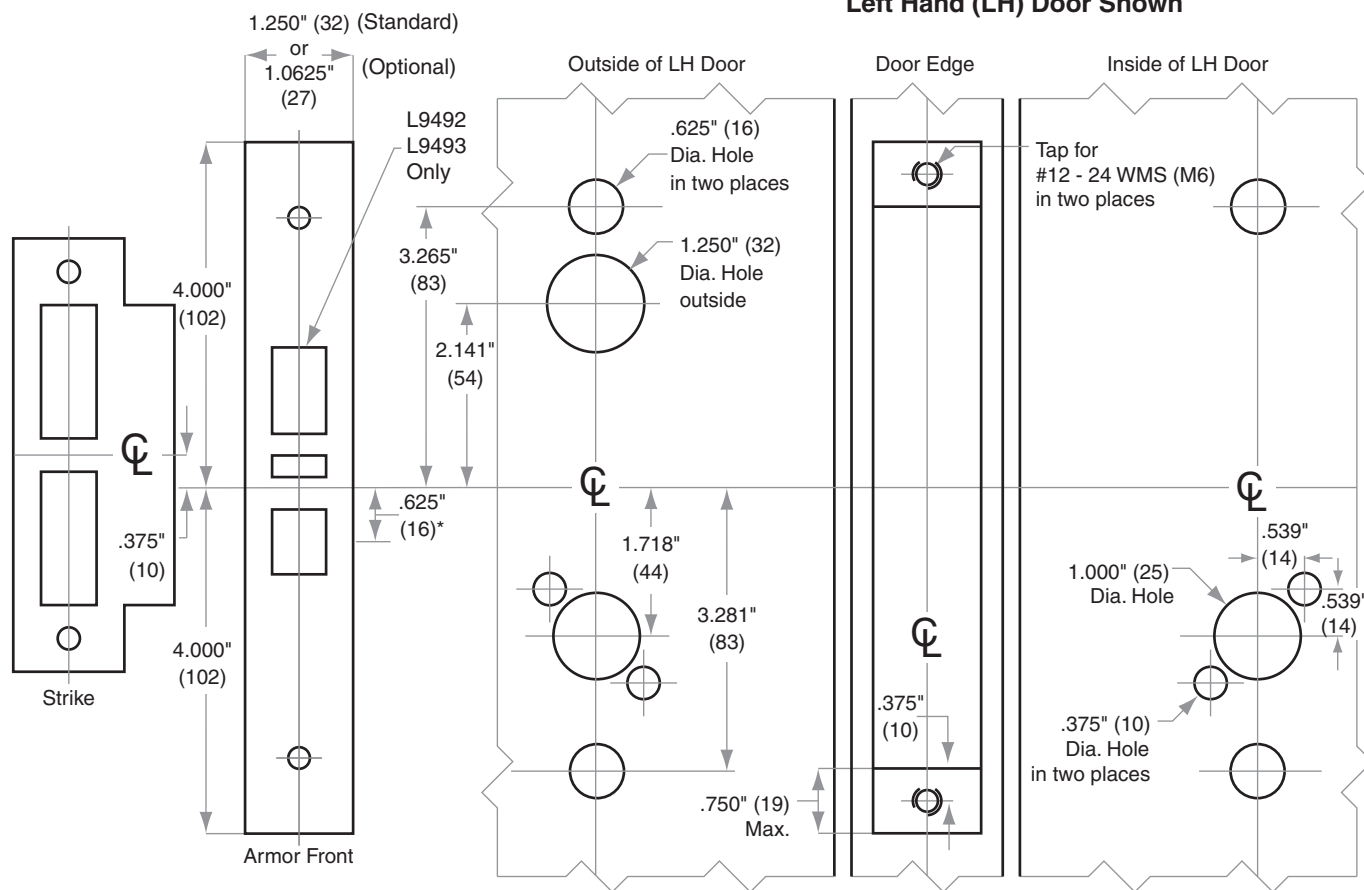

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L919 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for  
 your product and application!**

Door preparation template

# L919



# L/LV/LM/LMV-Series


## Models L9092, L9093 Electrified Locks

Door Type: Metal, flat or beveled  
 Trim: Rose

This template should not be used for HSLR trim. Use template L966 for HSLR trim.

**For Case and Strike dimensions, see Template L1  
 Refer to Template L1 (revised October 2014 or  
 later) for information to prepare the door for  
 wire routing**

### Left Hand (LH) Door Shown

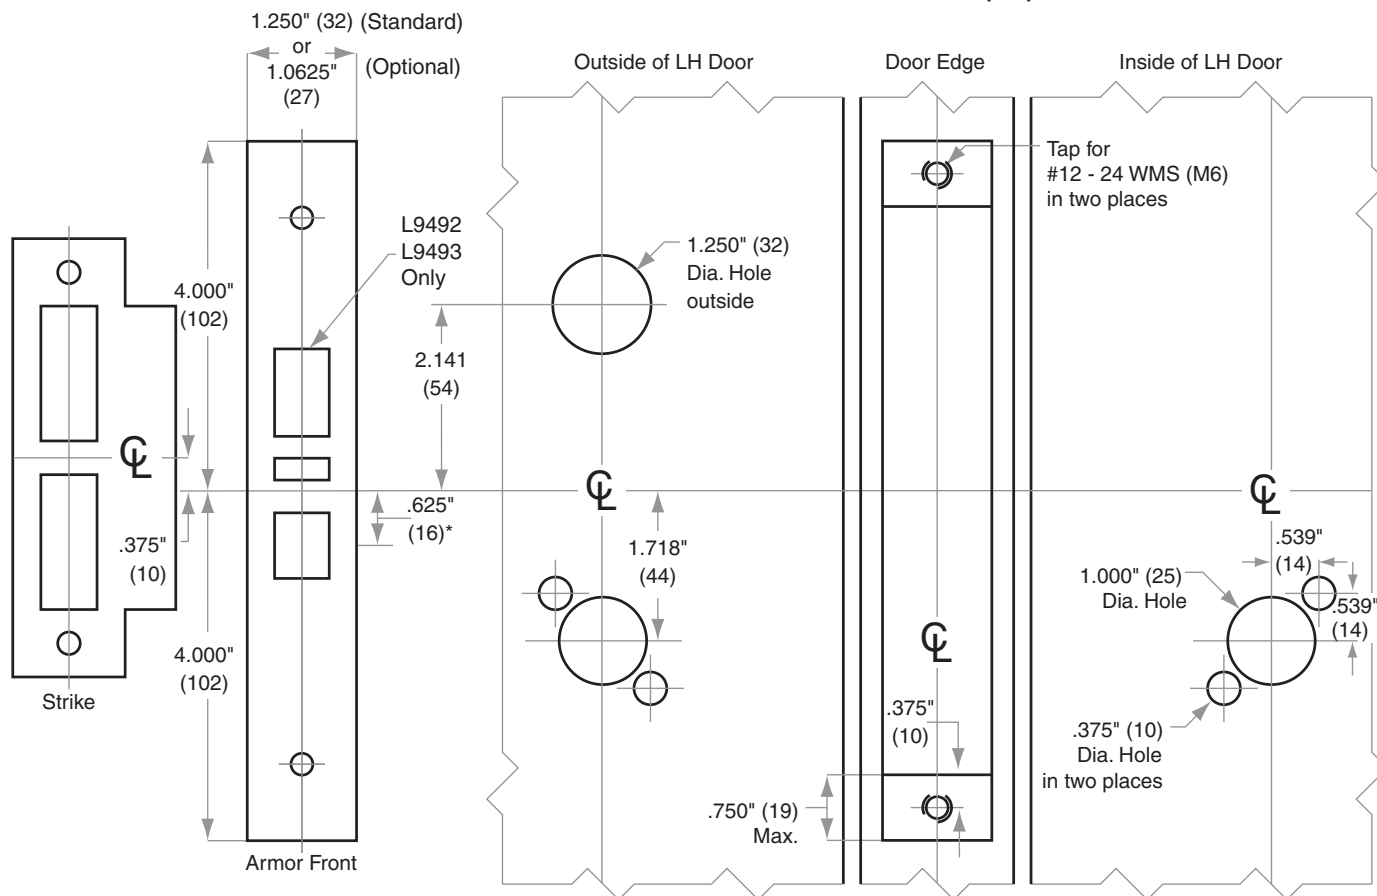

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L920 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for  
 your product and application!**

Door preparation template

# L920





# L/LV/LM/LMV-Series


## Models L9092, L9093 Locks

Door Type: Wood or composite, flat or beveled  
 Trim: Escutcheon

This template should not be used for HSLR trim. Use template L965 for HSLR trim.

**For Case and Strike dimensions, see Template L1**  
**Refer to Template L1 (revised October 2014 or later)** for information to prepare the door for wire routing

### Left Hand (LH) Door Shown

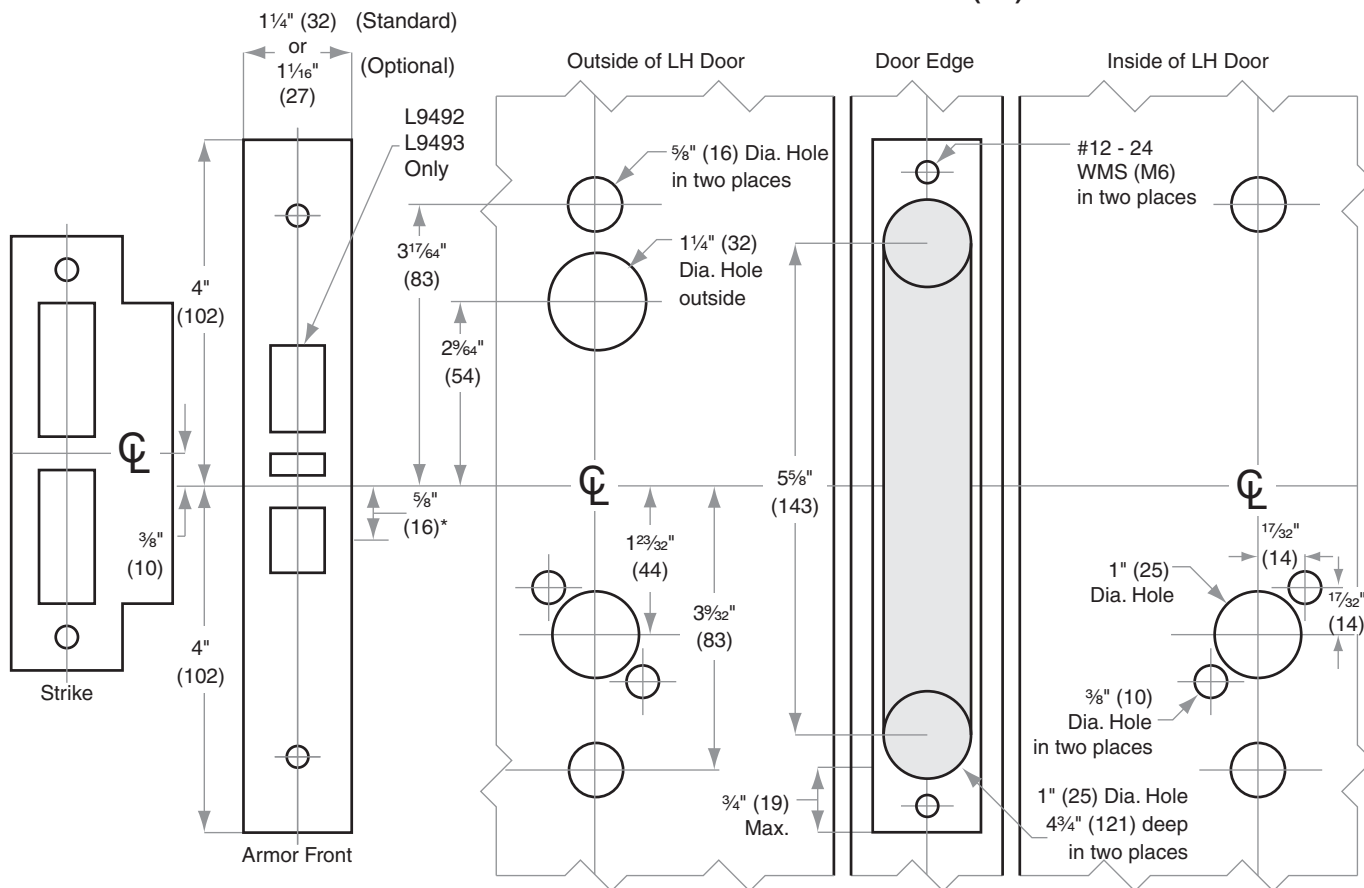

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L921 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L921



# L/LV/LM/LMV-Series


## Models L9092, L9093 Electrified Locks

Door Type: Wood or composite, flat or beveled  
 Trim: Rose

This template should not be used for HSLR trim. Use template L965 for HSLR trim.

**For Case and Strike dimensions, see Template L1**  
**Refer to Template L1 (revised October 2014 or later) for information to prepare the door for wire routing**

### Left Hand (LH) Door Shown

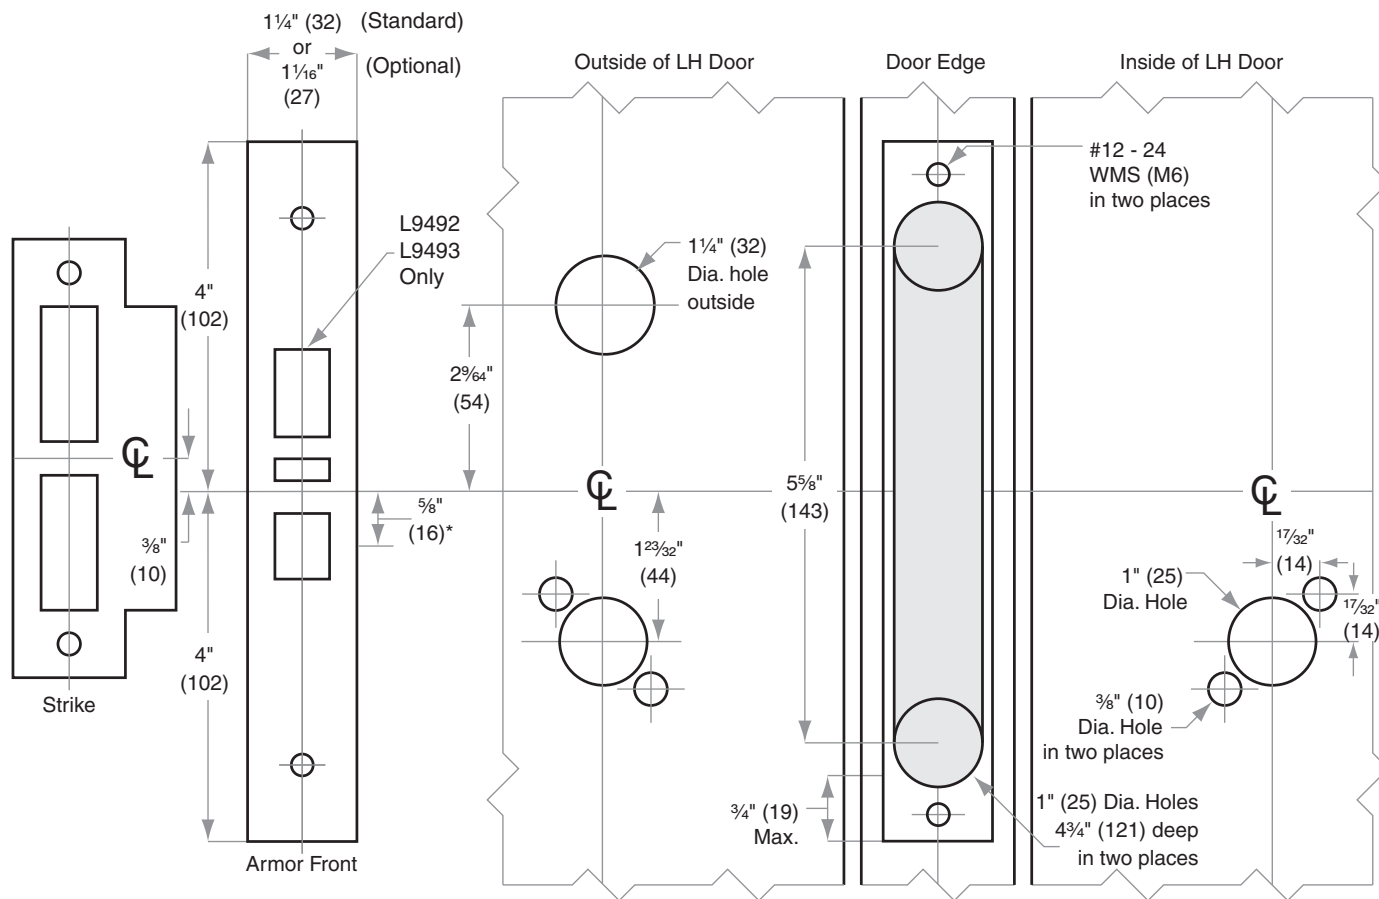

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L922 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L922



# L/LV/LM/LMV-Series


Models L9094, L9095, L9494, L9495 Electrified Locks

Door Type: Metal, flat or beveled  
 Trim: Escutcheon

This template should not be used for HSLR trim. Use template L966 for HSLR trim.

**For Case and Strike dimensions, see Template L1  
 Refer to Template L1 (revised October 2014 or  
 later) for information to prepare the door for  
 wire routing**

### Left Hand (LH) Door Shown

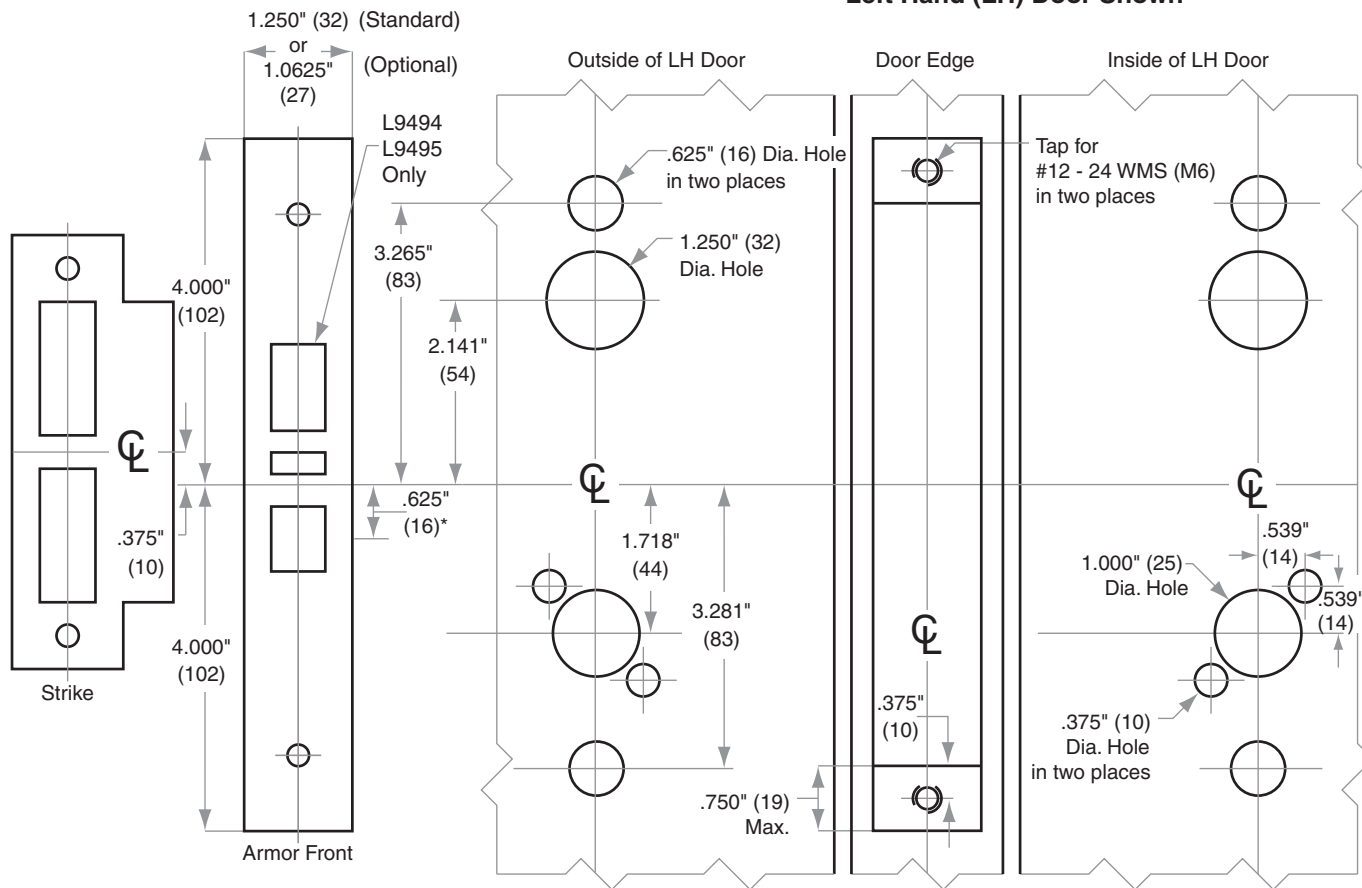

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L923 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for  
 your product and application!**

Door preparation template

# L923



# L/LV/LM/LMV-Series

Models L9094, L9095, L9494, L9495 Electrified Locks


Door Type: Metal, flat or beveled

Trim: Rose

This template should not be used for HSLR trim. Use template L966 for HSLR trim.

**For Case and Strike dimensions, see Template L1  
Refer to Template L1 (revised October 2014 or later) for information to prepare the door for wire routing**

### Left Hand (LH) Door Shown

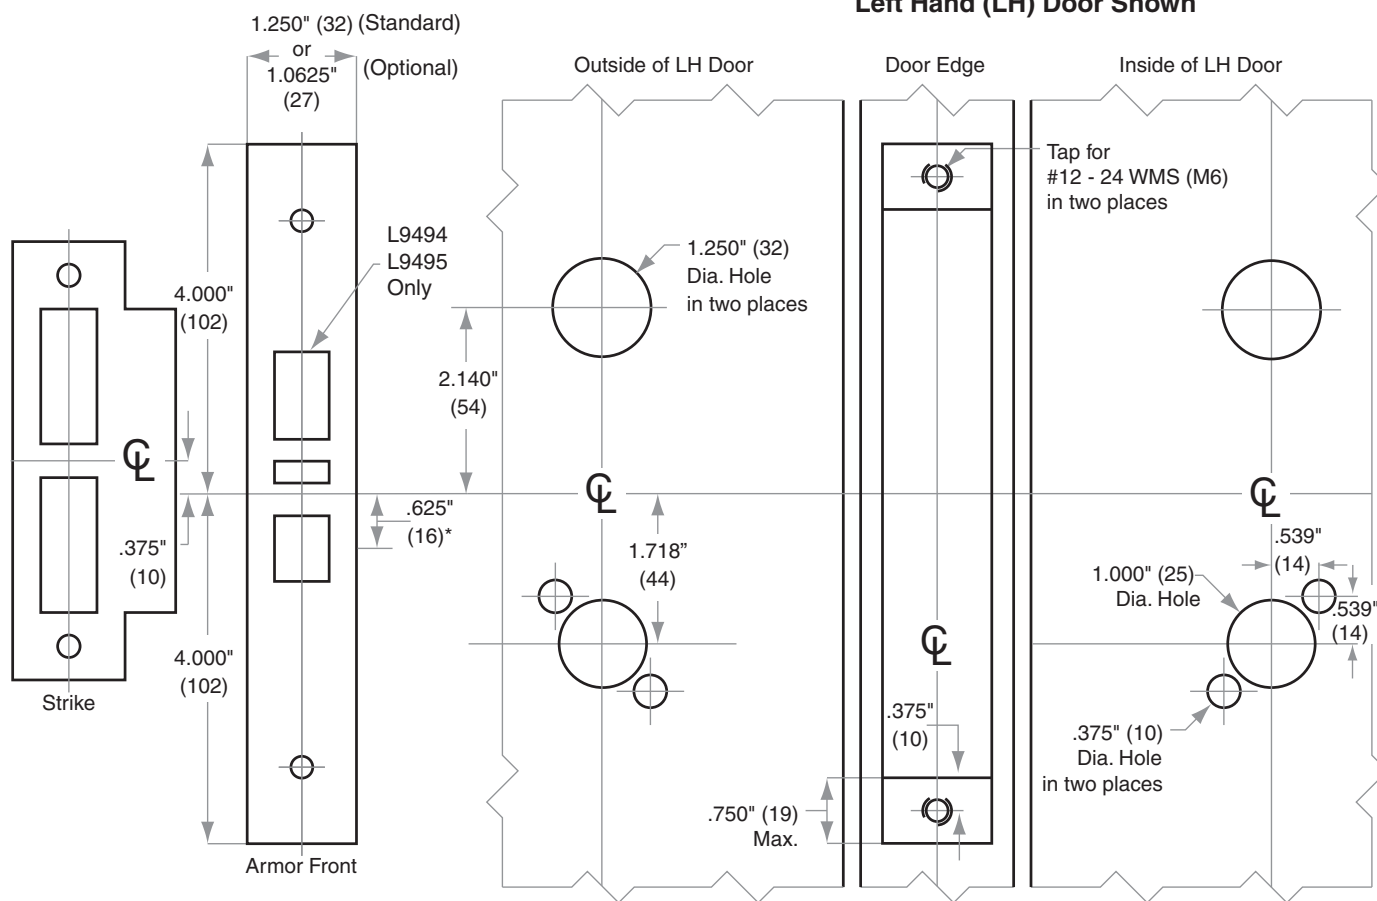

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L924 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**

**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L924



# L/LV/LM/LMV-Series


Models L9094, L9095, L9494, L9495 Electrified Locks

Door Type: Wood or composite, flat or beveled  
 Trim: Escutcheon

This template should not be used for HSLR trim. Use template L965 for HSLR trim.

**For Case and Strike dimensions, see Template L1  
 Refer to Template L1 (revised October 2014 or  
 later) for information to prepare the door for  
 wire routing**

### Left Hand (LH) Door Shown

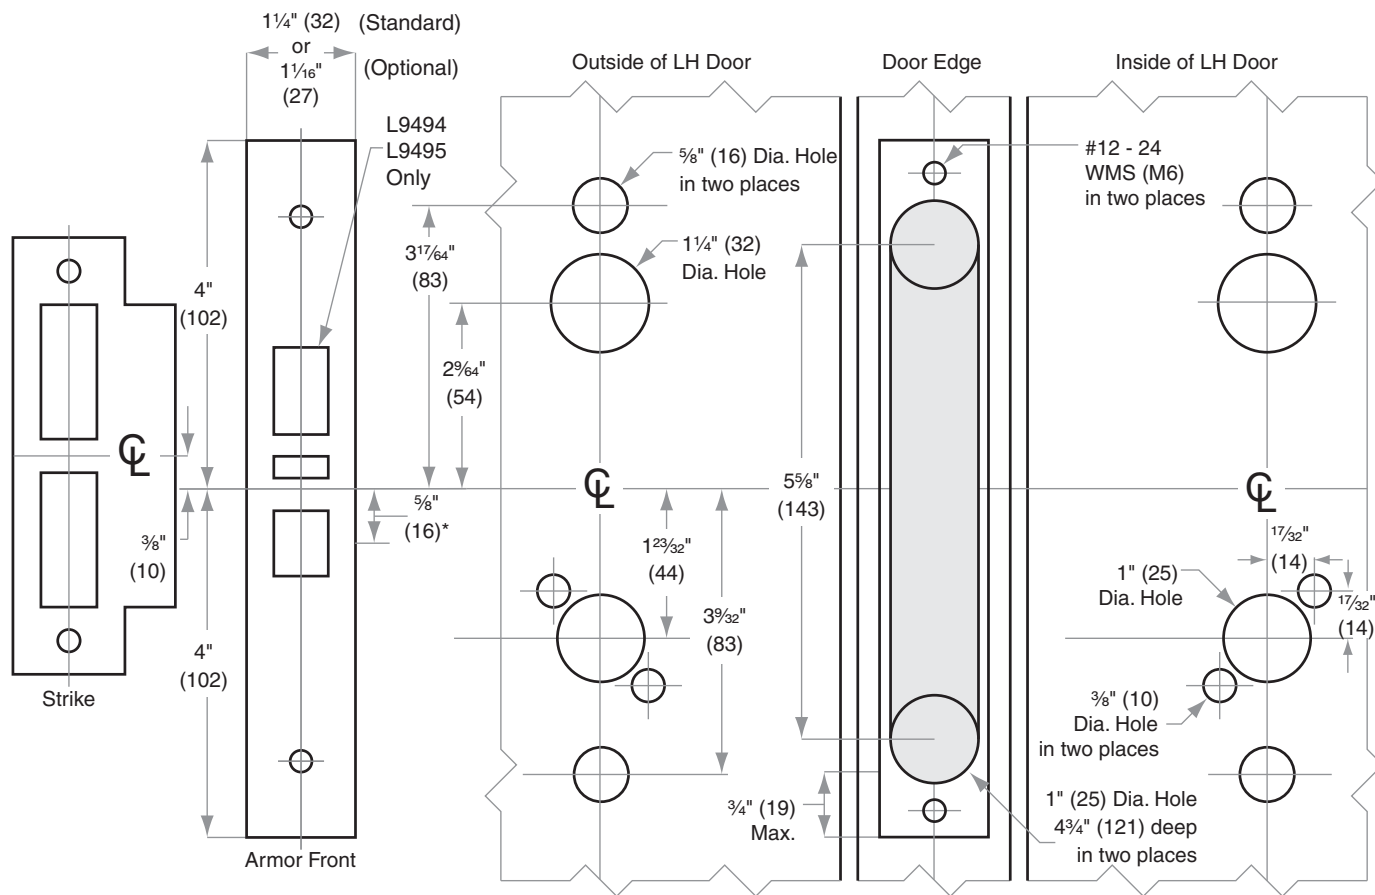

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L925 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for  
 your product and application!**

Door preparation template

# L925



# L/LV/LM/LMV-Series


Models L9094, L9095, L9494, L9495 Electrified Locks

Door Type: Wood or composite, flat or beveled  
 Trim: Rose

This template should not be used for HSLR trim. Use template L965 for HSLR trim.

**For Case and Strike dimensions, see Template L1  
 Refer to Template L1 (revised October 2014 or  
 later) for information to prepare the door for  
 wire routing**

### Left Hand (LH) Door Shown

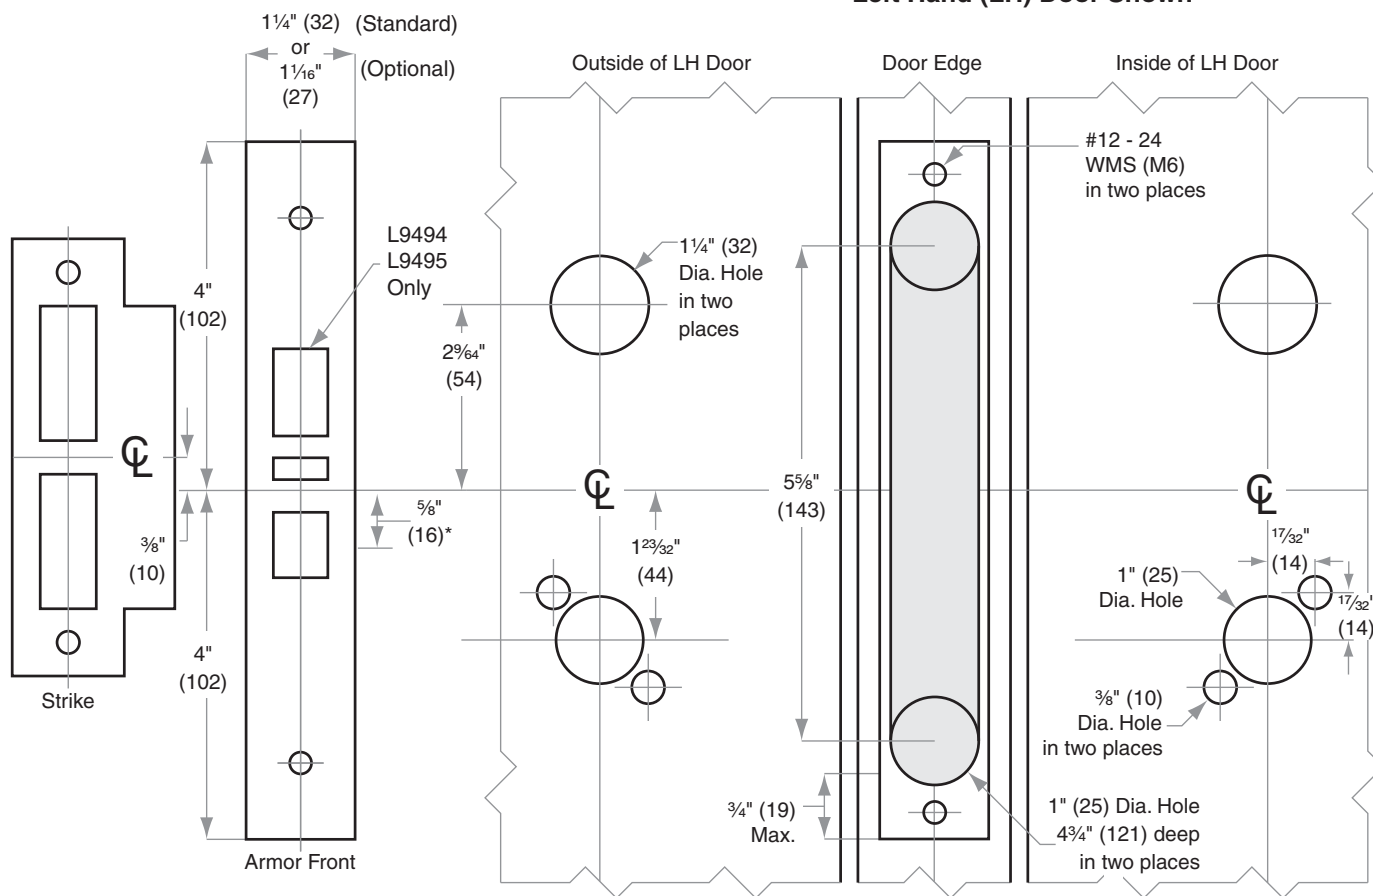

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L926 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for  
 your product and application!**

Door preparation template

# L926






# LM9200-Series

## Model LM9210, LM9210F Locks

Door Type: Wood or composite, flat or beveled  
 Trim: Escutcheon

For case and strike dimensions, see Template L3.

**NOTE: For fire-rated locks less bottom latch (LBL), refer to template #L959 for additional door preparation instructions.**

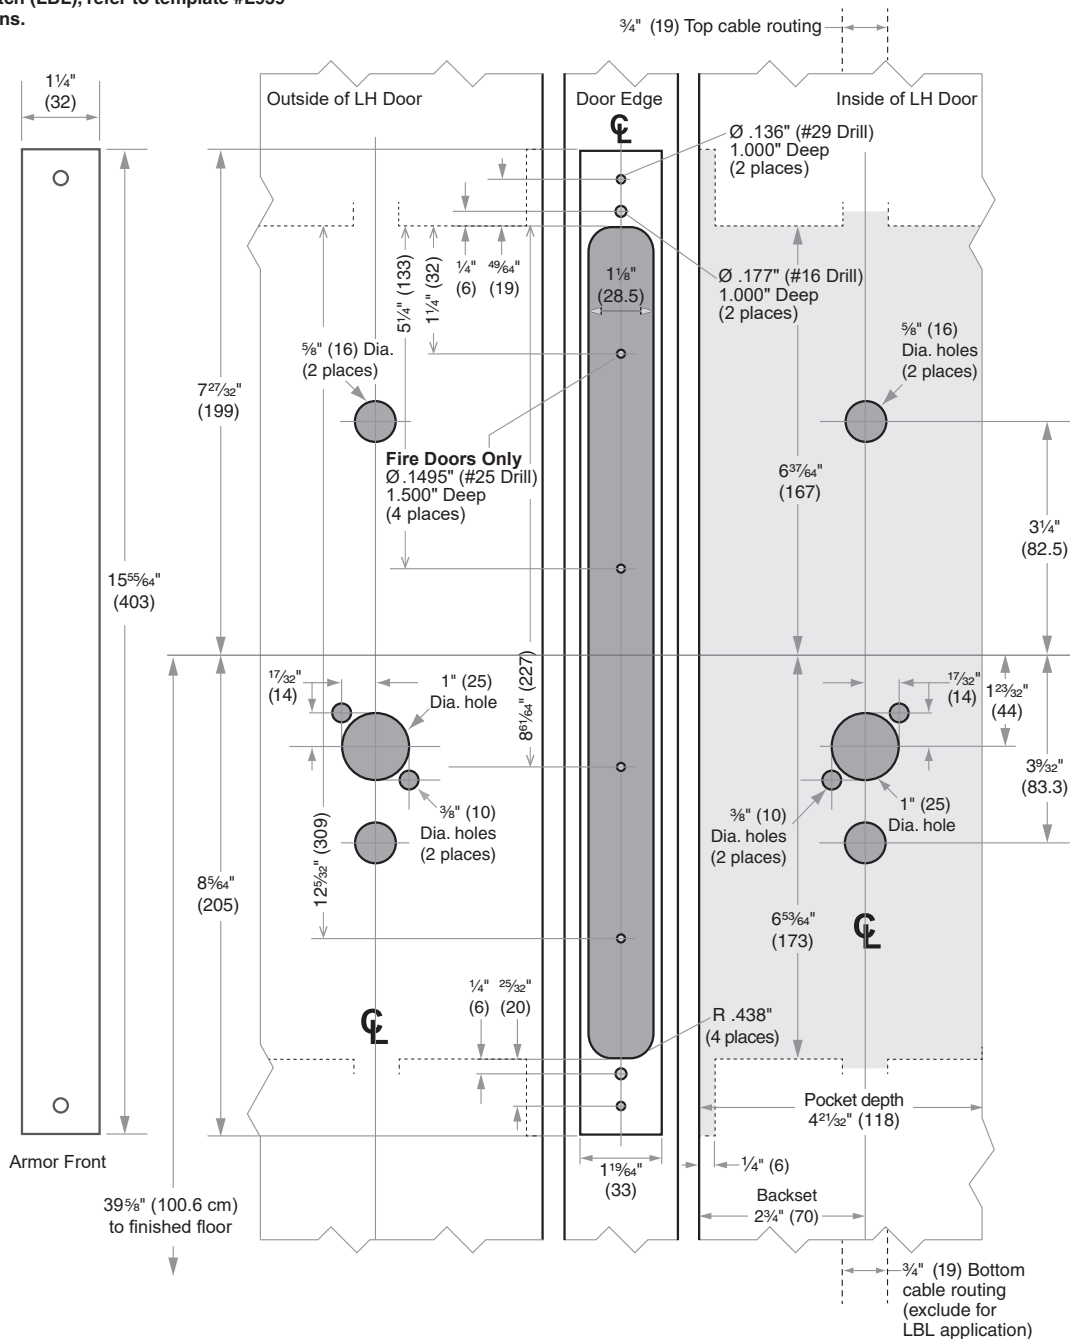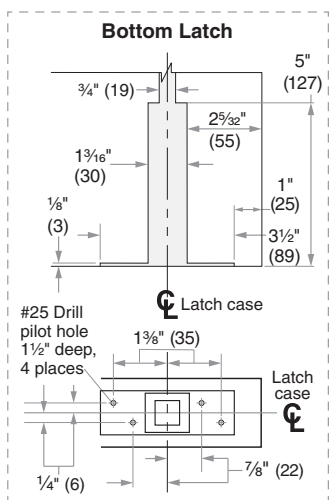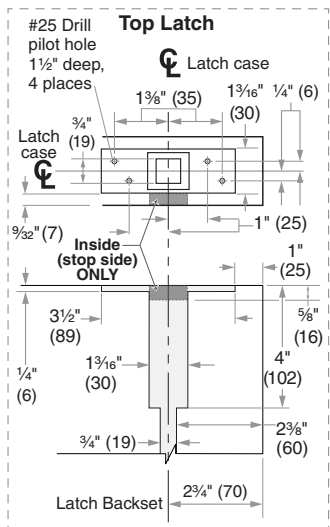

Dimensions shown in parentheses ( ) are in millimeters.

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

Door preparation template




# LM9200-Series

## Model LM9210, LM9210F Locks

Door Type: Wood or composite, flat or beveled  
 Trim: Rose

For case and strike dimensions, see Template L3.

**NOTE: For fire-rated locks less bottom latch (LBL), refer to template #L959 for additional door preparation instructions.**

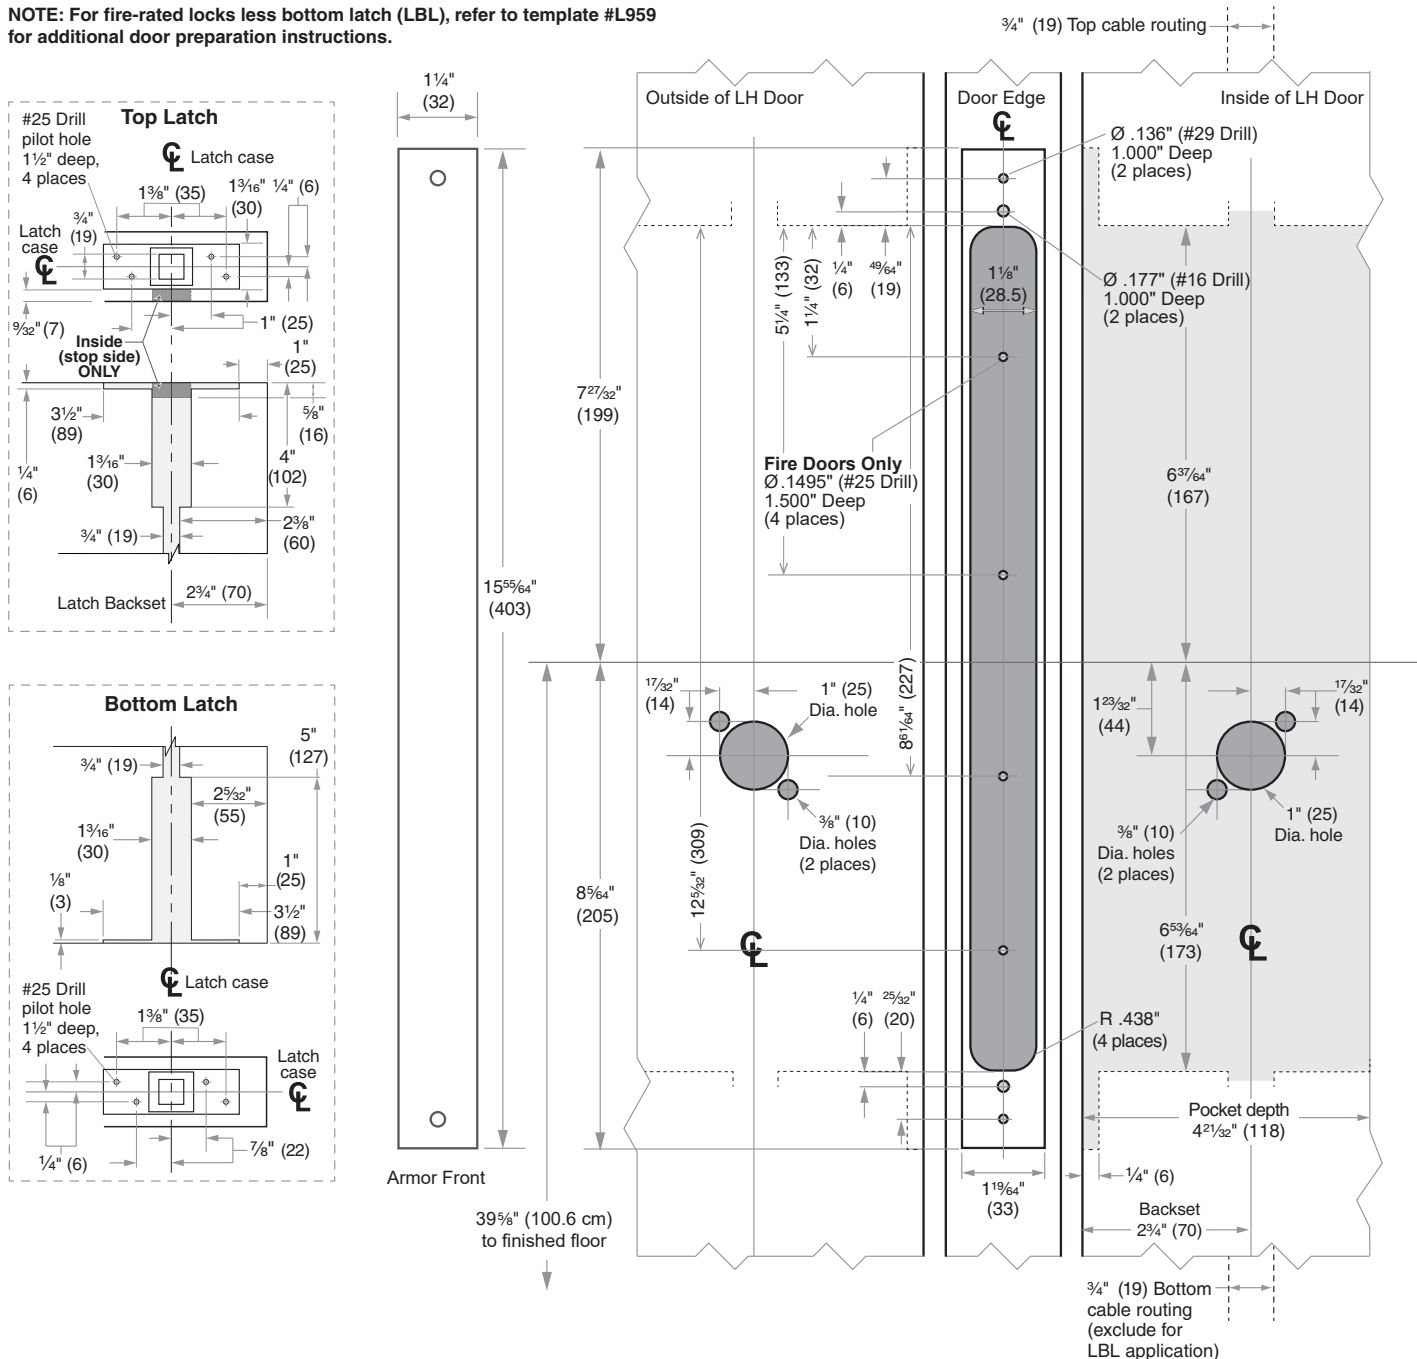

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L928 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L928






# LM9200-Series

## Model LM9225, LM9225F Locks

Door Type: Wood or composite, flat or beveled  
 Trim: Rose

For case and strike dimensions, see Template L3.

**NOTE: For fire-rated locks less bottom latch (LBL), refer to template #L959 for additional door preparation instructions.**

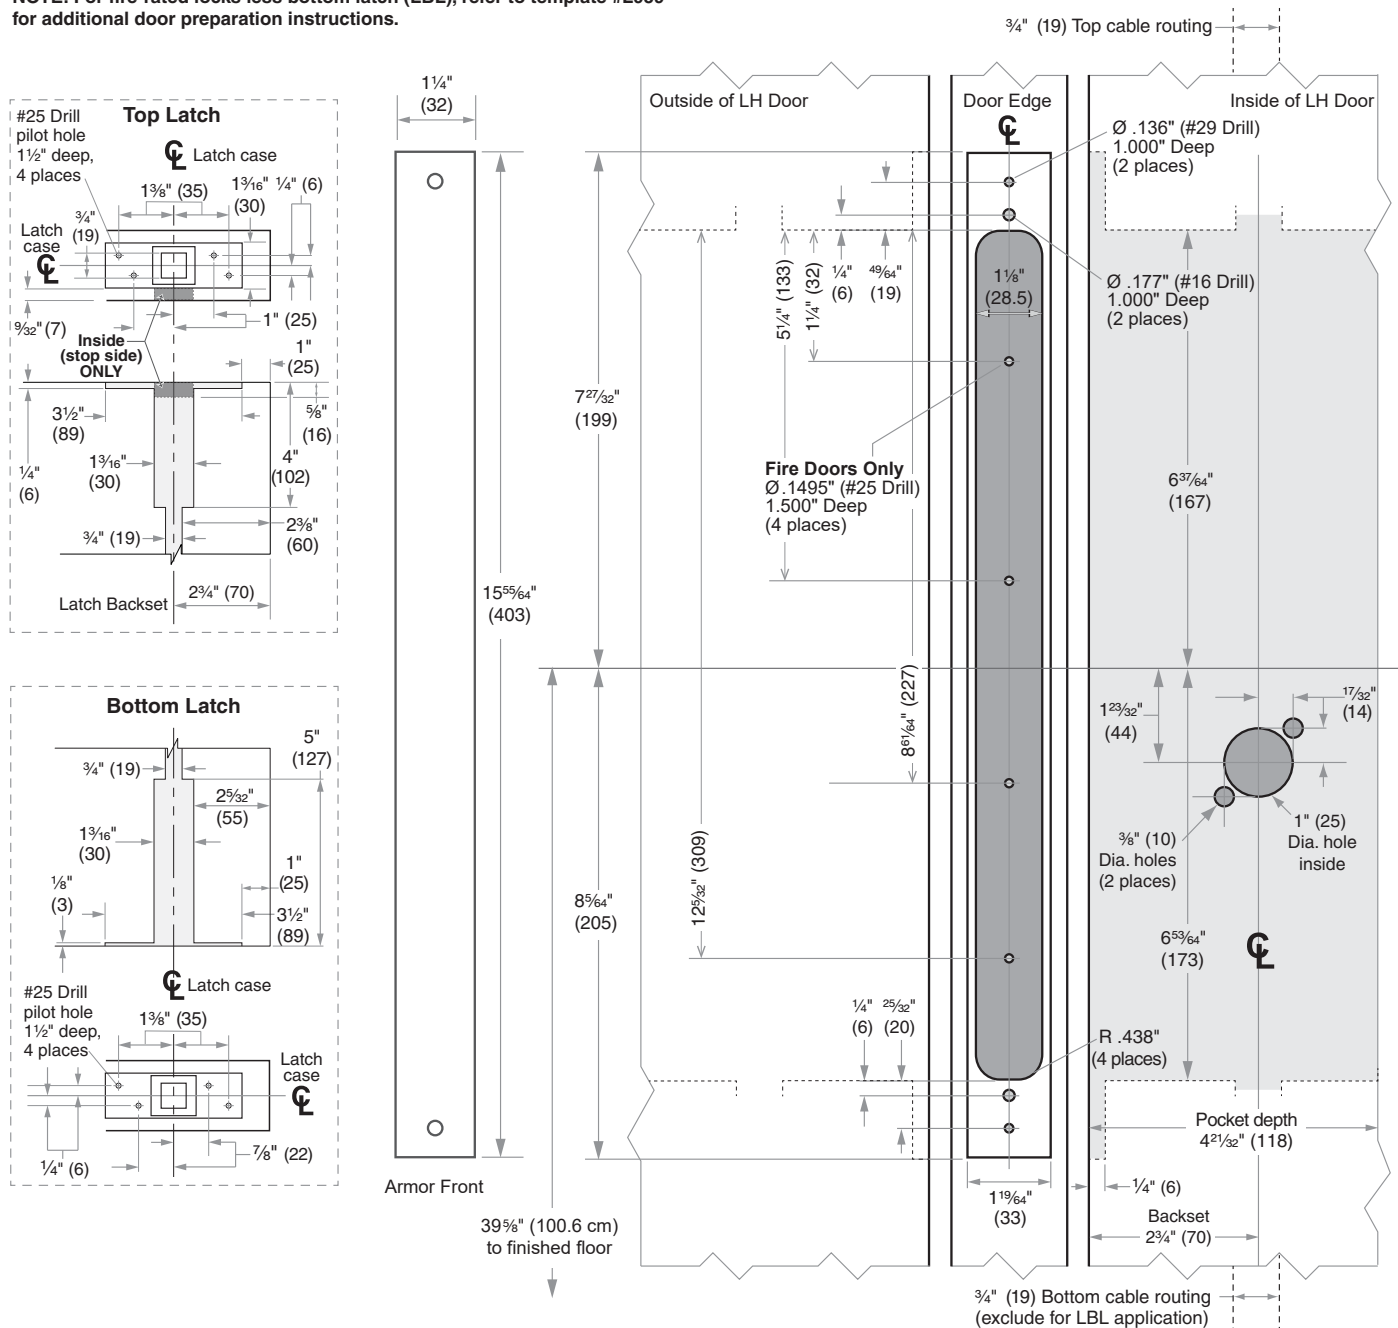

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L930 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**  
**We can help you find the correct guide for your product and application!**

Door preparation template  
**L930**



# LM9200-Series


Models LM9250, LM9250F, LM9256, LM9256F Locks

Door Type: Wood or composite, flat or beveled

Trim: Escutcheon

**For case and strike dimensions, see Template L3.**

**NOTE: For fire-rated locks less bottom latch (LBL), refer to template #L959 for additional door preparation instructions.**

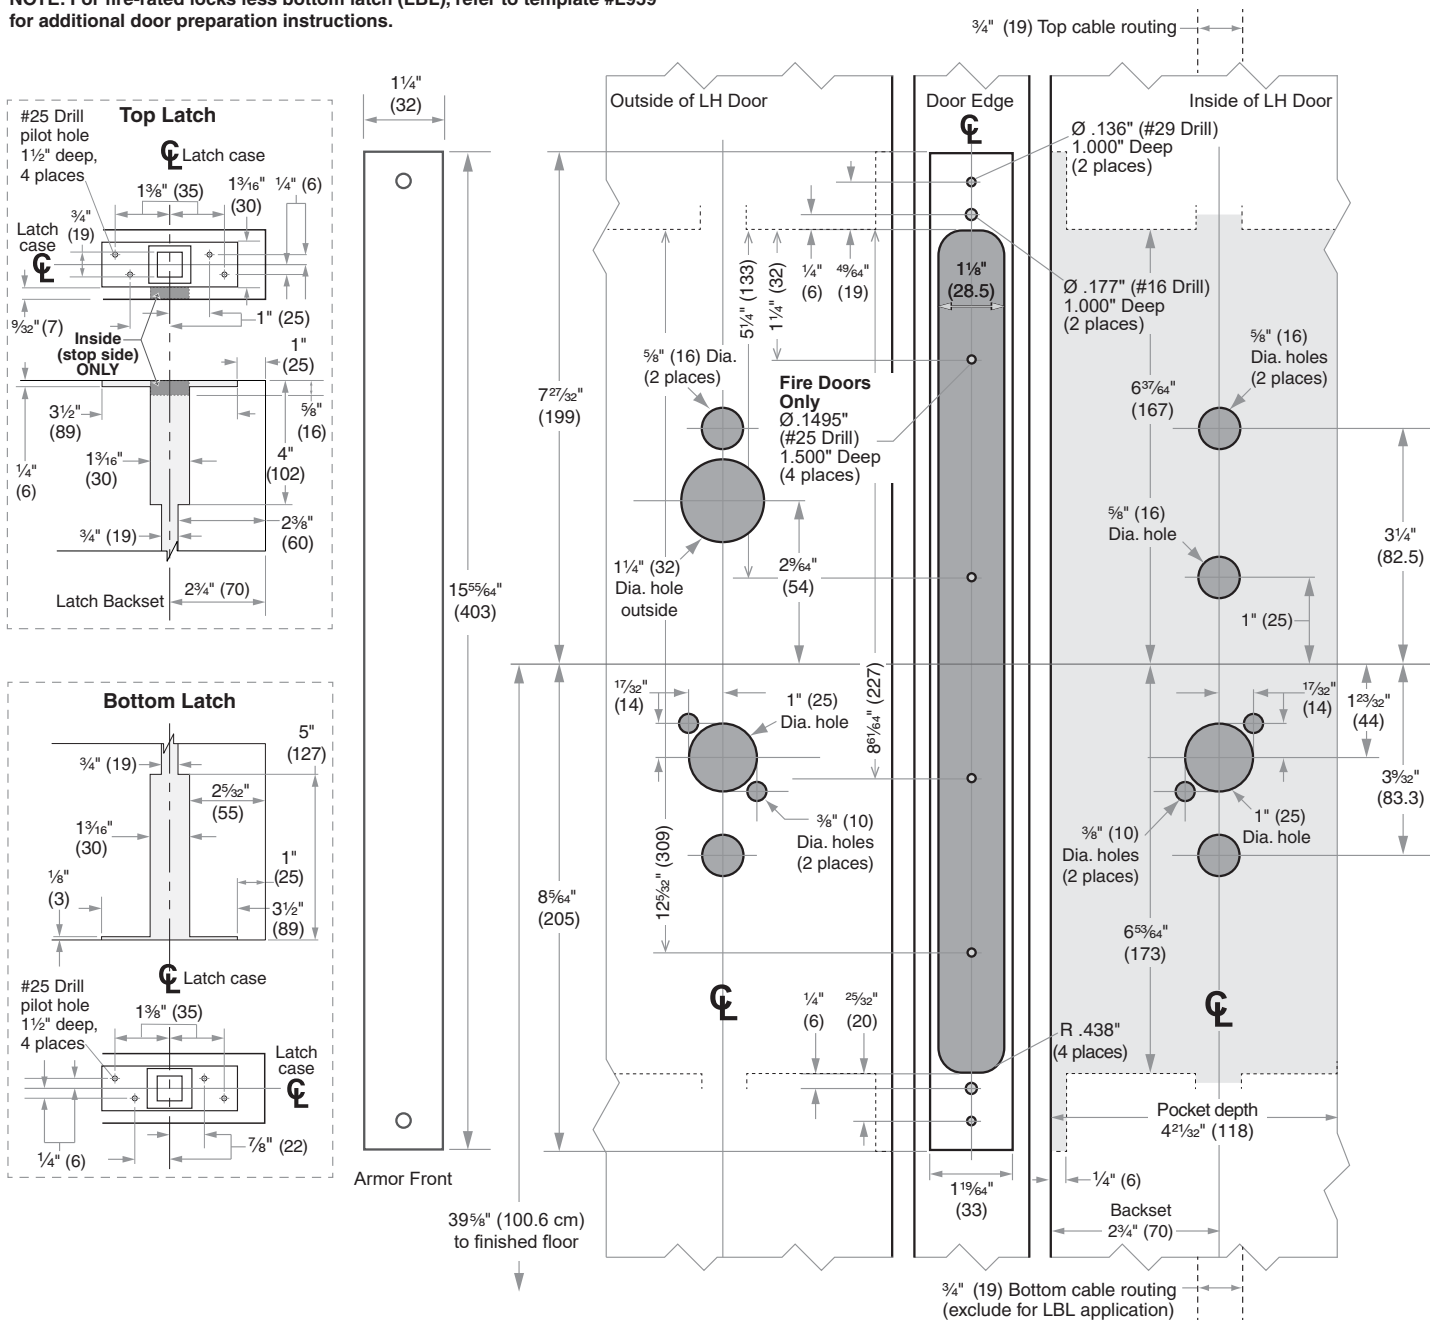

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L931 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L931



# LM9200-Series


Models LM9250, LM9250F, LM9256, LM9256F Locks

Door Type: Wood or composite, flat or beveled

Trim: Rose

For case and strike dimensions, see Template L3.

**NOTE: For fire-rated locks less bottom latch (LBL), refer to template #L959 for additional door preparation instructions.**

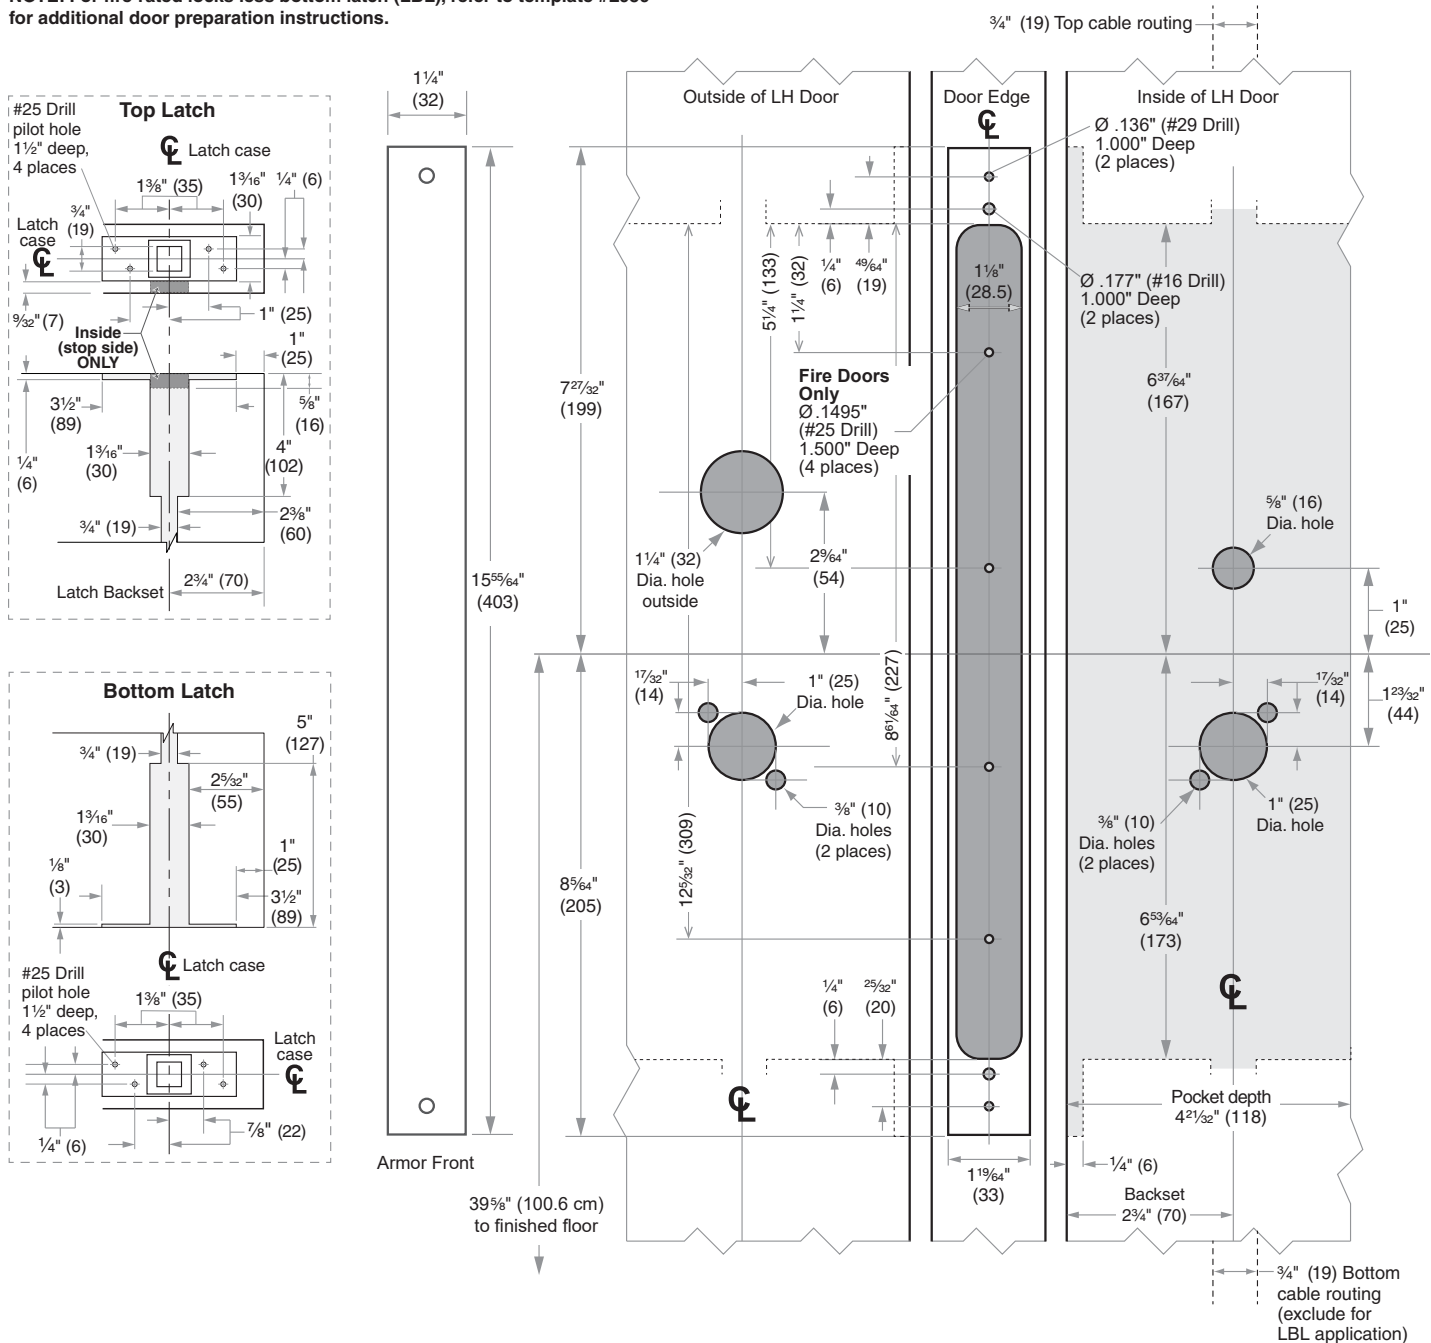

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L932 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L932



# LM9200-Series


Models LM9270, LM9270F, LM9280, LM9280F Locks

Door Type: Wood or composite, flat or beveled

Trim: Escutcheon

For case and strike dimensions, see Template L3.

**NOTE:** For fire-rated locks less bottom latch (LBL), refer to template #L959 for additional door preparation instructions.

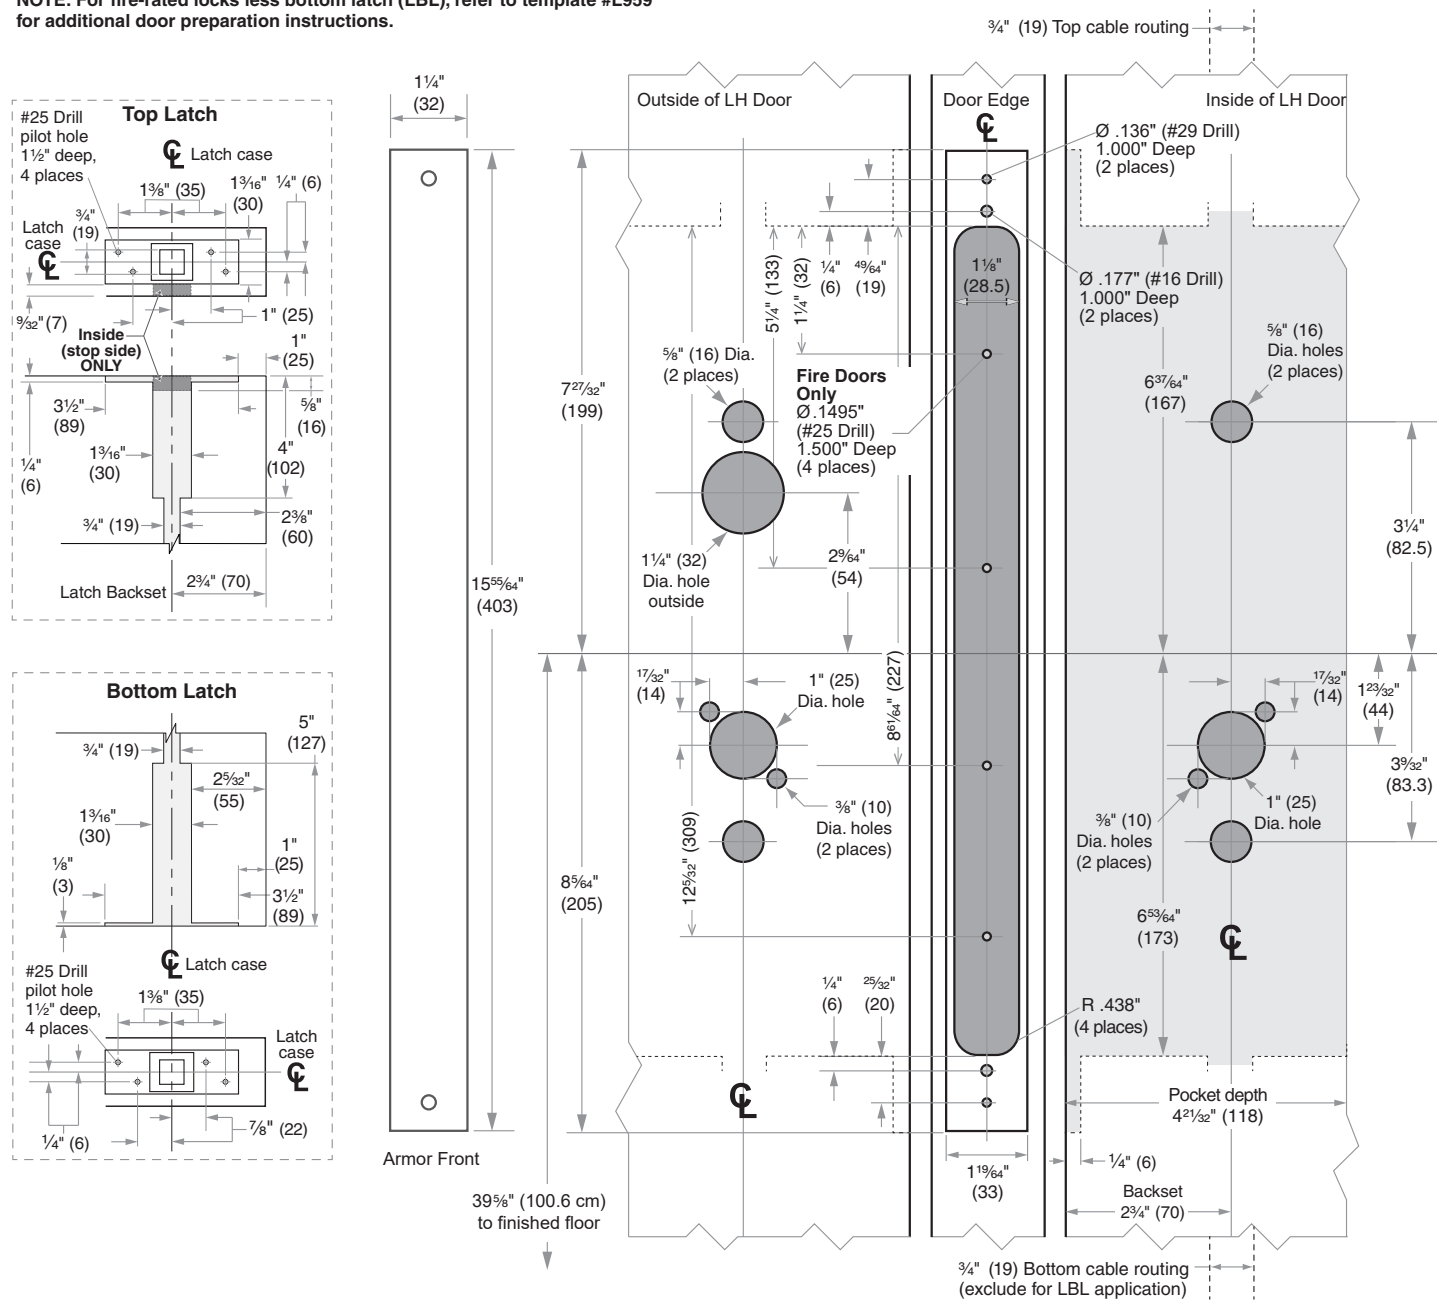

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L933 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L933



ALLEGION™

# LM9200-Series


Models LM9270, LM9270F, LM9280, LM9280F Locks

Door Type: Wood or composite, flat or beveled

Trim: Rose

For case and strike dimensions, see Template L3.

**NOTE:** For fire-rated locks less bottom latch (LBL), refer to template #L959 for additional door preparation instructions.

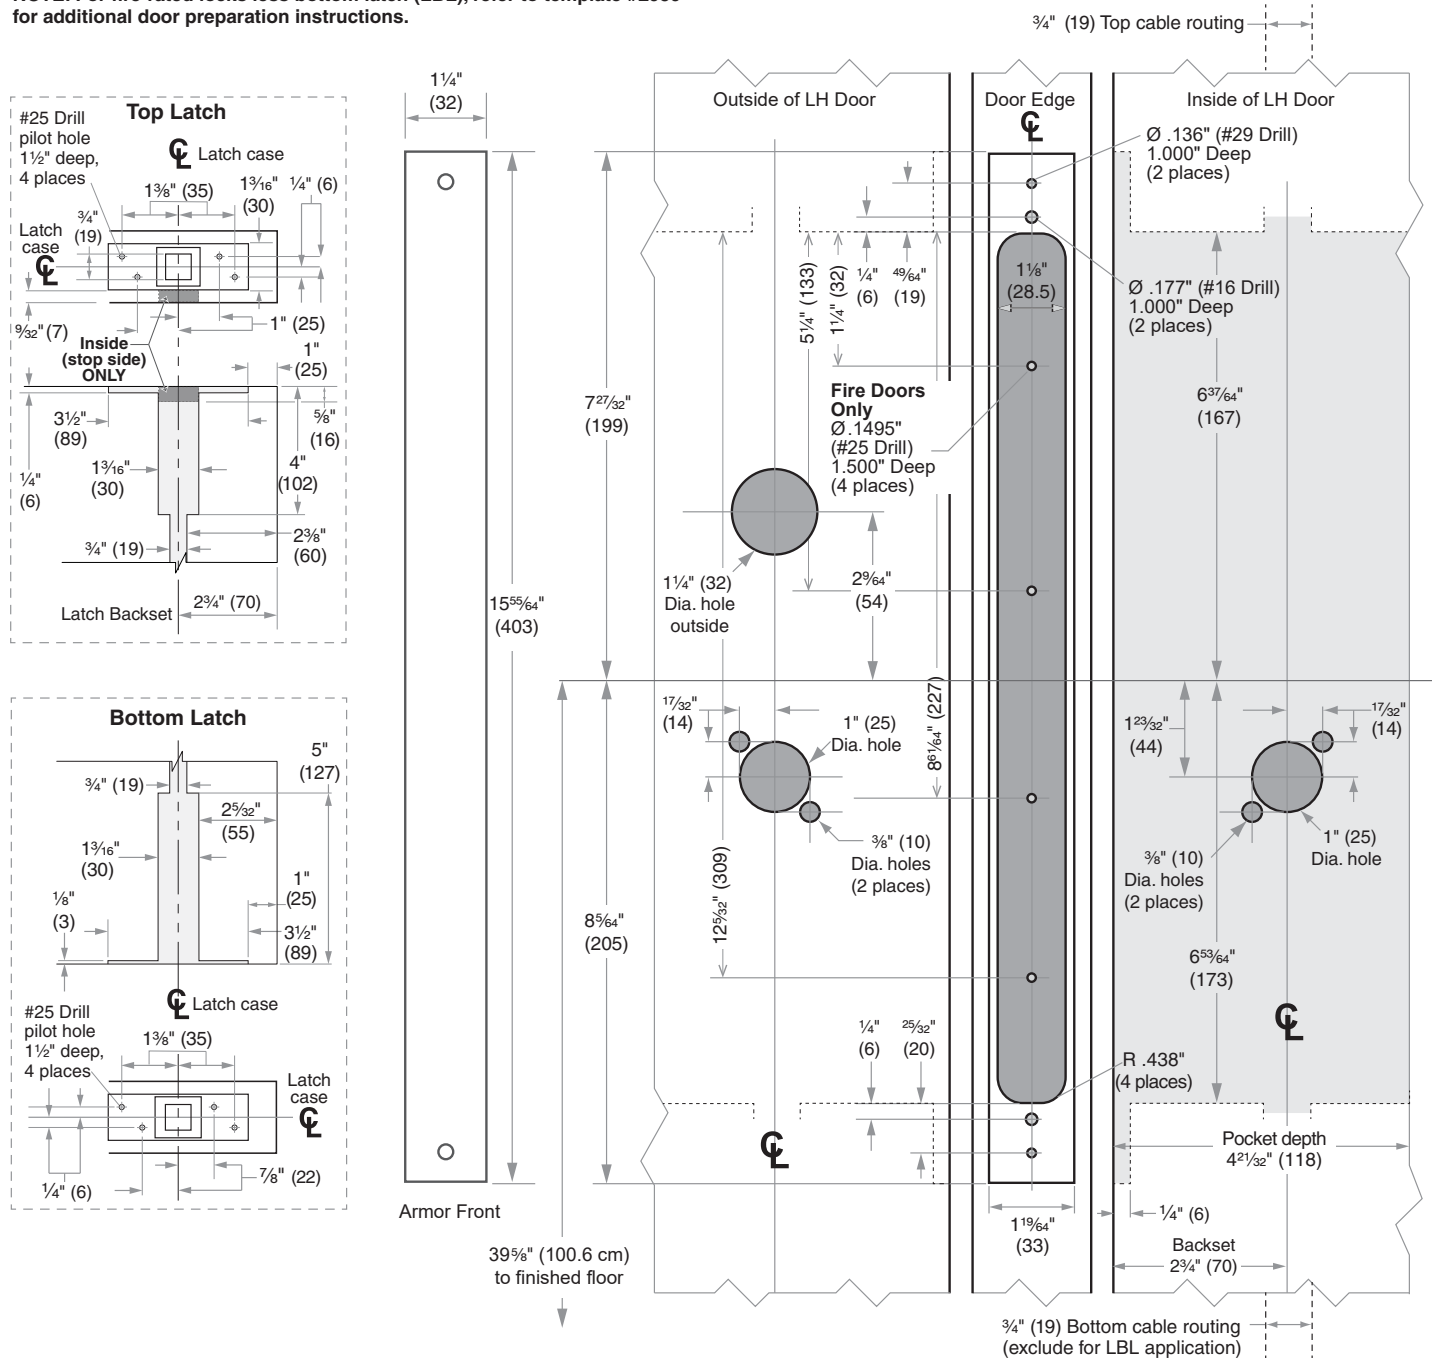

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L934 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**

Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L934




# LM9200-Series

## Model LM9271, LM9271F Locks

Door Type: Wood or composite, flat or beveled  
 Trim: Escutcheon

For case and strike dimensions, see Template L3.

**NOTE:** For fire-rated locks less bottom latch (LBL), refer to template #L959 for additional door preparation instructions.

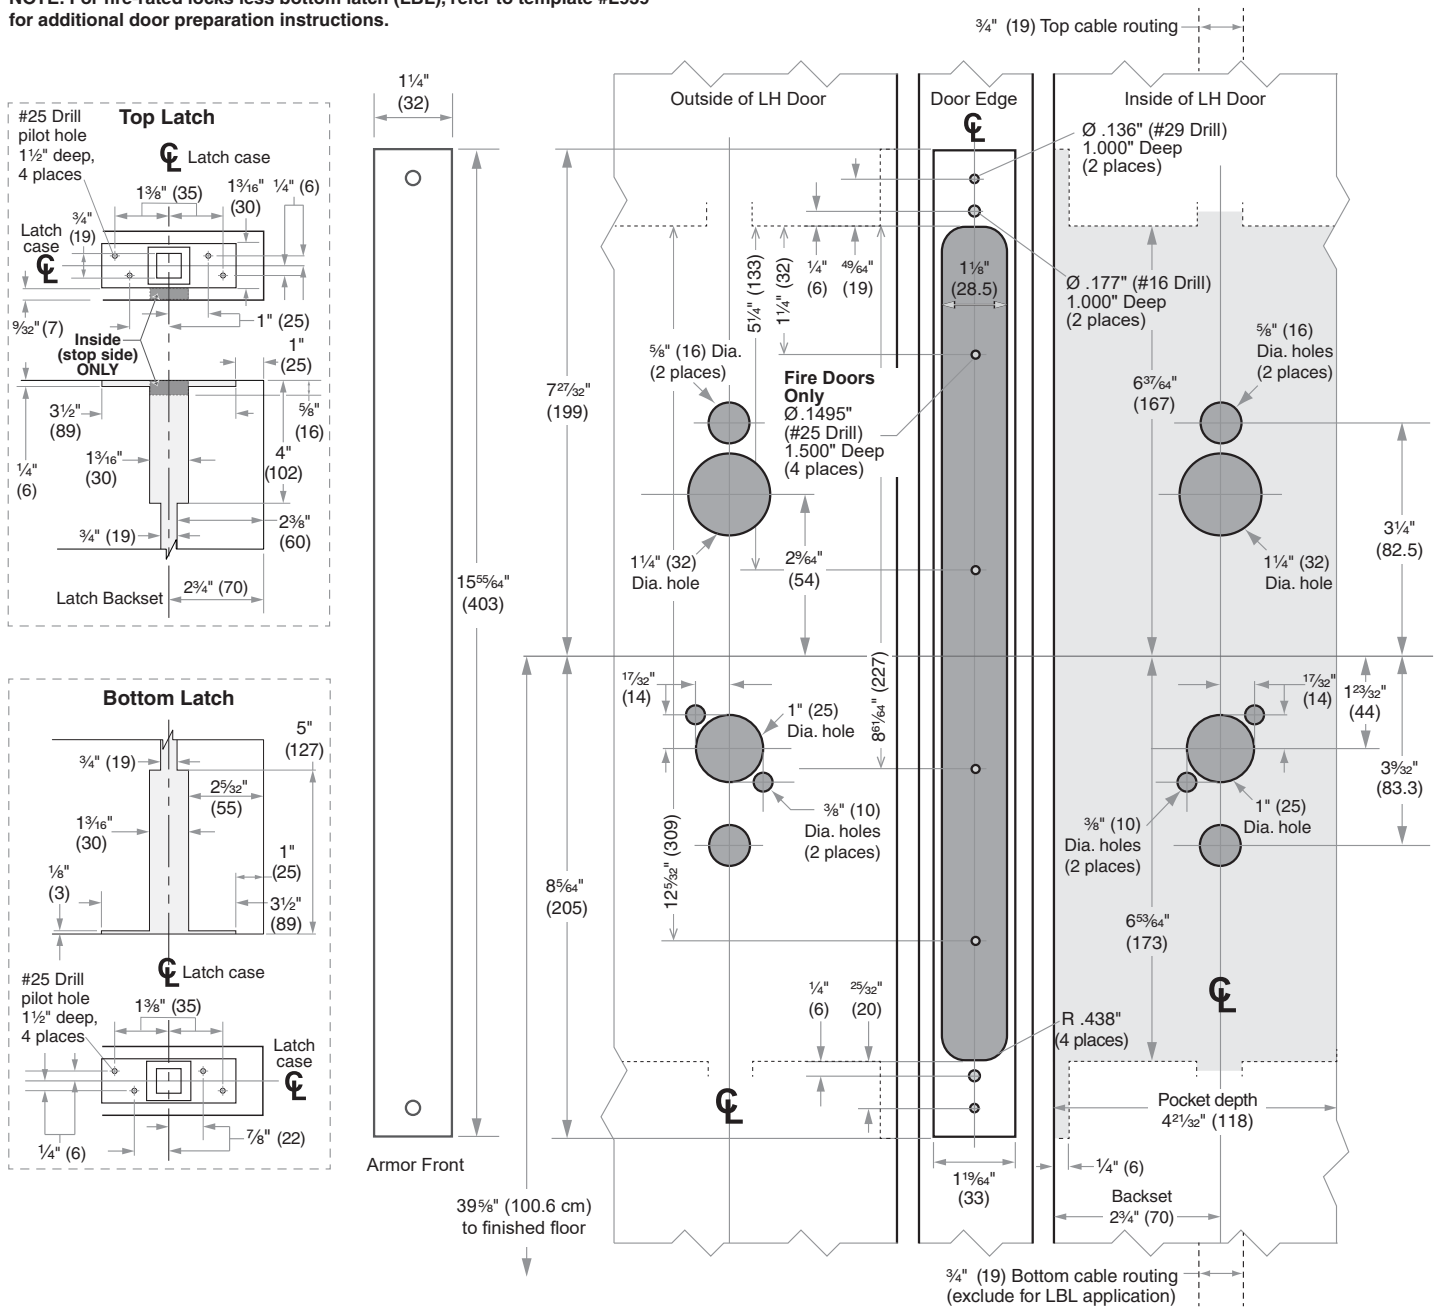

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L935 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L935




# LM9200-Series

## Model LM9271, LM9271F Locks

Door Type: Wood or composite, flat or beveled  
 Trim: Rose

For case and strike dimensions, see Template L3.

**NOTE: For fire-rated locks less bottom latch (LBL), refer to template #L959 for additional door preparation instructions.**

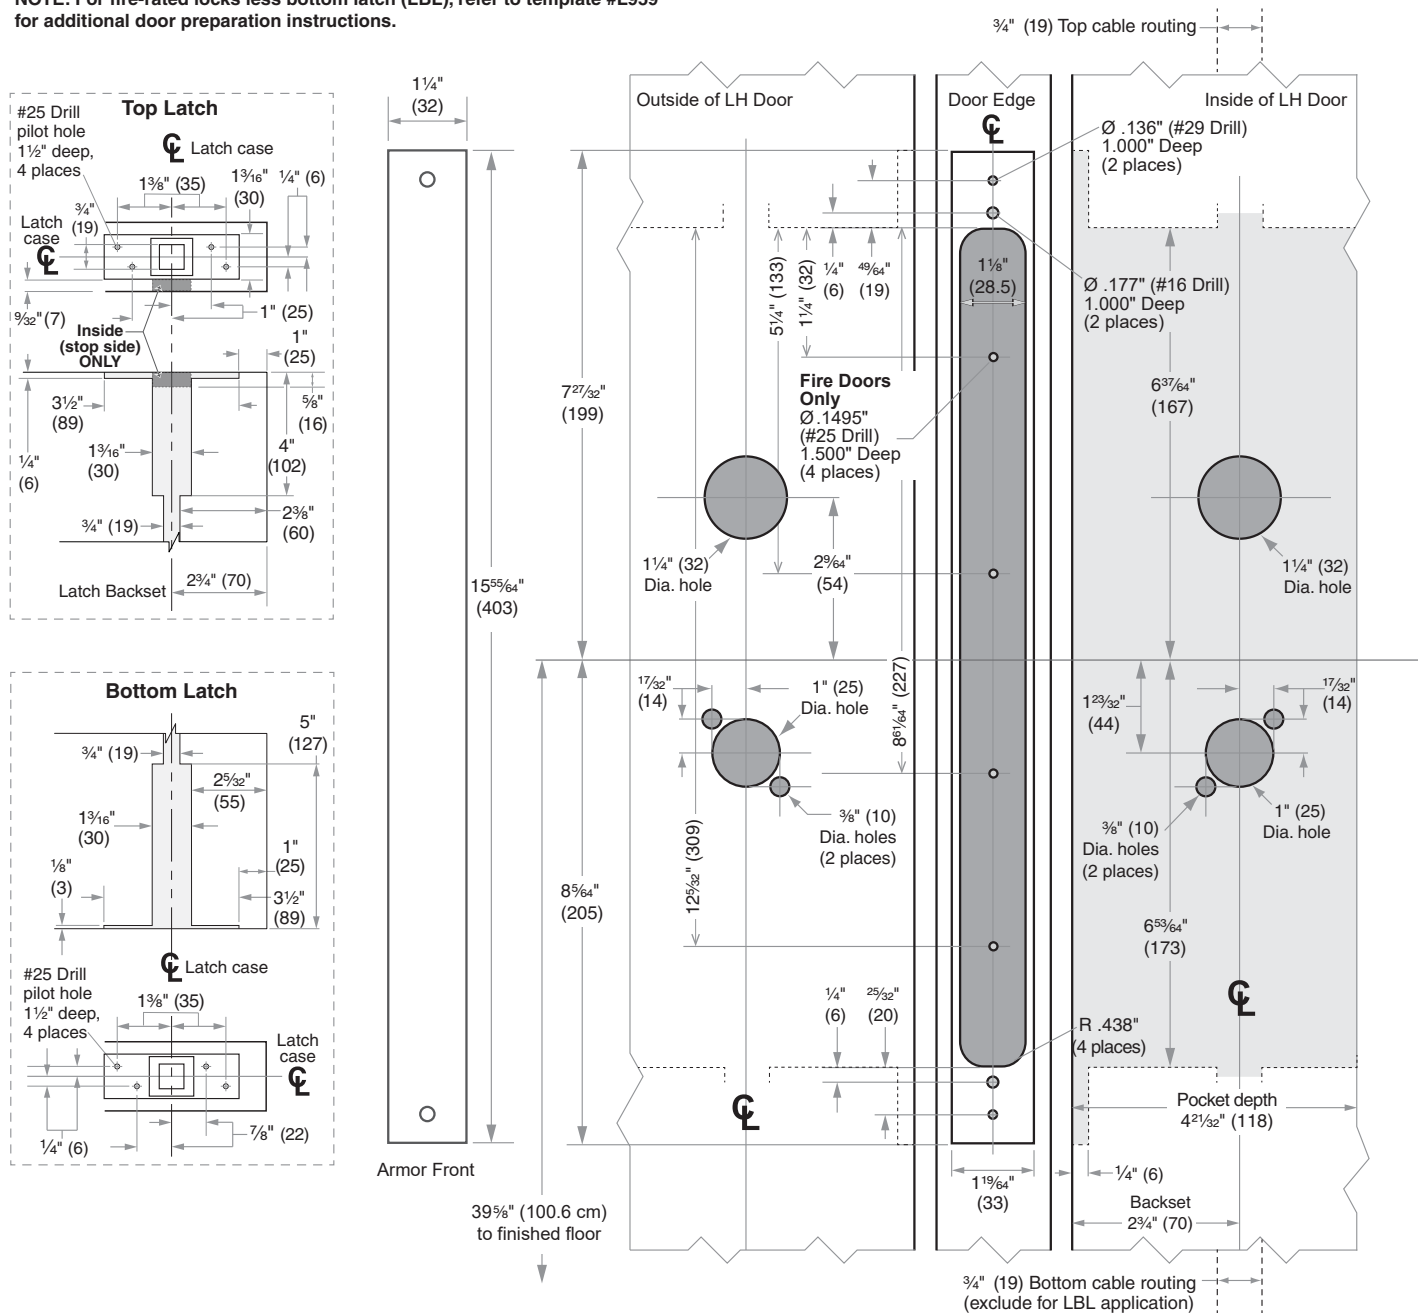

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L936 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L936



# LM9200-Series


Models LM9290 EL/EU, LM9290F EL/EU, LM9291 EL/EU, LM9291F EL/EU Locks

Door Type: Wood or composite, flat or beveled

Trim: Escutcheon

For case and strike dimensions, see Template L3.

**NOTE: For fire-rated locks less bottom latch (LBL), refer to template #L959 for additional door preparation instructions.**

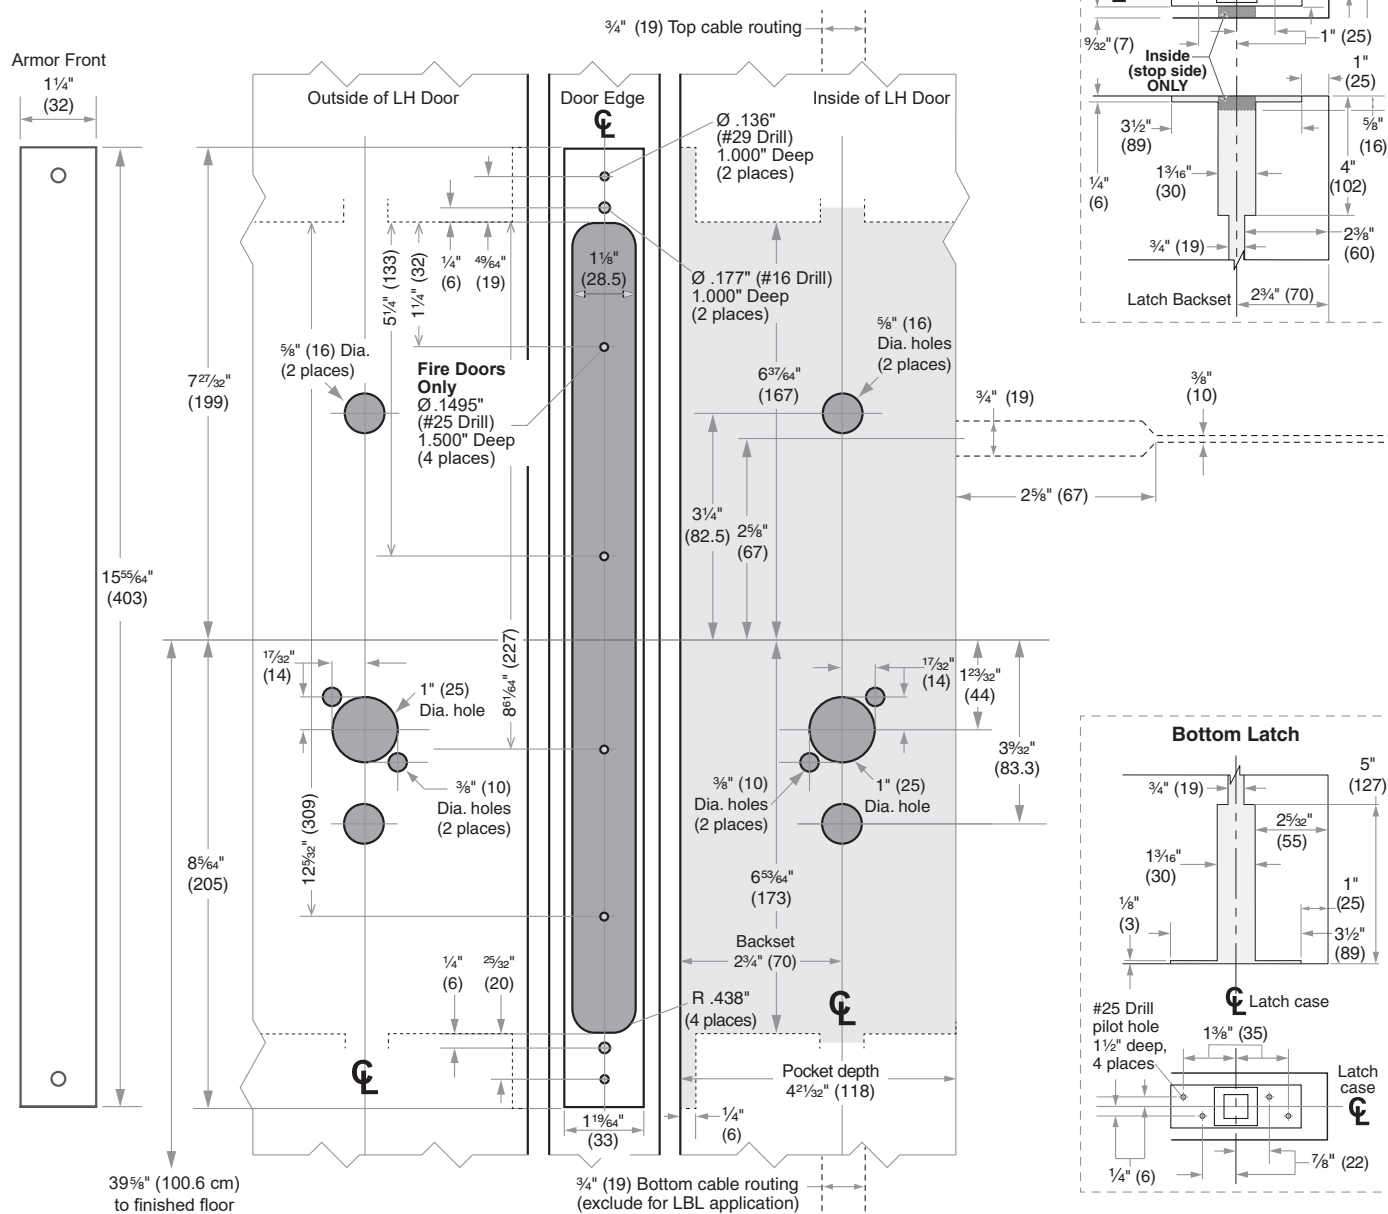

Dimensions shown in parentheses ( ) are in millimeters.

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L937





# LM9200-Series


Models LM9290 EL/EU, LM9290F EL/EU, LM9291 EL/EU, LM9291F EL/EU Locks

Door Type: Wood or composite, flat or beveled

Trim: Rose

For case and strike dimensions, see Template L3.

**NOTE: For fire-rated locks less bottom latch (LBL), refer to template #L959 for additional door preparation instructions.**

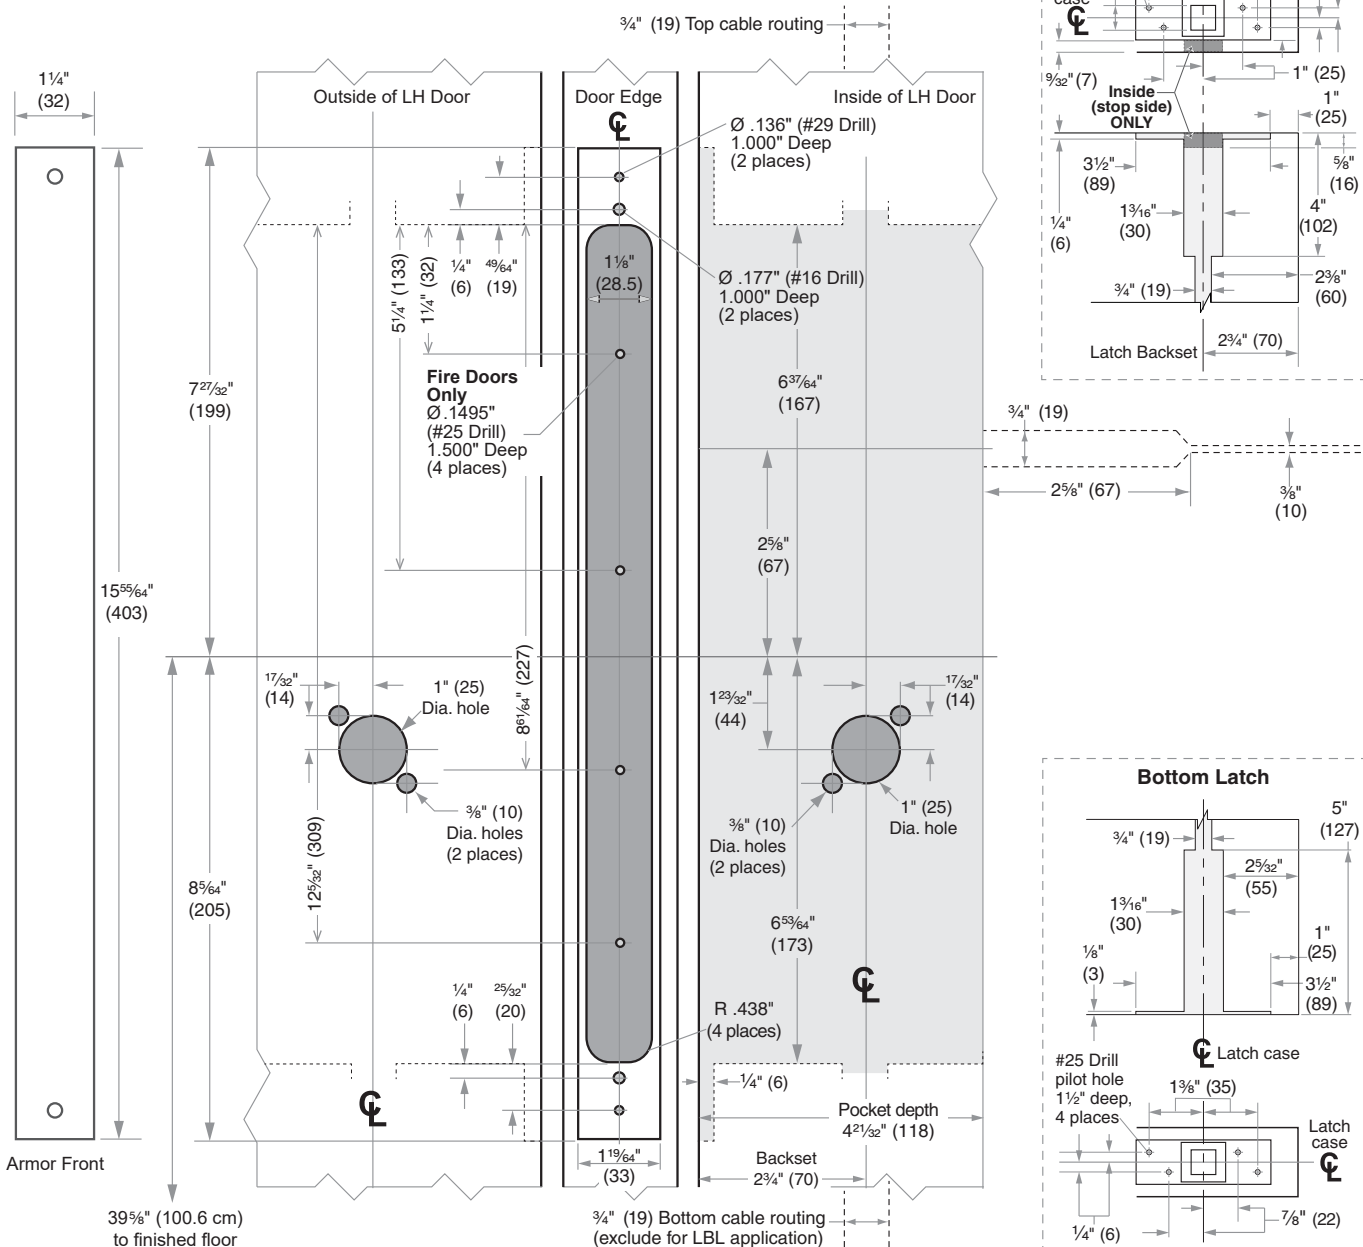

Dimensions shown in parentheses ( ) are in millimeters.

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L938




# LM9200-Series

Models LM9292 EL/EU, LM9292F EL/EU, LM9293 EL/EU, LM9293F EL/EU Locks

Door Type: Wood or composite, flat or beveled  
Trim: Escutcheon

For case and strike dimensions, see Template L3.

**NOTE: For fire-rated locks less bottom latch (LBL), refer to template #L959 for additional door preparation instructions.**

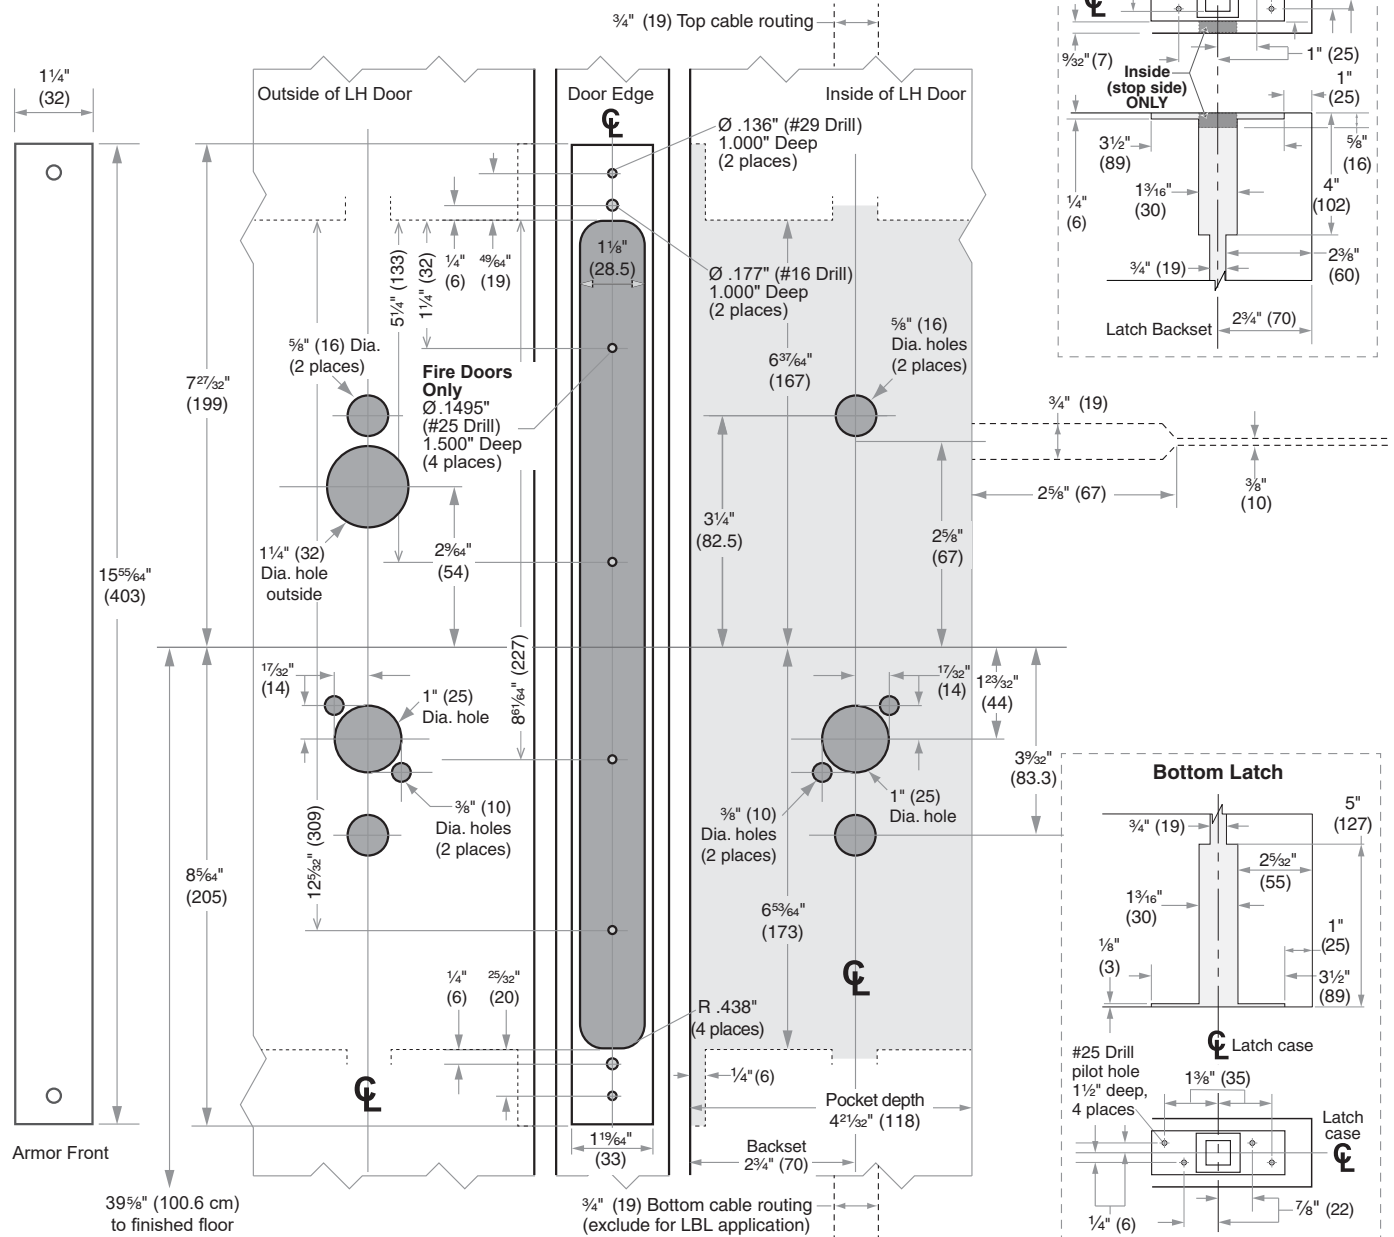

Dimensions shown in parentheses ( ) are in millimeters.

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L939




# LM9200-Series

Models LM9292 EL/EU, LM9292F EL/EU, LM9293 EL/EU, LM9293F EL/EU Locks

Door Type: Wood or composite, flat or beveled  
Trim: Rose

**For case and strike dimensions, see Template L3.**

**NOTE: For fire-rated locks less bottom latch (LBL), refer to template #L959 for additional door preparation instructions.**

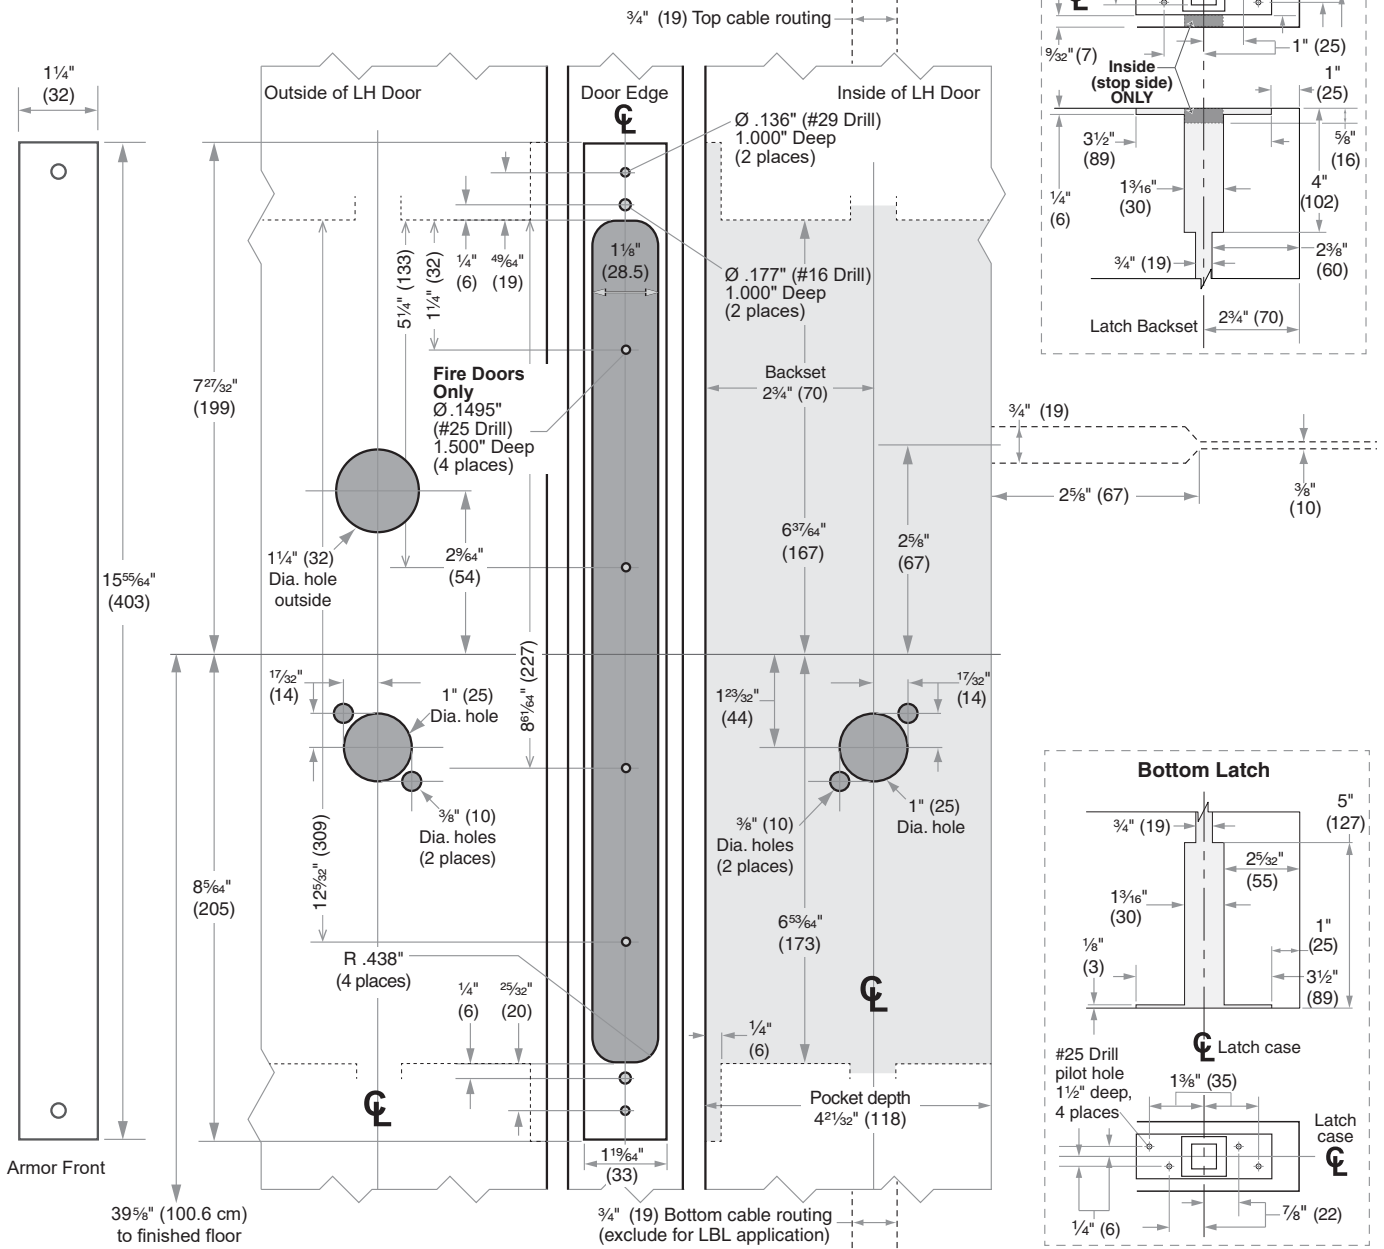

Dimensions shown in parentheses ( ) are in millimeters.

**DRAWING IS NOT TO SCALE!**  
Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L940



# LM9200-Series


Models LM9294 EL/EU, LM9294F EL/EU, LM9295 EL/EU, LM9295F EL/EU Locks

Door Type: Wood or composite, flat or beveled

Trim: Escutcheon

For case and strike dimensions, see Template L3.

**NOTE: For fire-rated locks less bottom latch (LBL), refer to template #L959 for additional door preparation instructions.**

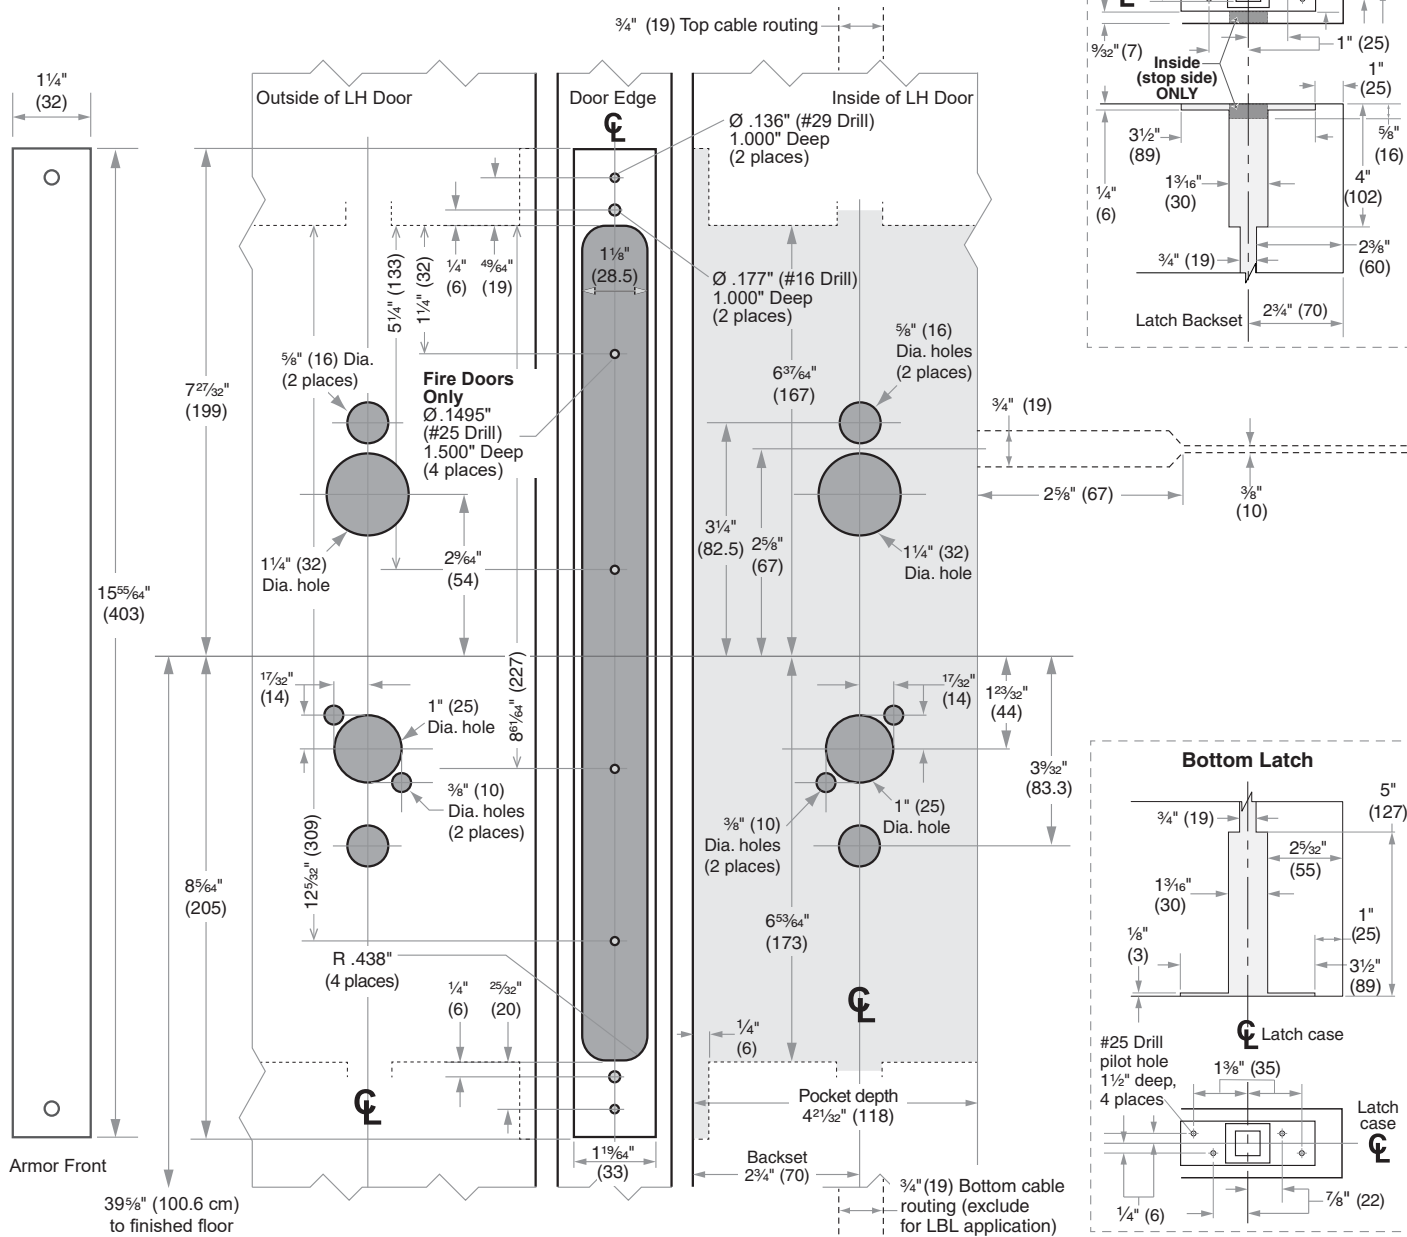

Dimensions shown in parentheses ( ) are in millimeters.

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

Door preparation template



# LM9200-Series


Models LM9294 EL/EU, LM9294F EL/EU, LM9295 EL/EU, LM9295F EL/EU Locks

Door Type: Wood or composite, flat or beveled

Trim: Rose

For case and strike dimensions, see Template L3.

**NOTE:** For fire-rated locks less bottom latch (LBL), refer to template #L959 for additional door preparation instructions.

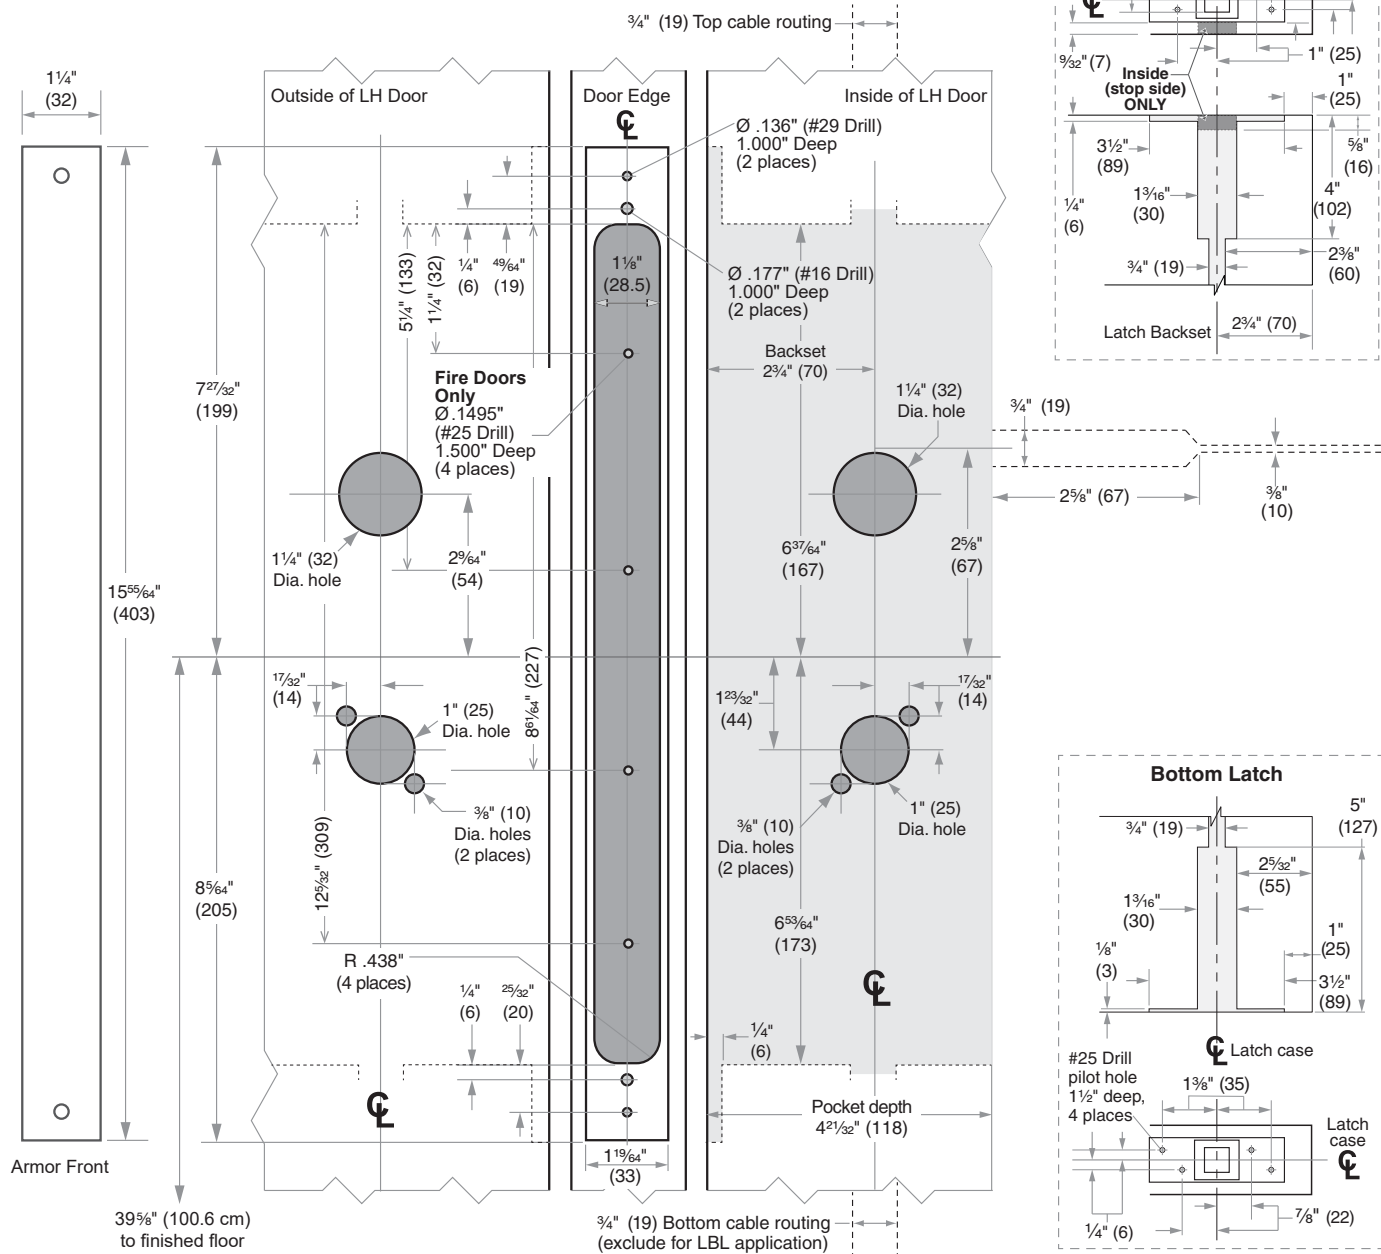

Dimensions shown in parentheses ( ) are in millimeters.

**DRAWING IS NOT TO SCALE!**

Customer service: 877-671-7011

We can help you find the correct guide for your product and application!

Door preparation template

# L942




# LM9200-Series

## Models LM9210, LM9210M Locks

Door Type: Metal, flat or beveled  
 Trim: Escutcheon

For case and strike dimensions, see Template L3.

**NOTES:**  
 Suitable reinforcement required for metal door installation.  
 For fire-rated locks less bottom latch (LBL), refer to  
 template #L960 for additional door preparation instructions.

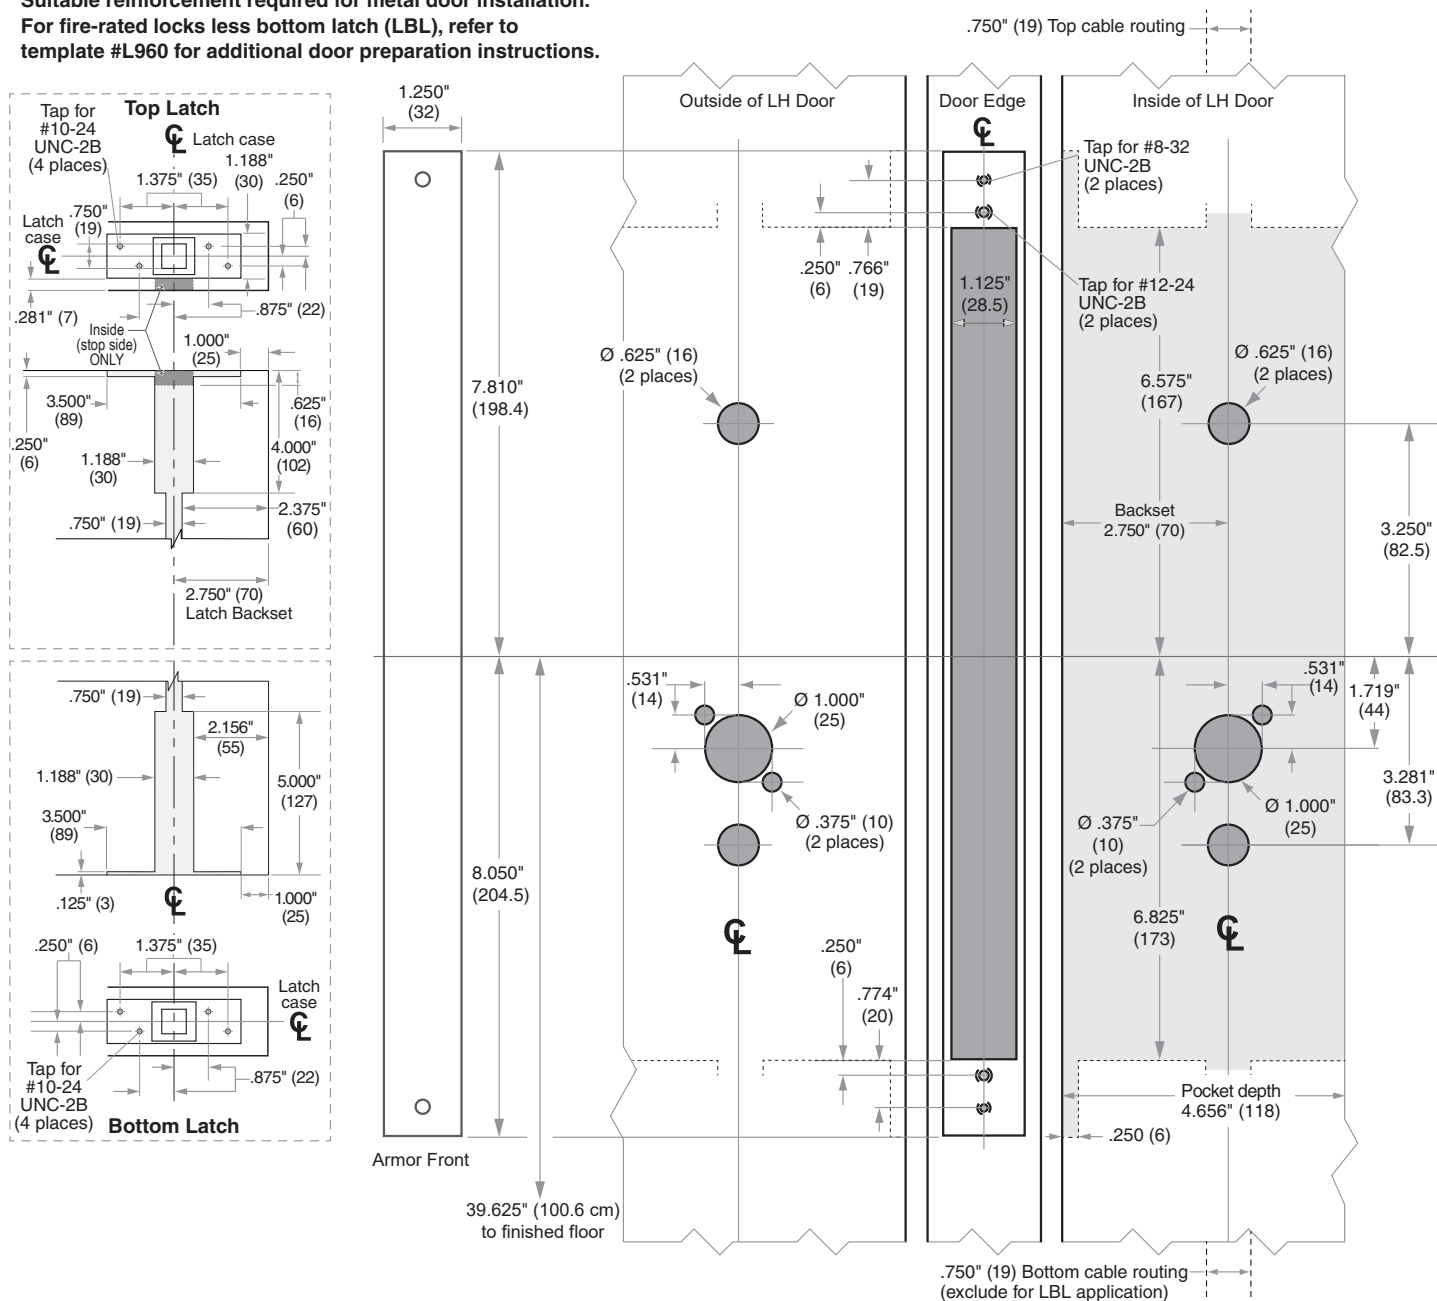

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L943 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for  
 your product and application!**

Door preparation template

# L943



# LM9200-Series


## Models LM9210, LM9210M Locks

Door Type: Metal, flat or beveled  
 Trim: Rose

For case and strike dimensions, see Template L3.

**NOTES:**

Suitable reinforcement required for metal door installation.  
 For fire-rated locks less bottom latch (LBL), refer to template #L960 for additional door preparation instructions.

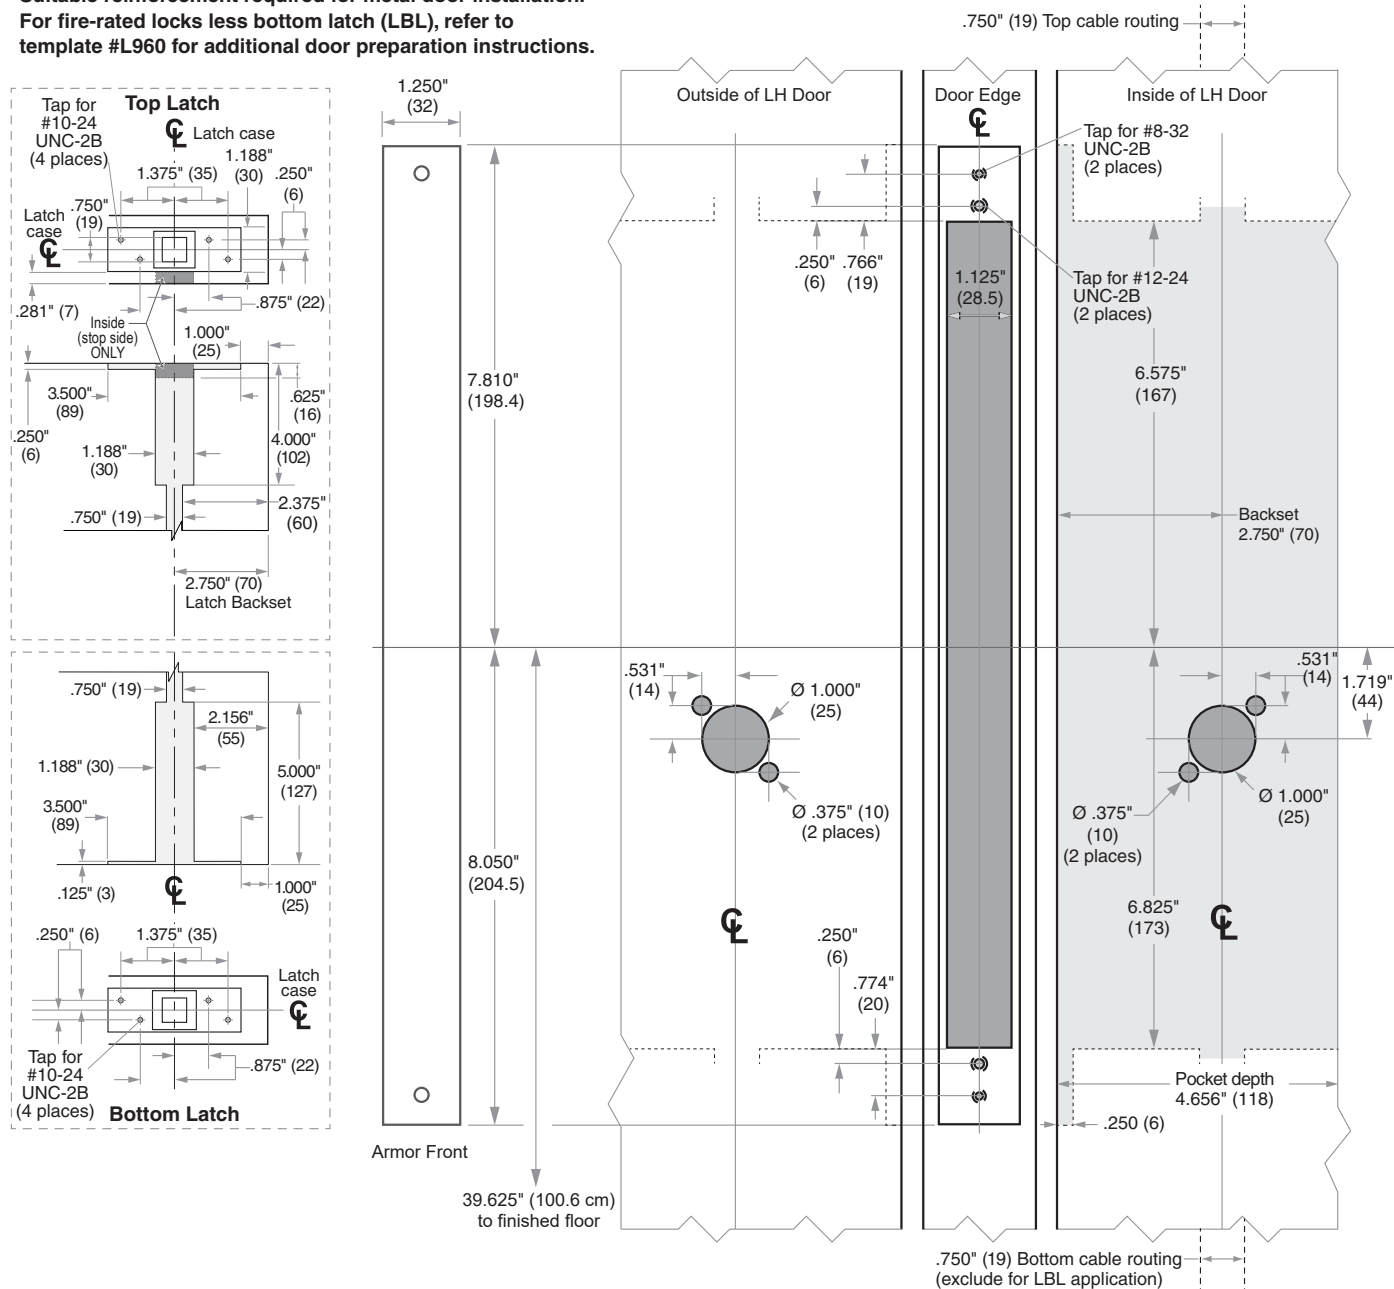

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L944 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L944



# LM9200-Series



## Models LM9225, LM9225M Locks

Door Type: Metal, flat or beveled  
 Trim: Rose

For case and strike dimensions, see Template L3.

**NOTES:**

**Suitable reinforcement required for metal door installation.**  
**For fire-rated locks less bottom latch (LBL), refer to template #L960 for additional door preparation instructions.**

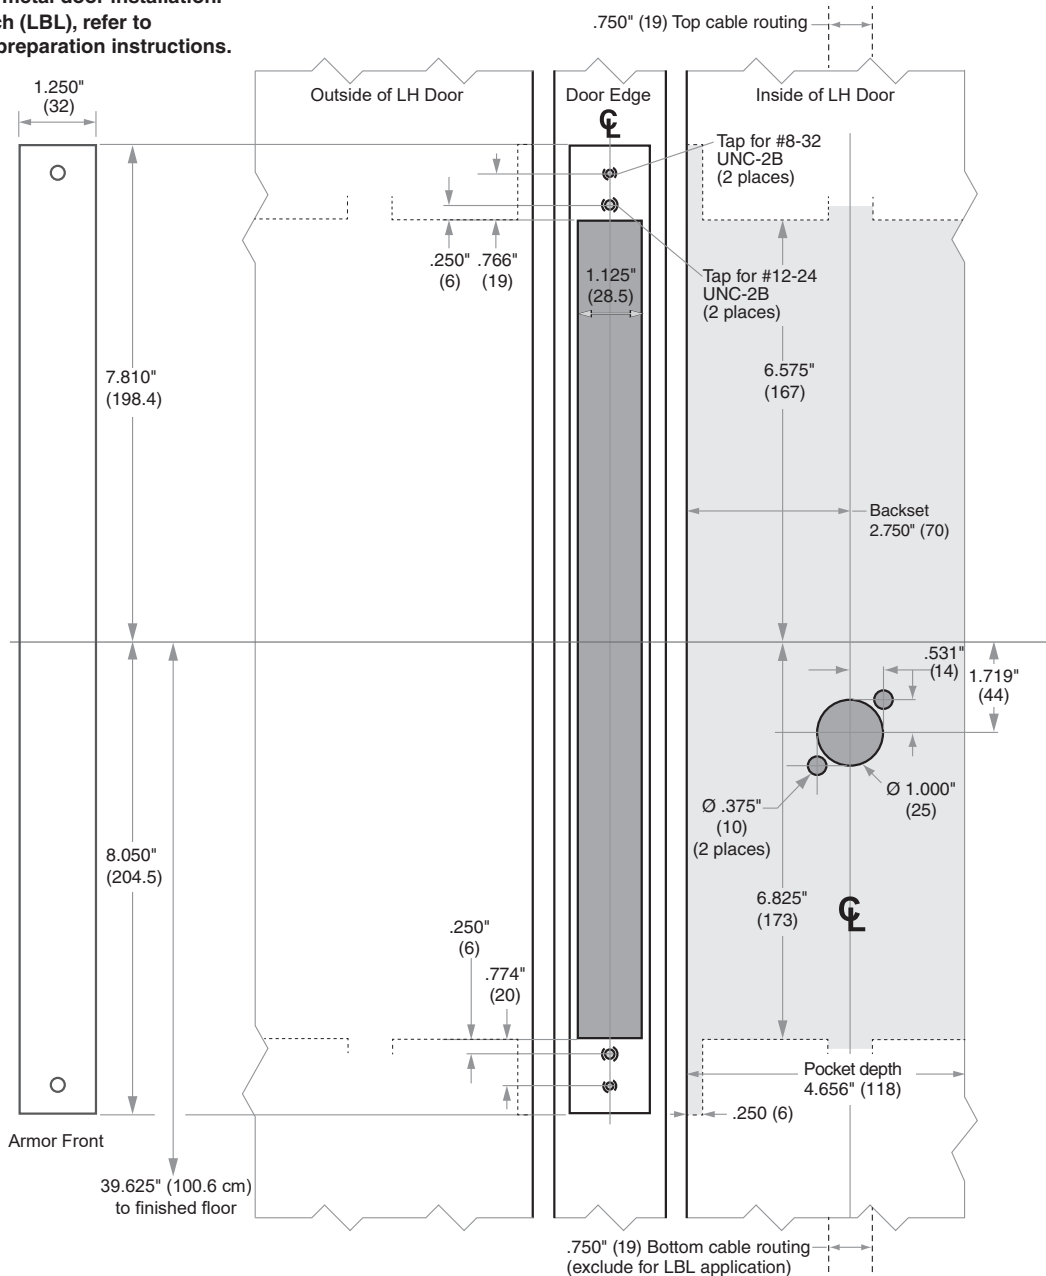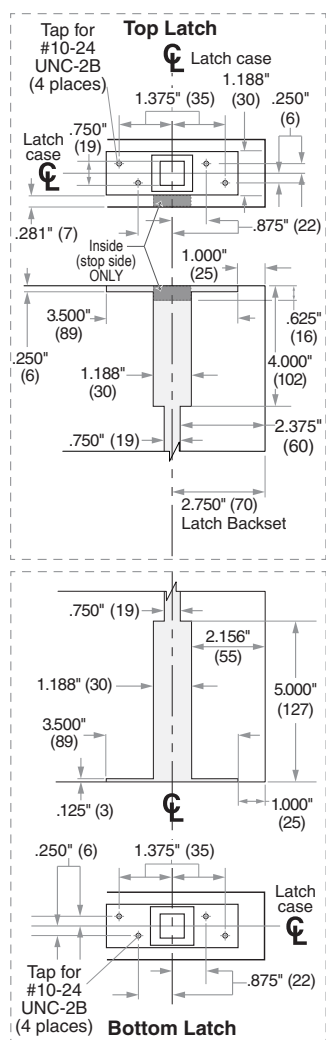

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L946 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L946





# LM9200-Series

Models LM9250, LM9250M, LM9256, LM9256M Locks


Door Type: Metal, flat or beveled

Trim: Escutcheon

For case and strike dimensions, see Template L3.

**NOTES:**

Suitable reinforcement required for metal door installation.  
For fire-rated locks less bottom latch (LBL), refer to template #L960 for additional door preparation instructions.

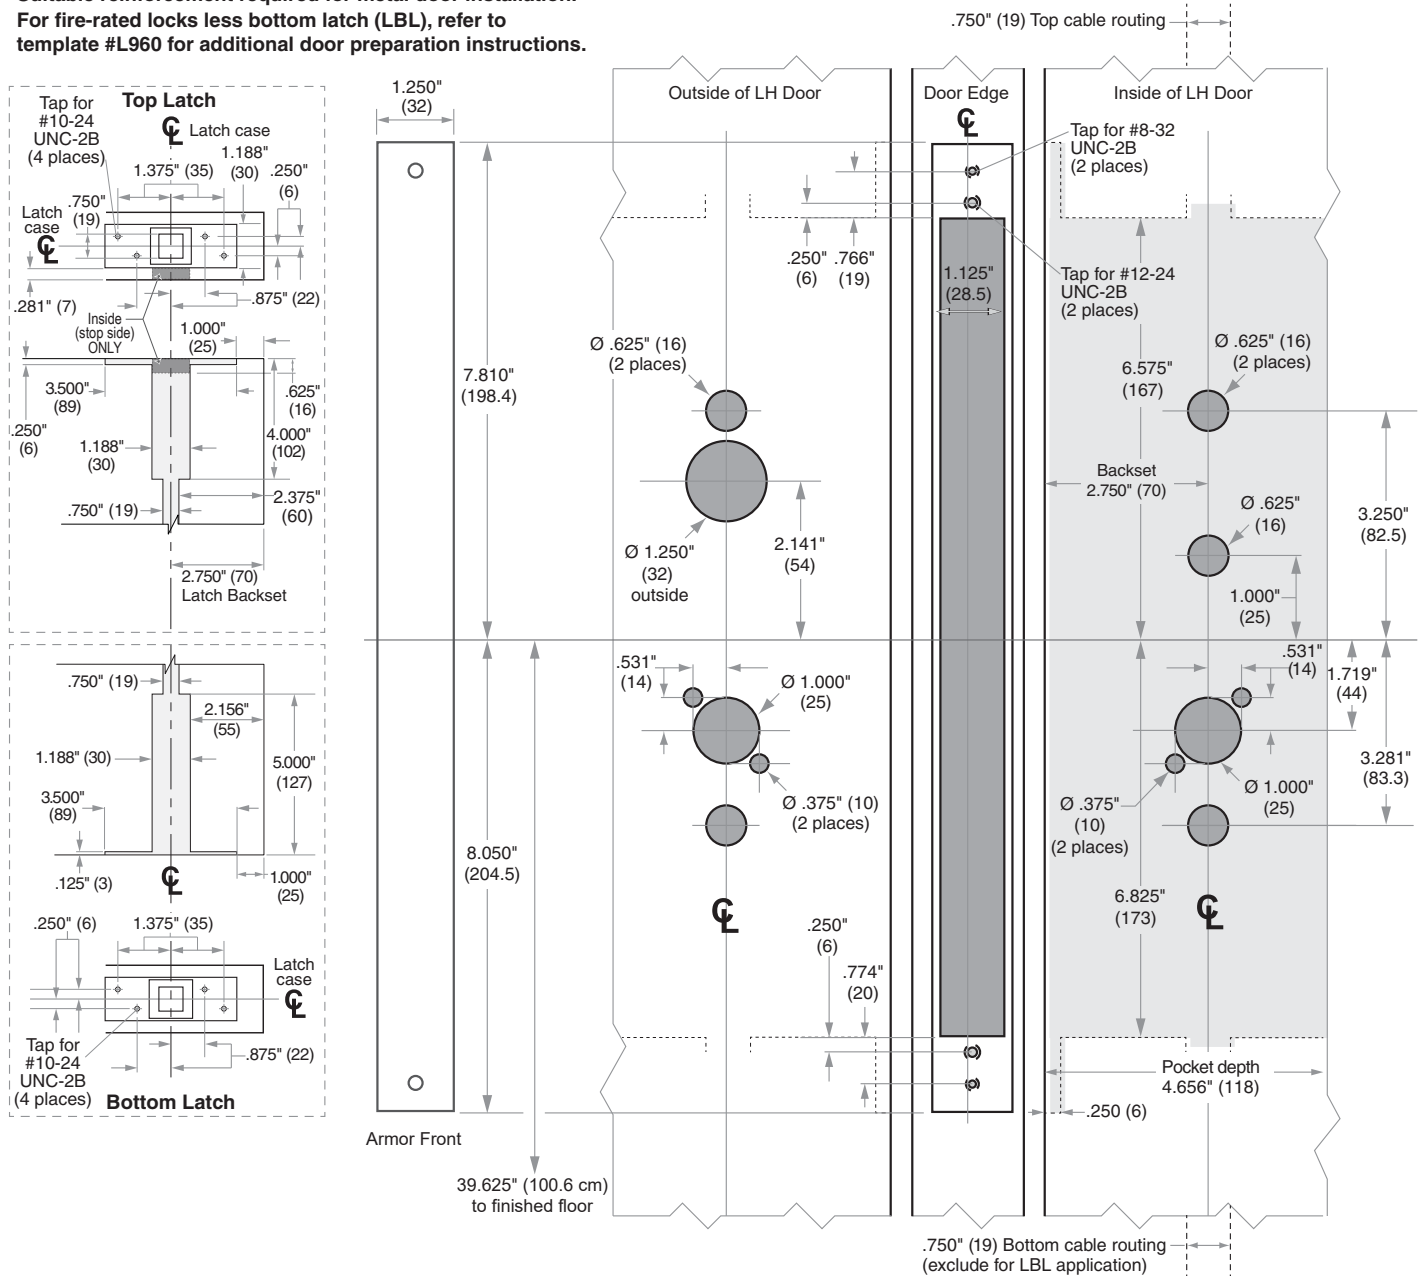

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L947 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L947



# LM9200-Series

Models LM9250, LM9250M, LM9256, LM9256M Locks


Door Type: Metal, flat or beveled

Trim: Rose

For case and strike dimensions, see Template L3.

**NOTES:**

Suitable reinforcement required for metal door installation.  
 For fire-rated locks less bottom latch (LBL), refer to  
 template #L960 for additional door preparation instructions.

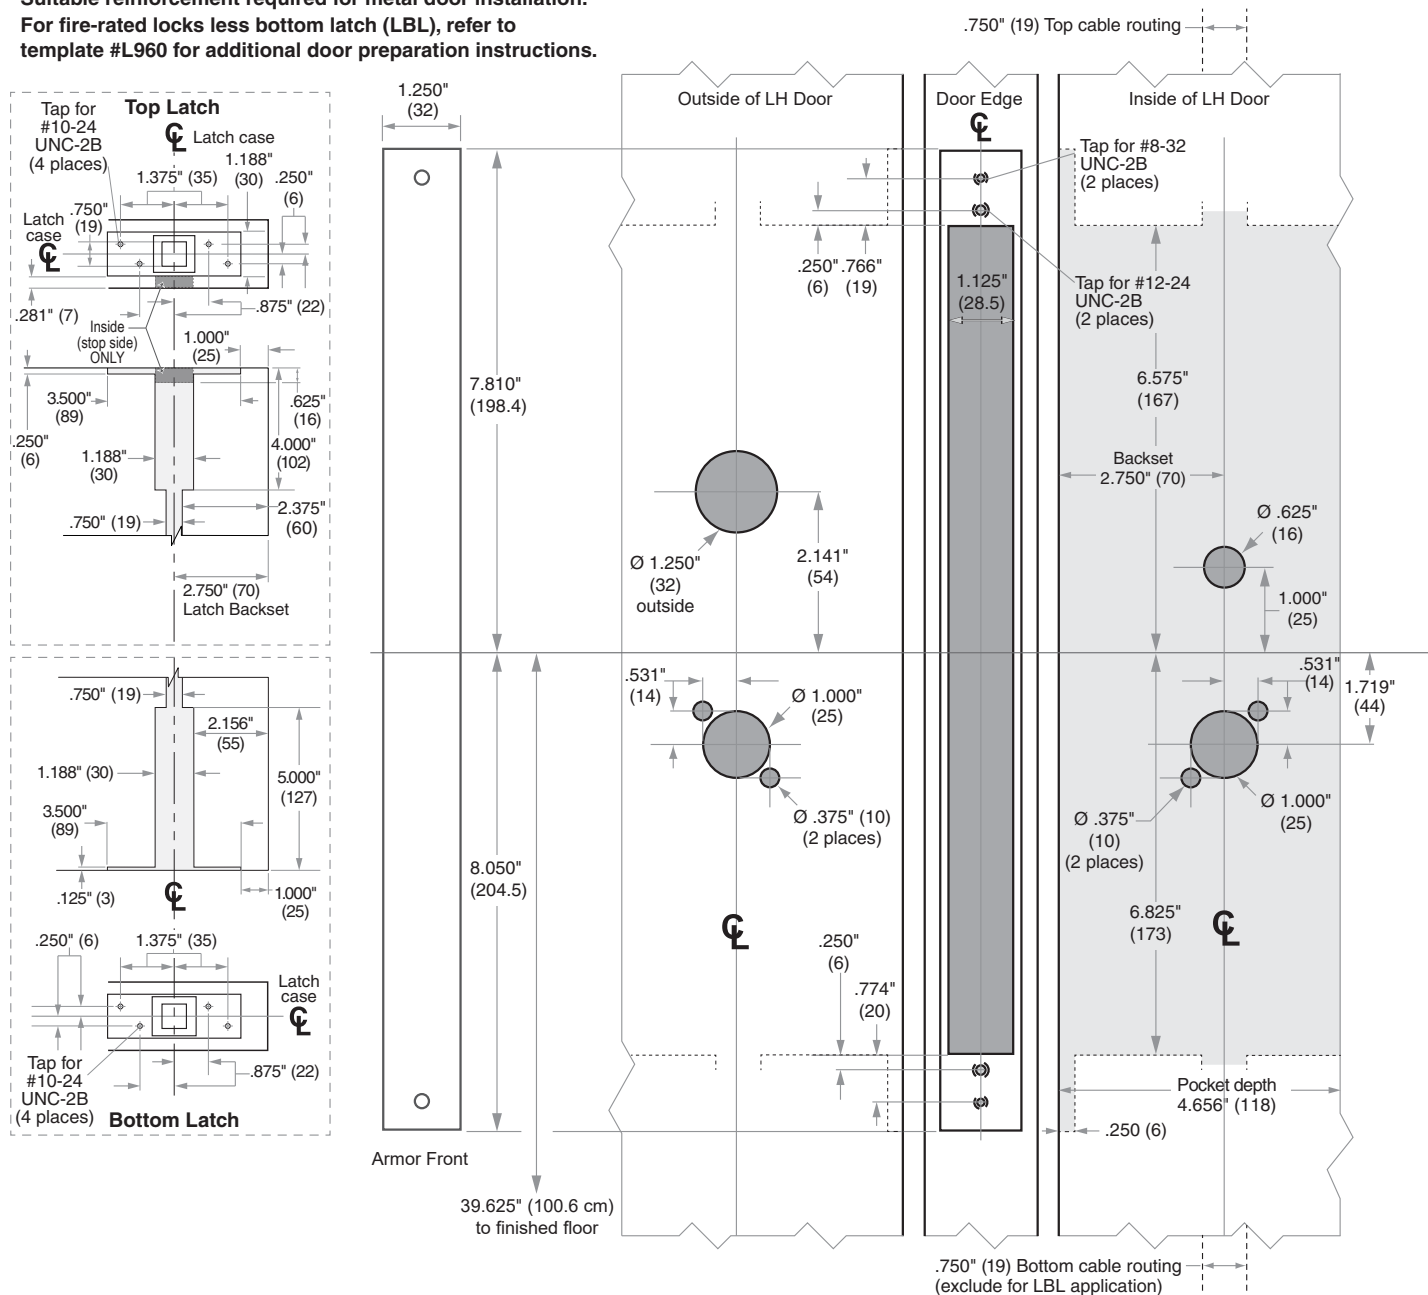

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L948 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for  
 your product and application!**

Door preparation template

# L948



# LM9200-Series


Models LM9270, LM9270M, LM9280, LM9280M Locks

Door Type: Metal, flat or beveled  
Trim: Escutcheon

For case and strike dimensions, see Template L3.

**NOTES:**

Suitable reinforcement required for metal door installation.  
For fire-rated locks less bottom latch (LBL), refer to template #L960 for additional door preparation instructions.

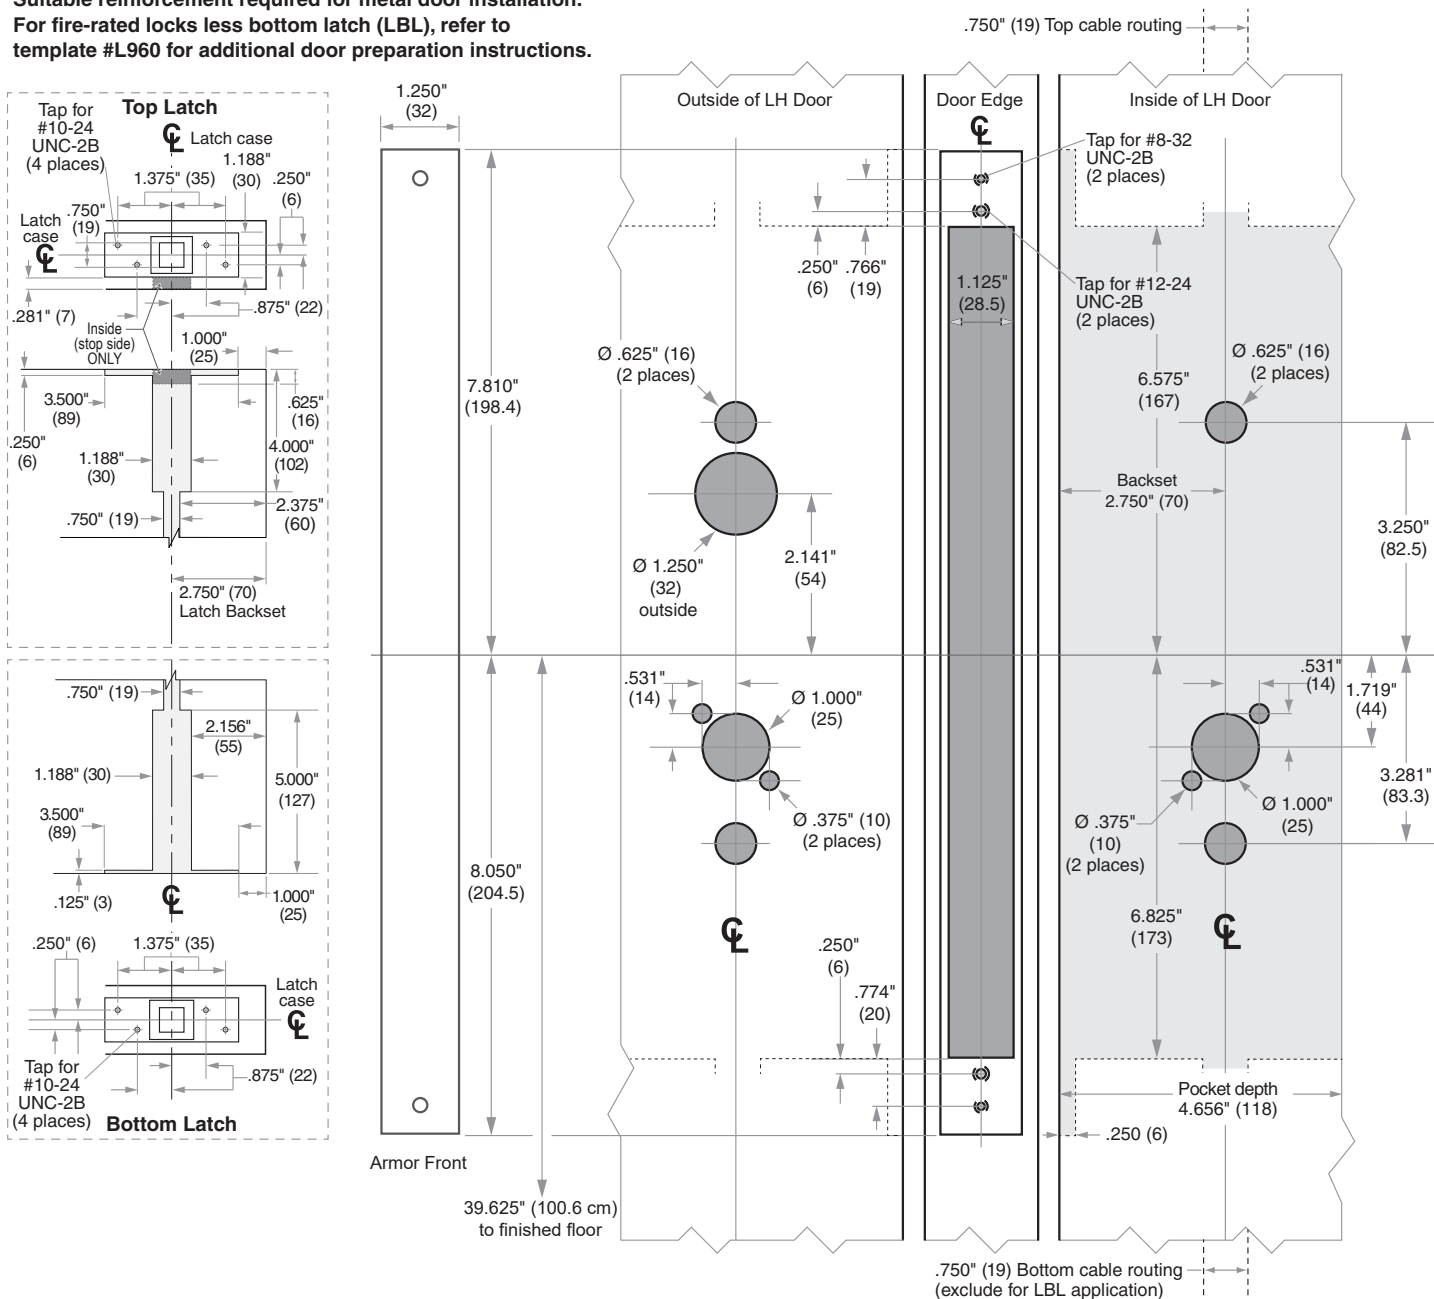

Dimensions shown in parentheses ( ) are in millimeters.

**DRAWING IS NOT TO SCALE!**  
Customer service: 877-671-7011

Door preparation template



# LM9200-Series

Models LM9270, LM9270M, LM9280, LM9280M Locks



Door Type: Metal, flat or beveled

Trim: Rose

For case and strike dimensions, see Template L3.

**NOTES:**

Suitable reinforcement required for metal door installation.  
For fire-rated locks less bottom latch (LBL), refer to template #L960 for additional door preparation instructions.

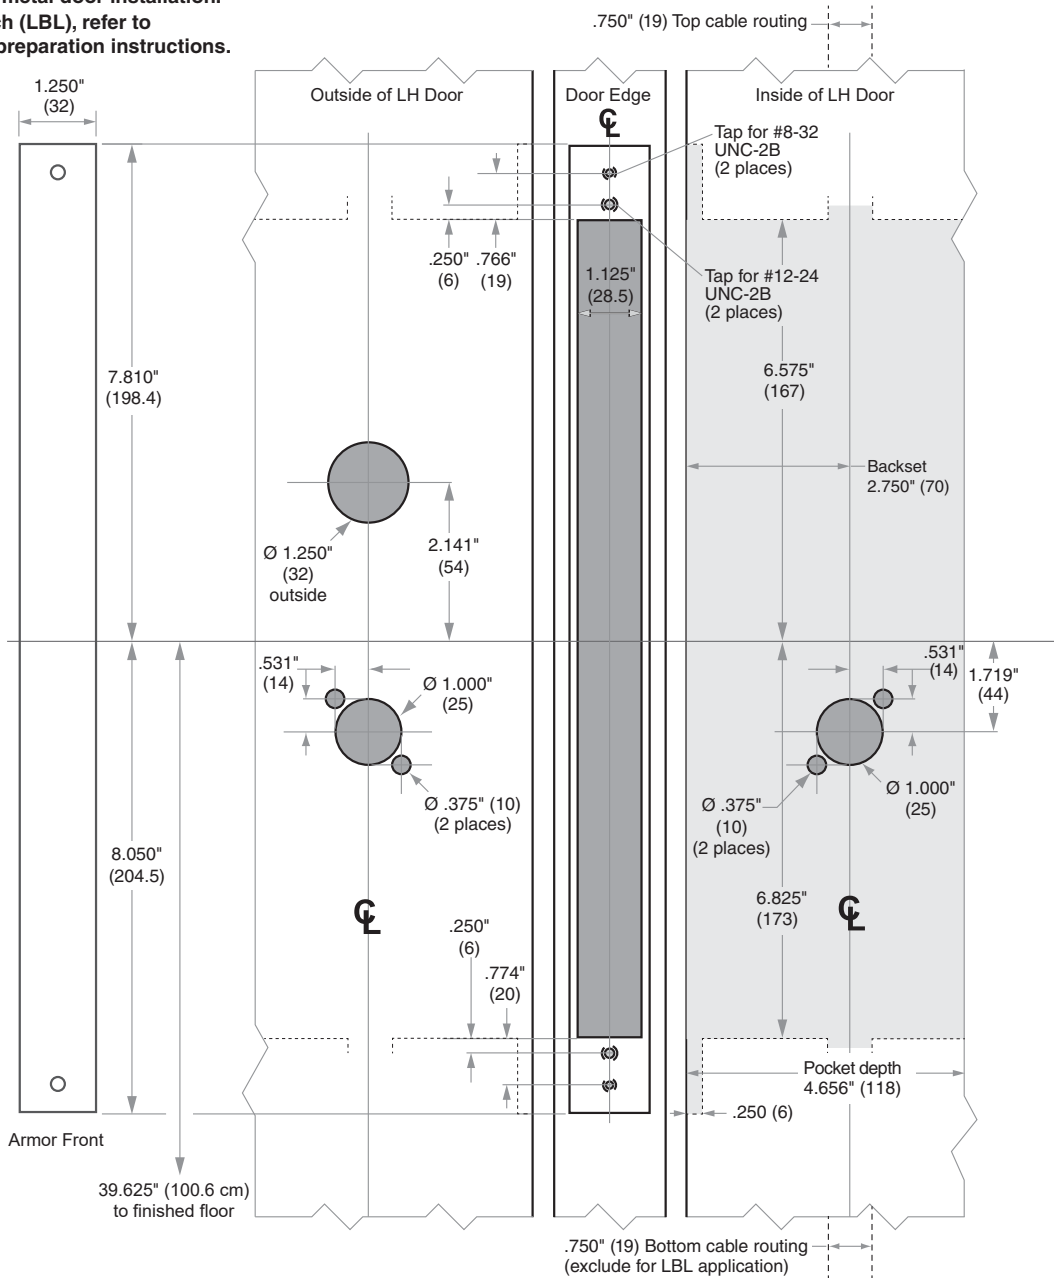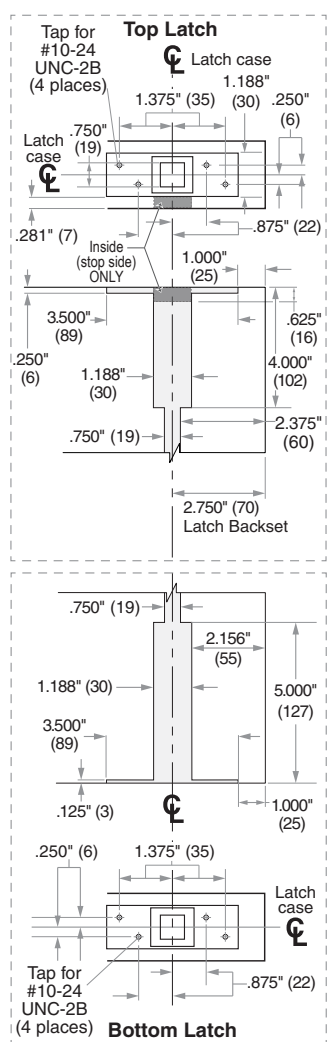

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L950 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L950



# LM9200-Series


## Models LM9271, LM9271M Locks

Door Type: Metal, flat or beveled  
 Trim: Escutcheon

For case and strike dimensions, see Template L3.

**NOTES:**

Suitable reinforcement required for metal door installation.  
 For fire-rated locks less bottom latch (LBL), refer to template #L960 for additional door preparation instructions.

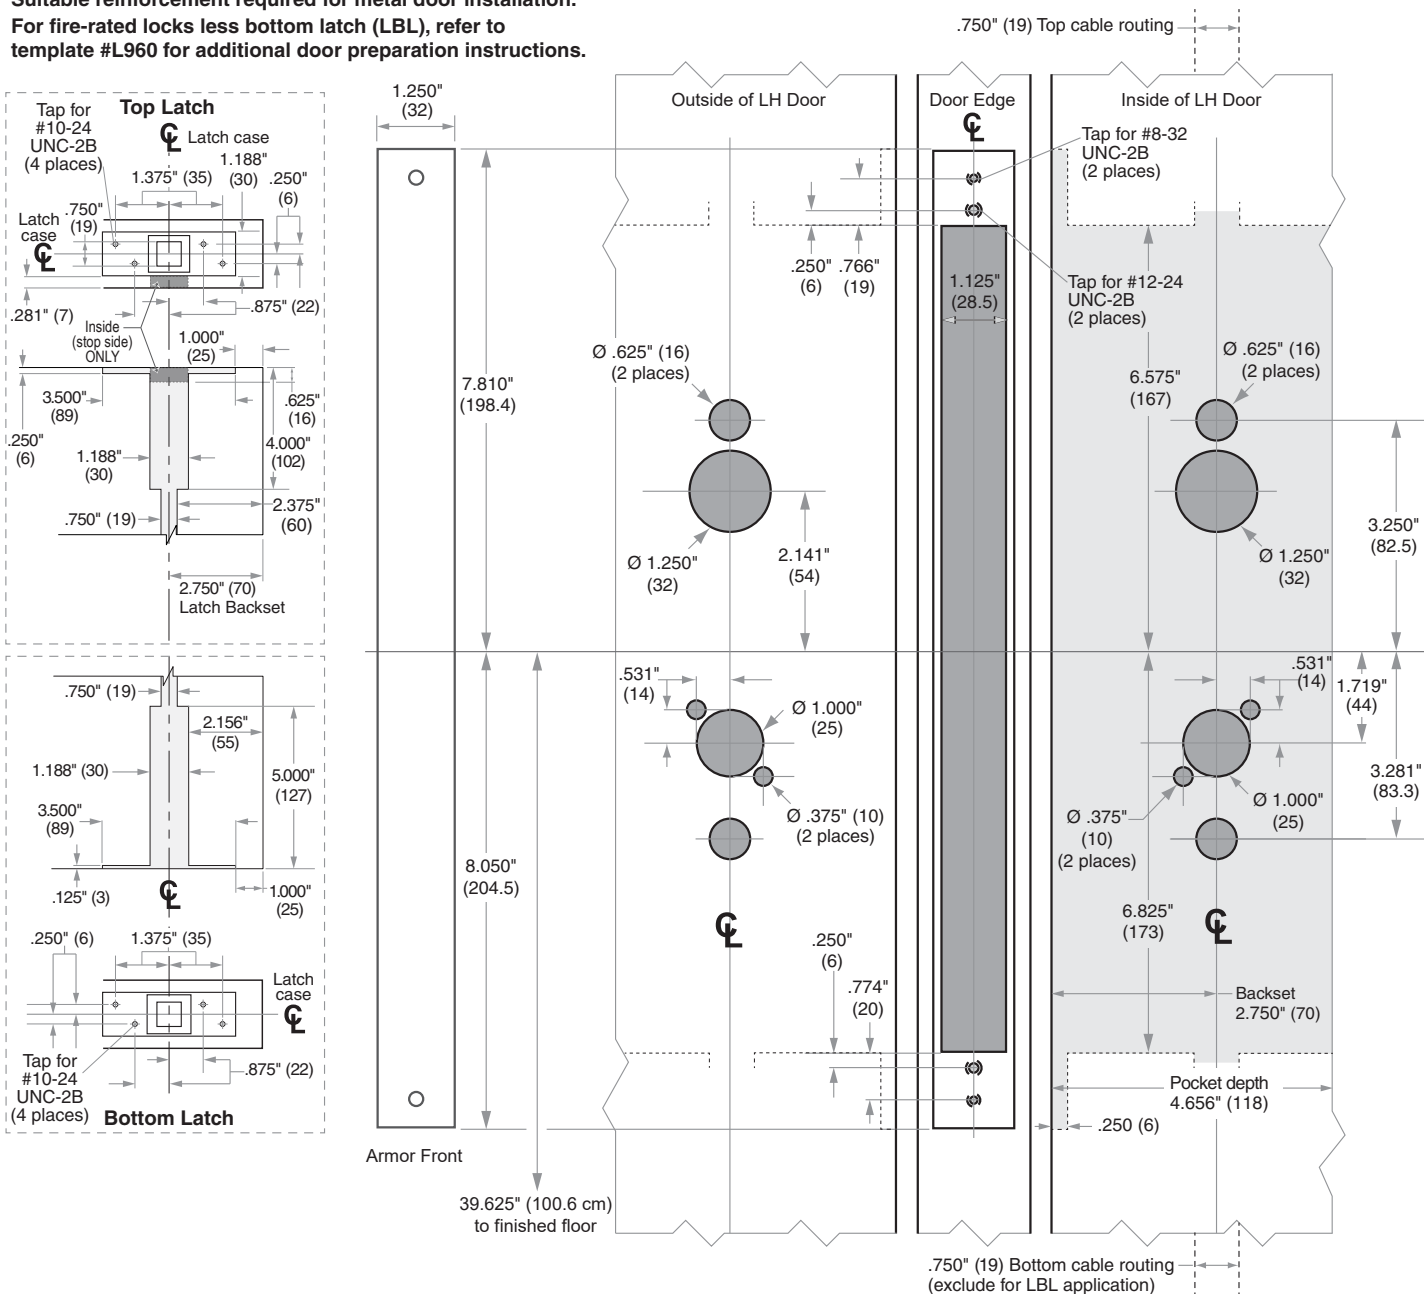

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L951 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L951



# LM9200-Series


## Models LM9271, LM9271M Locks

Door Type: Metal, flat or beveled  
 Trim: Rose

For case and strike dimensions, see Template L3.

**NOTES:**

Suitable reinforcement required for metal door installation.  
 For fire-rated locks less bottom latch (LBL), refer to  
 template #L960 for additional door preparation instructions.

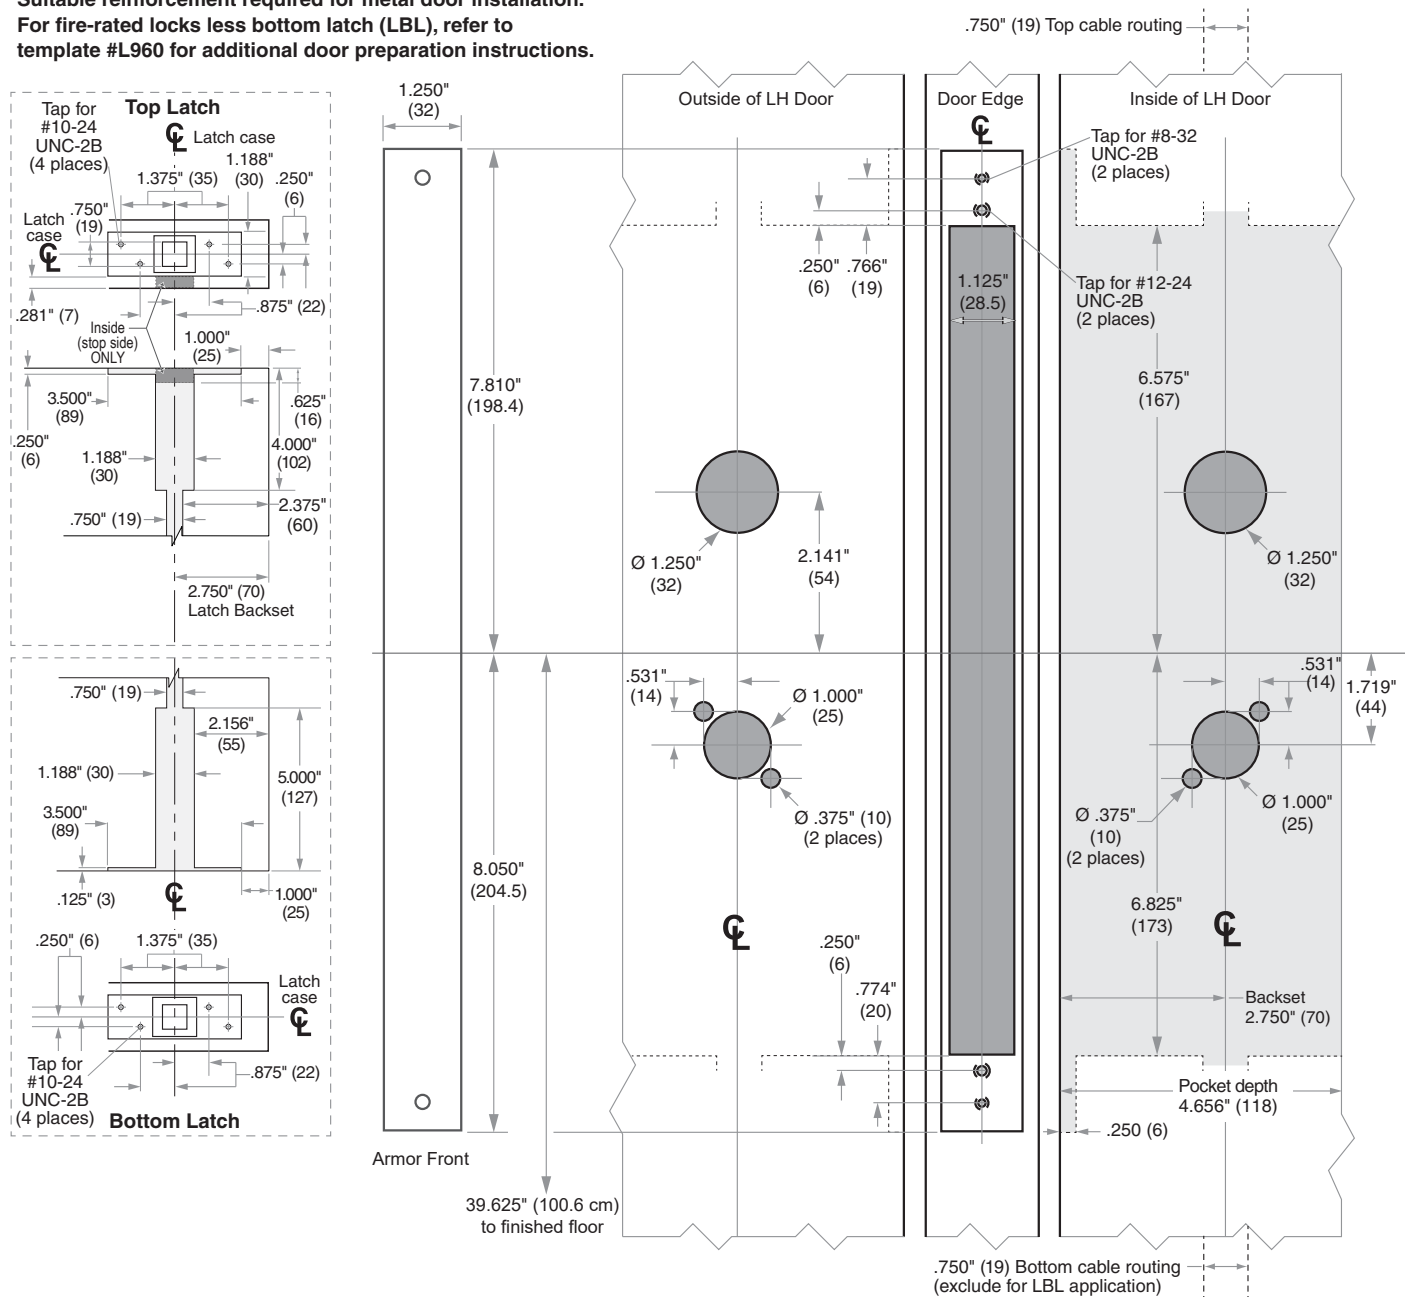

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L952 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
 Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L952



# LM9200-Series

Models LM9290EL/EU, LM9290M EL/EU, LM9291 EL/EU, LM9291M EL/EU Locks

Door Type: Metal, flat or beveled


Trim: Escutcheon

**For case and strike dimensions, see Template L3.**

**NOTES:**

Suitable reinforcement required for metal door installation.

For fire-rated locks less bottom latch (LBL), refer to template #L960 for additional door preparation instructions.

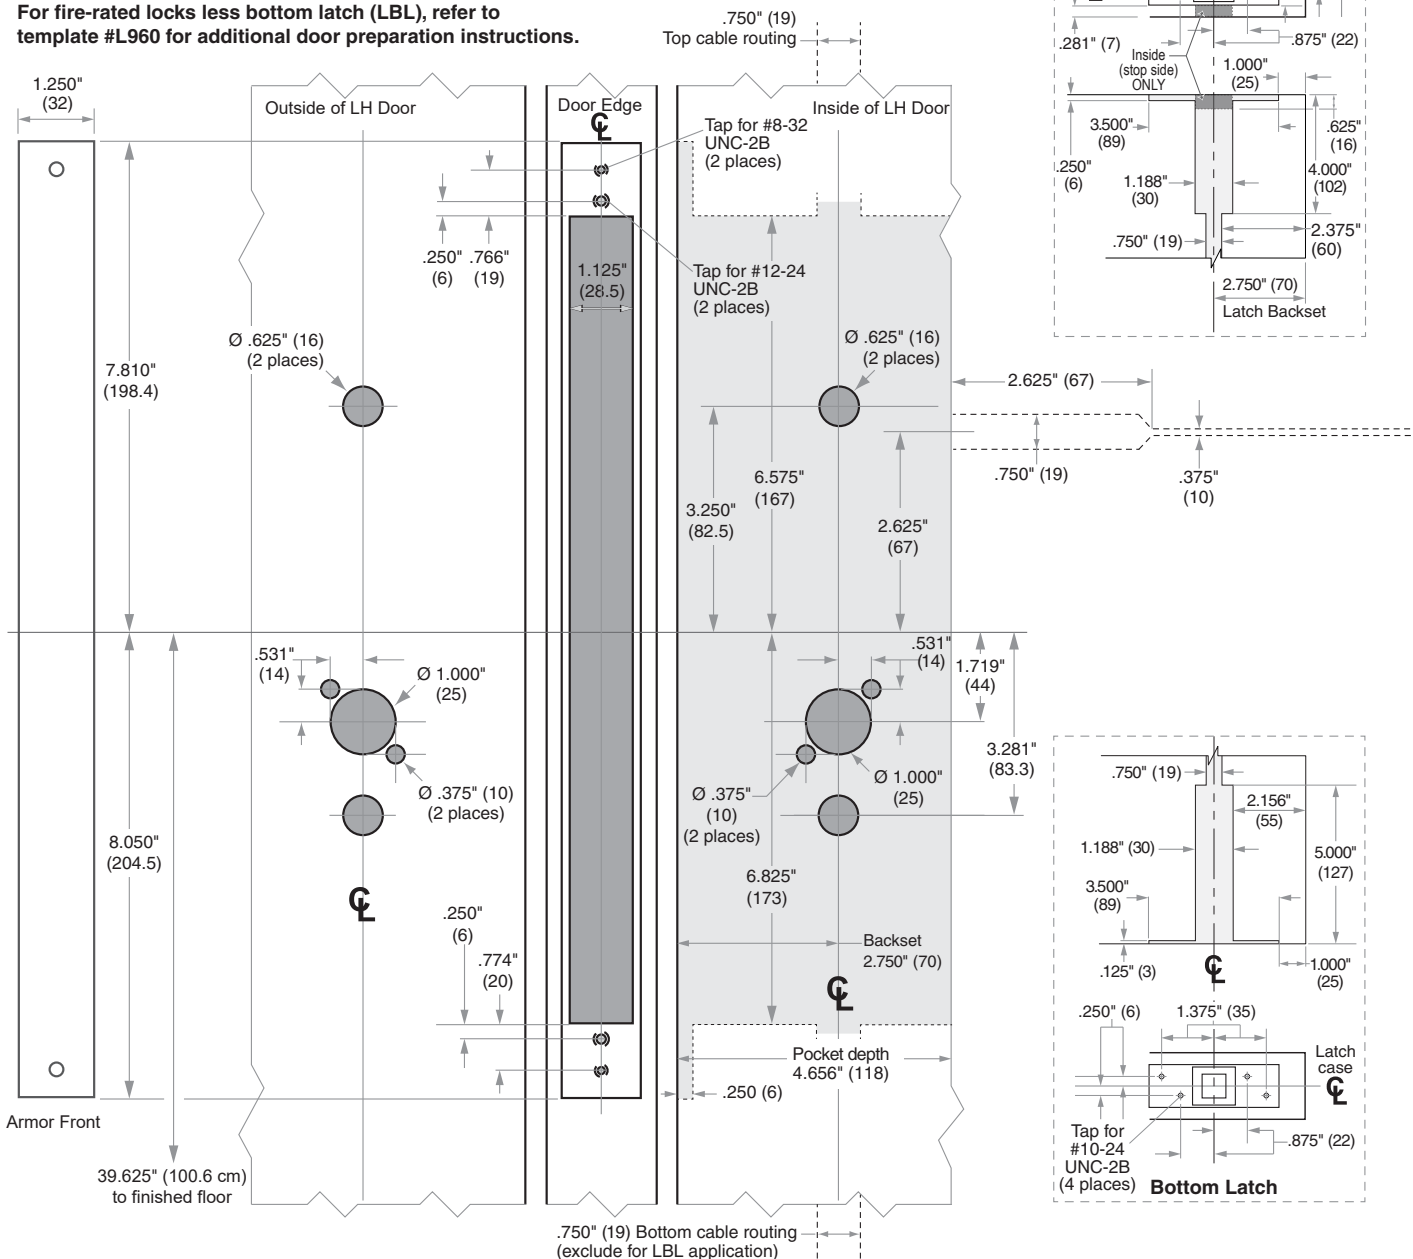

Dimensions shown in parentheses ( ) are in millimeters.

**DRAWING IS NOT TO SCALE!**

**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L953



# LM9200-Series


Models LM9290EL/EU, LM9290M EL/EU, LM9291 EL/EU, LM9291M EL/EU Locks

Door Type: Metal, flat or beveled

Trim: Rose

For case and strike dimensions, see Template L3.

**NOTES:**  
 Suitable reinforcement required for metal door installation.  
 For fire-rated locks less bottom latch (LBL), refer to template #L960 for additional door preparation instructions.

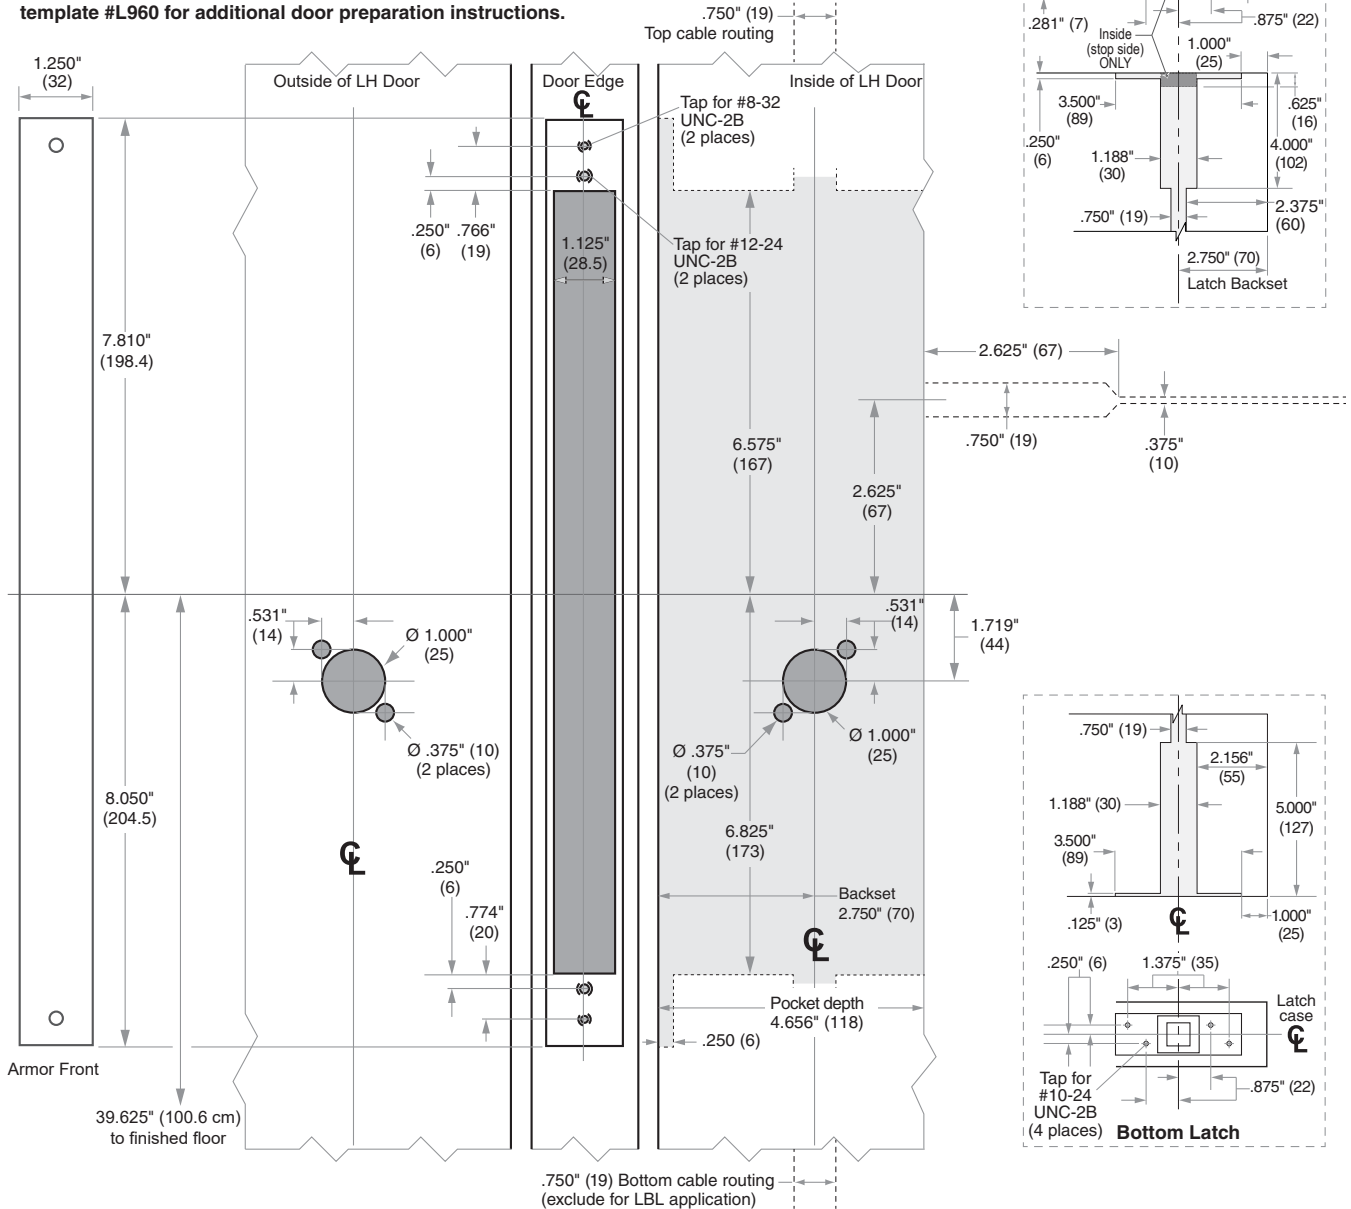

Dimensions shown in parentheses ( ) are in millimeters.

**DRAWING IS NOT TO SCALE!**  
 Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

© 2021 Allegion  
 L954 Rev. 12/21  
 us.allegion.com

Door preparation template

# L954





# LM9200-Series

Models LM9292EL/EU, LM9292M EL/EU, LM9293 EL/EU, LM9293M EL/EU Locks


Door Type: Metal, flat or beveled

Trim: Escutcheon

For case and strike dimensions, see Template L3.

**NOTES:**

Suitable reinforcement required for metal door installation.  
For fire-rated locks less bottom latch (LBL), refer to template #L960 for additional door preparation instructions.

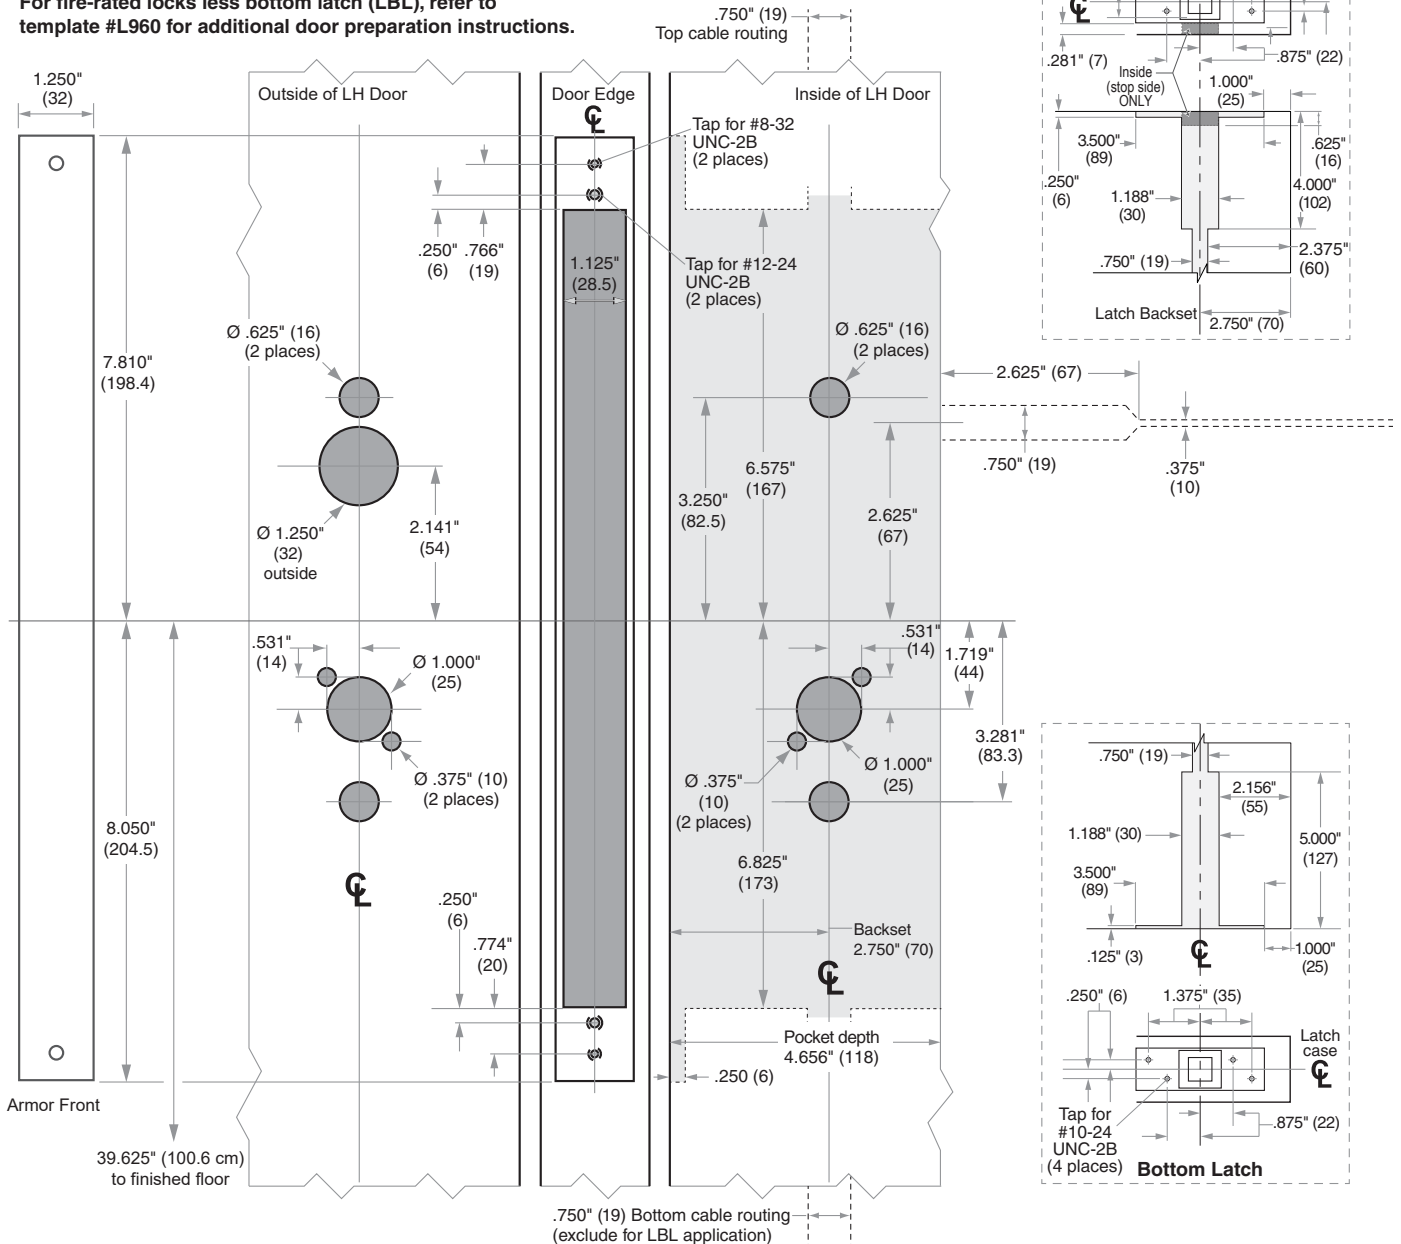

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L955 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L955



# LM9200-Series

Models LM9292EL/EU, LM9292M EL/EU, LM9293 EL/EU, LM9293M EL/EU Locks


Door Type: Metal, flat or beveled

Trim: Rose

For case and strike dimensions, see Template L3.

**NOTES:**

Suitable reinforcement required for metal door installation.  
For fire-rated locks less bottom latch (LBL), refer to template #L960 for additional door preparation instructions.

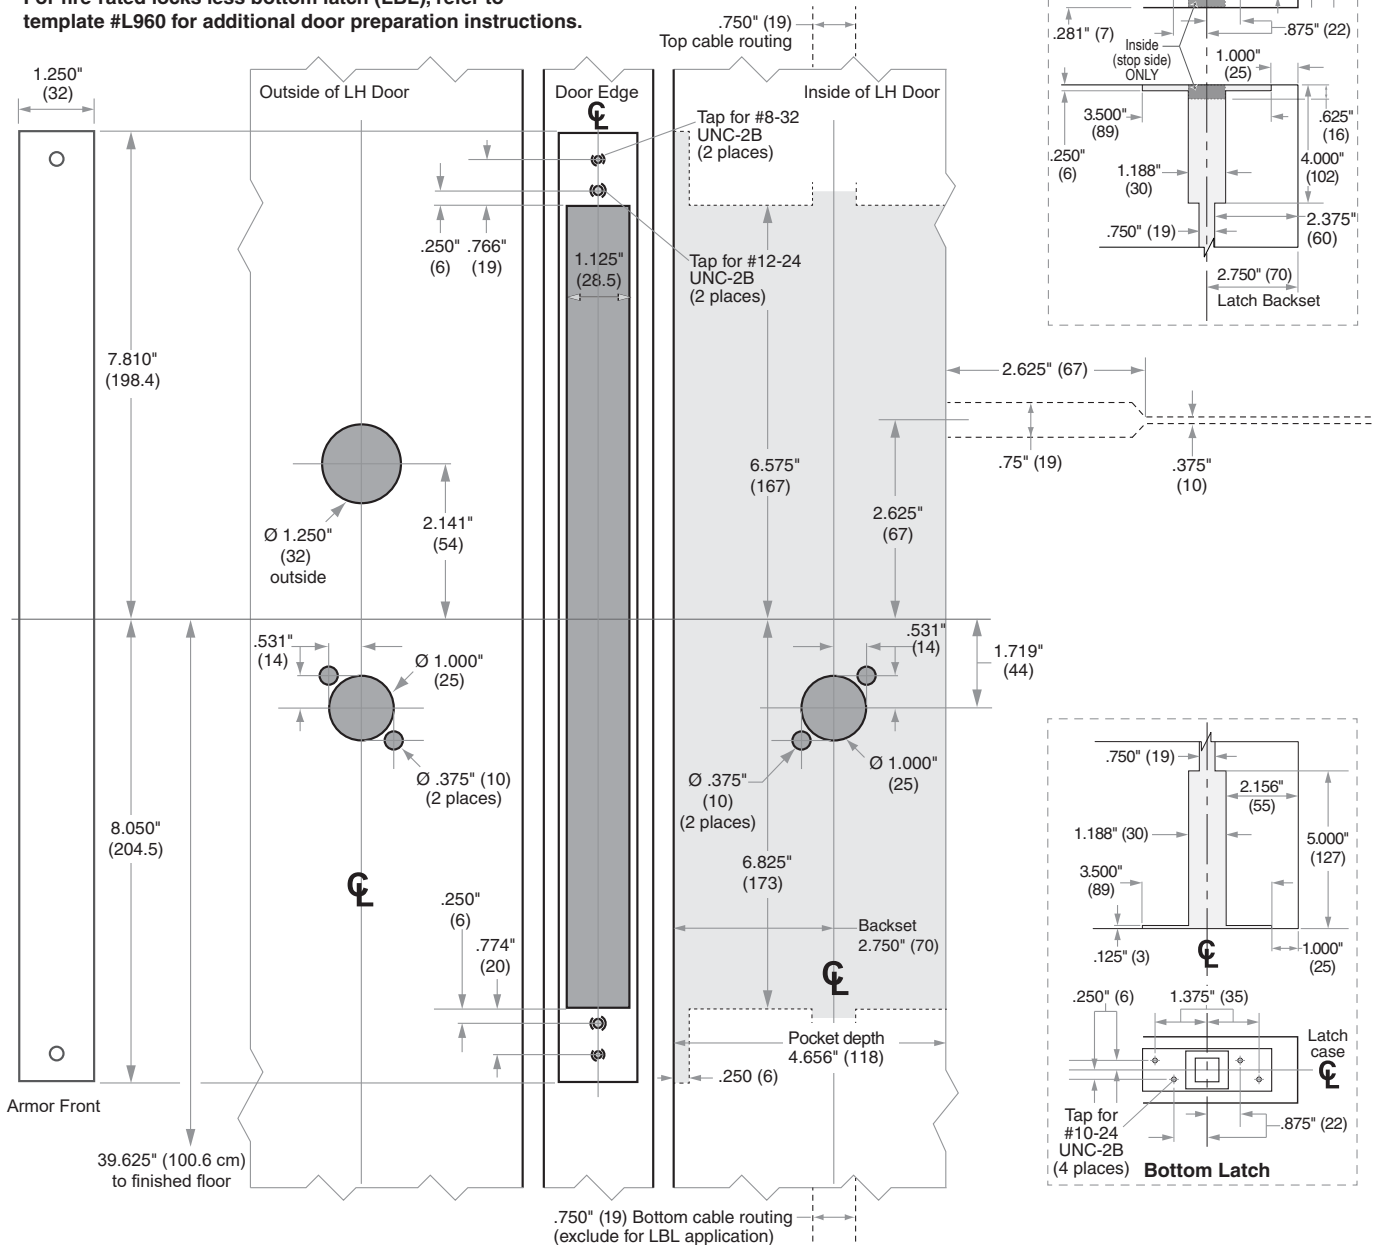

Dimensions shown in parentheses ( ) are in millimeters.

**DRAWING IS NOT TO SCALE!**  
Customer service: 877-671-7011

We can help you find the correct guide for your product and application!

Door preparation template

# L956



# LM9200-Series

Models LM9294EL/EU, LM9294M EL/EU, LM9295 EL/EU, LM9295M EL/EU Locks


Door Type: Metal, flat or beveled

Trim: Escutcheon

For case and strike dimensions, see Template L3.

**NOTES:**

Suitable reinforcement required for metal door installation.  
For fire-rated locks less bottom latch (LBL), refer to template #L960 for additional door preparation instructions.

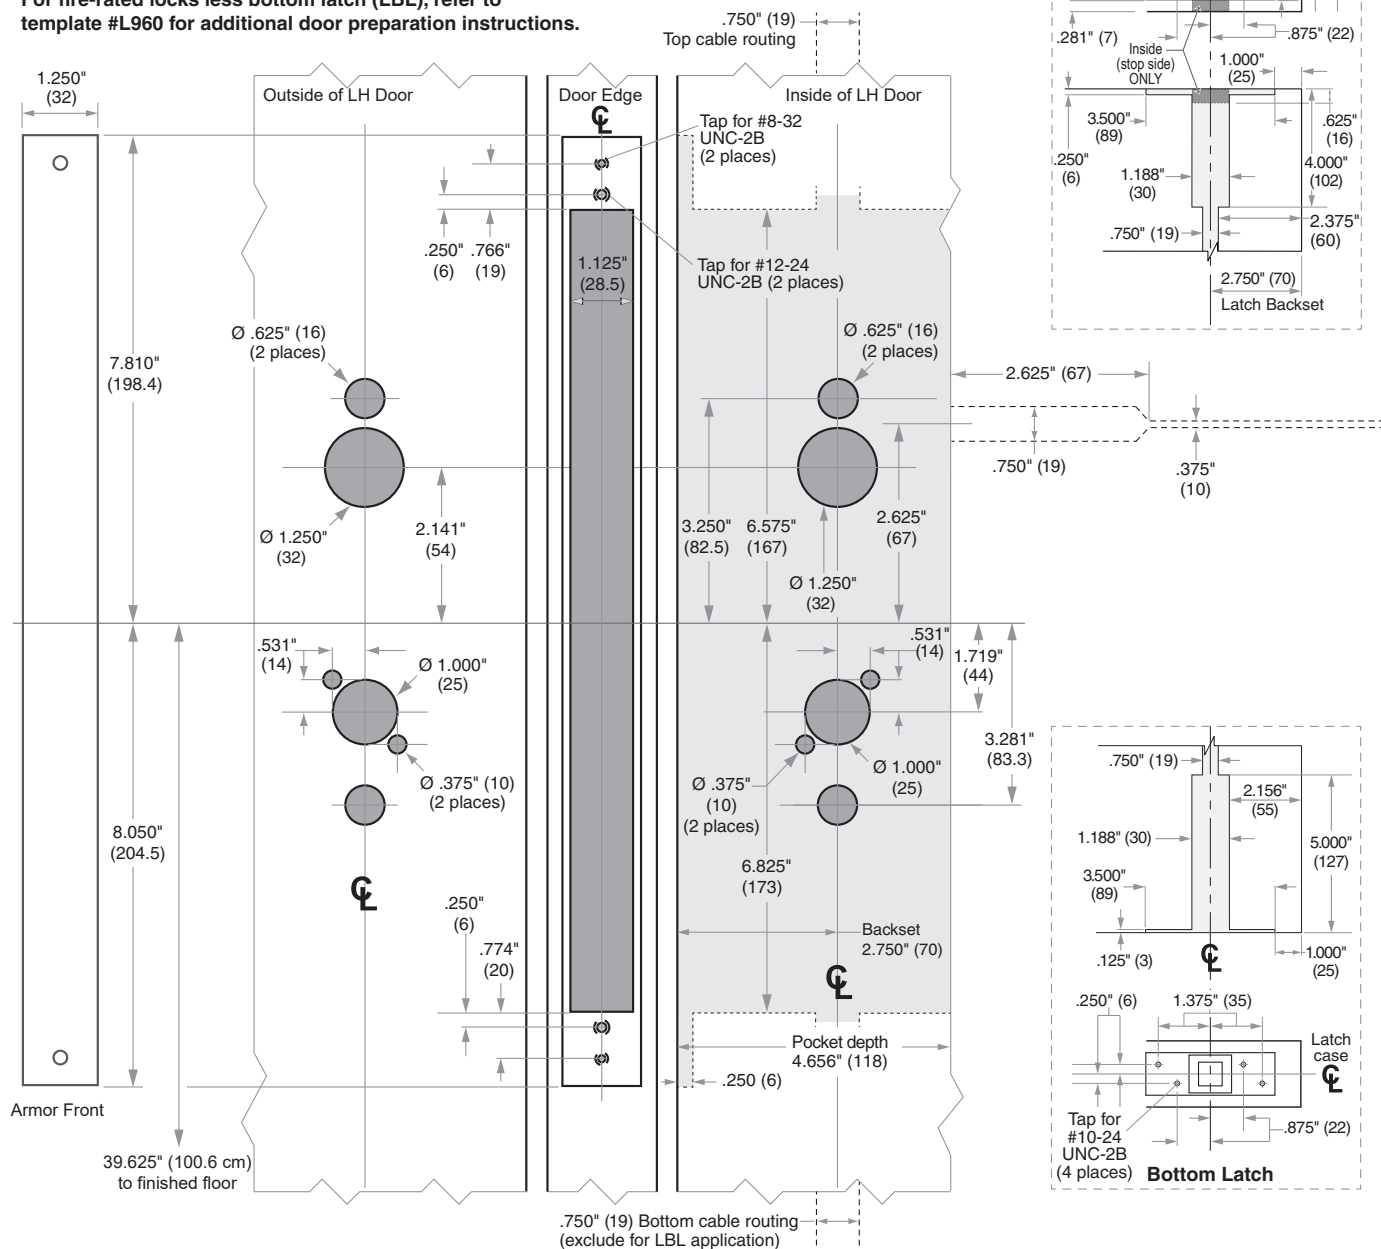

Dimensions shown in parentheses ( ) are in millimeters.

**DRAWING IS NOT TO SCALE!**

**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L957



# LM9200-Series

Models LM9294EL/EU, LM9294M EL/EU, LM9295 EL/EU, LM9295M EL/EU Locks


Door Type: Metal, flat or beveled

Trim: Rose

For case and strike dimensions, see Template L3.

**NOTES:**

Suitable reinforcement required for metal door installation.  
For fire-rated locks less bottom latch (LBL), refer to template #L960 for additional door preparation instructions.

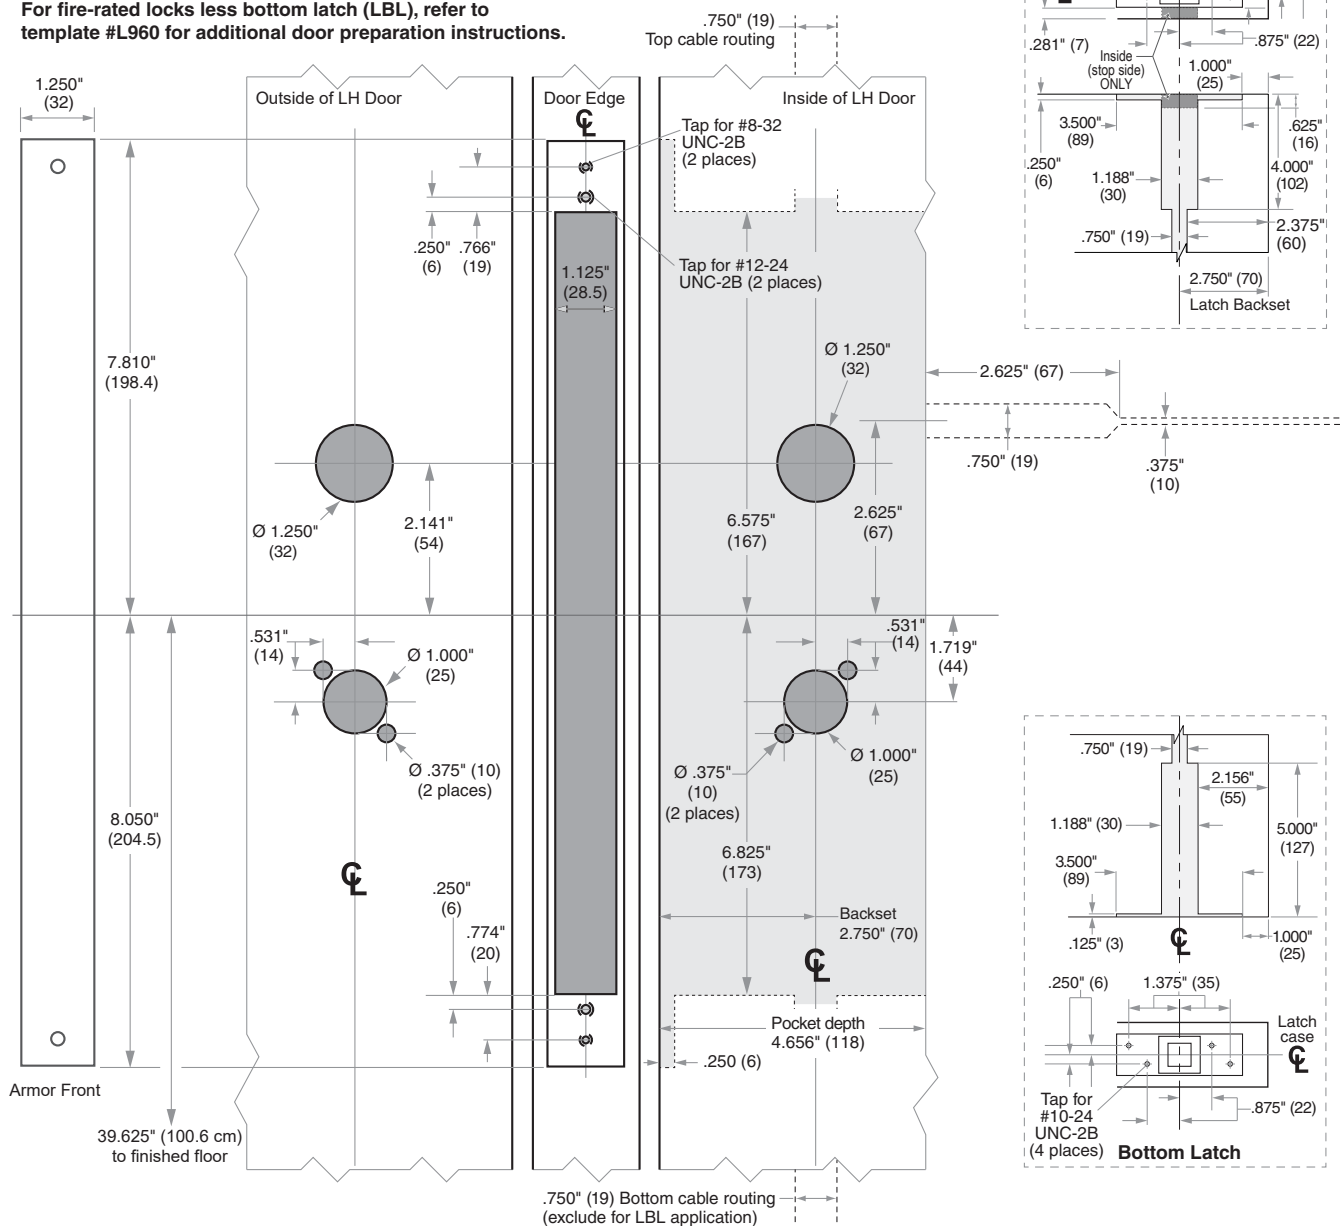

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L958 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L958




# LM9200F-LBL (Less bottom latch)

## Multi-Point Locks (20-minute wood door application)

Door Type: Wood or composite, flat or beveled  
 Trim: Escutcheon or rose


For case and strike dimensions, see Template L3.

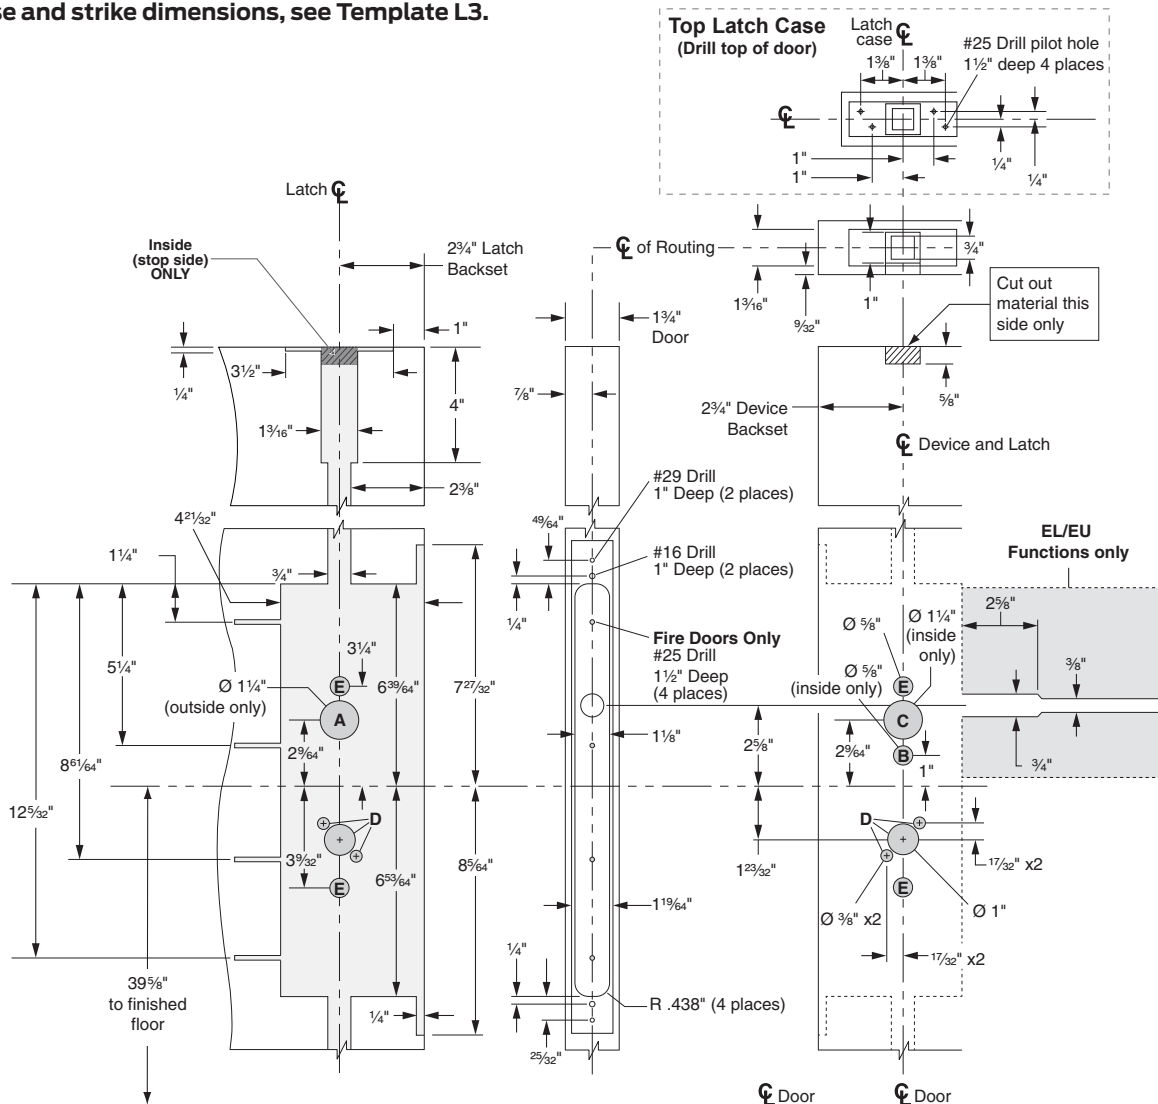

Functions	OUTSIDE			INSIDE			
	A	D	E	B	C	D	E
LM9225							X
LM9210		X					X
LM9250, LM9256	X	X		X			X
LM9270, LM9280	X	X					X
LM9271, LM9294, LM9295	X	X			X	X	
LM9290, LM9291	X	X					X
LM9292, LM9293	X	X					X

Escutcheon trim

Escutcheon trim

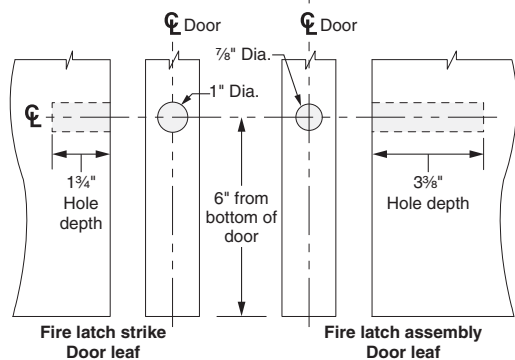

**NOTE:**  
 For additional information on fire door less bottom latch installation, please refer to instruction sheet #911009.

Dimensions shown in parentheses ( ) are in millimeters.

**DRAWING IS NOT TO SCALE!**  
 Customer service: 877-671-7011

Door preparation template




# LM9200M-LBL (Less bottom latch)


## Multi-Point Locks (90-minute metal door application)

Door Type: Metal, flat or beveled  
 Trim: Escutcheon or rose

For case and strike dimensions, see Template L3.

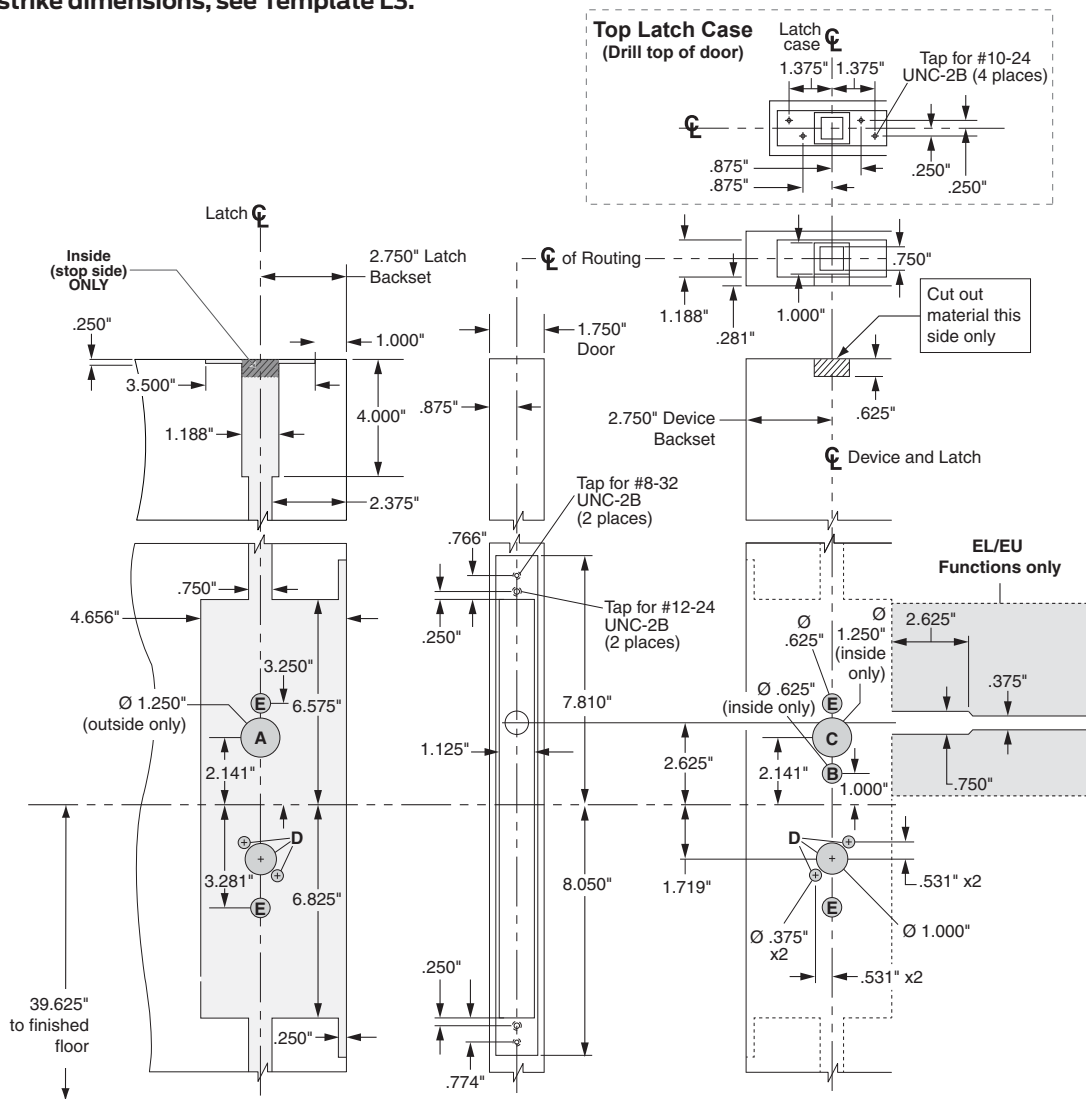

Functions	OUTSIDE			INSIDE			
	A	D	E	B	C	D	E
LM9225	No holes					X	
LM9210		X				X	Escutcheon trim
LM9250, LM9256	X	X		X		X	Escutcheon trim
LM9270, LM9280	X	X				X	Escutcheon trim
LM9271, LM9294, LM9295	X	X			X	X	Escutcheon trim
LM9290, LM9291		X				X	
LM9292, LM9293	X	X				X	

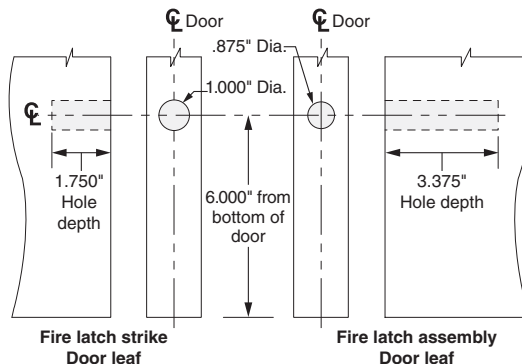

**NOTE:**  
 For additional information on fire door less bottom latch installation, please refer to instruction sheet #911009.

Dimensions shown in parentheses ( ) are in millimeters.

**DRAWING IS NOT TO SCALE!**  
 Customer service: 877-671-7011

Door preparation template



# L/LV/LM/LMV-Series


## Models L9492, L9493 Electrified Locks

Door Type: Wood or composite, flat or beveled  
 Trim: Rose

This template should not be used for HSLR trim. Use template L965 for HSLR trim.

**For Case and Strike dimensions, see Template L1**  
**Refer to Template L1 (revised October 2014 or later) for information to prepare the door for wire routing.**

### Left Hand (LH) Door Shown

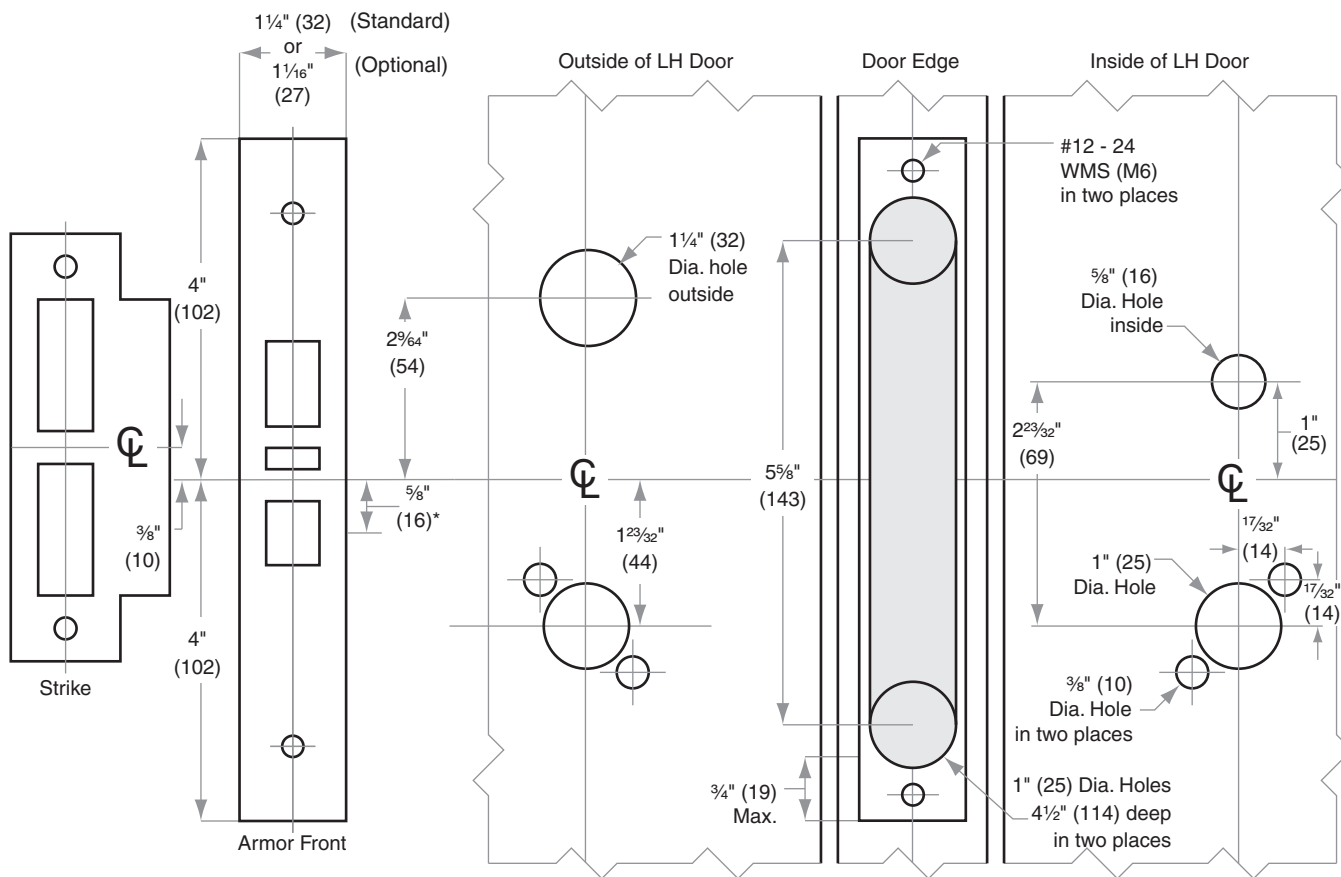

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L961 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L961



# L/LV/LM/LMV-Series


## Models L9492, L9493 Electrified Locks

Door Type: Metal, flat or beveled  
 Trim: Rose

This template should not be used for HSLR trim. Use template L966 for HSLR trim.

**For Case and Strike dimensions, see Template L1  
 Refer to Template L1 (revised October 2014 or  
 later) for information to prepare the door for  
 wire routing.**

### Left Hand (LH) Door Shown

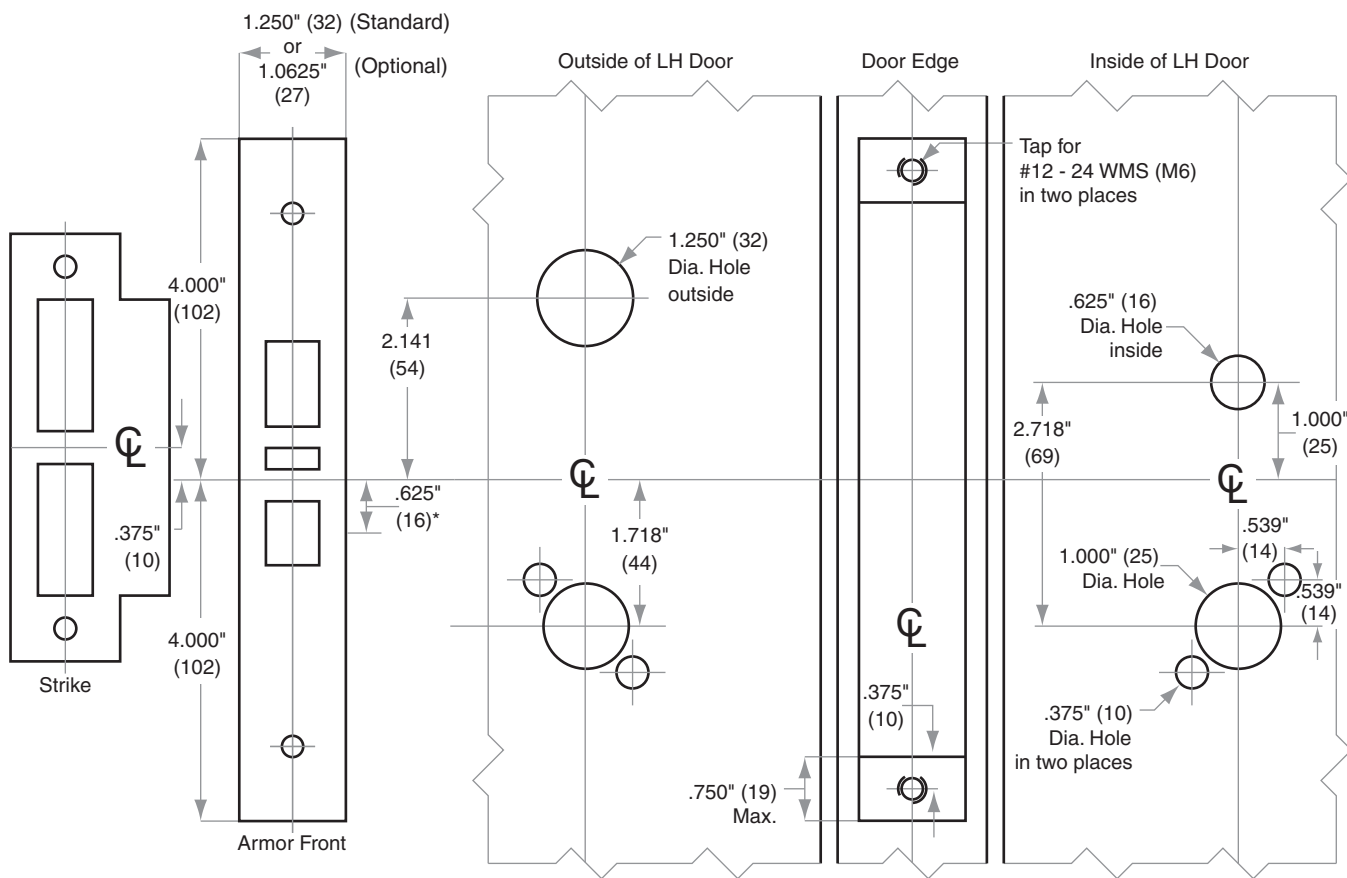

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L962 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for  
 your product and application!**

Door preparation template

# L962





# L/LV/LM/LMV-Series


## Models L9492, L9493 Electrified Locks

Door Type: Wood or composite, flat or beveled  
 Trim: Escutcheon

This template should not be used for HSLR trim. Use template L965 for HSLR trim.

**For Case and Strike dimensions, see Template L1**  
**Refer to Template L1 (revised October 2014 or later) for information to prepare the door for wire routing.**

### Left Hand (LH) Door Shown

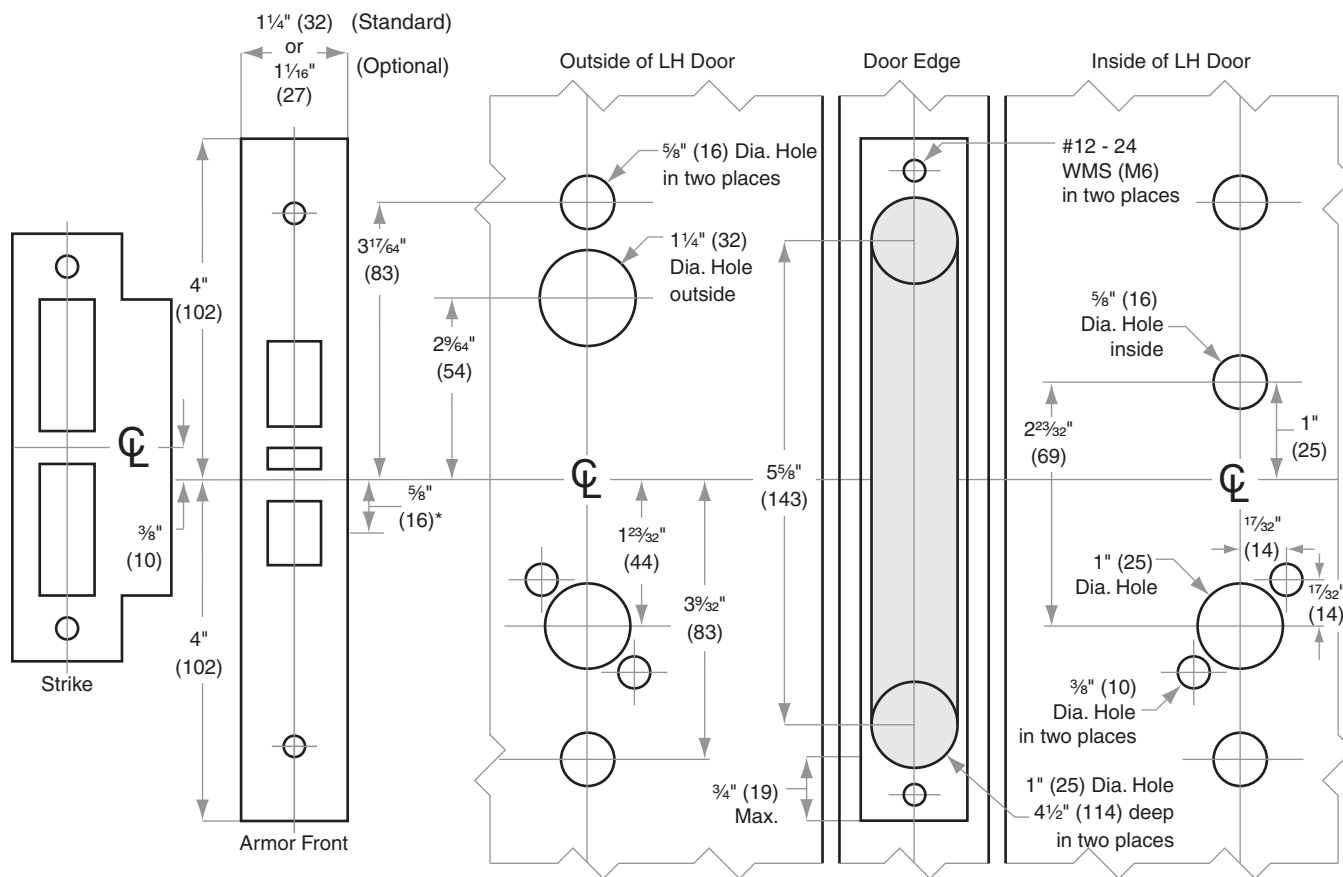

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L963 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for your product and application!**

Door preparation template

# L963



# L/LV/LM/LMV-Series


## Models L9492, L9493 Electrified Locks

Door Type: Metal, flat or beveled  
Trim: Escutcheon

This template should not be used for HSLR trim. Use template L966 for HSLR trim.

**For Case and Strike dimensions, see Template L1  
Refer to Template L1 (revised October 2014 or  
later) for information to prepare the door for  
wire routing.**

### Left Hand (LH) Door Shown

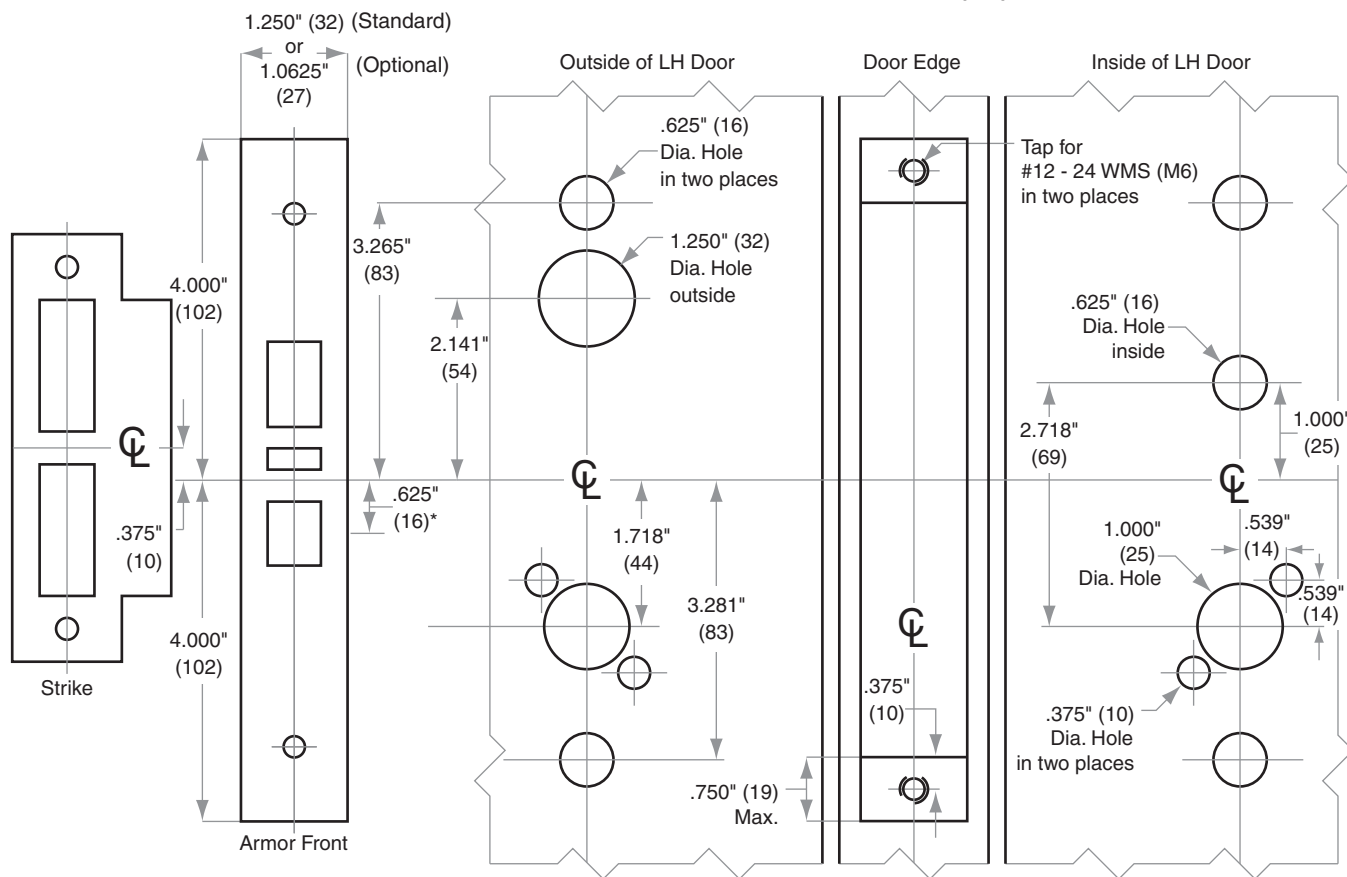

\* Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L964 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**

**We can help you find the correct guide for  
your product and application!**

Door preparation template

# L964




# L9000-Series HSLR



Door Type: Wood or Composite, Flat or beveled  
 Trim: Escutcheon

For case and strike dimensions, see Template [L4](#).

LH door shown

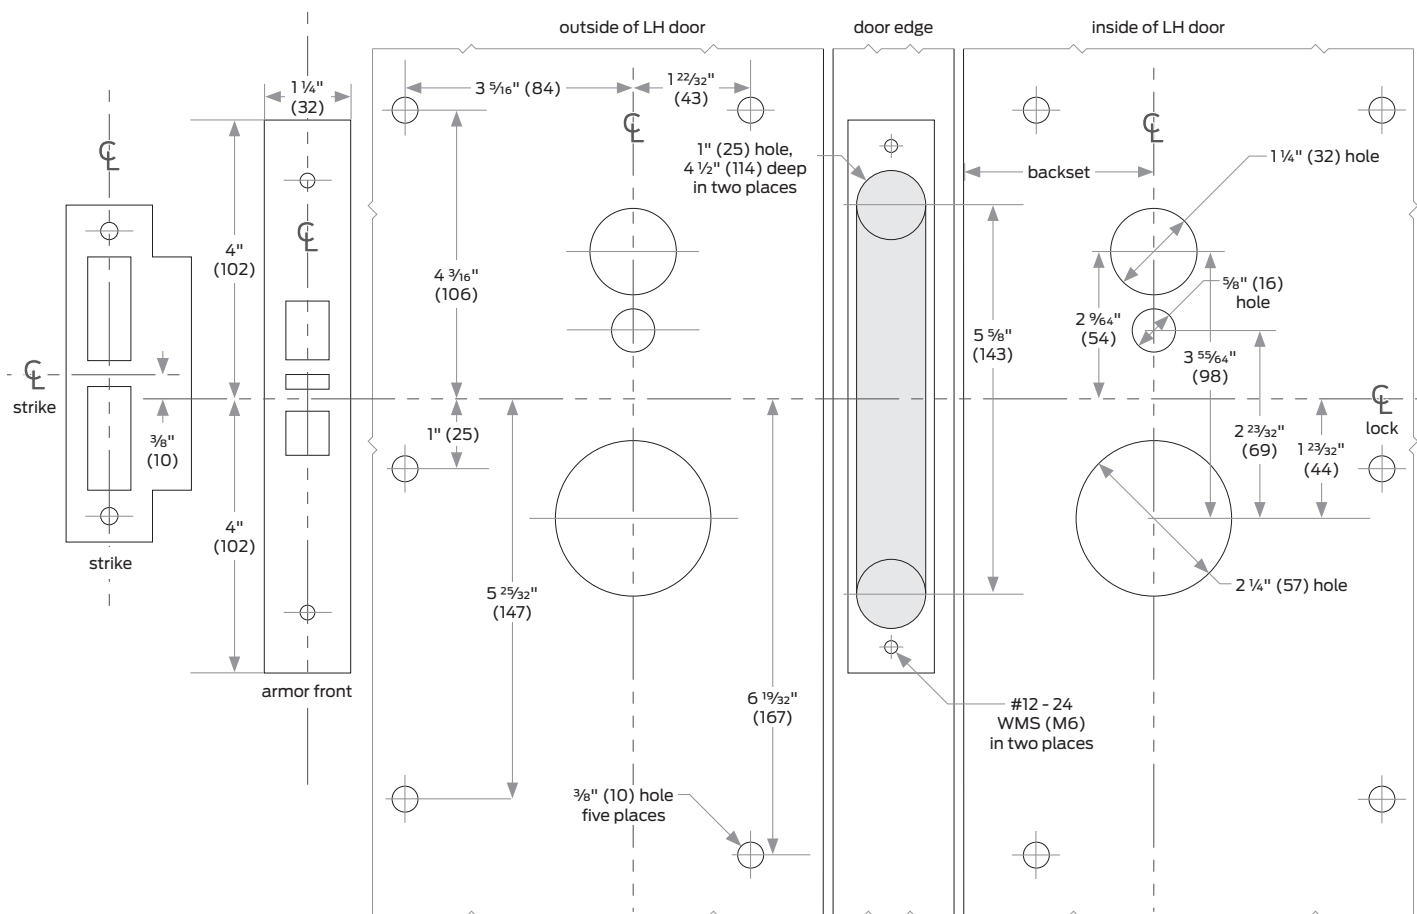

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L965 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
 Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L965




# L9000-Series HSLR

Door Type: Metal, Flat or beveled  
Trim: Escutcheon

For case and strike dimensions, see Template [L4](#).

LH door shown

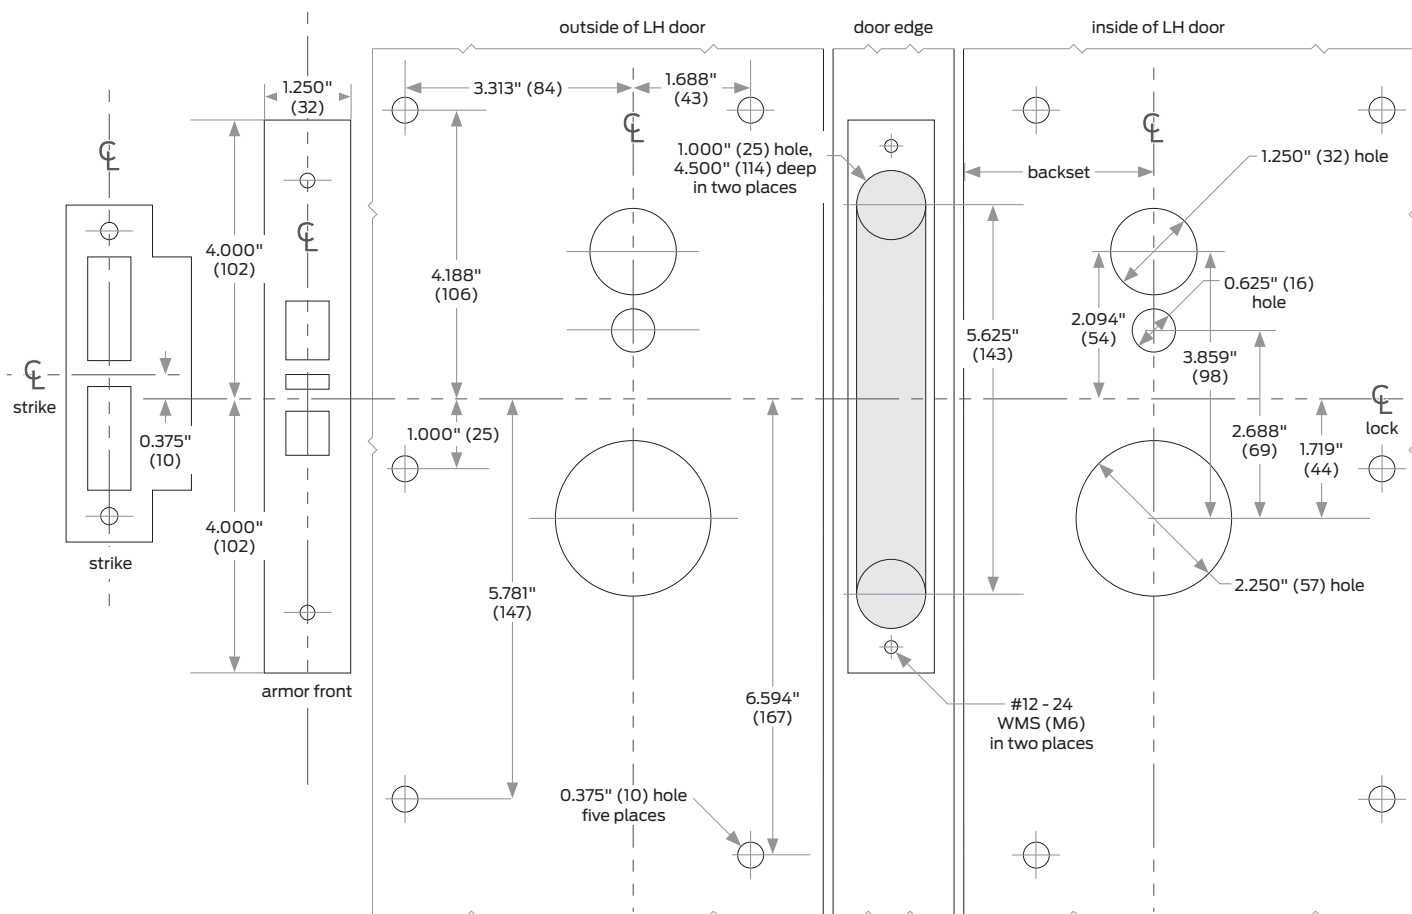

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
L966 Rev. 12/21  
us.allegion.com

**DRAWING IS NOT TO SCALE!**  
**Customer service: 877-671-7011**  
**We can help you find the correct guide for your product and application!**

Door preparation template

# L966




# L/LV/LM/LMV-Series

## Model L9412

Door Type: Wood or composite, flat or beveled  
 Trim: Rose

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

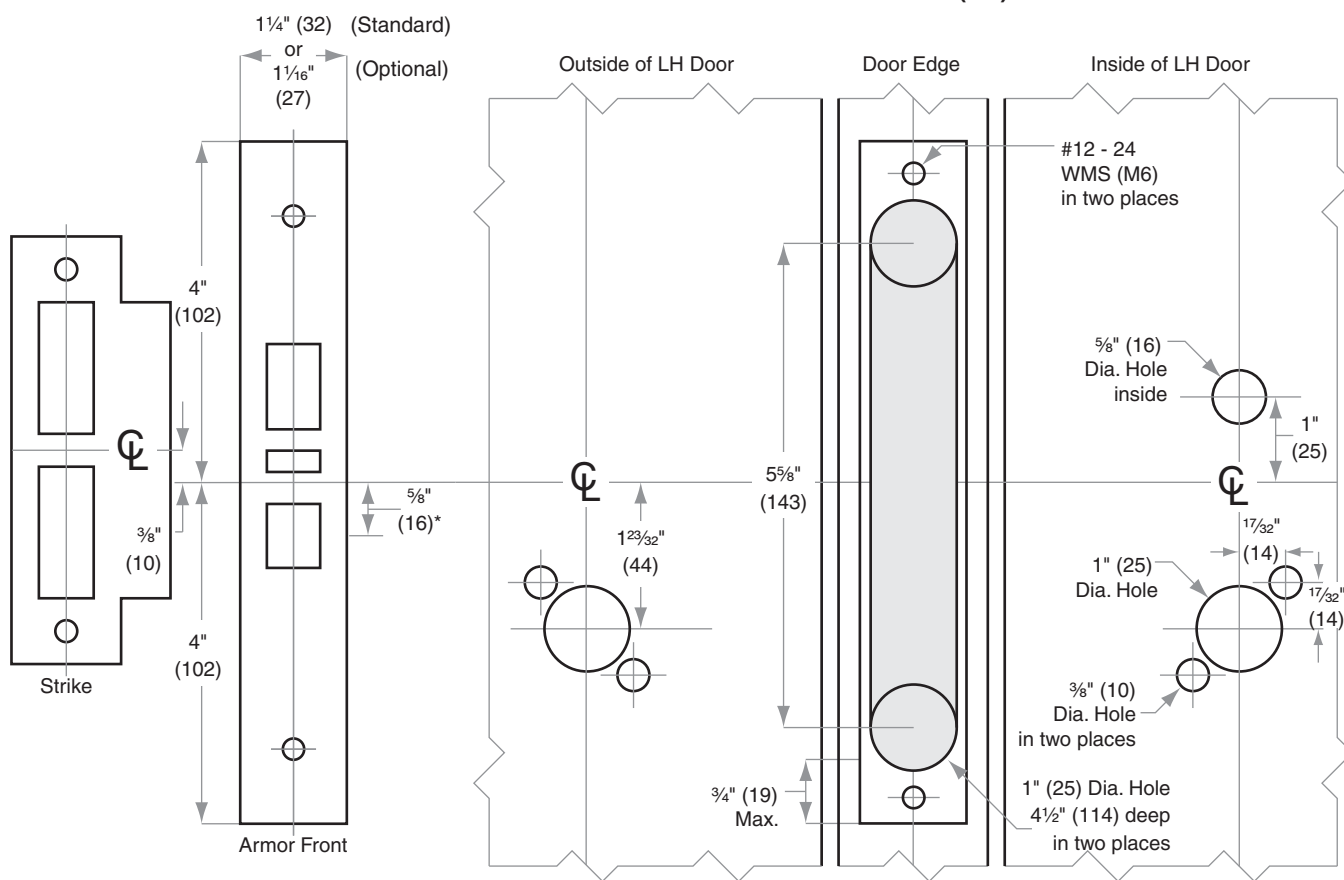

\*Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L967 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
 Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L967




# L/LV/LM/LMV-Series

## Model L9412

Door Type: Metal, flat or beveled  
 Trim: Rose

For Case and Strike dimensions, see Template L1

### Left Hand (LH) Door Shown

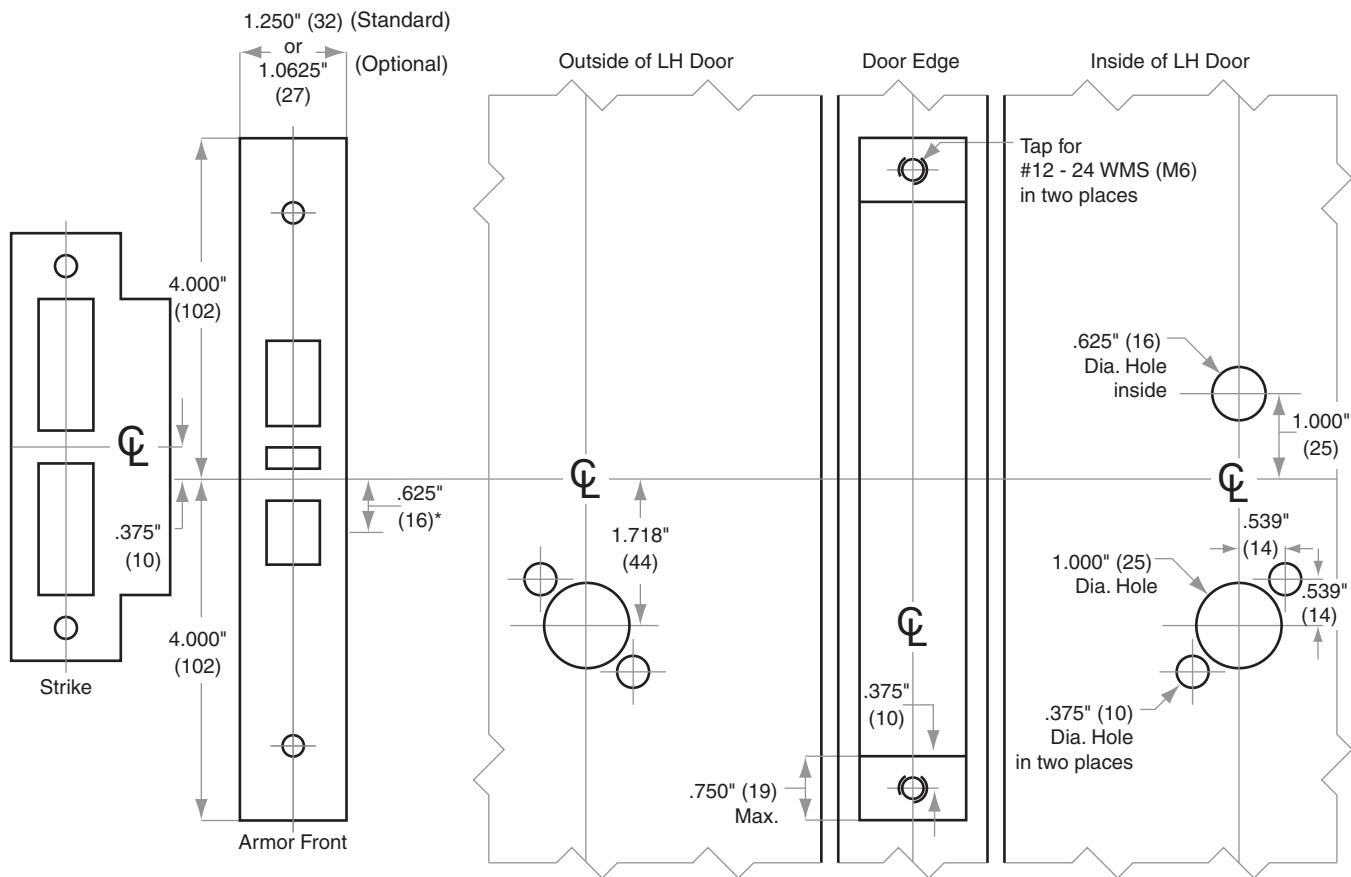

\*Centerline of Armor Front to Centerline of Latch dimension

Dimensions shown in parentheses ( ) are in millimeters.

© 2021 Allegion  
 L968 Rev. 12/21  
 us.allegion.com

**DRAWING IS NOT TO SCALE!**  
 Customer service: 877-671-7011

**We can help you find the correct guide for your product and application!**

Door preparation template

# L968