


Magnetic Mount - Documentation

PREFACE

The Magnetic Mount by Black Box Embedded is a phone mount designed for use with anything that can accept an AMP bolt pattern. The mount consists of two pieces one with AMP style bolt pattern and one with adhesive to affix to your phone case.


What's included:

- Magnetic Mount (2pcs)

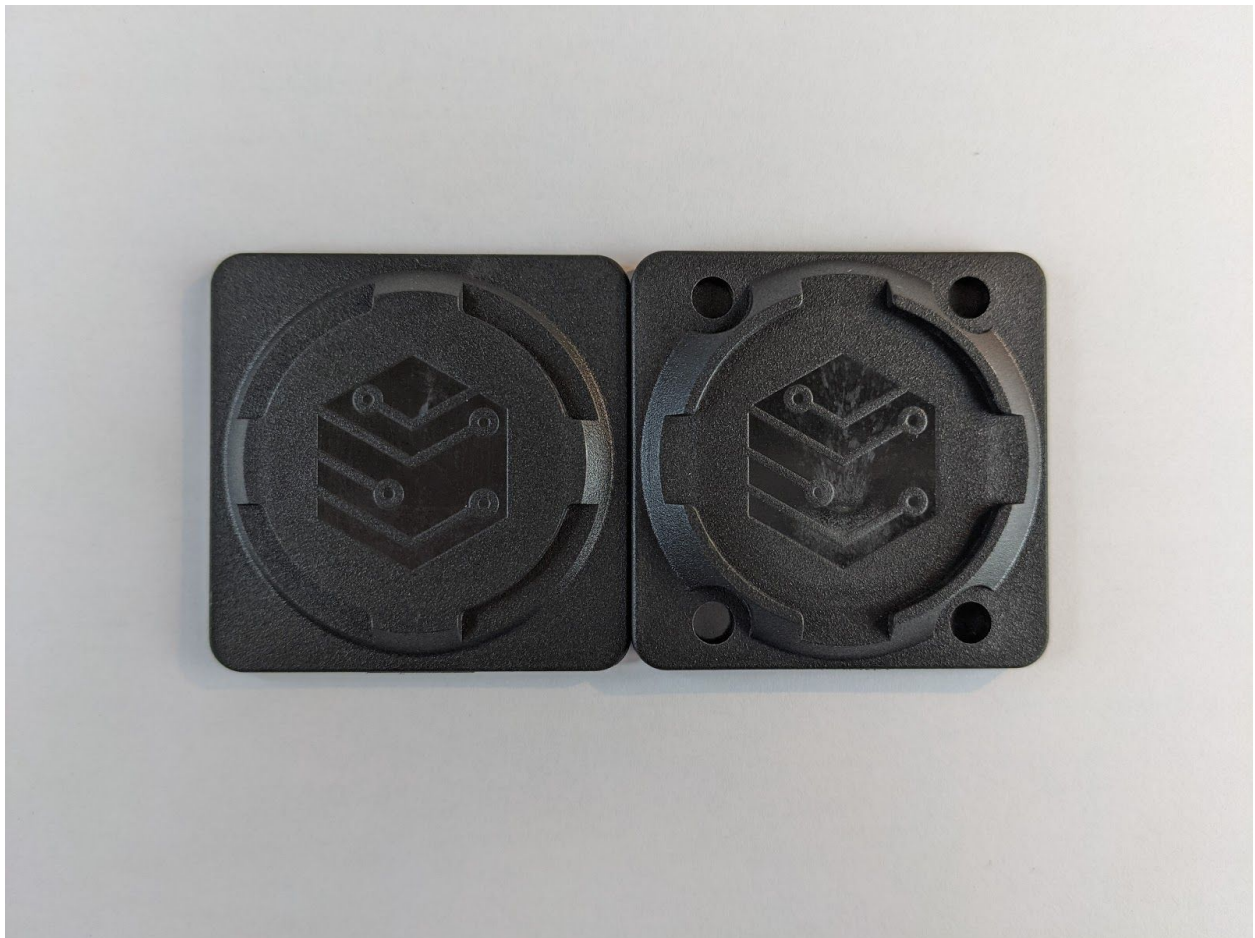

Magnetic Mount Install

First, install the Magnetic Mount piece with the four screw holes to the surface with AMP pattern.

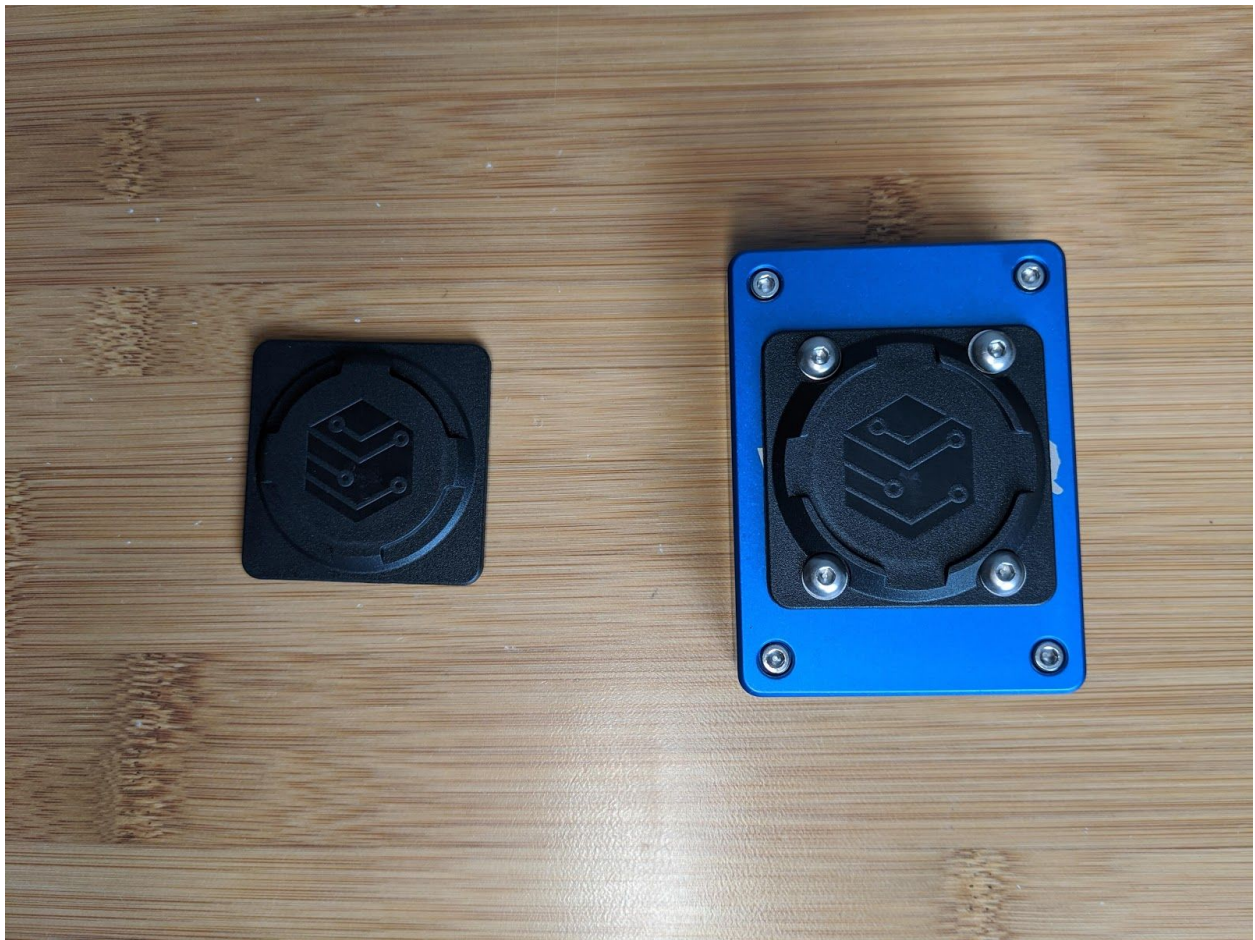

Next, affix the other Magnetic Mount piece with 3M VHB to your phone's case.

First, clean the area on your phone case that you plan to affix the Magnetic Mount piece to. We suggest using something that doesn't leave a film like alcohol. For detailed instructions see: [3M VHB surface preparation instructions](#).



Peel the white backing from the rear of the Magnetic Mount piece.



Stick the Magnetic Mount Piece to the rear of the phone case. It is highly suggested to add pressure for over 24hrs to let the adhesive tape fully adhere, we suggest using the other Magnetic Mount piece placed on the inside of the case to have the magnetics apply the pressure while curing.



WARNING

Black Box Embedded is not responsible for your phone and suggests you take the necessary precautions to secure your phone for the terrain your riding on.