


BGW

Door Assembly Instructions



BASIC PARTS&MATSRIAC

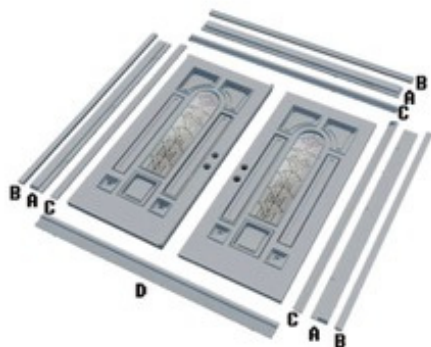

LEFT HAND SWING

- A.DOOR JAMB
- B.Exterior Brick Mould
- C.Interior Casing
- D.Threshold/Sill
- E.Hinges
- F.Jamb Screws




RIGHT HAND SWING

ASSEMBLY PARTS



A. Door Jamb x3

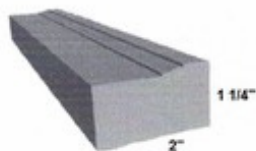

B. Brick Molding x3



C. Casing x3



D. Threshold x1




E. Hinge x4

Hinge Screws x48



F. Jamb Screw

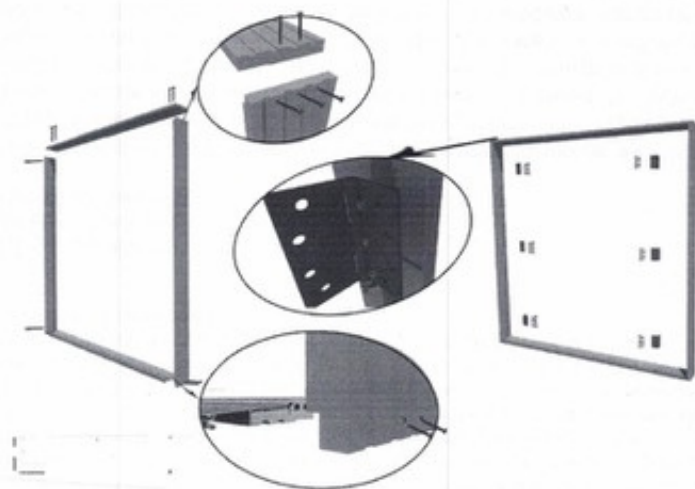

Steps:

1. Assemble Frame :

Screw door Jamb and legs together. Screw Sill to Jamb legs.

2. Screw Hinges to door.

3. Install door Jamb in opening according to installers chosen method.

4. Screw Hinges and door to door Jamb. Adjust doors to close properly.

5. Install locksets per customer choosing.

6. Install Exterior Brick Mould.

7. Install Interior Casing.