



SIDE STEP BRACKETS YAMAHA® DRIVE®


INSTALLATION INSTRUCTIONS

INCLUDED:

U-Bolts
Mounting Brackets
Hardware Pack
Side Steps


TOOLS NEEDED:

Cordless Drill
17mm Socket
17mm Wrench

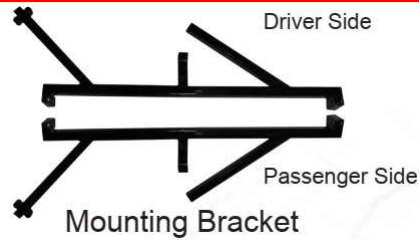

NOTE:

Professional installation is recommended. If you choose not to have this product installed by a professional, we highly recommend that you exercise caution, care and patience when installing this product as it involves drilling holes into your cart's body.

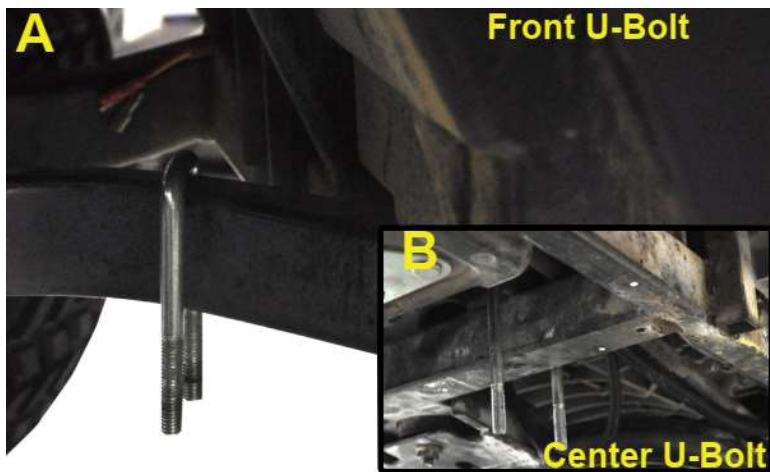


STEP 1

- (A) Place smaller U-Bolt over front of frame as shown.
- (B) Place larger U-Bolt over frame located directly under the front of the battery well.

STEP 2

Place bracket under frame with the tab in the picture hooked to the top of the frame directly behind the pedal box.



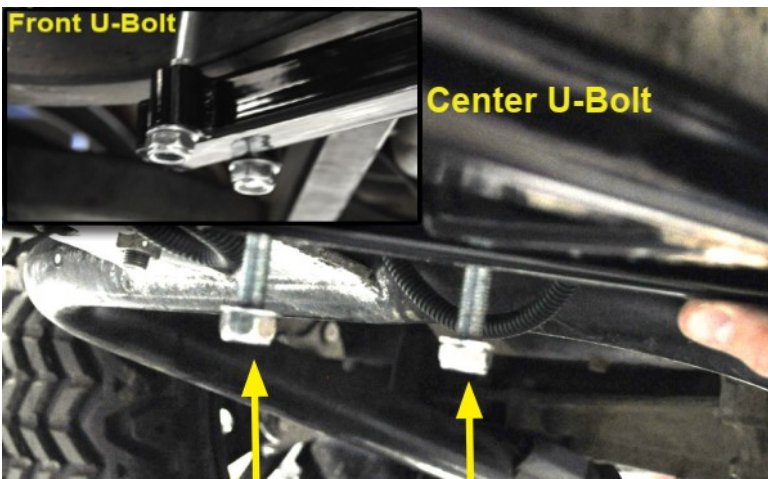

STEP 3

Guide the U-Bolts through the bracket and hand tighten the supplied hardware.



STEP 4

Using a 17mm socket, tighten the U-Bolt hardware on the front and centre locations. Be sure the hardware is tightened evenly.



STEP 5

Using the 10mm x 55mm hardware, attach the step to the bracket with 17mm socket and wrench. Once all 4 bolts are in place, tighten all.
Repeat steps 1-5 on the other side

INSTALLATION COMPLETE

E-Z-GO®, E-Z-GO® TXT®, E-Z-GO® FREEDOM® TXT®, E-Z-GO® CUSHMAN® and E-Z-GO® RXV® are registered trademarks of Textron Innovations, Inc. Club Car®, Club Car® Precedent®, and Club Car® DS® are registered trademarks of Ingersoll Rand, Inc. Yamaha®, Yamaha® Drive®, G-14®, G-16®, G-19®, and G-22® are registered trademarks of Yamaha Golf-Car Company. Any reference to Club Car®, E-Z-GO®, or Yamaha® or their associated trademarks, word marks, or products are only for purposes of identifying golf carts with which this product is compatible. These products are aftermarket parts and are not original equipment parts. EXCALIBUR is not connected to, affiliated with, sponsored by, or endorsed by either Textron Innovations, Inc., Ingersoll Rand Inc., Yamaha Golf Cart Company or any of their parent or subsidiary companies.

HARDWARE PACK

- 2 – Square U-Bolts 10mm x 40mm x 104mm
- 2 – Square U-Bolts 10mm x 68mm x 100mm
- 8 – 10mm x 55mm Hex head bolts
- 24 – 10mm flat washers
- 16 – 10mm lock nuts

