

INCLUDED:

Spacers
Hip Restraint brackets
Left Bracket
Right Bracket
Hardware Pack

TOOLS NEEDED:

10mm Wrench
Phillips Screwdriver
Ratchet
7/16 Socket



Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.


Remove factory front seat. Remove and retain hip restraints and hinges.




If your cart is 2012 and up install your retained hip restraints and hinges using the provided hardware then proceed to step 6.

If your cart is an 04-11, use the provided hardware to attach clamps to the seat.

NOTE: Each Clamp is labeled A-D, attach them to their corresponding leations.

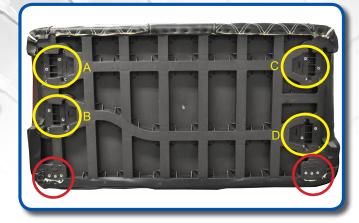



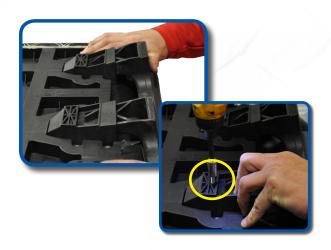

Install hip restraint using provided hardware.

Install seat hinges using provided hardware.



Install the lean back spacer on the base of the bracket. The longer spacer is for seat kits and the smaller one is to mount to the sweater basket. Install the M6 bolt into hexagonal shaped hole at the top of the bracket.

NOTE: Make sure opening in spacer is facing down.





Mount the brackets to the back of your seat cushion. Do not over tighten.



B) If mounting to sweater basket proceed to next step.







Set opening of spacer on lower mounting hook. Align upper stud with wedge and secure. Do not overtighten.

Place spacer opening on sweater basket. Align stud with hole in sweater basket.



INSTALLATION COMPLETE

Club Car®, Club Car® Precedent®, and Club Car® DS® are registered trademarks of Ingersoll Rand, Inc. ("Ingersoll Rand"). Reference to Club Car®, Club Car®

PACK HARDWARE

4 - #14 X 39MM HEX WASHER HEAD SELF TAPPING SCREW 18 - M6 X 1.0 X 20MM HEX HEAD SCREWS 8 - M6 X 1.0 X 30MM HEX HEAD SCREWS 18 - M6 FLAT WASHER