




**INSTALLATION INSTRUCTIONS FOR TSUNAMI CUSHIONS
WILL FIT E-Z-GO RXV, TXT, YAMAHA DRIVE, DRIVE²**

INCLUDED:

Left Bracket
Right Bracket
Hardware Pack

TOOLS NEEDED:


10mm Wrench
Phillips Screwdriver
Ratchet
7/16 Socket

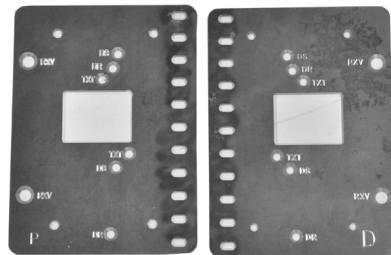

Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.

1



Remove factory front seat. Remove and retain hip restraints. Remove hinges and hardware.

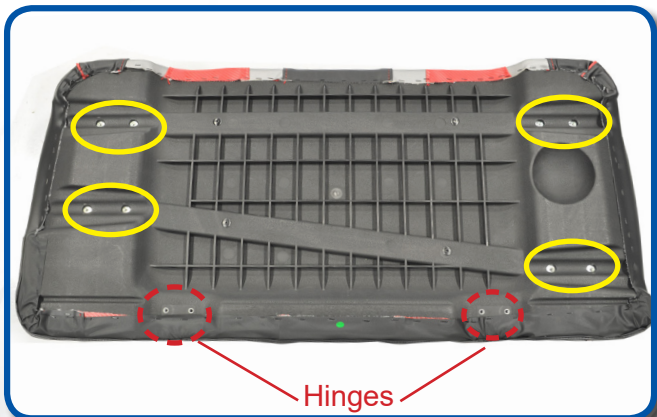

Install retained hip restraints and hinges on seat bottom of new seat. Do not overtighten.

2

Select bolt holes based on your cart model and install to lean back. Do not overtighten.

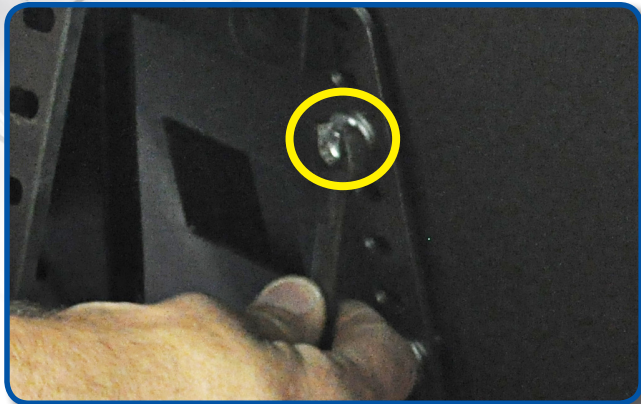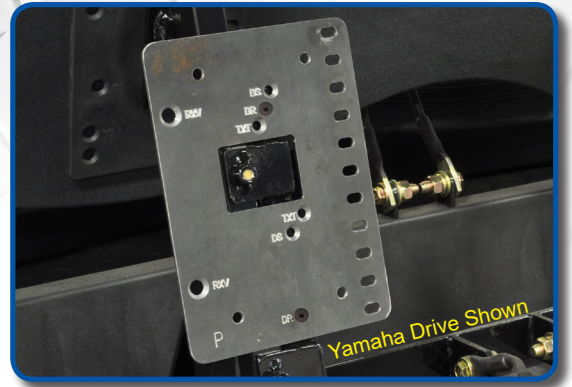

Using provided hardware install seatback. Do not overtighten.

INSTALLATION COMPLETE

E-Z-GO®, TXT®, and RXV® are registered trademarks of Textron Innovations, Inc. ("Textron"). Reference to Textron's trademarks and products is only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected or affiliated with or sponsored by Textron® or E-Z-GO®.

Yamaha®, G-14®, G-19®, and G-22® are registered trademarks of Yamaha Golf-Car Company and Yamaha Motor Corporation ("Yamaha"). Reference to Yamaha's trademarks and products is only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected or affiliated with or sponsored by Yamaha Motor Corporation or Yamaha Golf-Car Company.

HARDWARE PACK

- 4 - M6x25 Bolts
- 4 - M6 Flat Washers
- 4 - M6 Lock Washers
- 4 - M10 Flat Washers
- 4 - M10x60 Countersunk bolts
- 4 - M10 Nyloc Nuts
- 4 - M6x40 Bolts
- 4 - M6 Flat Washers
- 4 - M6 Nyloc Nuts