




G1™ CHEW KIT INSTALLATION INSTRUCTIONS


GUNNER®

1

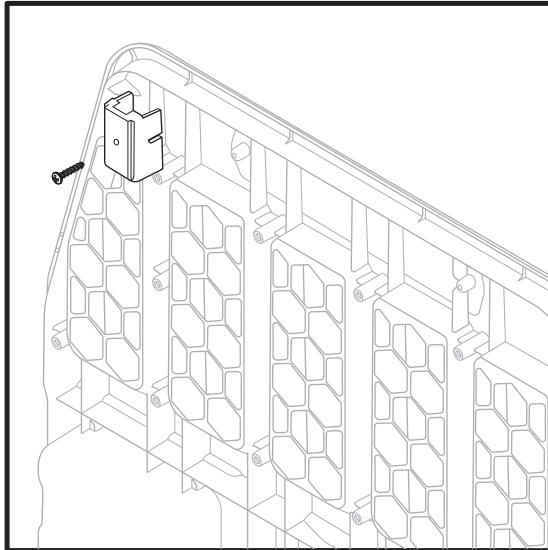


Remove the screw, and take off the security latch cover. Discard the latch cover.

2

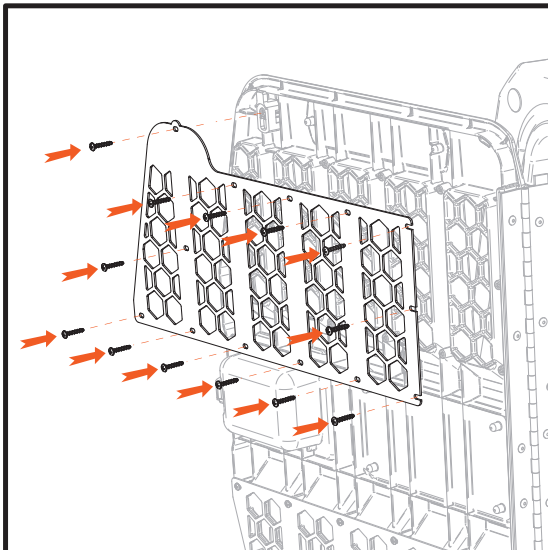

Place grate over windows and align the screw holes. Install the thirteen screws to secure the grate in place.

3

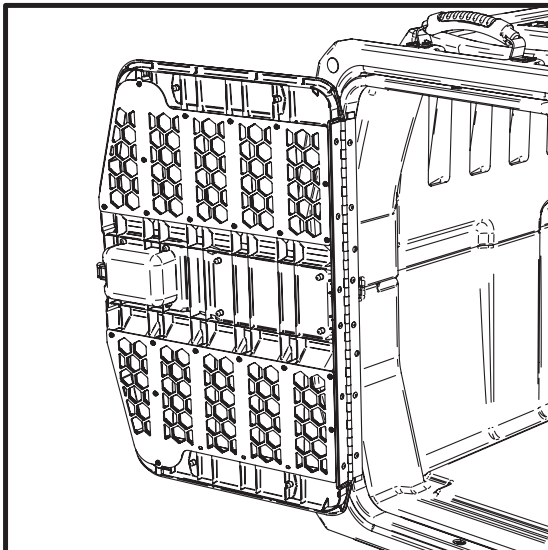


Repeat for bottom of door.



G1™ CHEW KIT INSTALLATION INSTRUCTIONS


GUNNER®

4

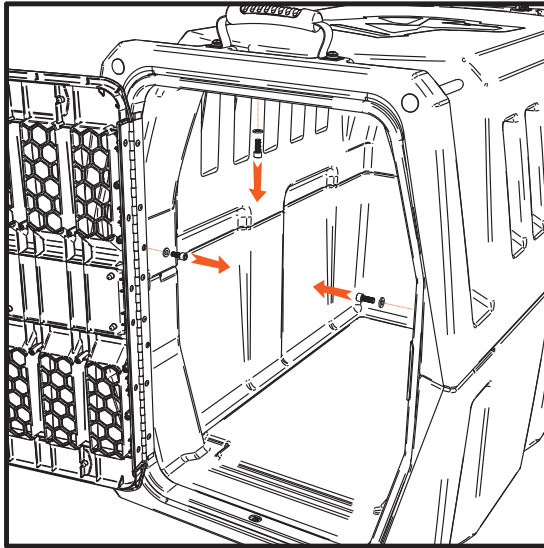


Remove three cap screws and washers that attach door frame to upper half of the kennel.

5

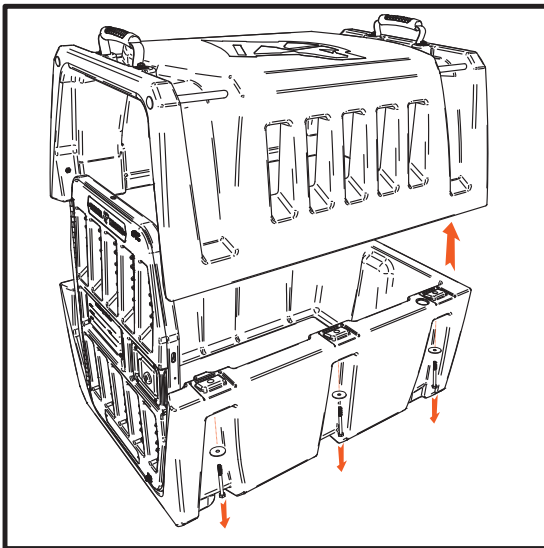

Using a 7/6" wrench or ratchet, remove the screws and washers fastening the upper and lower halves of the kennel.

6

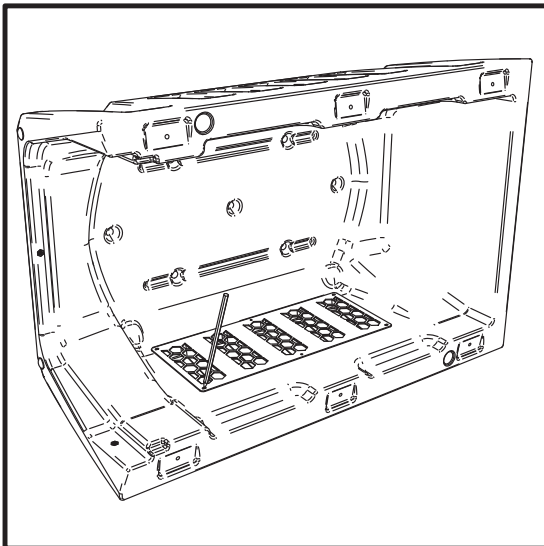

Place the window grate on the interior of the kennel. Align the grate with the window openings. Mark the mounting holes.


Repeat for other window(s).



G1™ CHEW KIT INSTALLATION INSTRUCTIONS

GUNNER®


7

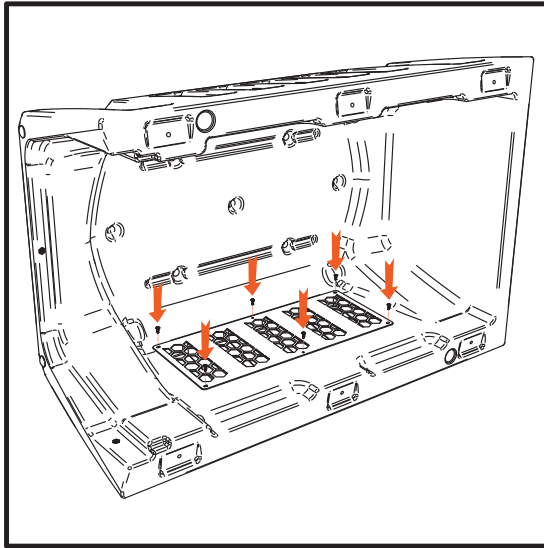

Insert supplied screws into designed points, and install grates using by twisting screws with applied manual force.



8

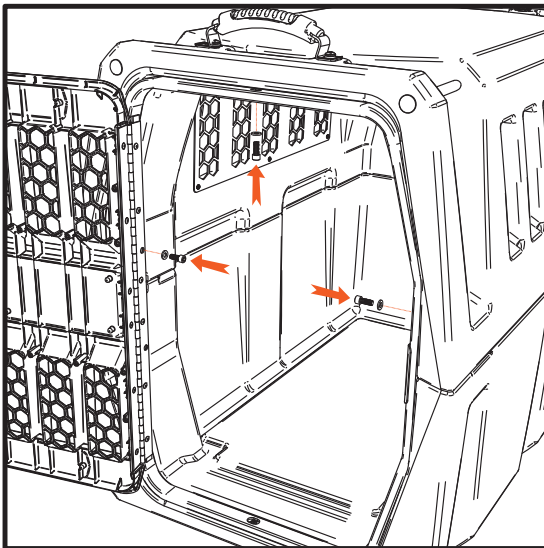

Reassemble the upper and lower halves of the kennel. Finally, reinstall three cap screws and washers in the door frame.