

五好之家



Tip: The picture is for reference only, please refer to the real thing!

S2221 Instruction Manual

NOTICE OF ASSEMBLE

Tips for assembling

1. Because this product contains small parts, children need to use this product with an adult to avoid accidental ingestion and cause suffocation hazard. There are sharp objects in the product, be careful not to pierce people to avoid injury.
2. After all the materials are used in the required amount in the operation steps, put the remaining materials back into the original bag until the installation is completed. (Avoid losing materials during the installation process)
3. The unit of dimension marked in the step diagram is "cm".
4. Tips for making template paper: Put the template on the back of the material, fix it with some small double-sided tape, and then cut out the material to prevent the cloth or template from moving in the cutting process, or causing errors in the cut material. Or lead to insufficient materials.
5. According to the "Parts Rule Example" at the bottom of this page, refer to the parts on the part number drawing, find the actual product and compare it with the bill of materials, and then install it after confirming that it is correct. (Wooden parts only)
6. It is not advisable to apply too much glue, so as not to wait for a longer time to dry, and overflow will affect the effect of the finished product.
7. There are unavoidable small deviations in the color of wood, fabric, and beads of different batches, without notice, thanks for understanding.

Tips for Assembling Wood



Find the corresponding block number, use a knife in the connection point gently press, you can take out the wood.



Use a knife to smooth out the burr.



Or use sandpaper to smooth out the burr

Testing on LED function

Be sure to test the LED lights before making the lighting, note that the LED white wire to the negative, gray wire to the positive reference to the following figure operation test.



DO NOT contact the LED wire end direct to the battery cell.



Use the provide battery holder. Make sue the correct polarity.


How to assemble the battery holder



1. Material and tools needed: - Battery holder, LED bulb, tape, screw driver and 2 pieces AAA size battery (not provided)




2. Use screw driver and take the lid off from the battery holder.

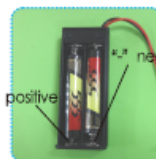


3. Insert the battery take notes on the polarity.



4. Connect the red wire to grey wire. Connect the black wire to white wire.

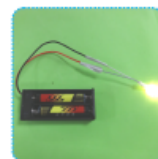

5. Wrap the exposed wire with the tapes.

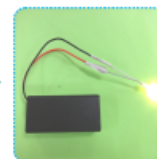

6. Place the box lid and fastness with screw driver.


Examples of parts rule:

A01: The part is directly in the packaging box; B01: The part is in the B bag; C01: The part is in the C bag, and so on. (Note: display the printing paper A06-1 in the step, the part number is A06-1. Printing paper and template paper are placed directly in the box)

Catalogue

Name	Related Materials Bag	
Printing paper	A06 of a package (The printing paper and template paper are concentrated on the A06 paper accessories A total of 3 A4 single-sided)	
Side cabinet	Bag C+Printing paper	Page 3
radio	Bag C + Bag D+Printing paper	Page 3
Chair	Bag C	Page 3-4
fan	Bag C+Bag D+Printing paper	Page 4
bed	Bag C + Bag D+Printing paper	Page 4-5
bike	Bag C + Printing paper	Page 5-6
Tape	Printing paper	Page 6
desk	Bag C +Bag D+ Printing paper	Page 6-7
TV set	Bag B+Bag D+Bag E + Printing paper	Page 7
cabinet	Bag B +Bag D+ Bag E+Printing paper	Page 8
bag	Bag D+Bag H	Page 8
Hot kettle, hanger, curtains	Bag D +Bag E+Printing paper	Page 9
lamp	Bag D+Bag F+ Printing paper	Page 9
Outer frame	Bag A +Bag B+Bag E + Printing paper	Page 10-12
Installation of battery boxes	Bag F	Page 13


Material List Thumbnail (For Reference Only)

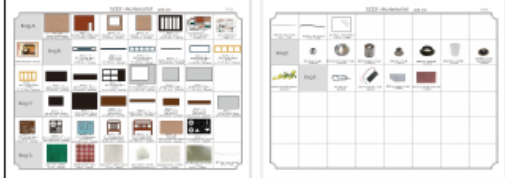

Printed paper and template paper thumbnail (For Reference Only)



Symbol description used

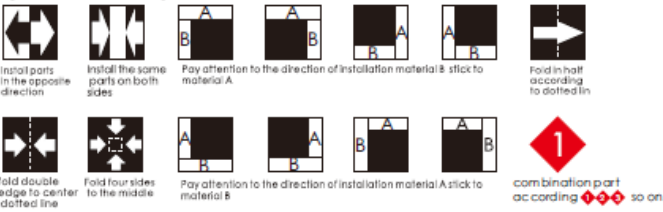

About the use of glue

Method for using glue:
 1. After applying the glue, let it dry for a few seconds before pasting.
 2. Fix it slightly with your hands, and finally put it aside to dry;

Tips:

When pasting the plane printing paper, a piece of waste bank card or telephone card can be used to wipe evenly after the glue is smeared on the wood board, and then the printing paper is pasted to squeeze out the air inside.

Types of glue:

White latex: Used for adhering soft materials, such as wood and paper.
 Alcoholic Glue: Used for adhering hard materials such as cloth, plastic, beads, wire, dust cover, etc.

Side cabinet

1. C01, C02, C02, A06-17, A06-20

2. C02, C02 (8mm)

3. C02

4. C01

5. A06-20, A06-20

6. A06-20

7. A06-17

8. A06-17

Radio

Please use C09-3 before making.

1. D08:3cm, C07, C09-3, A06-7, C07

2. A06-7, A06-7

3. C09-3

4. D08:3cm, 1.8cm, 1.2cm, As shown in the figure


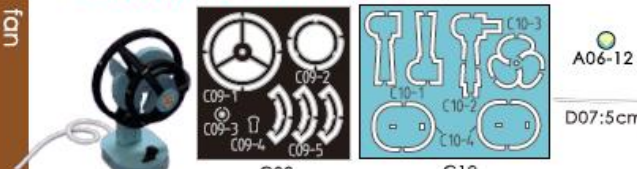

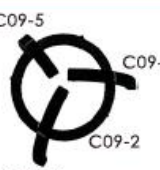

















5. A06-7

Chair

Please use the C08 to use it before making.

1. C08-1, C08-1, C08-2, C08-3, C08


2. C08-2, C08-1

2	 C08-4	3	 C08-1	4	 C08-3	<p>Please use C09 and C10 before making.</p>  <p>fan</p> <p>A06-12</p> <p>D07:5cm</p>					
1	 C09-2	2	 C09-5	3	 C10-2	4	 C10-1	5	 C10-4	6	 C10-4
7	 C09-1	8	 C10-3	9	 C10-1	10	 D07:5cm	11	 C09-1	12	 C09-4
<p>Before production, please cut D03 according to A06-32-2 and A06-32-3 templates.</p>											
<p>bed</p> 		 C11	 C12	 C13	 A06-31	 D04	 A06-10	 A06-32-2	 A06-32-3	 C13	 C11


4

2	 C12	3	 A06-31	4	 A06-31	5	 A06-31	6	 A06-32-3	7	 A06-32-3
8	 A06-32-2	9	 A06-32-2	10	 A06-31	11	 A06-32-2 0.2cm I 0.2cm Fold inward 0.2cm edge	12	 A06-32-2 Apply glue on the side and paste it as shown in the figure	13	 A06-32-2
14	 D04	15	 D04 Put in D04 and seal the gap well	16	 D02	17	 A06-10	18	 A06-10	19	 A06-10
20	 A06-10	21	 A06-10	22	 A06-10	23	 D02	<p>bike</p>  <p>C14</p> <p>A06-30</p>		1	 C14-9 C14-1

5

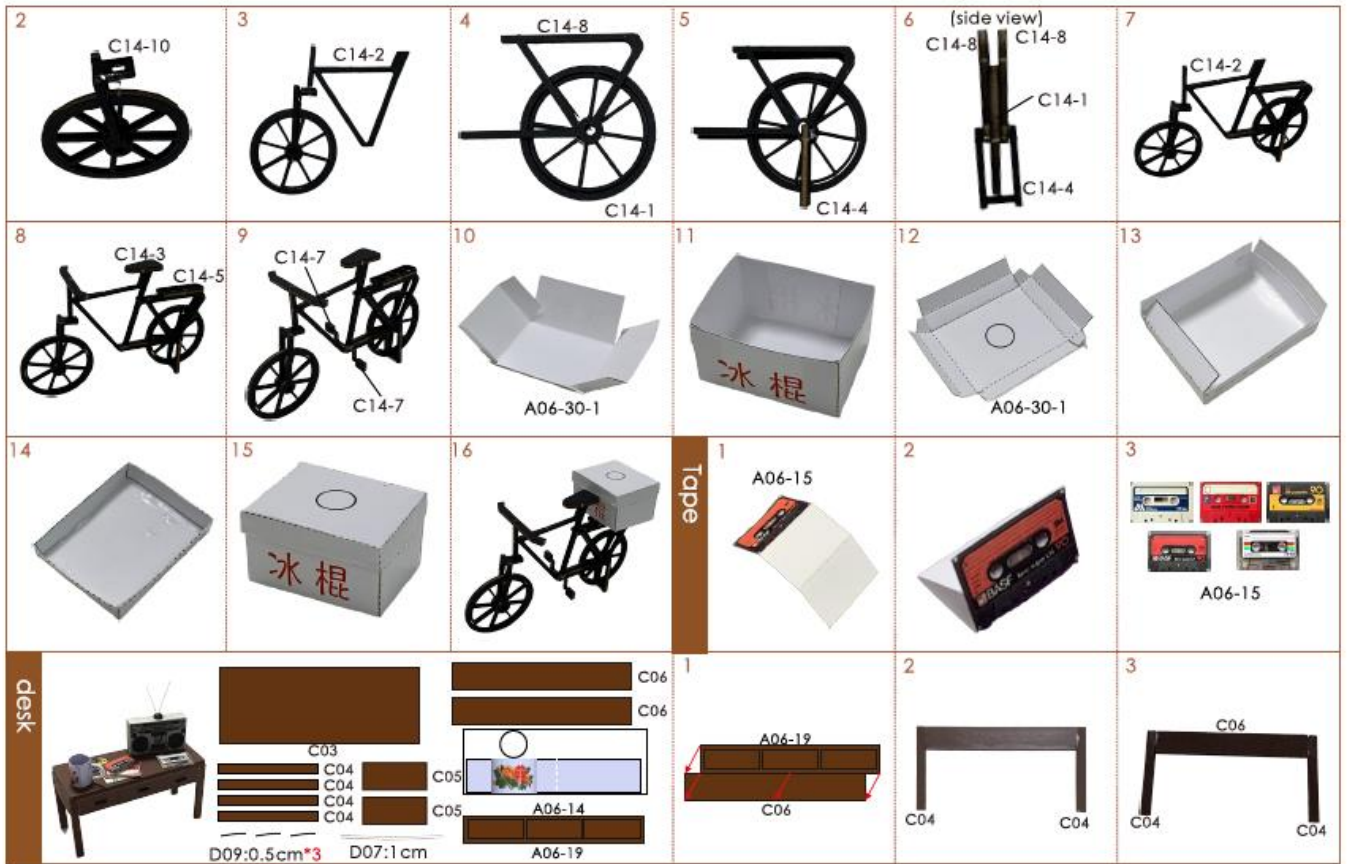

6

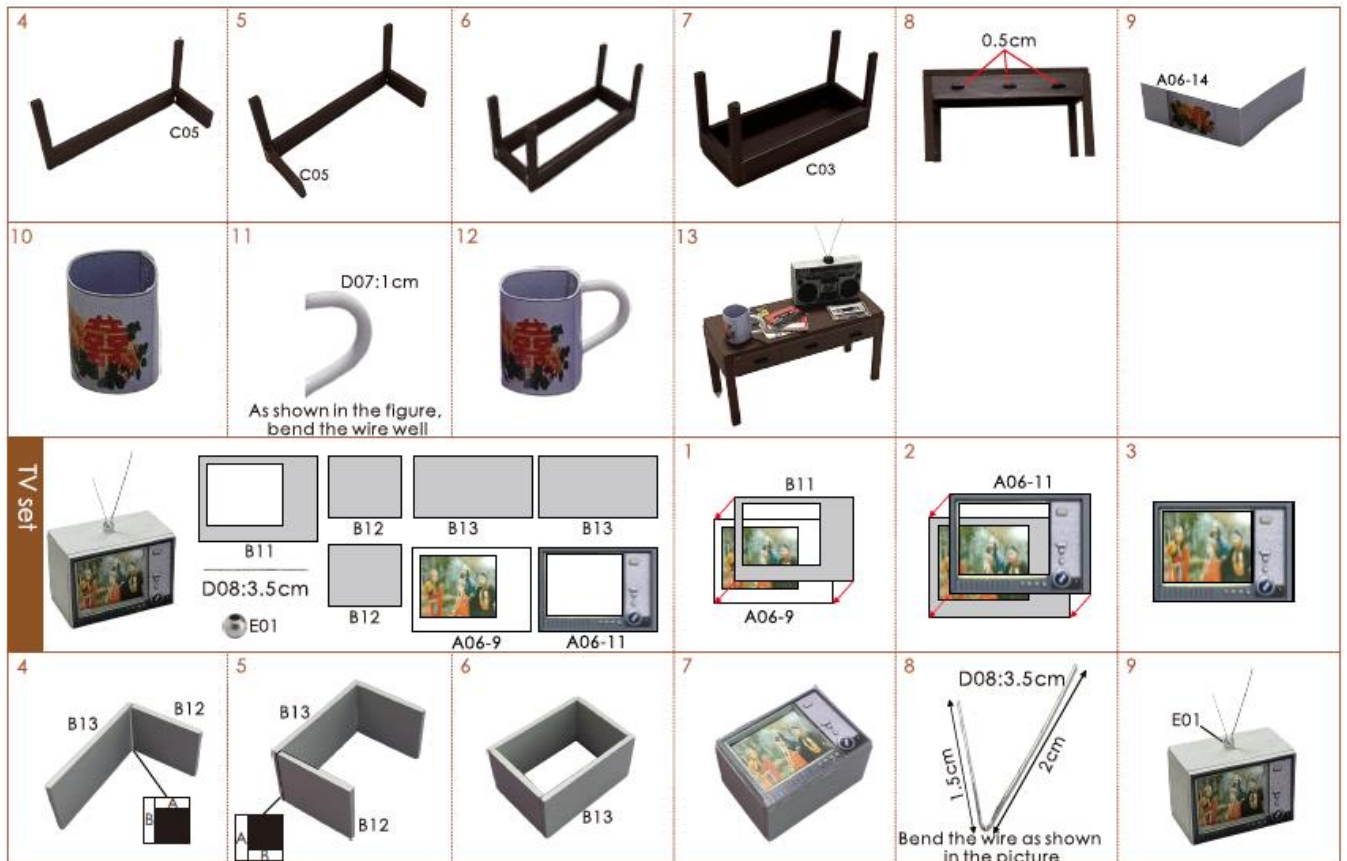

7

Before production, cut D10 4.2*6cm

cabinet

B08 A06-16 D10:4.2*6cm A06-28 A06-29

D09:3cm*2 E05 E06 E07

1 B10 D10:4.2*6cm

2 B09 B10

3 B10 B09

4 B10 B08

5 A06-29

6 As shown in the figure, fold the book

7 0.5cm 1.7cm 0.9cm D09:3cm (need 2 pieces)

8 E06 E05

9 E07

10 D09

11 A06-16

bog

Please cut D01 according to A06-34-2 and A06-34-3 templates before making.

A06-34-2 E04 A06-34-3

1 0.2cm 0.2cm A06-34-3

Fold inward 0.2cm edge

2 1.02cm 2cm

3 0.4cm E04 (back)

4 (front)

5 A06-34-2 fold

6 A06-34-2 Paste in the middle as shown in the figure

7 Paste the other end

8 As shown in the figure

8

Hot kettle

E04 E04 E03 E04 E04 E03

A06-18

1 A06-18

2 E04

3 E03

4 The same production and distribution complete another

Coat hanger

A06-32-1 E01 E01

D09:4.5cm*2 D08:7cm

1 D09:4.5cm 0.4cm 0.3cm

2 0.7cm 1cm

3 (need 2 pieces)

4 A06-32-1

curtain

Before production, cut D01 according to A06-34-1 and D01 cut two 3*7CMs from A06-34-1

A06-34-1 A06-34-1 D05:3*7cm*2

1 A06-34-1 A06-34-1

lamp

Before production, cut D04 according to A06-5 and A06-6

A06-5 A06-6 F01 F01

1 A06-5


2 F01

In the same way, do 2 chandeliers

2 As shown in the figure, Fengqin Fold

3 The other half of the same discount method is completed

9

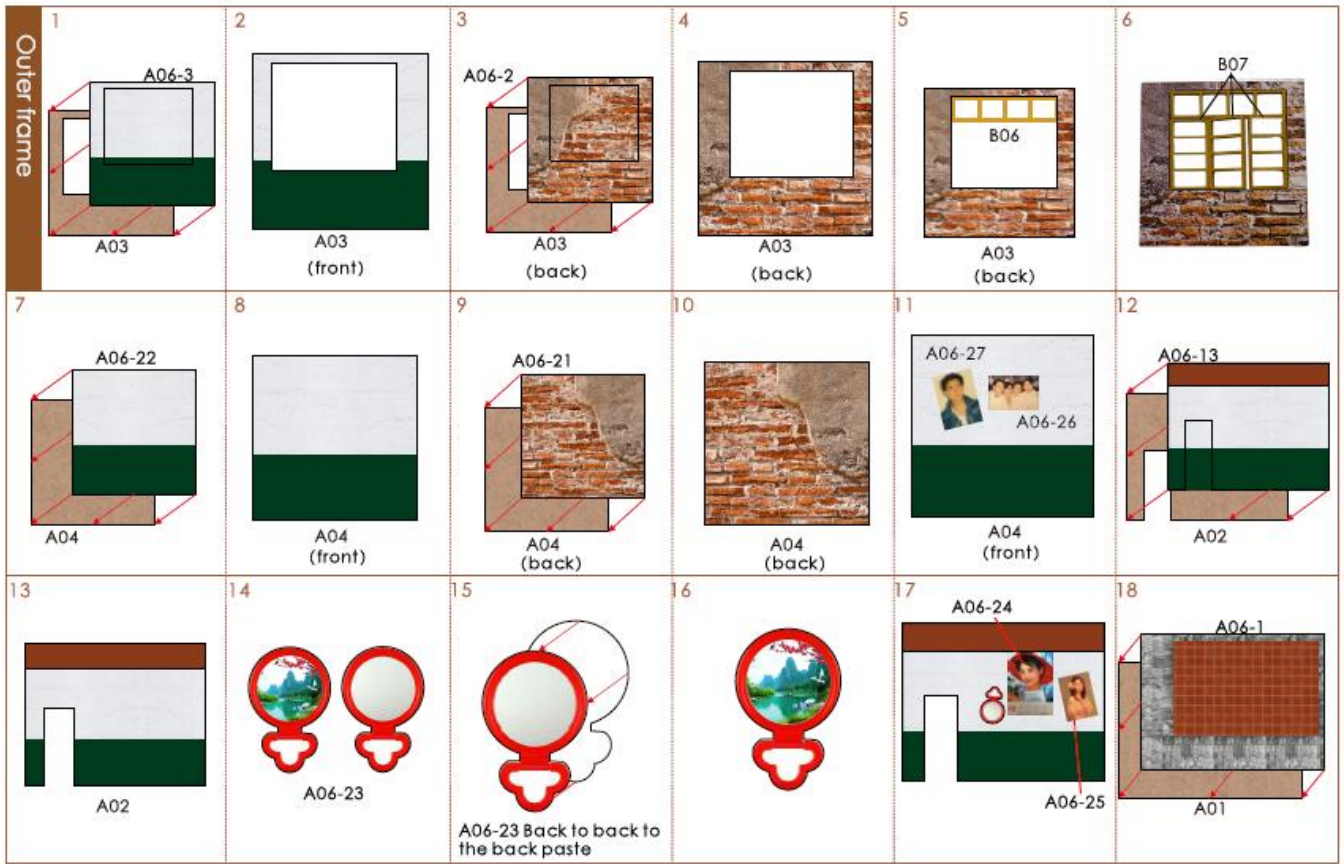

10



11



12

Installation Of Battery Box

Disclaimer: This wire cannot be plugged into the output socket

- Can use two AAA batteries
- The positive and negative poles of the battery are aligned and the battery is installed
- Non-rechargeable batteries, cannot be charged
- Rechargeable batteries can only be charged under adult supervision
- Rechargeable batteries should be removed from the toy before charging
- Different types of batteries or old and new batteries cannot be mixed
- Batteries should be inserted with correct polarity
- Exhausted batteries should be removed from the toy
- The power terminal must not be short-circuited

White LED light line

Gray LED light line

Battery box red line

Black line of battery box

Battery red wire and LED light gray line, battery box black wire Wire with the white wire of the LED light and wrap the exposed wires with F03.

Great, you finished it ~! Awesome!

13



After the assembly is completed, the manual should be retained