



Cosy Bathroom

\$2010 Instruction manual

NOTICE OF ASSEMBLE

Tips for assemblina

- 1. Because this product contains small parts, children need to use this product with an adult to avoid accidental ingestion and cause suffocation hazard. There are sharp objects in the product, be careful not to pierce people to avoid injury.
- 2. After all the materials are used in the required amount in the operation steps, put the remaining materials back into the original bag until the installation is completed. (Avoid losing materials during the installation process)
- 3. The unit of dimension marked in the step diagram is "cm".
- 4.Tips for making template paper: Put the template on the back of the material, fix it with some small double-sided tape, and then cut out the material to prevent the cloth or template from moving in the cutting process, or causing errors in the cut material. Or lead to insufficient materials.
- 5.According to the "Parts Rule Example" at the bottom of this page, refer to the parts on the part number drawing, find the actual product and compare it with the bill of materials, and then install it after confirming that it is correct. (Wooden parts only)
- 6.It is not advisable to apply too much alue, so as not to wait for a longer time to dry, and overflow will affect the effect of the finished product.
- 7. There are unavoidable small deviations in the color of wood, fabric, and beads of different batches, without notice, thanks for understanding.



Find the corresponding block number. use a knife in the connection point gently press, you can take out the wood

Use a knife to smooth out the burr.

Or use sandpaper to smooth

out the burn

Testing on LED function

Be sure to test the LED lights before making the lighting, note that the LED white wire to the negative, gray wire to the positive reference to the following figure operation test.



How to assemble the battery holder



1. Material and tools needed: - Battery holder, LED bulb. tape, screw driver and 2 pieces battery holder. AAA size battery(not provided)



2. Use screw driver and take the lid off from the



Insert the battery take notes on the polarity.



4. Connect the red wire to grey wire. Connect the black wire to white



5. Wrap the exposed wire with the tapes.



6. Place the box lid and fastness with screw driver.

Examples of parts rule:

A01: The parts are directly in the box: B01: The parts are in the B bag; C01: The parts are in the C bag, and so on (Note: The printing paper is displayed in the step A04-1: The printing paper is placed directly in the box, The part number is A04-1. In the step, the template paper A05-C01 is displayed, A05 is the template paper, C01 is the cutting template used for the corresponding material, C01-1, C01-2 are the part numbers for the parts, and the printing paper and template paper are directly placed in the packaging box.)

Contonto

Come	115	
Name	Materials package	
printing paper	A bag A04,A05(all of printing paper and template paper are in A04, A05;total 4pieces of A5 paper)	
cabinet	B bag + C bag + D bag + printing paper + template paper	page 3-4
storage cabinet	B bag +C bag+D bag+ printing paper+ template paper	page 4-5
door	B bag+D bag + template paper	page 5
shower	C bag+D bag	page 5-6
mirror	B bag +D bag+ template paper	page 6
carpet	D bag	page 6
clothes basket	C bag+D bag+printing paper+template paper	page 6-7
bathtub	B bag+C bag+D bag+printing paper+ template paper	page 7
window	B bag +D bag	page 7
outer frame	A bag +B bag+C bag+E bag+printing paper	page 8-10
battery holder	Ebag	page 10
dust cover	Z bag +E bag	page 11

Symbol description used


























according edge to center to the middle to dotted line













Method for using glue: 1. After applying the glue, let it

dry for a few seconds before pasting. 2. Fix it slightly with your hands, and finally put it aside to dry;

Tips:

When pasting the plane printing paper, a piece of waste bank card or telephone card can be used to wipe evenly after the glue is smeared on the wood board, and then the printing paper is pasted to squeeze out the air inside.

Thumbnail of material list (reference only)





Thumbnail of printing paper & template paper (reference only)












Types of glue:

White latex: Used for adhering soft materials, such as wood and paper. Alcoholic Glue: Used for adhering hard materials such as cloth, plastic, beads, wire, dust cover, etc.

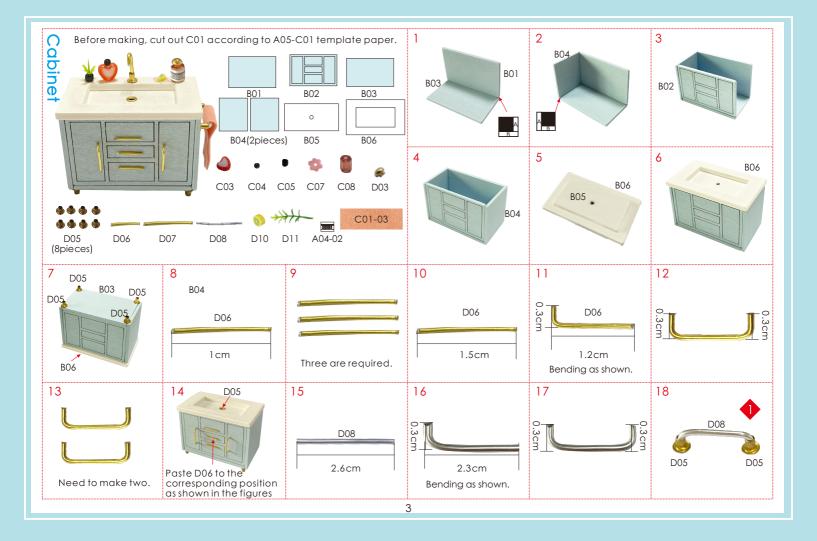





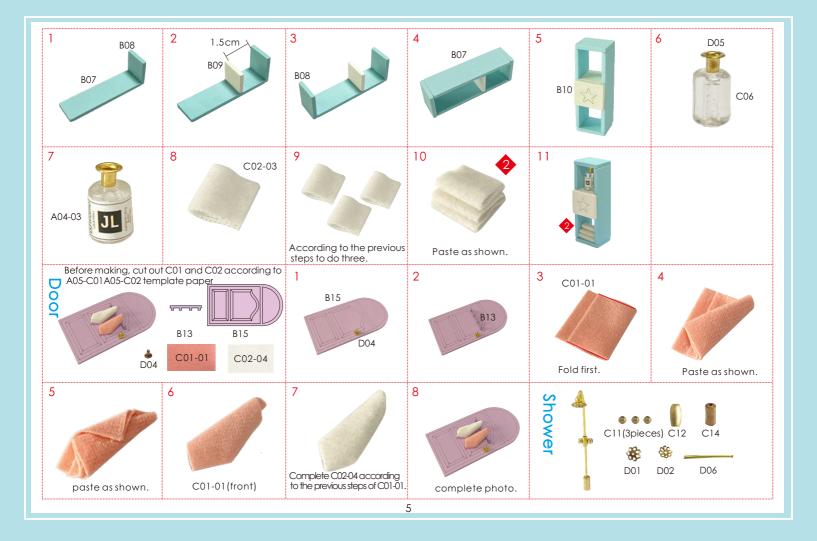


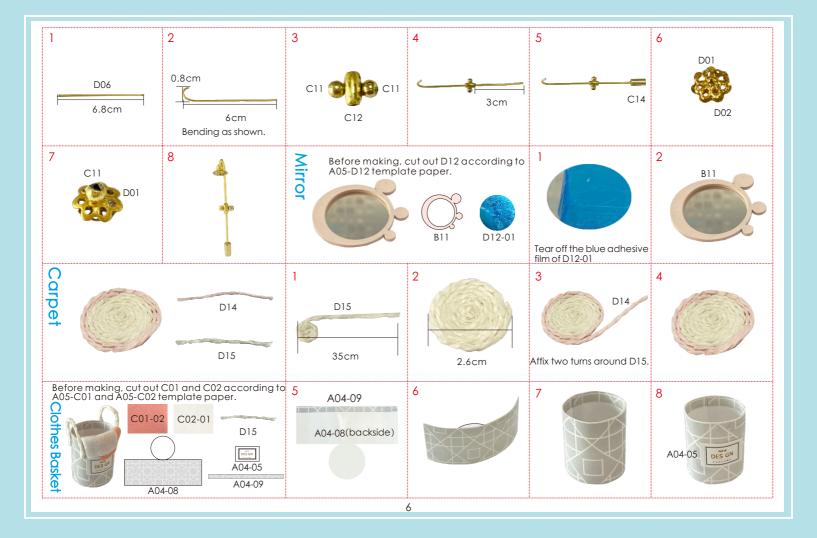




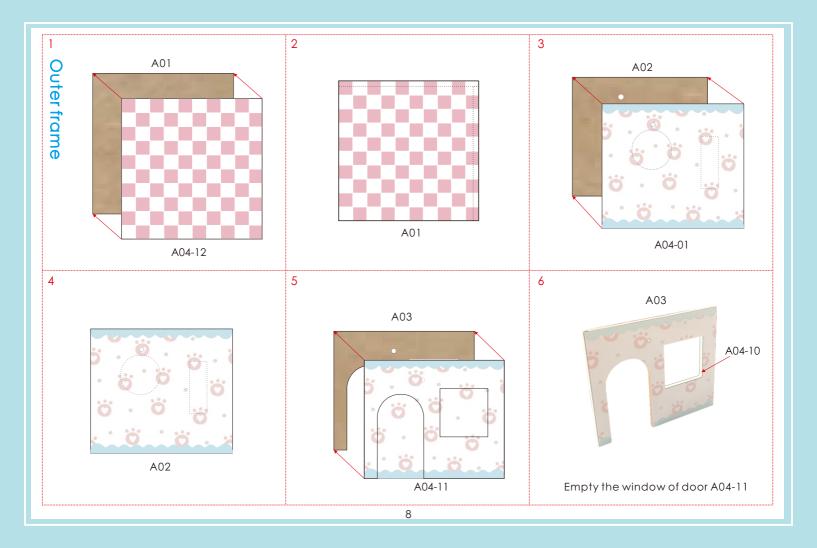

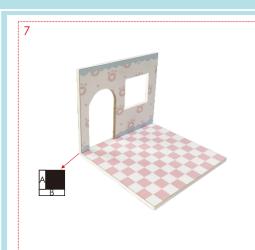

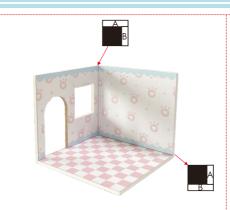



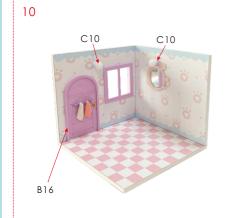







How to assemble the battery holder

Statement: the lamp wires cannot be inserted into the output socket.

- - Can use 2*AAA batteries
- Please notice the place of anode
- and cathode when pit in the batteries

 Rechargeable batteries are not blunt electricity
- Rechargeable batteries can only be charged under adult supervision
- Rechargeable batteries should be removed from the toy before charging
- - Different types of batteries cannot mix; Do not mix new batteries in use with semi-used batteries.
- - Run out of battery should be removed from the toy
- - The power shall not be short circuit

2



Tie the lamp wires together with E03 adhesive tape.



cut all the LED light wires to the same length peel off the film of the LED light wires and then wrap it together in the same color.



Twist the following wire together:
(I) BLACK wire from the battery box with the WHITE wire from LED bulb.
(II) RED wire from the battery box with the GREY wire from LED bulb.

5



Wrap the bare wires with adhesive tape E03. Make sure the LED lights are on.

Installation of dust cover

Dust cover




scale:1:6 13*13*0.13cm(1piece)



scale:1:6 Z01 plexiglass(transparent) Z02 plexiglass(transparent) 12.5*11*0.13cm(1piece)



scale:1:6 Z03 plexiglass(transparent) 12.37*11*0.13cm(1piece)



stick Z02 and Z03 on Z01

leaving one side of kraft paper

Ripped one side of kraft paper,

Take out the plexiglass and tear off the kraft paper with text on each piece of plexialass



3


The kraft paper that has been ripped off faces inwards, and the kraft paper that has not been ripped out faces out wards. Place Z01 to the right at a right angle of 90 degrees to ZO2



Use E03 to fix the junction of two pieces of plexiglass, (use transparent tape to replace E03)



The junction of every two pieces of plexiglass needs to be fixed with E03 (to prevent the plexiglass falling off)

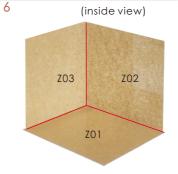

stick appropriate amount of glue to the interface of the two pieces of glass and scrape it slightly to make the glue penetrate into the junction of the two pieces of glass (the red line is theplexiglass interface)





Leave it for 1 hour. After the glue dries out, tear off a layer of kraft paper outside the plexialass.



Photo of Dust proof cover





Great!It had finished! It can be combined with other designs, would you like to see them?



FULL DISPLAY OF NINE SERIES



















(Roof need to purchased separately) Photos with roof



Two-in-one



(Photos for reference, can be combined in different by yourself)



(Photos for reference, can be combined in different by yourself)

Four-in-one



(Photos for reference, can be combined in different by yourself)

Four-in-one



(Photos for reference, can be combined in different by yourself)

Six-in-one



Nine-in-one



(Photos for reference, can be combined in different by yourself) (Photos for reference, can be combined in different by yourself)

The instruction manual should be keep, after assembled