

S2302

恬梦卧室



Dream Bedroom
S2302制作使用说明书

制作前的注意事项

安装提醒

- 1.因本产品内含有细小零件，儿童需在成人陪同下使用本产品，以免发生误食，造成窒息危险；内有尖端物小心使用请勿刺人，以免造成伤害。
- 2.所有材料在操作步骤中取用所需用量后，将剩余的材料放回原袋中，直至安装完毕。（避免在安装过程中丢失物料）
- 3.步骤图中所标注的尺寸单位均为“cm”。
- 4.模板纸制作技巧提示：将模板整个放在材料背面，用一些小双面胶固定，然后将材料剪出，以免布料或者模板在裁剪的过程中走位，或导致剪出来的材料有误差，或导致材料不够。
- 5.根据此页最下方的“零件规则举例”，参照零件编号图纸上的零件，找到实物后与物料清单对照，确认无误后进行安装。（仅限木质零件）
- 6.胶水不宜涂抹过多，以免待干时间更长，溢胶更会影响成品的效果。
- 7.不同批次的木料、布料、小珠颜色有不可避免的小偏差，不另行通知，请谅解。

使用的符号说明



零件规则举例

A01:零件直接在包装盒中;B01:零件在B包装袋中;C01:零件在C包装袋中,以此类推。

拼装木使用小技巧



找到对应的木块编号,使用小刀在连接点轻轻按压,即可把木粒取出



使用小刀把毛刺修平



或者使用磨砂纸把毛刺磨平

LED灯注意事项

请务必在制作灯饰前测试LED灯是否亮,注意LED白线接负极,灰线接正极参考下图操作测试。



物料清单缩略图(仅供参考)




S2302-印刷纸

—— 实线为裁剪线

----- 虚线为折痕线

请将此页剪下后使用

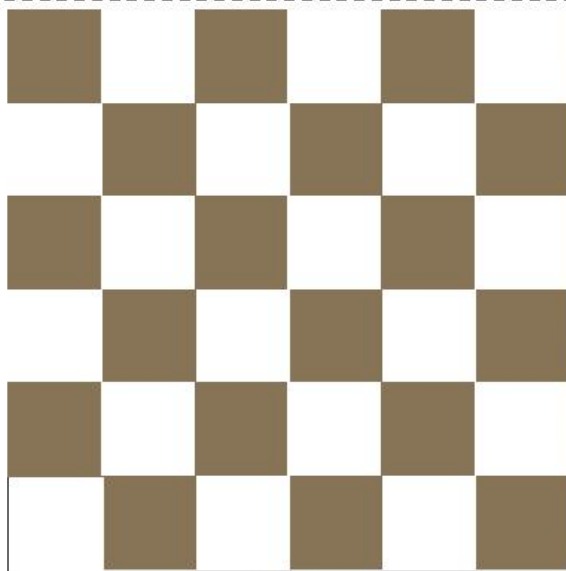

A10-1



A10-2




A10-3



A10-4



A10-5

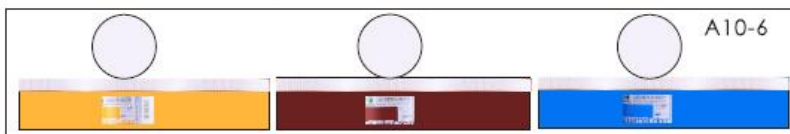

A10-6



A10-7




A10-8

2



A10-9

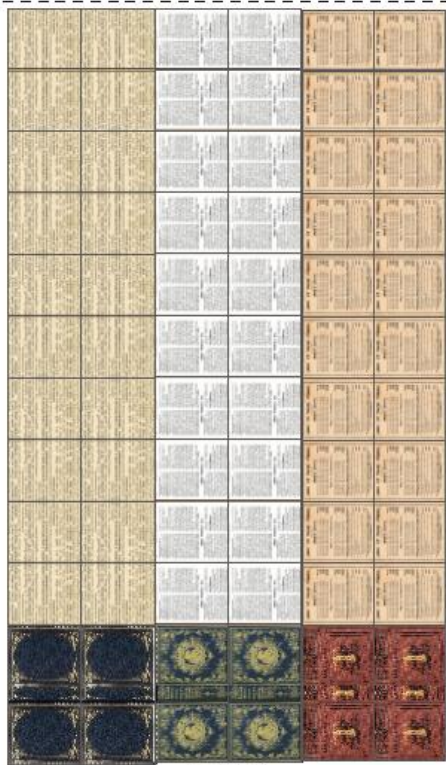

A10-10



A10-11




A10-12



A10-13




A10-14

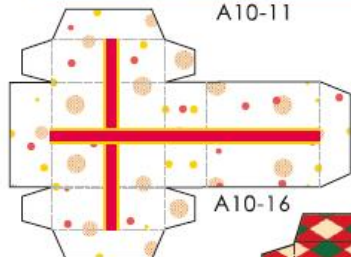


A10-16



A10-15

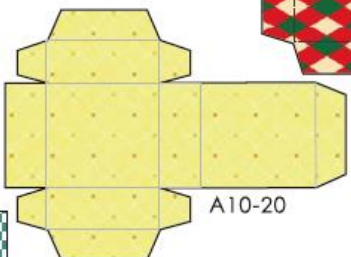

A10-20

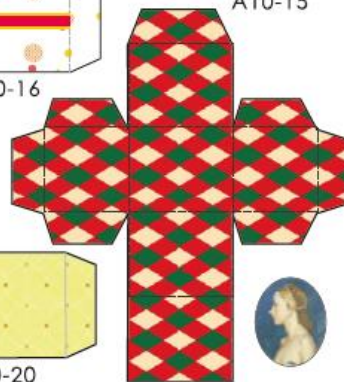

A10-21



A10-22



A10-17



A10-18



A10-19

4




S2302-模版纸

—— 实线为裁剪线


----- 虚线为折痕线

请将此页剪下后使用


D04 3*3 cm(1/1)

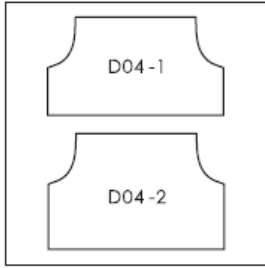


D05 3*2 cm(1/1)

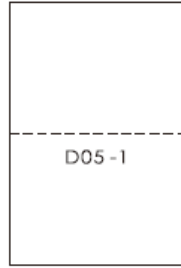


D02 6*6 cm(1/1)

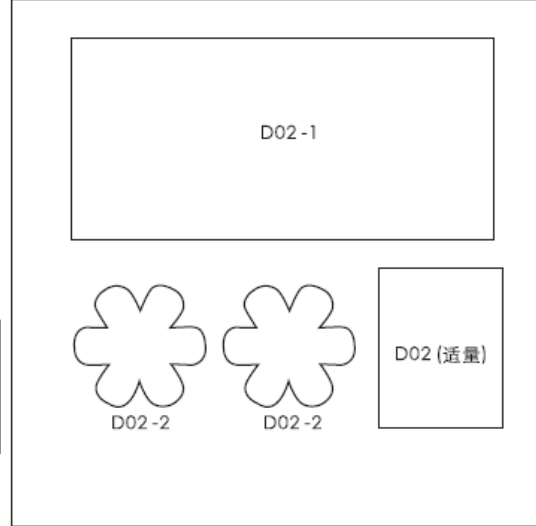

D06 6*1.5 cm(1/1)

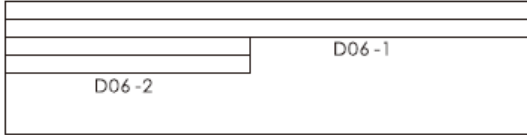

D07 3.5*2 cm(1/1)

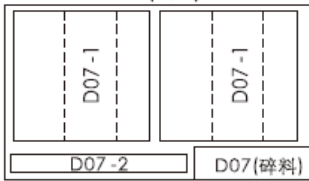

D03 2*1 cm(1/1)



礼物盒

制作前, 先把D06按D06-1, D06-2模板纸剪出

1. D06-2 重合粘贴0.5cm

2. 如图粘贴, 需完成2个

3. 如图组装粘贴

4. A10-21 先把折痕折出

5. A10-21 整理造型粘贴

6. 整理造型粘贴

7. D06-1 如图粘贴

8. 如图粘贴

9. D06-1 如图粘贴

10. 如图粘贴

11. 如图组装粘贴

12. A10-16 A10-20 折纸盒方法相同, 完成A10-16和A10-20

10

柜子

1. A10-10 (其中一本) 如图按折痕折出书本

2. A10-10 完成一本

3. 完成所有的A10-10

4. B07 切出2.1cm部分, 需切出2根备用

5. B14 两块B14粘在一起

6. B08 B14 如图把B08粘在B14上面, 有纹路一面朝外

7. B08 如图把B08粘在B14上面

8. 站立的效果

9. B11 B10 如图粘贴

10. B09 B11 如图居中粘贴

11. B10 如图粘贴

11

12 4 后面平齐粘贴	13 B07 切口向下粘贴	14 B07 切口向下粘贴	15 A10-10 如图放置粘贴
16 B12 如图放置粘贴	17 B14 如图粘贴	18 B13 如图粘贴	19 B14 如图粘贴
20 A10-19 A10-16	挂画 C02 C03 C04 A10-13 A10-14 A10-12 E04		1 A10-22 E04 如图粘贴
3 A10-13 C02 如图粘贴	4 完成	5 A10-14 C03 如图粘贴	6 完成
		7 A10-12 C04 如图粘贴	8 完成

12

制作前, 先把D07按D07-2模板纸剪出

小配件

 C12 A10-9 D09(1.2cm)*2	 E01 E02 E03 E03	 D08 (0.5cm) C13 D07-2	 D10(0.3cm) D10(1.5cm) D10(1.5cm)
 D10(1.5cm) 0.2cm 0.2cm 如图弯曲, 需完成2个	 C12 D10(1.5cm) (背面)	 A10-9 (正面) 如图粘贴	 D10(1.5cm) 0.6cm 如图弯曲
 E03 (闹钟)如图粘贴	 E01 E02 如图粘贴	 D10(0.3cm) D08 (0.5cm) D08切出0.5cm, 如图粘贴	 D10(1.5cm) (烛台)
 A10-6 整理造型	 如图粘贴	 如图粘贴	 (颜料) 完成三个A10-6

13

<p>14</p> <p>D09 (1.2cm) 1.5cm C13</p> <p>把两个D09粘在C13上</p>	<p>15</p> <p>D09 (1.2cm)</p> <p>整理D09的毛边</p>	<p>16</p> <p>D07-2</p> <p>如图粘贴</p>	<p>17</p> <p>(画笔) 如图粘贴</p>
<p>制作前, 先把D07按D07-1模板纸剪出</p>			
<p>画架</p>		<p>1</p> <p>D07-1</p> <p>按模版提示把折痕折出</p>	<p>2</p> <p>D07-1</p> <p>按模版提示把重合部分粘贴</p>
		<p>3</p> <p>D07-1</p> <p>再粘住一端,用力挤压使另一端鼓起</p>	<p>4</p> <p>D07(碎料)</p> <p>把鼓起开口部分粘在D07(碎料)上,再修剪</p>
<p>5</p> <p>修剪后的效果</p>	<p>6</p> <p>A10-18</p> <p>在中间贴上A10-18</p>	<p>7</p> <p>A10-18</p> <p>A10-18粘贴完成</p>	<p>8</p> <p>E05</p> <p>粘贴</p>

<p>9</p> <p>A10-17 E06</p> <p>另外一个配色也是相同的方法完成, 备用</p>	<p>10</p> <p>C07 C06</p> <p>如图粘贴</p>	<p>11</p> <p>C05</p> <p>0.5cm</p> <p>如图粘贴</p>	<p>12</p> <p>C08</p> <p>如图粘贴</p>
<p>13</p> <p>C05</p> <p>如图粘贴</p>	<p>14</p> <p>C10</p> <p>如图粘贴</p>	<p>15</p> <p>C09</p> <p>如图粘贴</p>	
<p>16</p> <p>C11</p> <p>A10-3</p> <p>如图粘贴</p>	<p>17</p> <p>C11</p> <p>A10-3</p> <p>如图粘贴</p>	<p>18</p> <p>如图组装, 剩余一个备用</p>	

备忘录墙

Materials: C01 (Frame), A10-7 (Wood-grain board), A10-4 (Memo board), A10-5 (Wood-grain board), D11 (0.5cm) (Thin board).

1. A10-7 and C01 are glued together. **粘贴**

2. The result after gluing. **粘贴后的效果**

3. A10-4 is fully glued, position is free to choose. **把A10-4全部粘贴, 位置可自由发挥**

4. A10-5 is glued. **粘贴**

5. D11 is glued on top. **粘贴D11在上面**

地板

Materials: A04 (Floor board), A10-2 (Wood-grain board), A10-8 (Wood-grain board), A04-2, A04-3, A04-4, A04-5, A04-1.

1. A04-2 and A04-3 are glued. **粘贴**

2. A04-4 is glued. **粘贴**

3. A04-5 is glued. **粘贴**

4. A04-1 is glued. **粘贴后的效果**

16

5. A10-2 is glued. **如图粘贴A10-2**

6. A10-8 is wrapped and glued. **如图包裹粘贴**

7. Gluing is complete. **粘贴完成**

铭牌

1. A09 is glued to A10-15. **粘贴**

2. (铭牌)

外框

1. A03 is disassembled. **拆分A03**



2. Assembly and gluing. **如图组装粘贴**



3. Assembly and gluing. **如图组装粘贴**

4. Assembly and gluing. **如图组装粘贴**

5. Assembly and gluing. **如图组装粘贴**

17

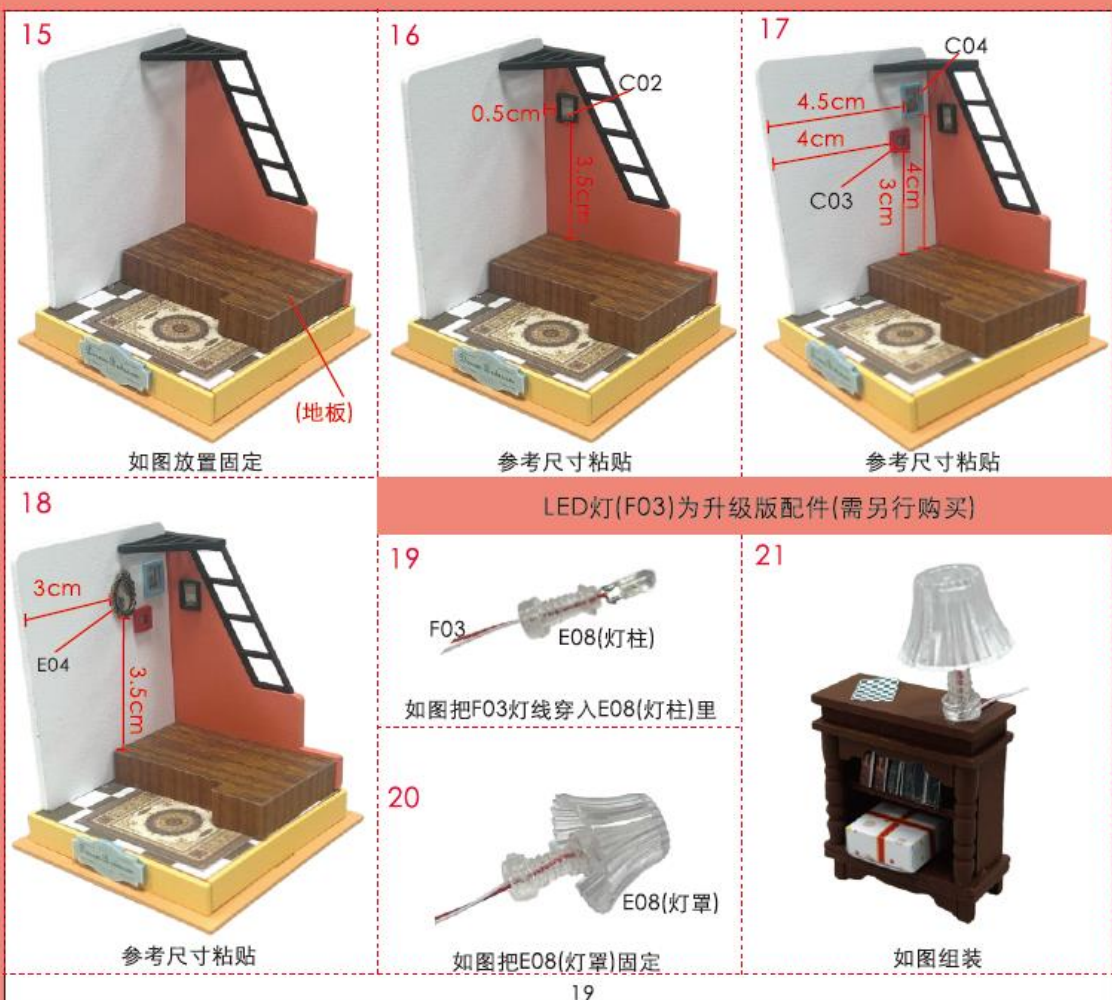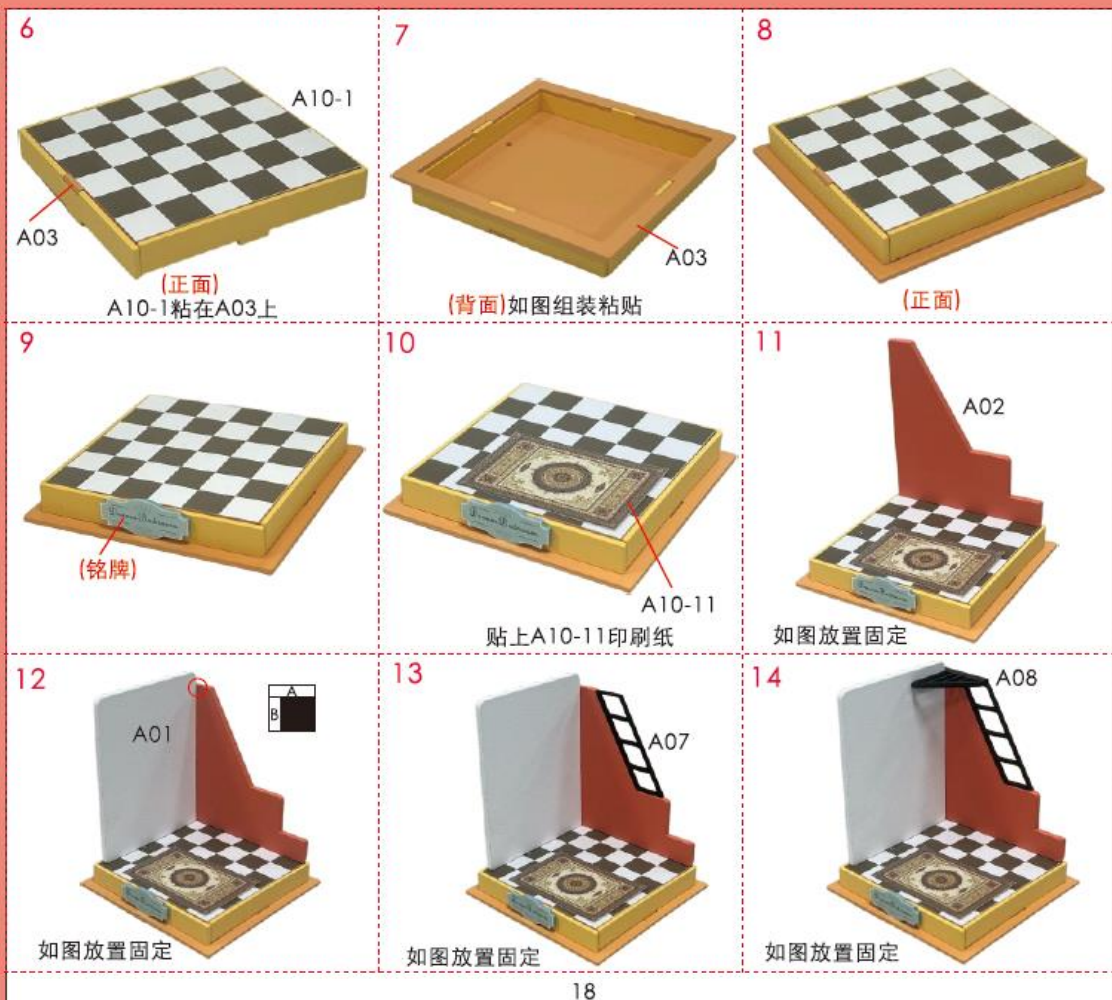

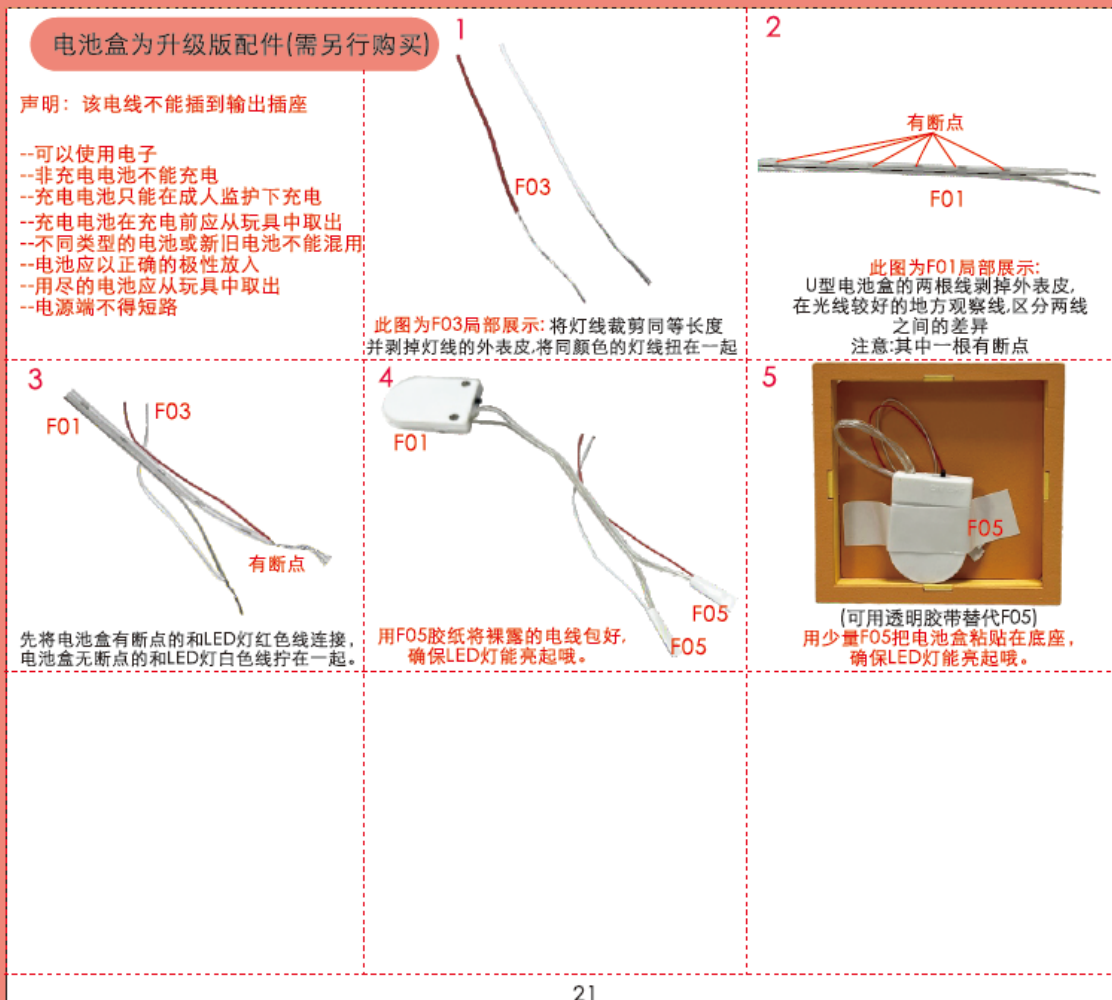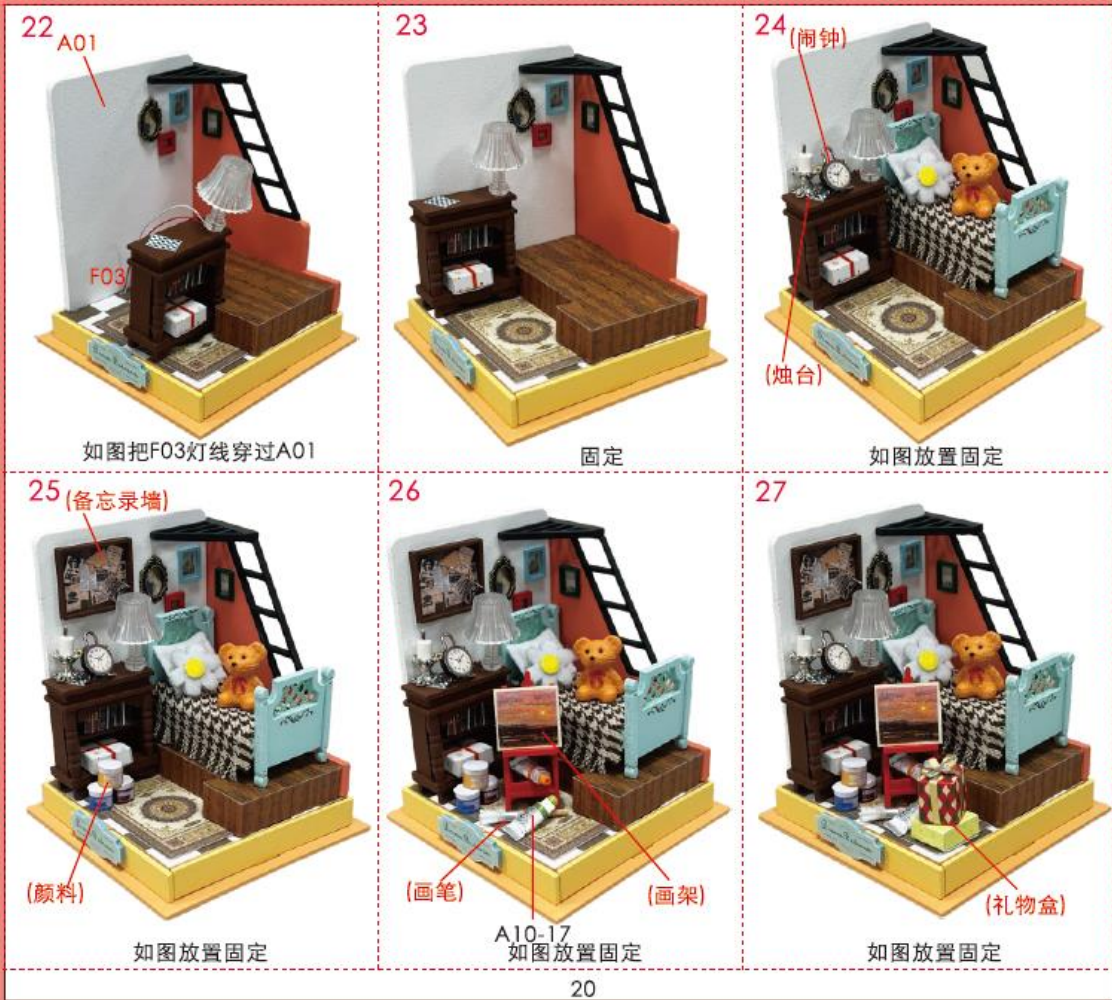

防尘罩的制作(选购:升级版配件,需要另行购买)




比例:1:4
Z01有机玻璃(透明)
7.5*7.5*0.13cm(1块)




比例:1:4
Z02有机玻璃(透明)
9.5*7.24*0.13cm(2块)



比例:1:4
Z03有机玻璃(透明)
9.5*7.5*0.13cm(2块)

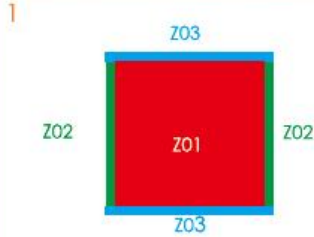


将Z02和Z03粘贴在Z01上

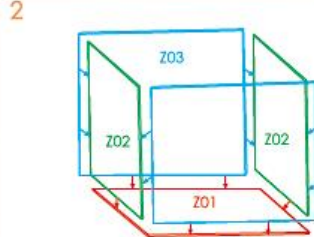


将五块有机玻璃防尘罩如图粘贴



(撕一面牛皮纸,留一面牛皮纸)
取出有机玻璃,将每一块有机玻璃有文字的那面牛皮纸都撕掉

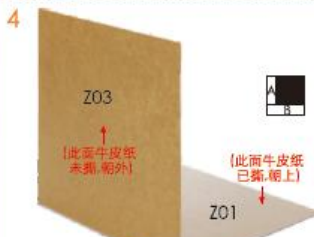

牛皮纸已撕掉的那一面朝内,牛皮纸未撕掉的那一面朝外。

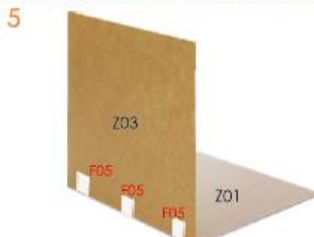


用F05来固定两块有机玻璃的交接处,(可用透明胶带替代F05)



每两块有机玻璃的交接处都需要用F05固定(防止有机玻璃脱落)

22

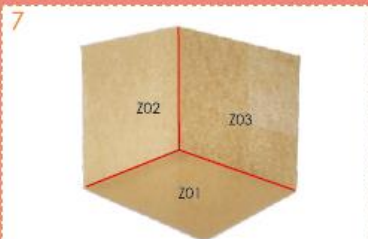

在两块玻璃的接口处涂上适量胶水并稍微用力刮一下使胶水渗透进两块玻璃连接处(画红线的地方为有机玻璃接口)




固定(防止有机玻璃脱落)
每两块有机玻璃的交接处都需要用F05



在两块玻璃的接口处涂上适量胶水并稍微用力刮一下使胶水渗透进两块玻璃连接处(画红线的地方为有机玻璃接口)



每两块有机玻璃的交接处都需要用F05固定(防止有机玻璃脱落)

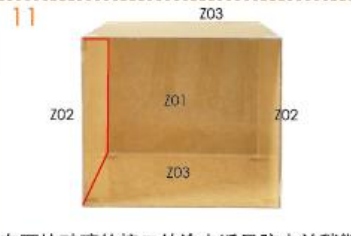

在两块玻璃的接口处涂上适量胶水并稍微用力刮一下使胶水渗透进两块玻璃连接处(画红线的地方为有机玻璃接口)



共需要将防尘罩8个接口涂上胶水



放置1个小时,待胶水干透后,再将有机玻璃外面一层牛皮纸撕掉。

拼装完成后, 应把说明书予以保留

23