



Adjustable Roof Mount for Standard Size Weathervanes Assembly Instructions

Your Package Includes

- 2 - Roof Mount Legs
- 1 - Roof Mount Tube
- 8 - 2" Screws


Tools Needed

- Silicon Caulk
- Caulking Gun
- Drill & 3/32" Bit
- Phillips Head Screwdriver
- Adjustable Wrench
- Small Level

CAUTION:


Working on top of a roof requires extreme caution. If you are not qualified to do this installation, we recommend you consult a professional builder.

1. Using level, check that the Roof Mount Tube is vertical.
2. Mark holes with marker.
3. Drill 3/32" holes using Roof Mount Legs as template.
4. Fill holes with caulk and drive in 2" screws supplied.
5. Insert Weathervane Rod, turning "N" towards North.
6. Tighten Set Screws.

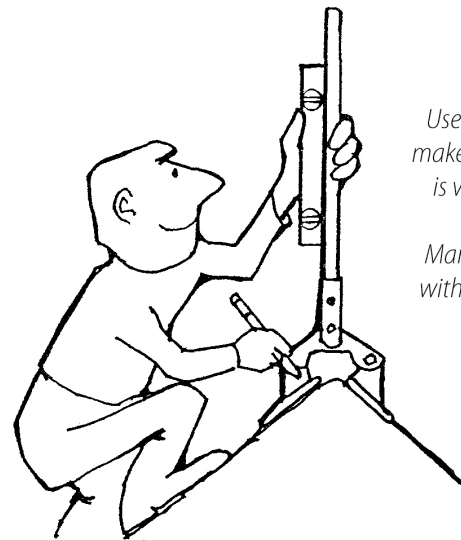


Use level to make sure rod is vertical.

Mark holes with marker.

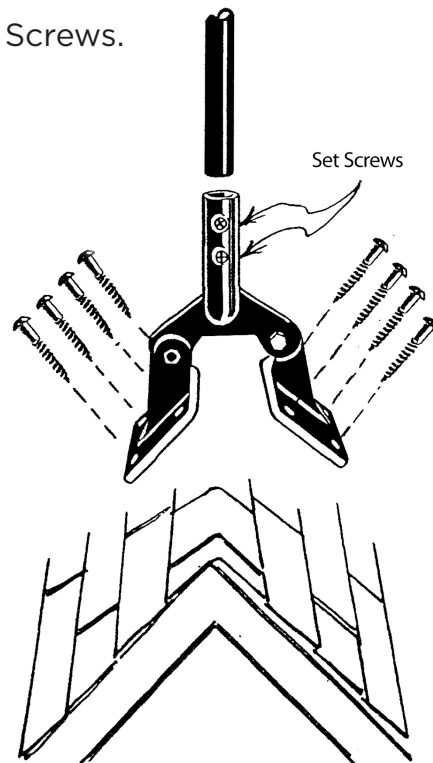

Set Screws

Adjusted to Pitch

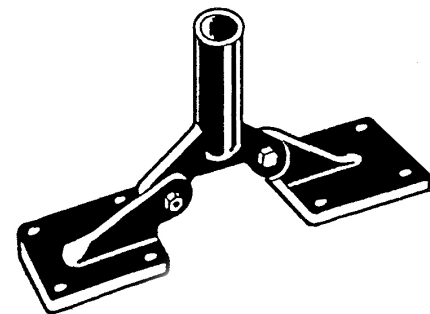

Flat Position

TELL US WHAT YOU THINK

Your opinion matters! Please review us on the site you purchased your Good Directions product. Your online review and feedback will help us be the best we can be!

Have a question? Let us help. help@gooddirections.com

