


Bowaters

MODELS

specialising in distinctive 16mm models

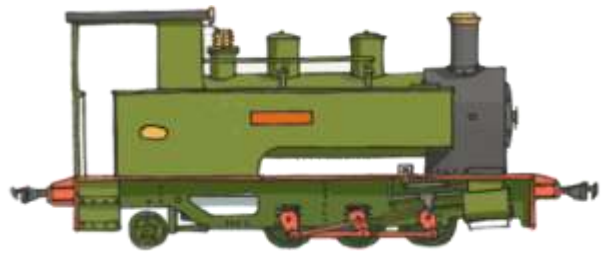

Bowaters Models – BM4 Series Instructions

Ffestiniog Railway Superbarn Coaches and Welsh Highland

Railway Coaches



Requires

- Peco L&B Coach Bogies
- Glazing

Required Tools

- Fine Sandpaper/Emery paper or boards
- Small Files
- PVA Glue
- Super Glue
- Sharp Craft Knife

About the Kit

The kit is a multimedia kit comprising of a set of laser cut wooden parts and 3D printed sections.

Chassis Fitting

This kit is designed for the Peco Lynton and Barnstaple Coach Bogies with integrated couplings. These are assembled as per the instructions.

Instruction notes


With these instructions, there are images which show various stages of the construction of one of the kits. They are of the digital Test build for coach 108 which may not be representative of the kit you have brought. They are for reference purposes only.

Painting


For painting, it is recommended you refer to prototype images to ensure the models are in the condition that you model.

Please Turn over


Please read though these instructions before beginning to assemble your
kit

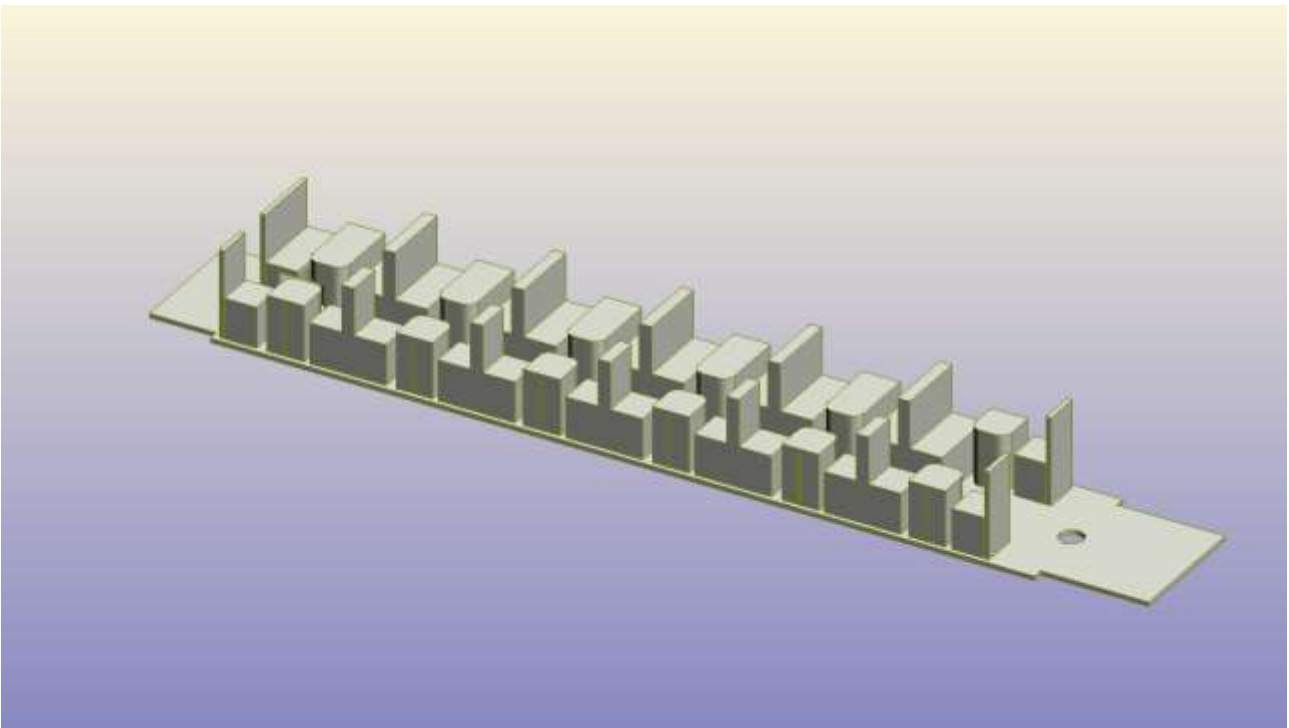


Start by painting the interior how you wish and fitting any passengers. Next, glue into place the inner coach side. This is the side any glazing needs to be applied too.

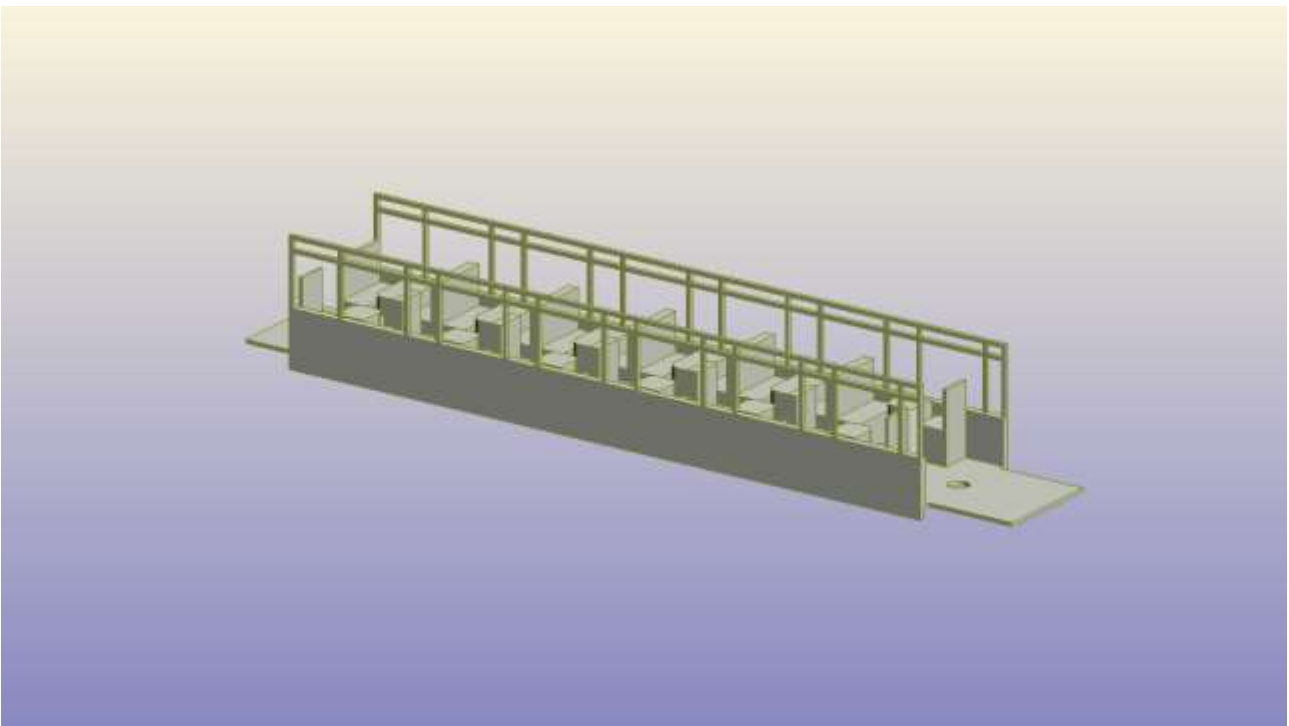


Start by painting the interior how you wish and fitting any passengers. Next, glue into place the inner coach side. This is the side any glazing needs to be applied too. Then glue into place the outer sides making sure the window pillars line up with the inner side.

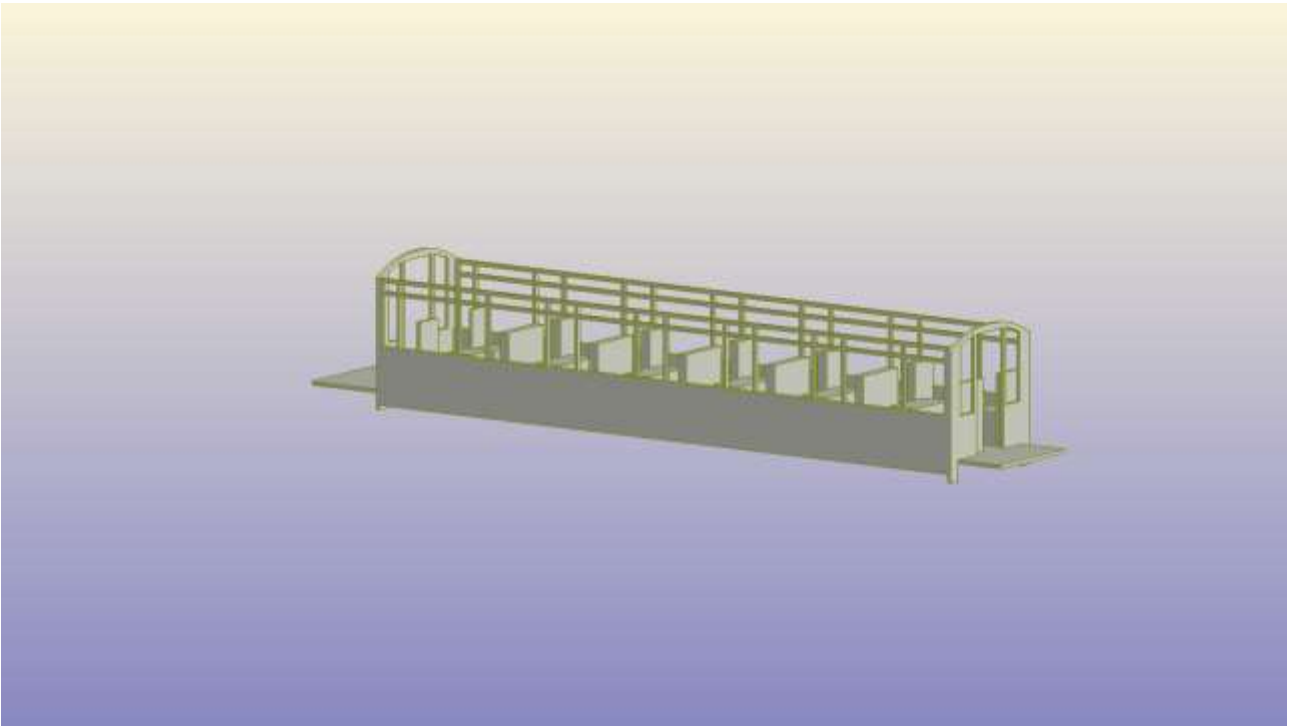


Now glue into place the passenger compartment ends.

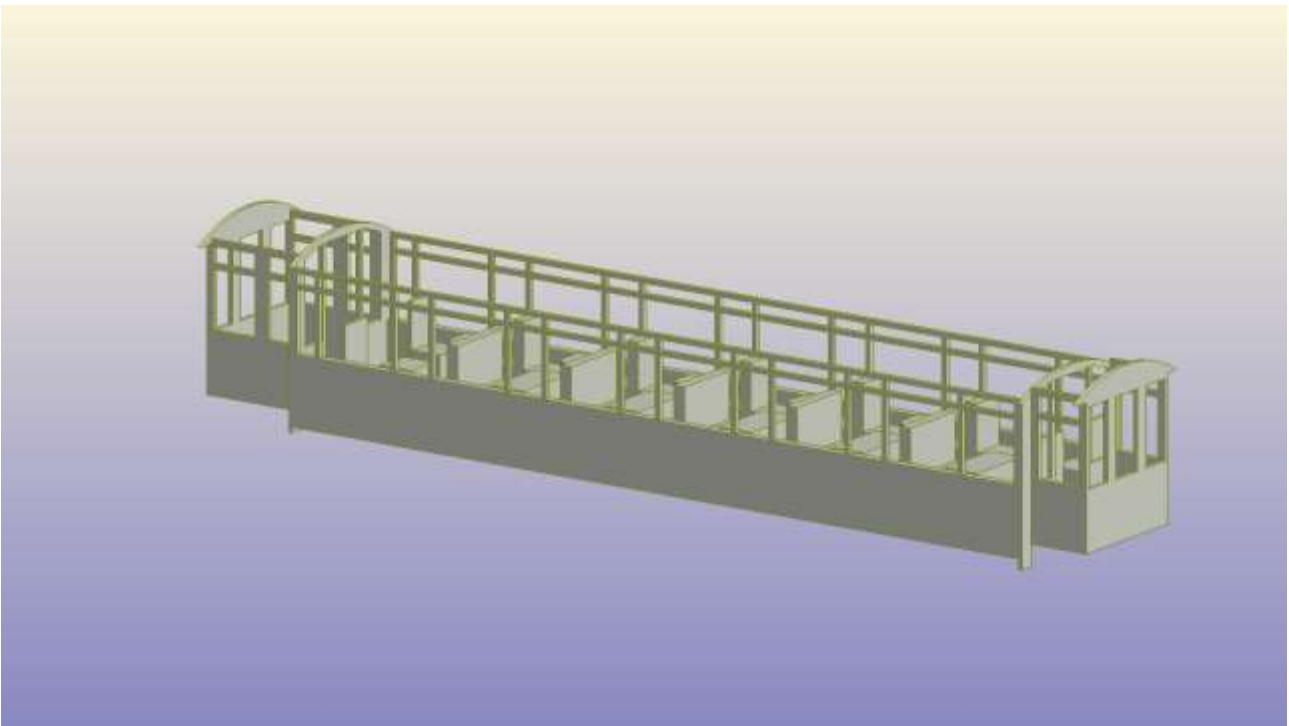


Now glue into place the coach ends and doors. The double doors go into place with the smaller door closest to the passenger compartment.

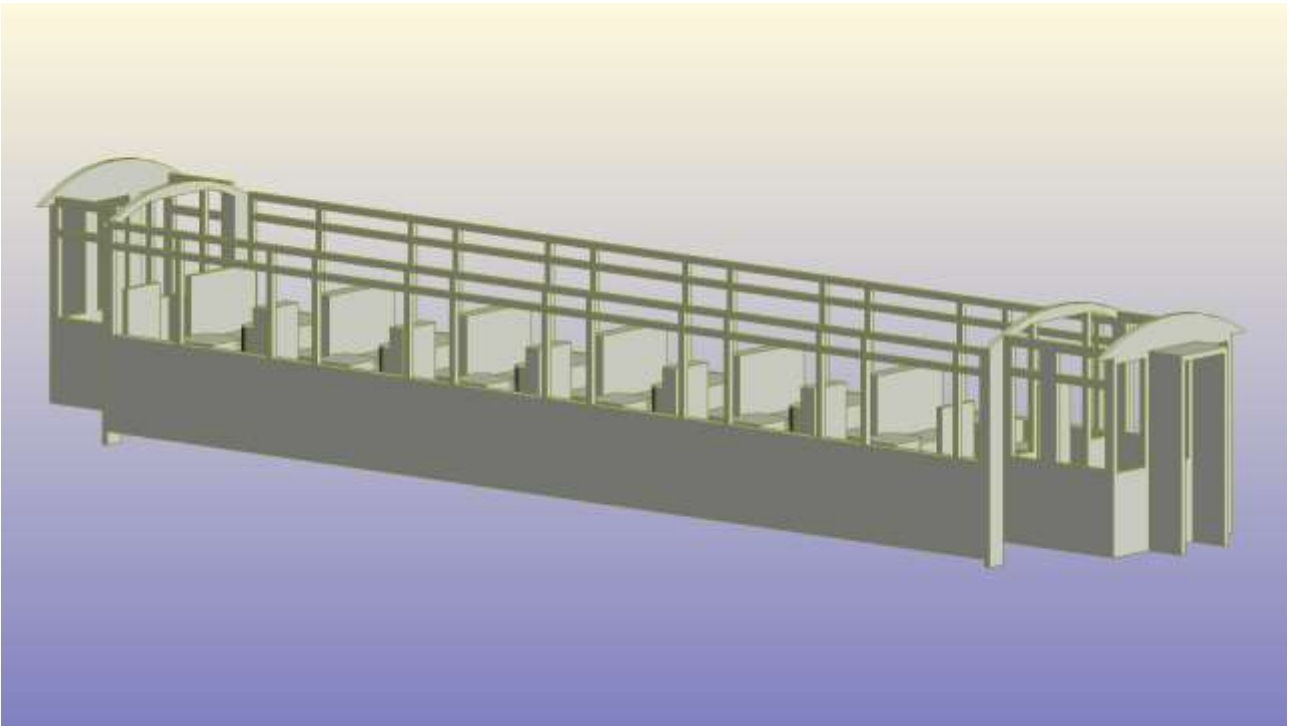

Now, glue into place the corridor connectors. There are 2 versions, thin and thick. If using the standard couplings, the 2 thicker ones are recommended. If you want close coupling, we recommend the Peco Slate wagon couplings along with a pairing of one of each corridor connector types when coupling 2 coaches together.

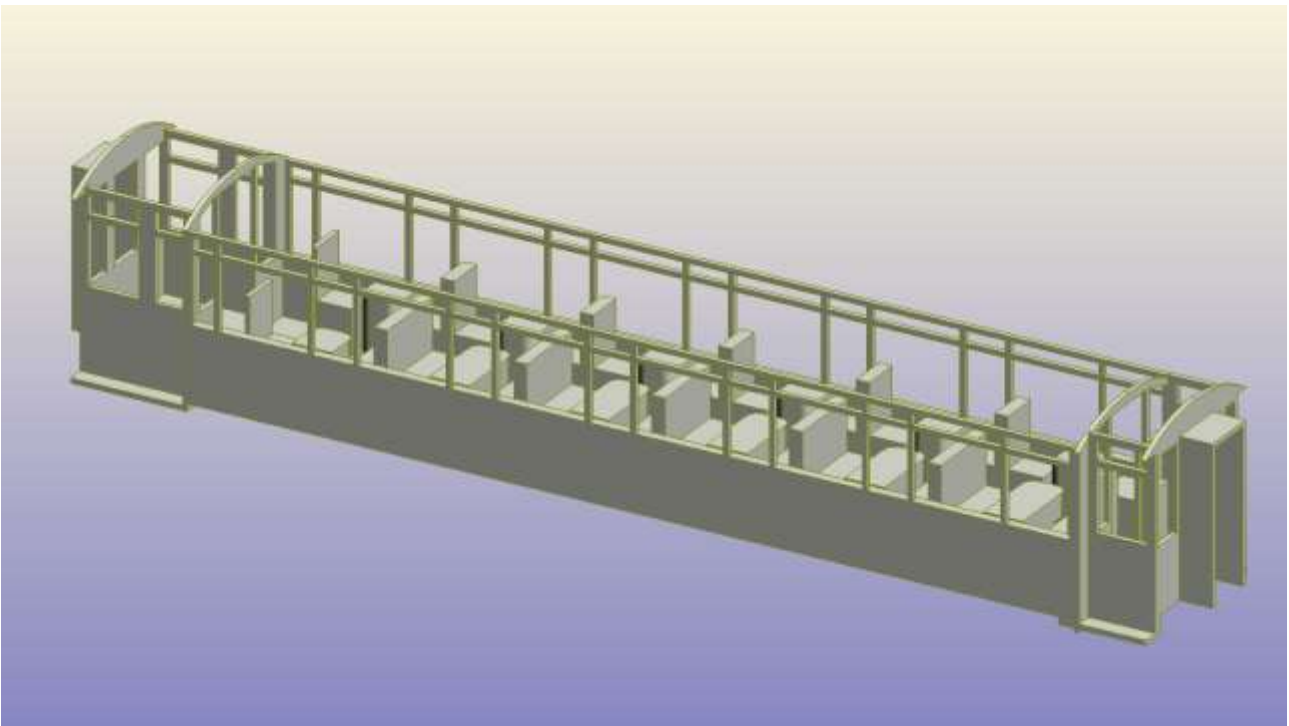

Now glue into place the steps at the ends of the coaches.

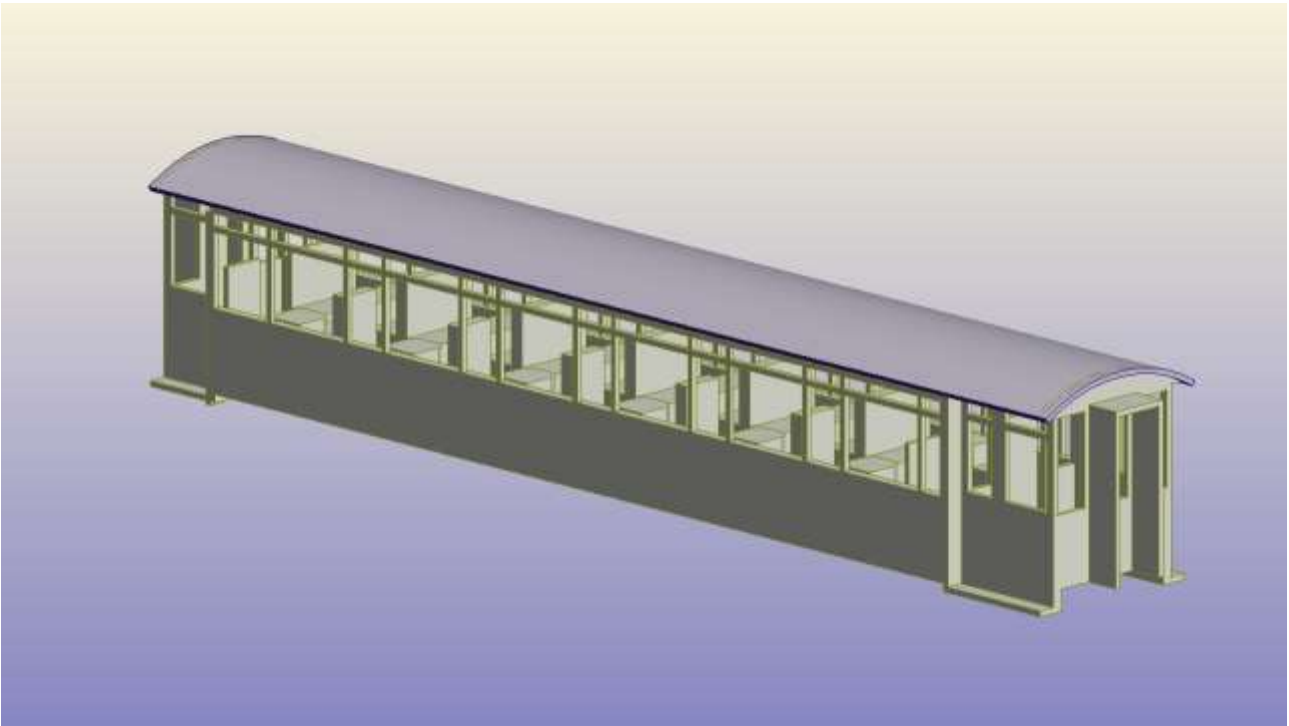

To finish the coach, glue into place the roof.

Your models are now complete.



We hope you enjoy your Bowaters Models kit! If you have any questions, don't hesitate to contact us on info@bowatersmodels.co.uk

We thank you for your custom.