

Floating Dock Kit with 8' Walkway

Assembly Instructions

Thank you for purchasing a floating dock kit. This dock has been fully assembled for you, and then only broken down as much as necessary to be able to fit on the pallet. All of the holes are pre-drilled. If you get to a step where a hole doesn't line up, or something doesn't match, double check it, because you probably don't have the right piece. You will have to remove some of the decking boards in order to reach the holes to attach hardware. We've left them attached to keep them safer during shipping.



FIGURE 1

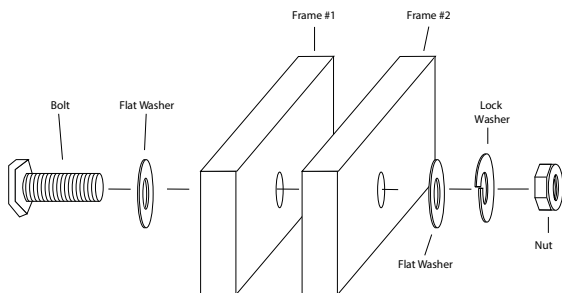


FIGURE 2



FIGURE 3

What's Needed to Assemble the Dock:

- A Flat, Open Area Near Water's Edge
- A Friend to Help Lift and Move Pieces
- About 1-2 Hours of Time
- Cordless Drill/Impact
- A Level
- #2 Square Head Bit for Attaching Decking Screws
- 9/16" Ratchet & Wrench for Bolting Sections Together
- 9/16" Socket & Impact Driver for Attaching Walkway Float(s)
- (2) 3/4" Wrenches for Attaching Walkway to Deck
- (2) 50 lb. Bags of Fast-Setting Concrete
- Rope & Stakes to tie Dock off While Concrete Sets

First, you'll set the base for the dock.

Step 1: You'll want to find a spot and set your base about 12" back from your full water mark (full pool). You want to make sure you have good solid ground to set the base into.

Use the base to mark where you need to dig holes, paying attention to the angle of the base, and making sure the dock, once attached, will be pointing the direction you want it to point. Dig two holes deep enough to accommodate the full length of the base legs. You should only see the top of the cross brace above ground.

Step 2: Concrete the base in making sure the cross bar on the base is level. While you let the concrete set up, you can start building the dock.

Next, you'll build the deck.

Step 1: The deck sections are all marked with letters and arrows. See Figure 1. Line up the deck sections by matching them up with the correct letters.

Step 2: Following the diagram in Figure 2, secure the sections of the deck together using the 4" bolts, 3/8" flat washers, 3/8" lock washers and 3/8" nuts as shown. There are 4 bolts per section.

Step 3: Next you'll attach the skirting boards using a #2 Square Head bit and brown decking screws. Each board is cut to length and numbered on the board and frame so you know where it goes. See Figure 3. There's a line on the frame so you can line up the flat edge, and the angled edge goes to the corner. Again, the holes should line up. If they don't, double check that you have the correct piece in the correct location.

Floating Dock Kit with 8' Walkway

Assembly Instructions Continued

Now, you're ready to attach the walkway.

Step 1: You'll want to find a spot and set your base about 12" above your full water mark (full pool). Use the base to mark where you need to dig holes, paying attention to the angle of the base, making sure the dock, once attached, will be pointing the direction you want it to point. Dig two holes deep enough to accommodate the base legs.

Step 2: Concrete the base in making sure the cross bar on the base is level. While you let the concrete set up, you can start building the dock.

Step 1: The deck sections are all marked with letters and arrows. See Figure 1. Line up the deck sections by matching them up with the correct letters.

Step 2: Following the diagram in Figure 2, secure the sections of the deck together using the 4" bolts, 3/8" flat washers, 3/8" lock washers and 3/8" nuts as shown. There are 4 bolts per section.

Step 3: Next you'll attach the skirting boards using a #2 Square Head bit and brown decking screws. Each board is cut to length and numbered on the board and frame so you know where it goes. See Figure 3. There's a line on the frame so you can line up the flat edge, and the angled edge goes to the corner. Again, the holes should line up. If they don't, double

Next, you'll connect the dock to the base.

Step 1: Line up the eyes on the walkway to the nuts on the base.

Step 2: Secure using the hardware provided according to Figure 6.



FIGURE 4



FIGURE 5

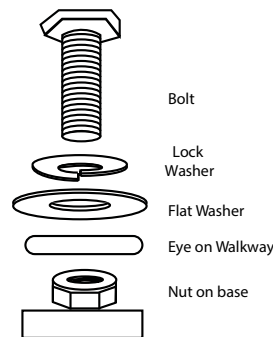


FIGURE 6



Finally, you'll install the remaining deck boards, and Voila! Your dock is complete!

If you have any questions, please don't hesitate to contact us.
Phone: 940-668-2573 | Email: marketing@pondking.com