


### Assembly Instructions

#### RECOMMENDED PLACEMENT


For enhancing your pond habitat, we recommend placing single units in water that is 3 to 4 feet deep, and combined vertical units in depths of 6 to 10 feet. Use a small concrete block to anchor vertical installations of 3 or more combined units.

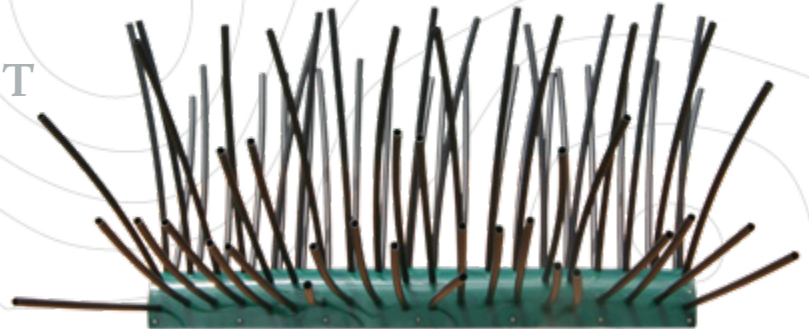

#### What You Need


- 1) Phillips Screwdriver 2) Standard Brick or Half Cinder Block\*

\*Use a half cinder block at the bottom to anchor vertical installations of 3 or more combined units.

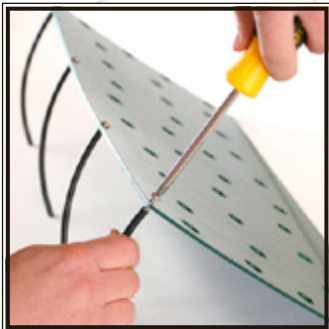


##### Step 1

Attach the four connector tubes on one side of the log making note of "Up" etched on the log.

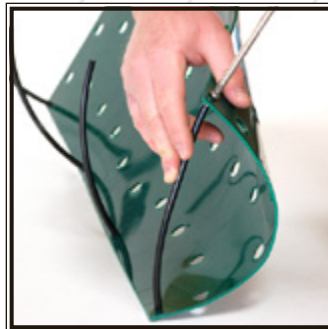

##### Step 2

Forming the log shape, attach the connector tubes on each end to the opposite side of the log.

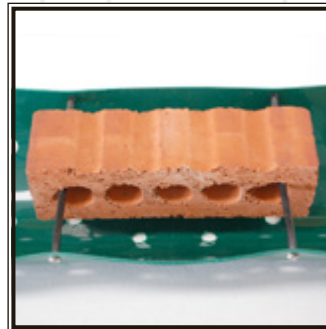

##### Step 3

Run the two middle connector tubes through a standard brick to attach weight to the log.



##### Step 4

Push the limbs into the drilled holes so they extend about one inch past the inside of the log.

#### Combining Units

Units can be linked together horizontally using cable ties and the small holes on each end of the log. To turn your logs into trees, simply link them horizontally first, and then stand them on end and tie the connector tubes together using cable ties.

Hang the trees from your dock with rope, or attach a weight to the bottom and drop in the water.

