





ASSEMBLY INSTRUCTIONS
CHARLIE VANITY DRESSER







clmhome.co.za






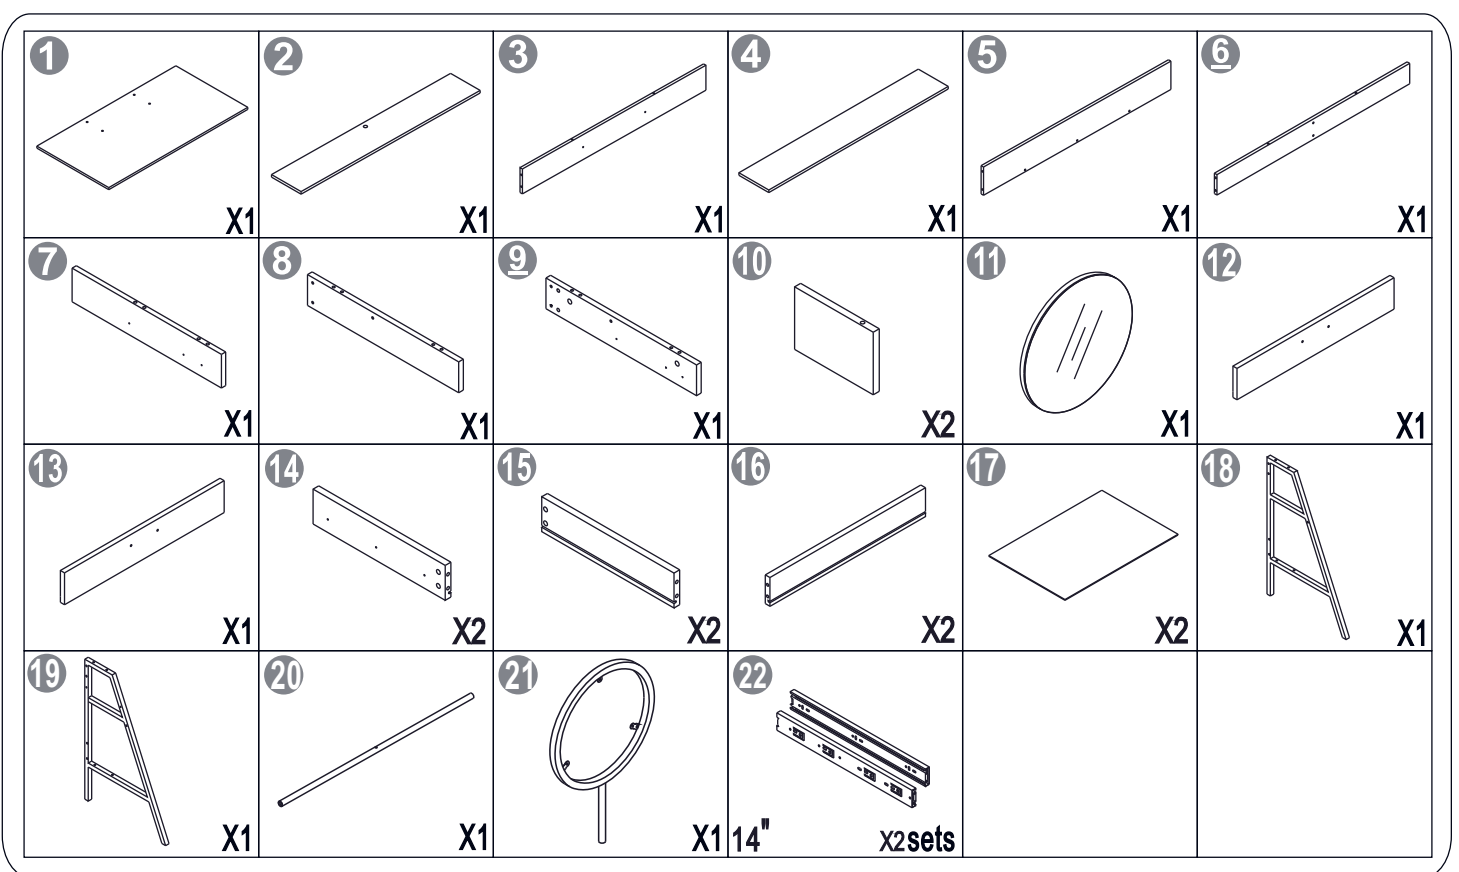








PART	QTY.	ITEM	
A	9	M6x50mm	
B	5	M6x40mm	
C	10	M6x35mm	
D	8	M6x25mm	
E	27	3.5x14mm	
F	2	5x38mm	
G	4	4x18mm	


PART	QTY.	ITEM	
H	20	6X40mm	
I	16	M6x25mm	
J	6	Ø8x30mm	
K	4	M6x10xH7	
L	2	109x16x8	
M	1	Ø5x54mm	
N	30	Ø21mm	

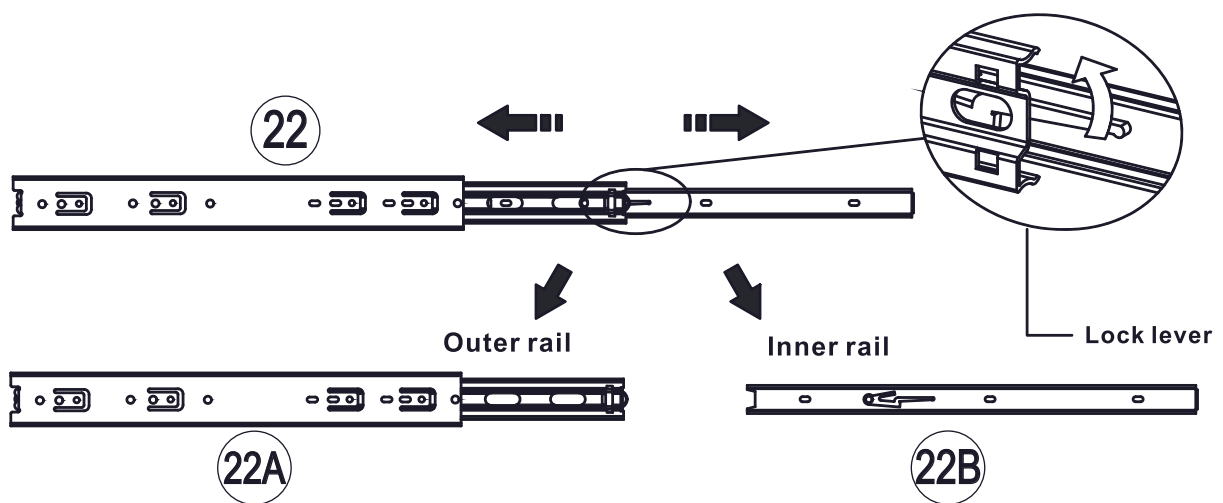

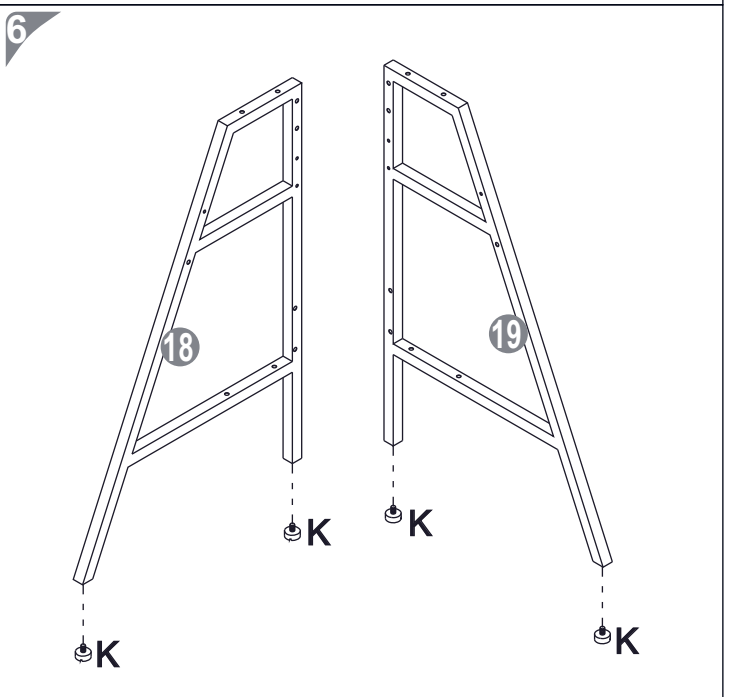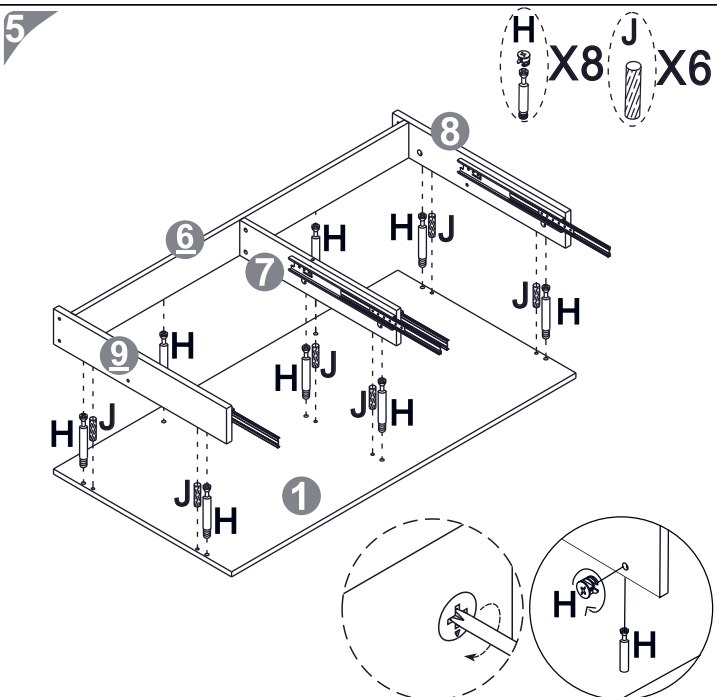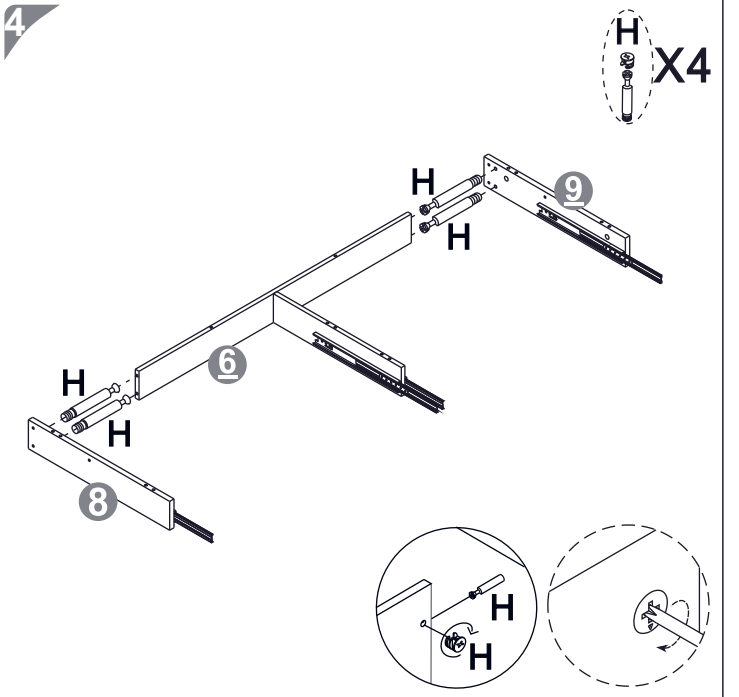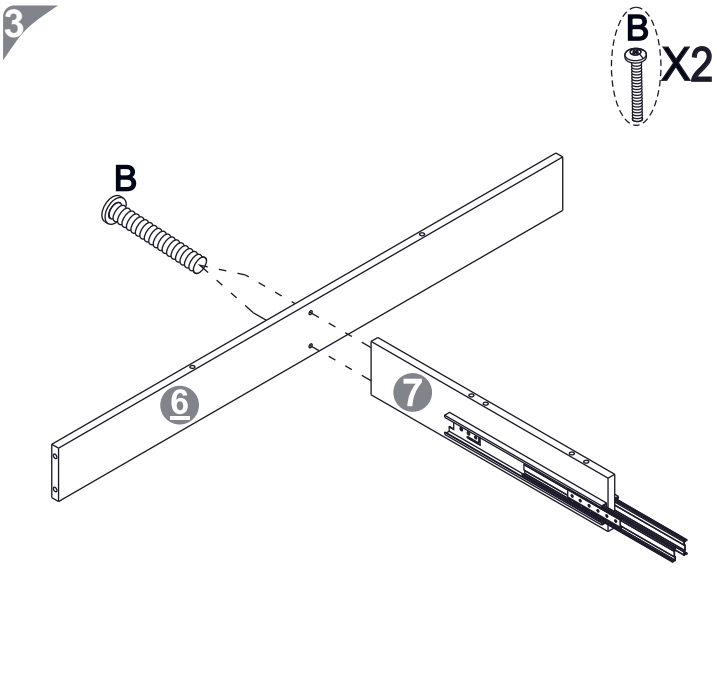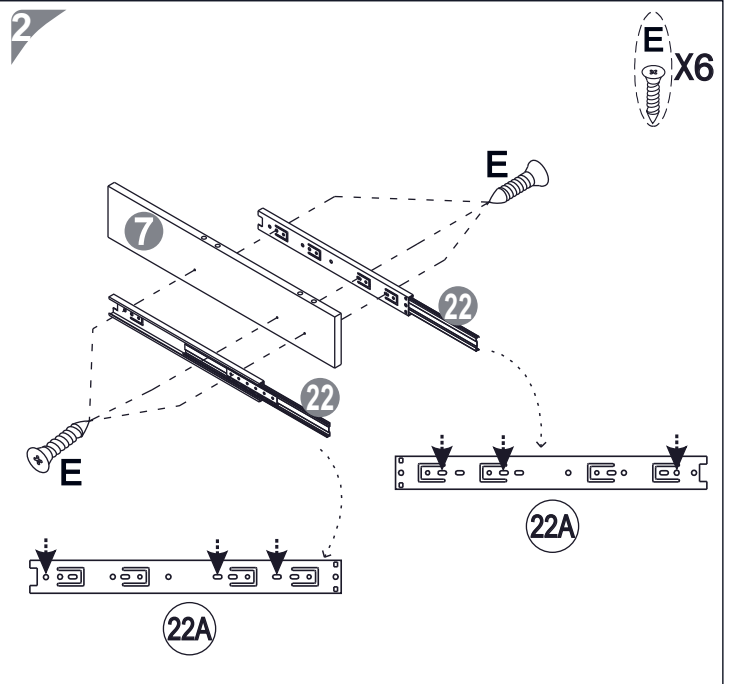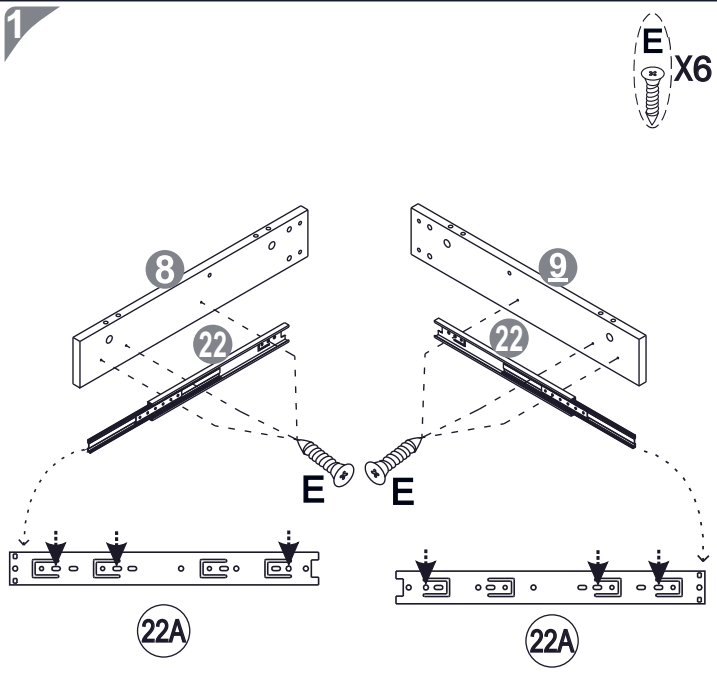

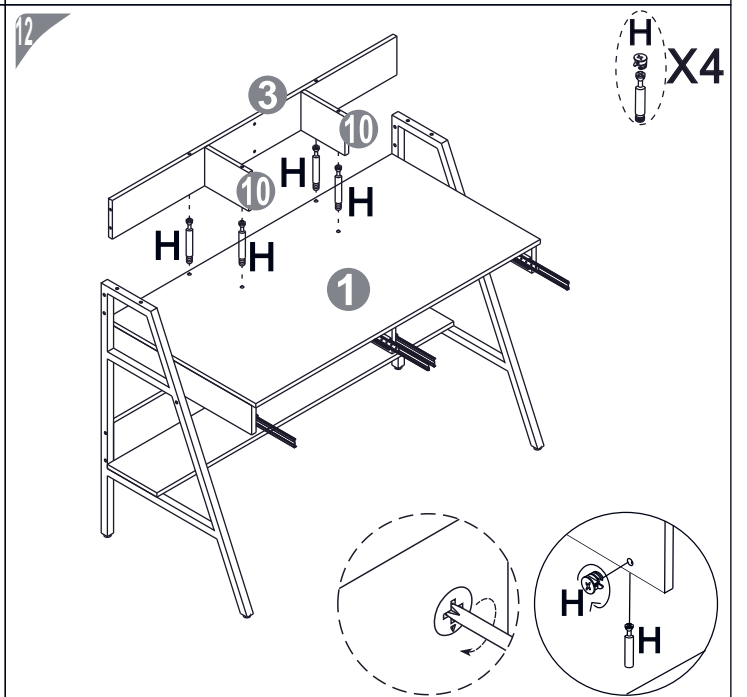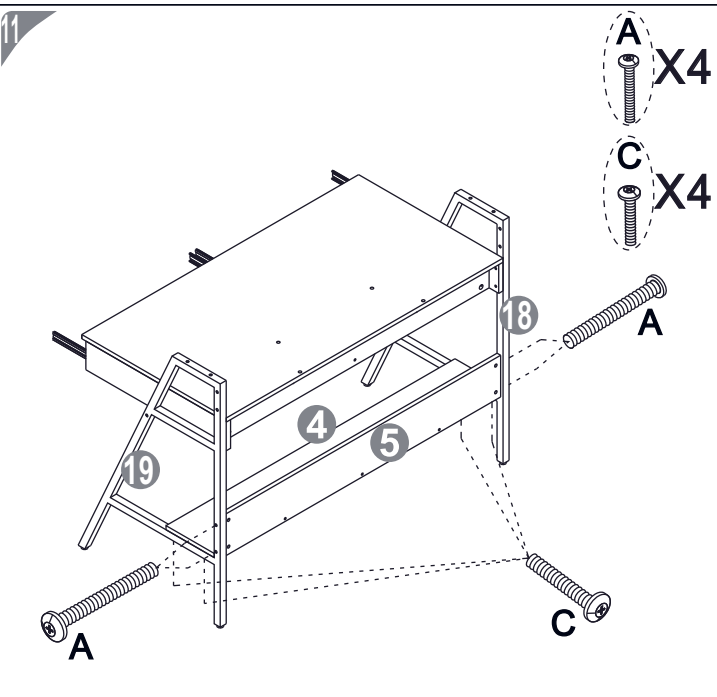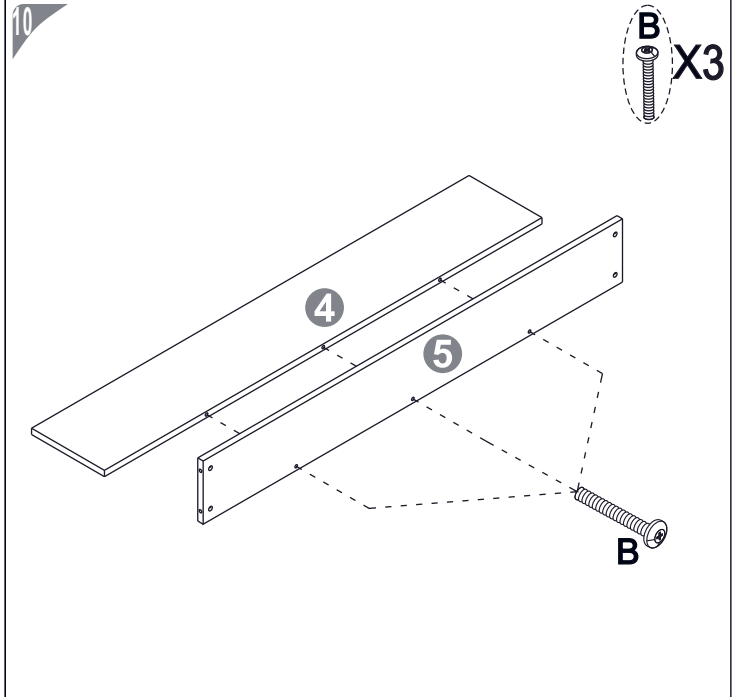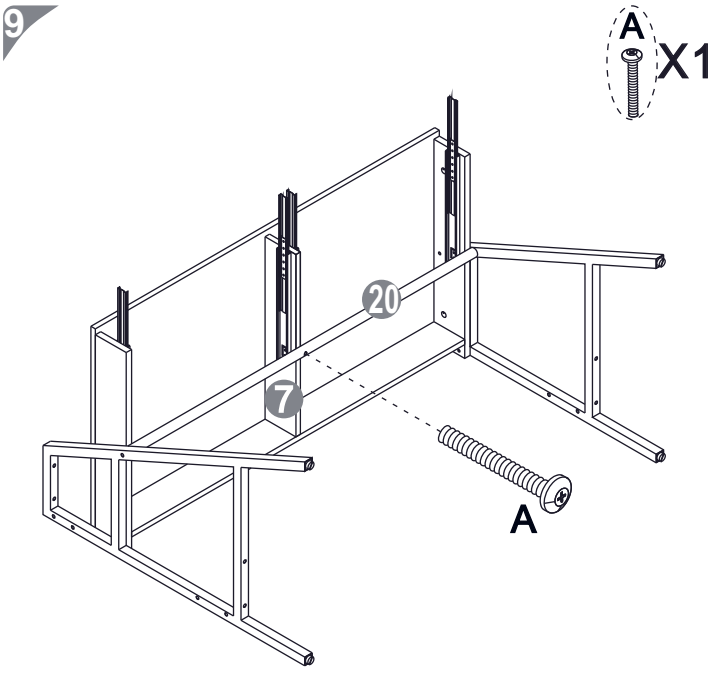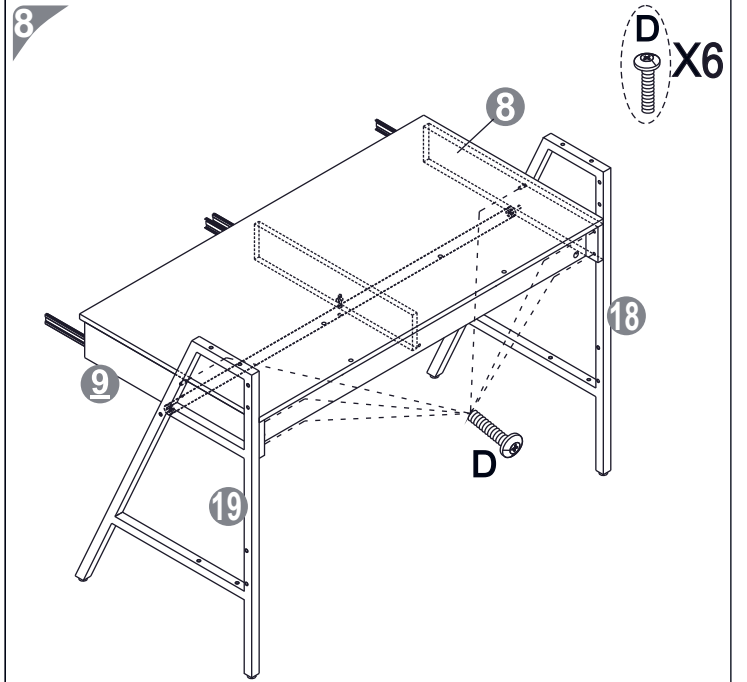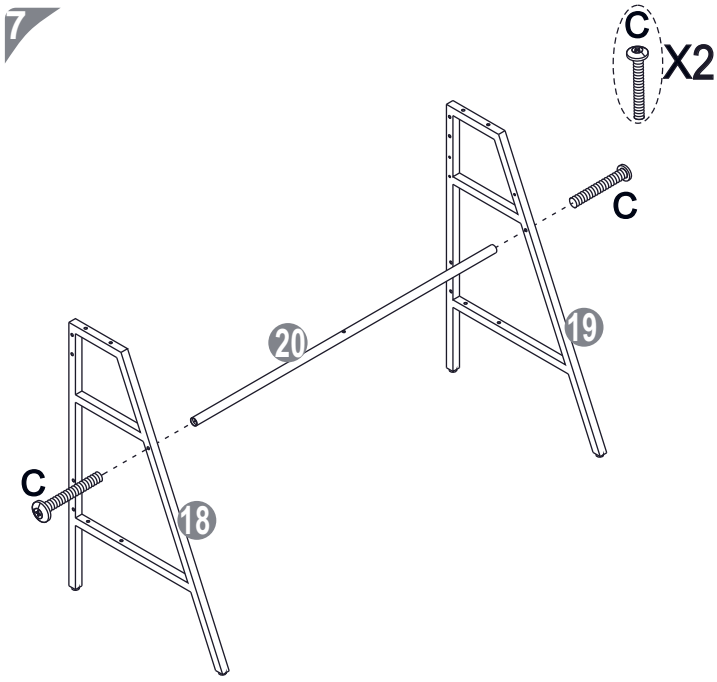

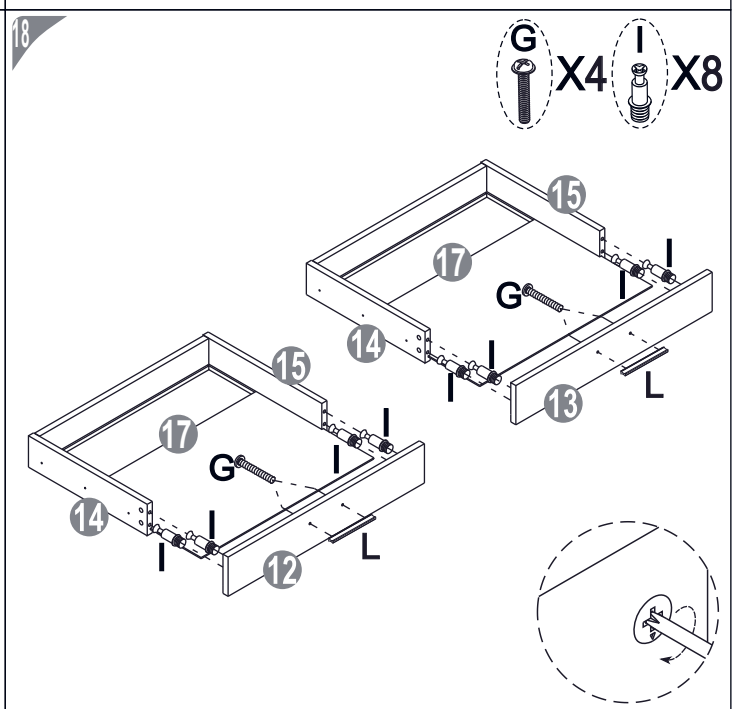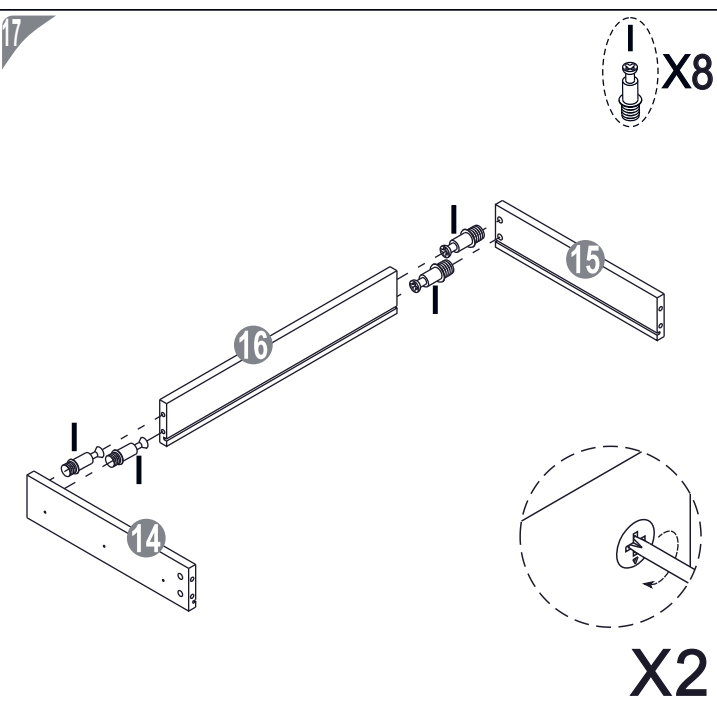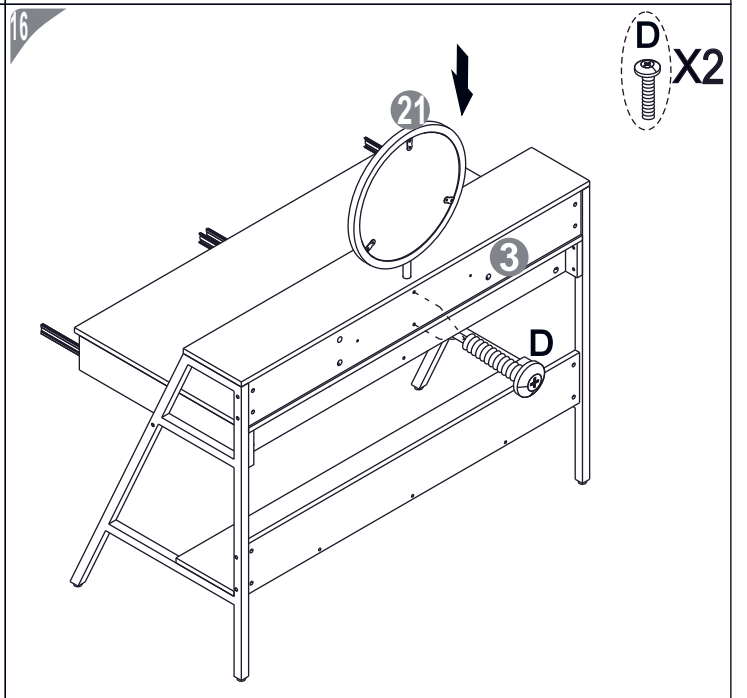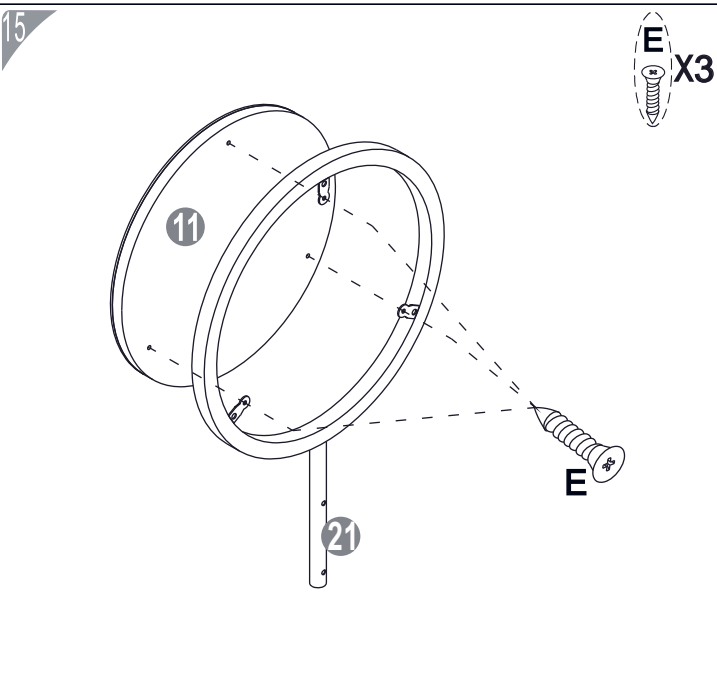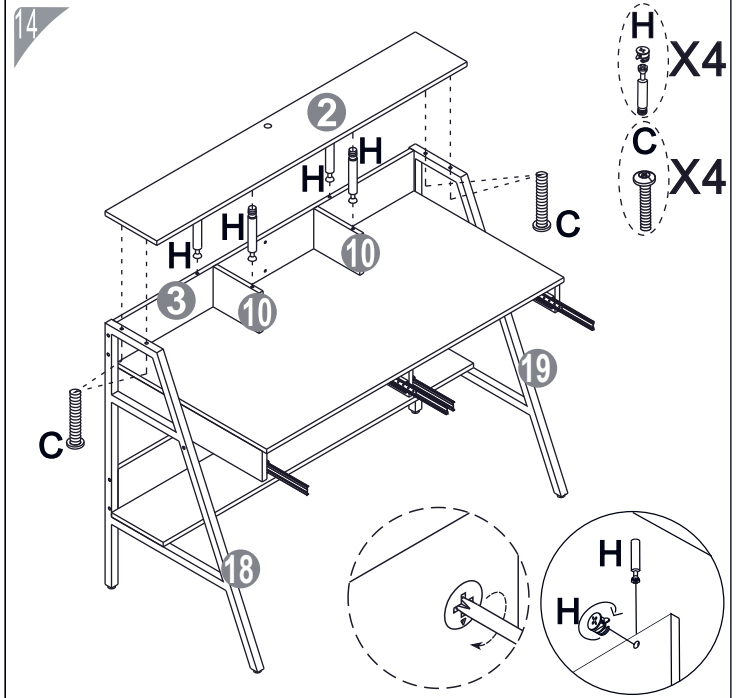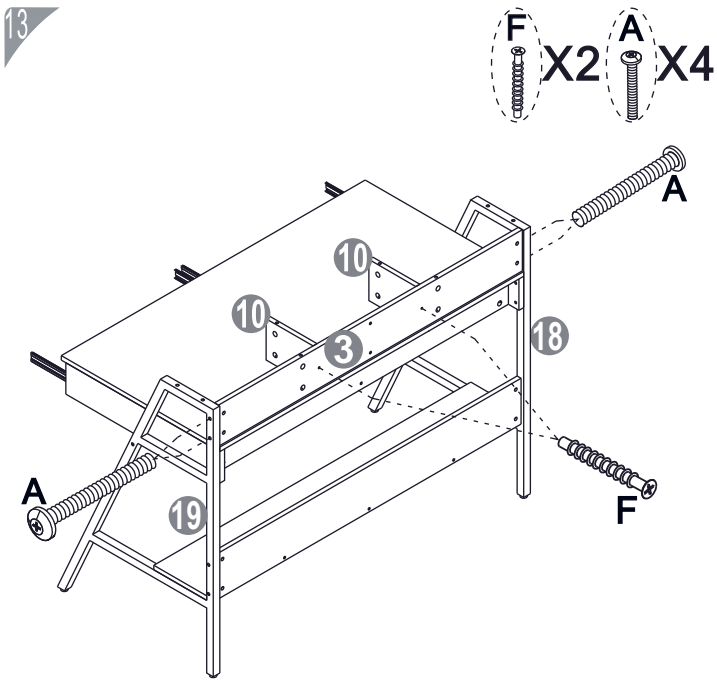

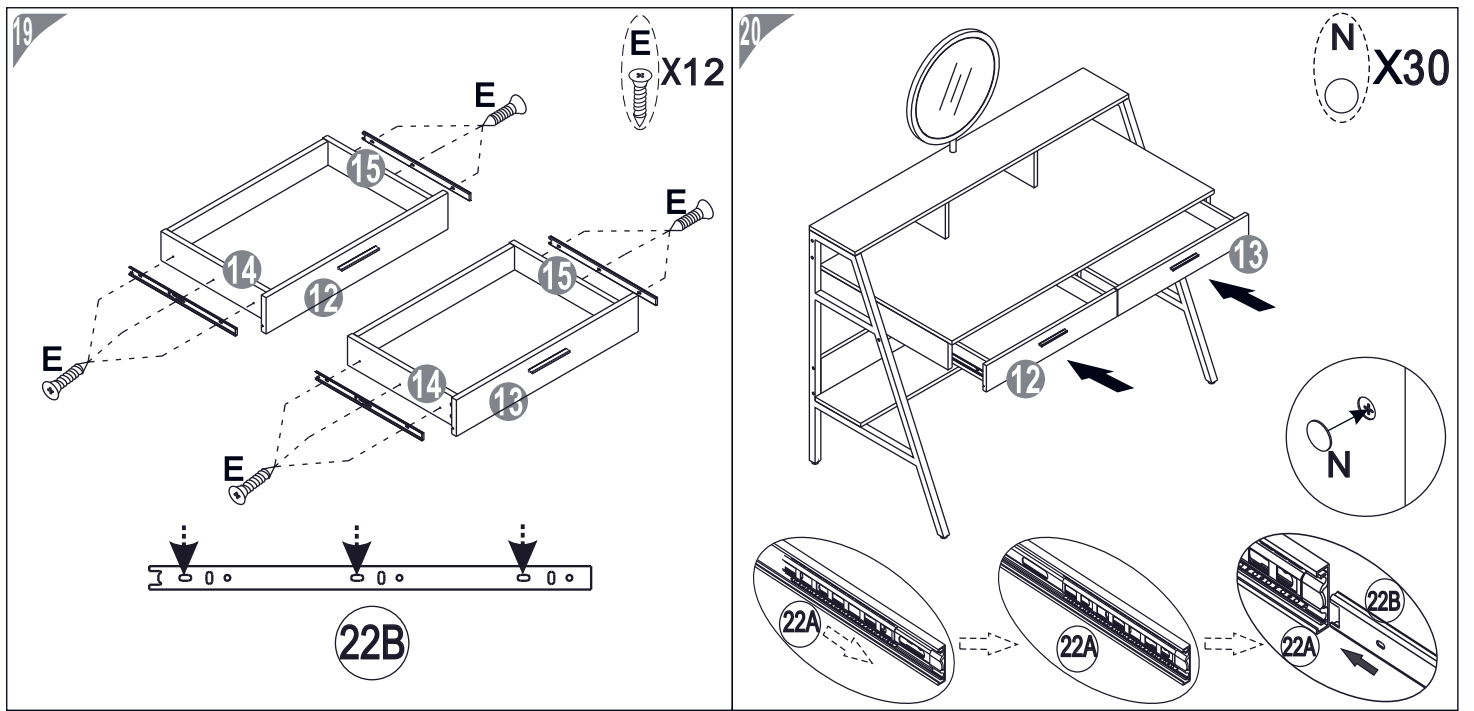

D-9014 ASSEMBLY INSTRUCTION

Thanks for purchasing one of our products ,please read carefully the assembly instructions before the installation (Attention: Do not tighten the screws before all screws are in place).

