



ASSEMBLY INSTRUCTIONS MERLIN DESK


clmhome.co.za

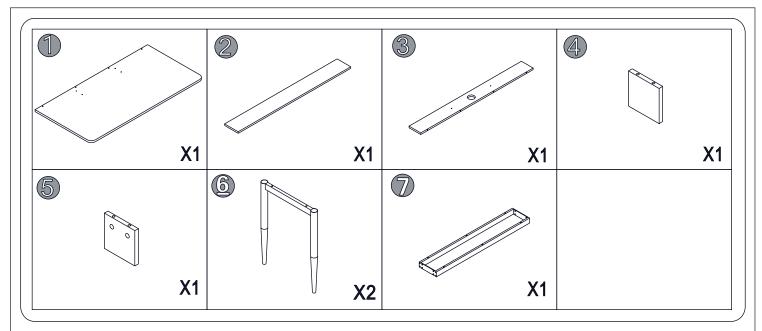

PART NO	QTY.	PARTS	
A	10	M6x60mm	
В	4	M6x45mm	
C	6	M5x38mm	
D	8	M6x14mm	(E) (IIIIIII)
E	8	M6x40mm	

PART NO	QTY.	PARTS	
E	1	Ø60	
G	4	M6	•
$oxed{\mathbf{H}}$	8	Ø6. 2xØ16x0. 8MM	©
	1	Ø5X54mm	
J	1	M5	
K	12	Ø21	0

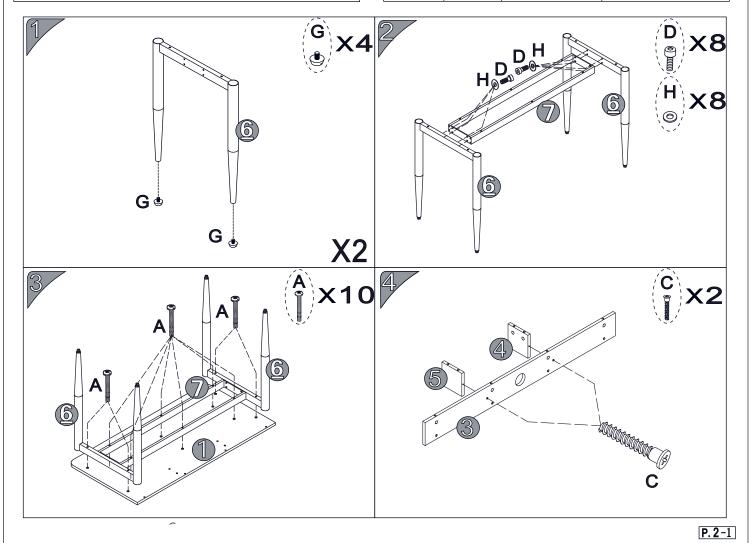

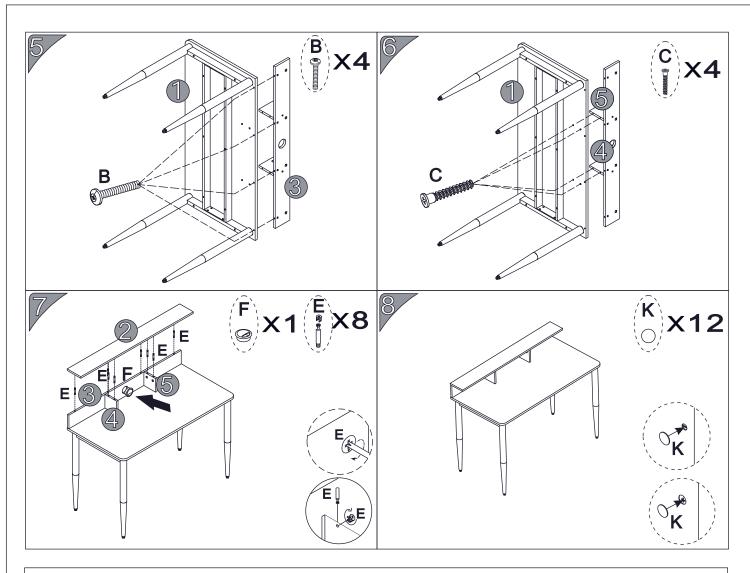

ST-S1909 ASSEMBLY INSTRUCTION

Thanks for purchasing one of our products, please read carefully the assembly instructions before the installation (Attention: Do not tighten the screws before all screws are in place).

