


# PATRICK MOTORSPORTS

PORSCHE & MID-ENGINE PERFORMANCE SPECIALISTS

## PORSCHE FLAT SIX TWIN PLUG DISTRIBUTOR PLUG WIRE LAYOUT CLOCKWISE

911 ENGINE FIRING ORDER = 1-6-2-4-3-5

\* THIS IS THE LAYOUT FOR CLOCKWISE ROTATION

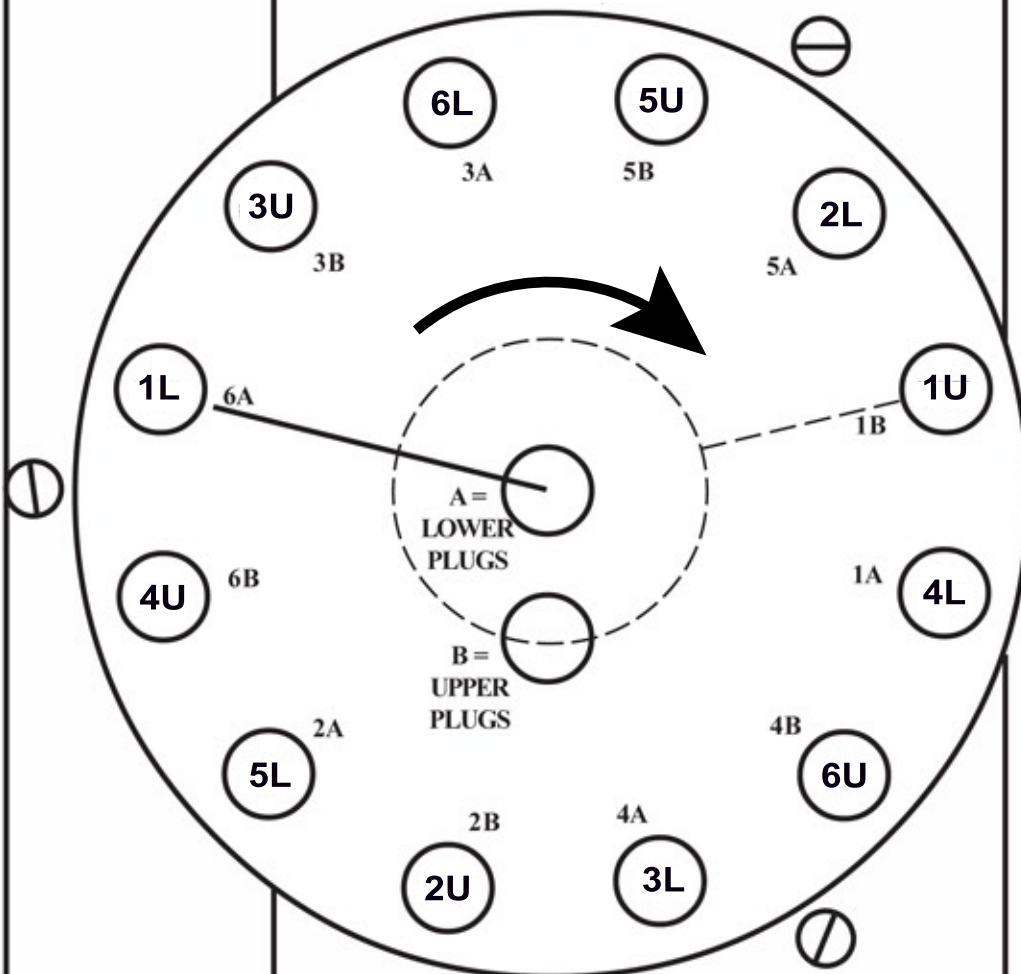

DISTRIBUTOR CAP  
TO  
SPARK PLUG  
WIRE LAYOUT

CAP = PLUG

- 1B = # 1 UPPER
- 1A = # 4 LOWER
- 4B = # 6 UPPER
- 4A = # 3 LOWER
- 2B = # 2 UPPER
- 2A = # 5 LOWER
- 6B = # 4 UPPER
- 6A = # 1 LOWER
- 3B = # 3 UPPER
- 3A = # 6 LOWER
- 5B = # 5 UPPER
- 5A = # 2 LOWER