


PATRICK MOTORSPORTS

PORSCHE & MID-ENGINE PERFORMANCE SPECIALISTS

PORSCHE FLAT SIX TWIN PLUG DISTRIBUTOR PLUG WIRE LAYOUT COUNTER CLOCKWISE

911 ENGINE FIRING ORDER = 1-6-2-4-3-5

* THIS IS THE LAYOUT FOR COUNTER CLOCKWISE

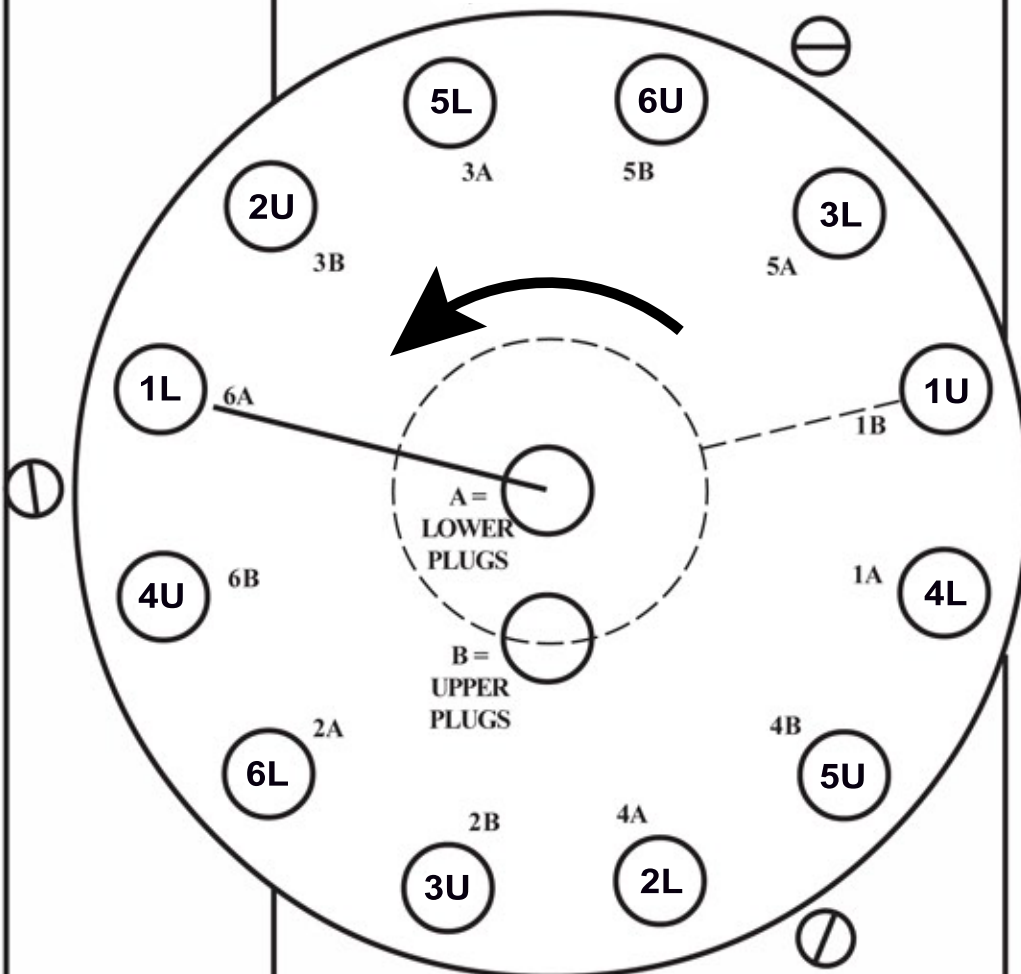

DISTRIBUTOR CAP
TO
SPARK PLUG
WIRE LAYOUT

CAP = PLUG

- 1B = # 1 UPPER
- 5A = # 3 LOWER
- 5B = # 6 UPPER
- 3A = # 5 LOWER
- 3B = # 2 UPPER
- 6A = # 1 LOWER
- 6B = # 4 UPPER
- 2A = # 6 LOWER
- 2B = # 3 UPPER
- 4A = # 2 LOWER
- 4B = # 5 UPPER
- 1A = # 4 LOWER