

# nkuku

eco friendly fair trade

## Assembly Instructions

Required Tools :



x 1  
Screw



x 1  
Screw Dowel




x 1  
Screw Driver

STYLE : KM1201

NAME : KAYIA ACACIA WOOD MIRROR



15 Min




Front




Back

Step -1

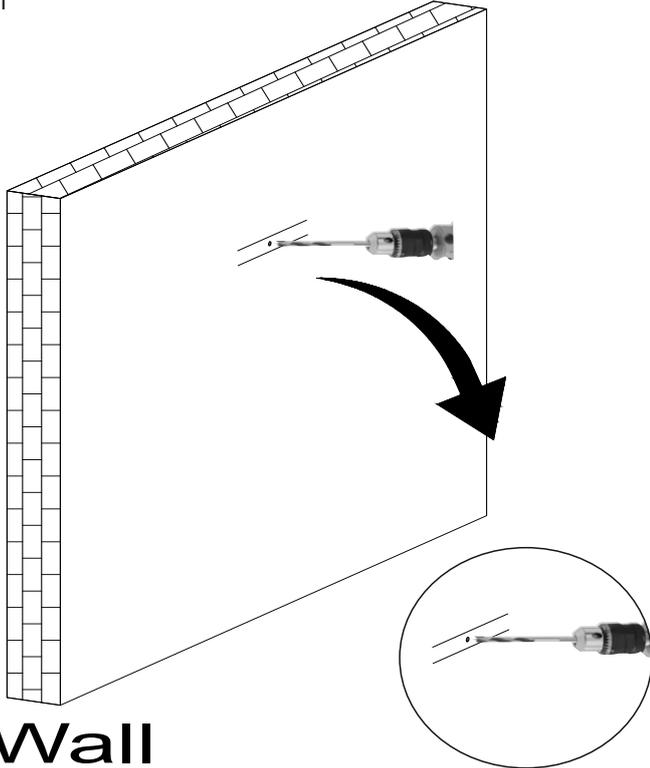


Wall

Step -2

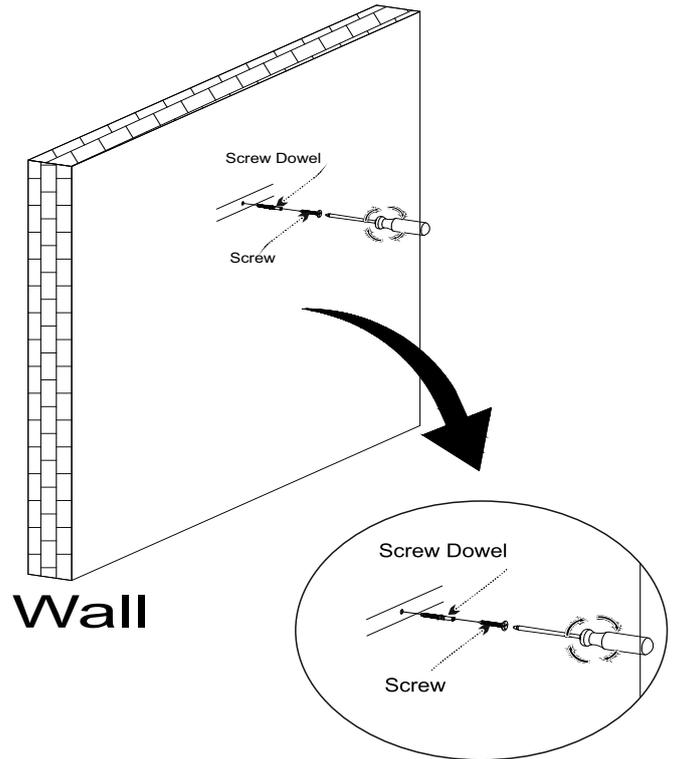

Wall


Step -3

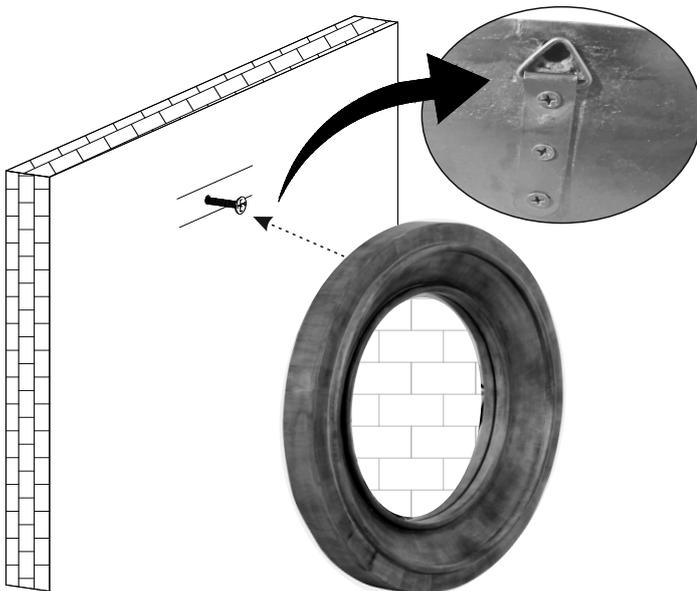

Wall

Mirror

Final Step -Assembled View

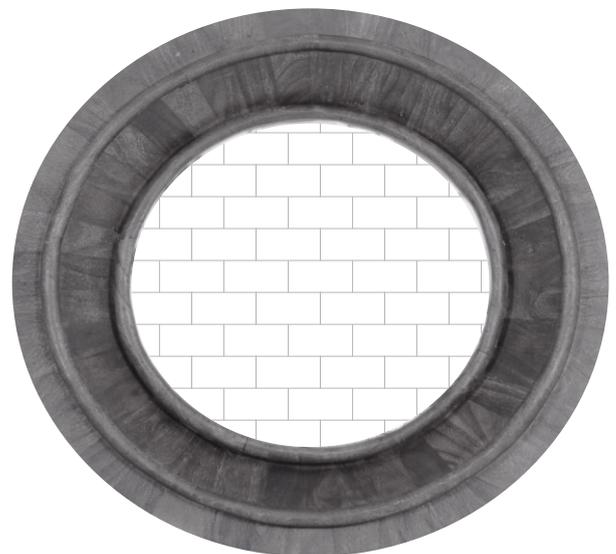

**Warning !** This is a heavy mirror, please make sure you select the correct wall plugs and screws for your wall type.