


# 1200W 24V KIT

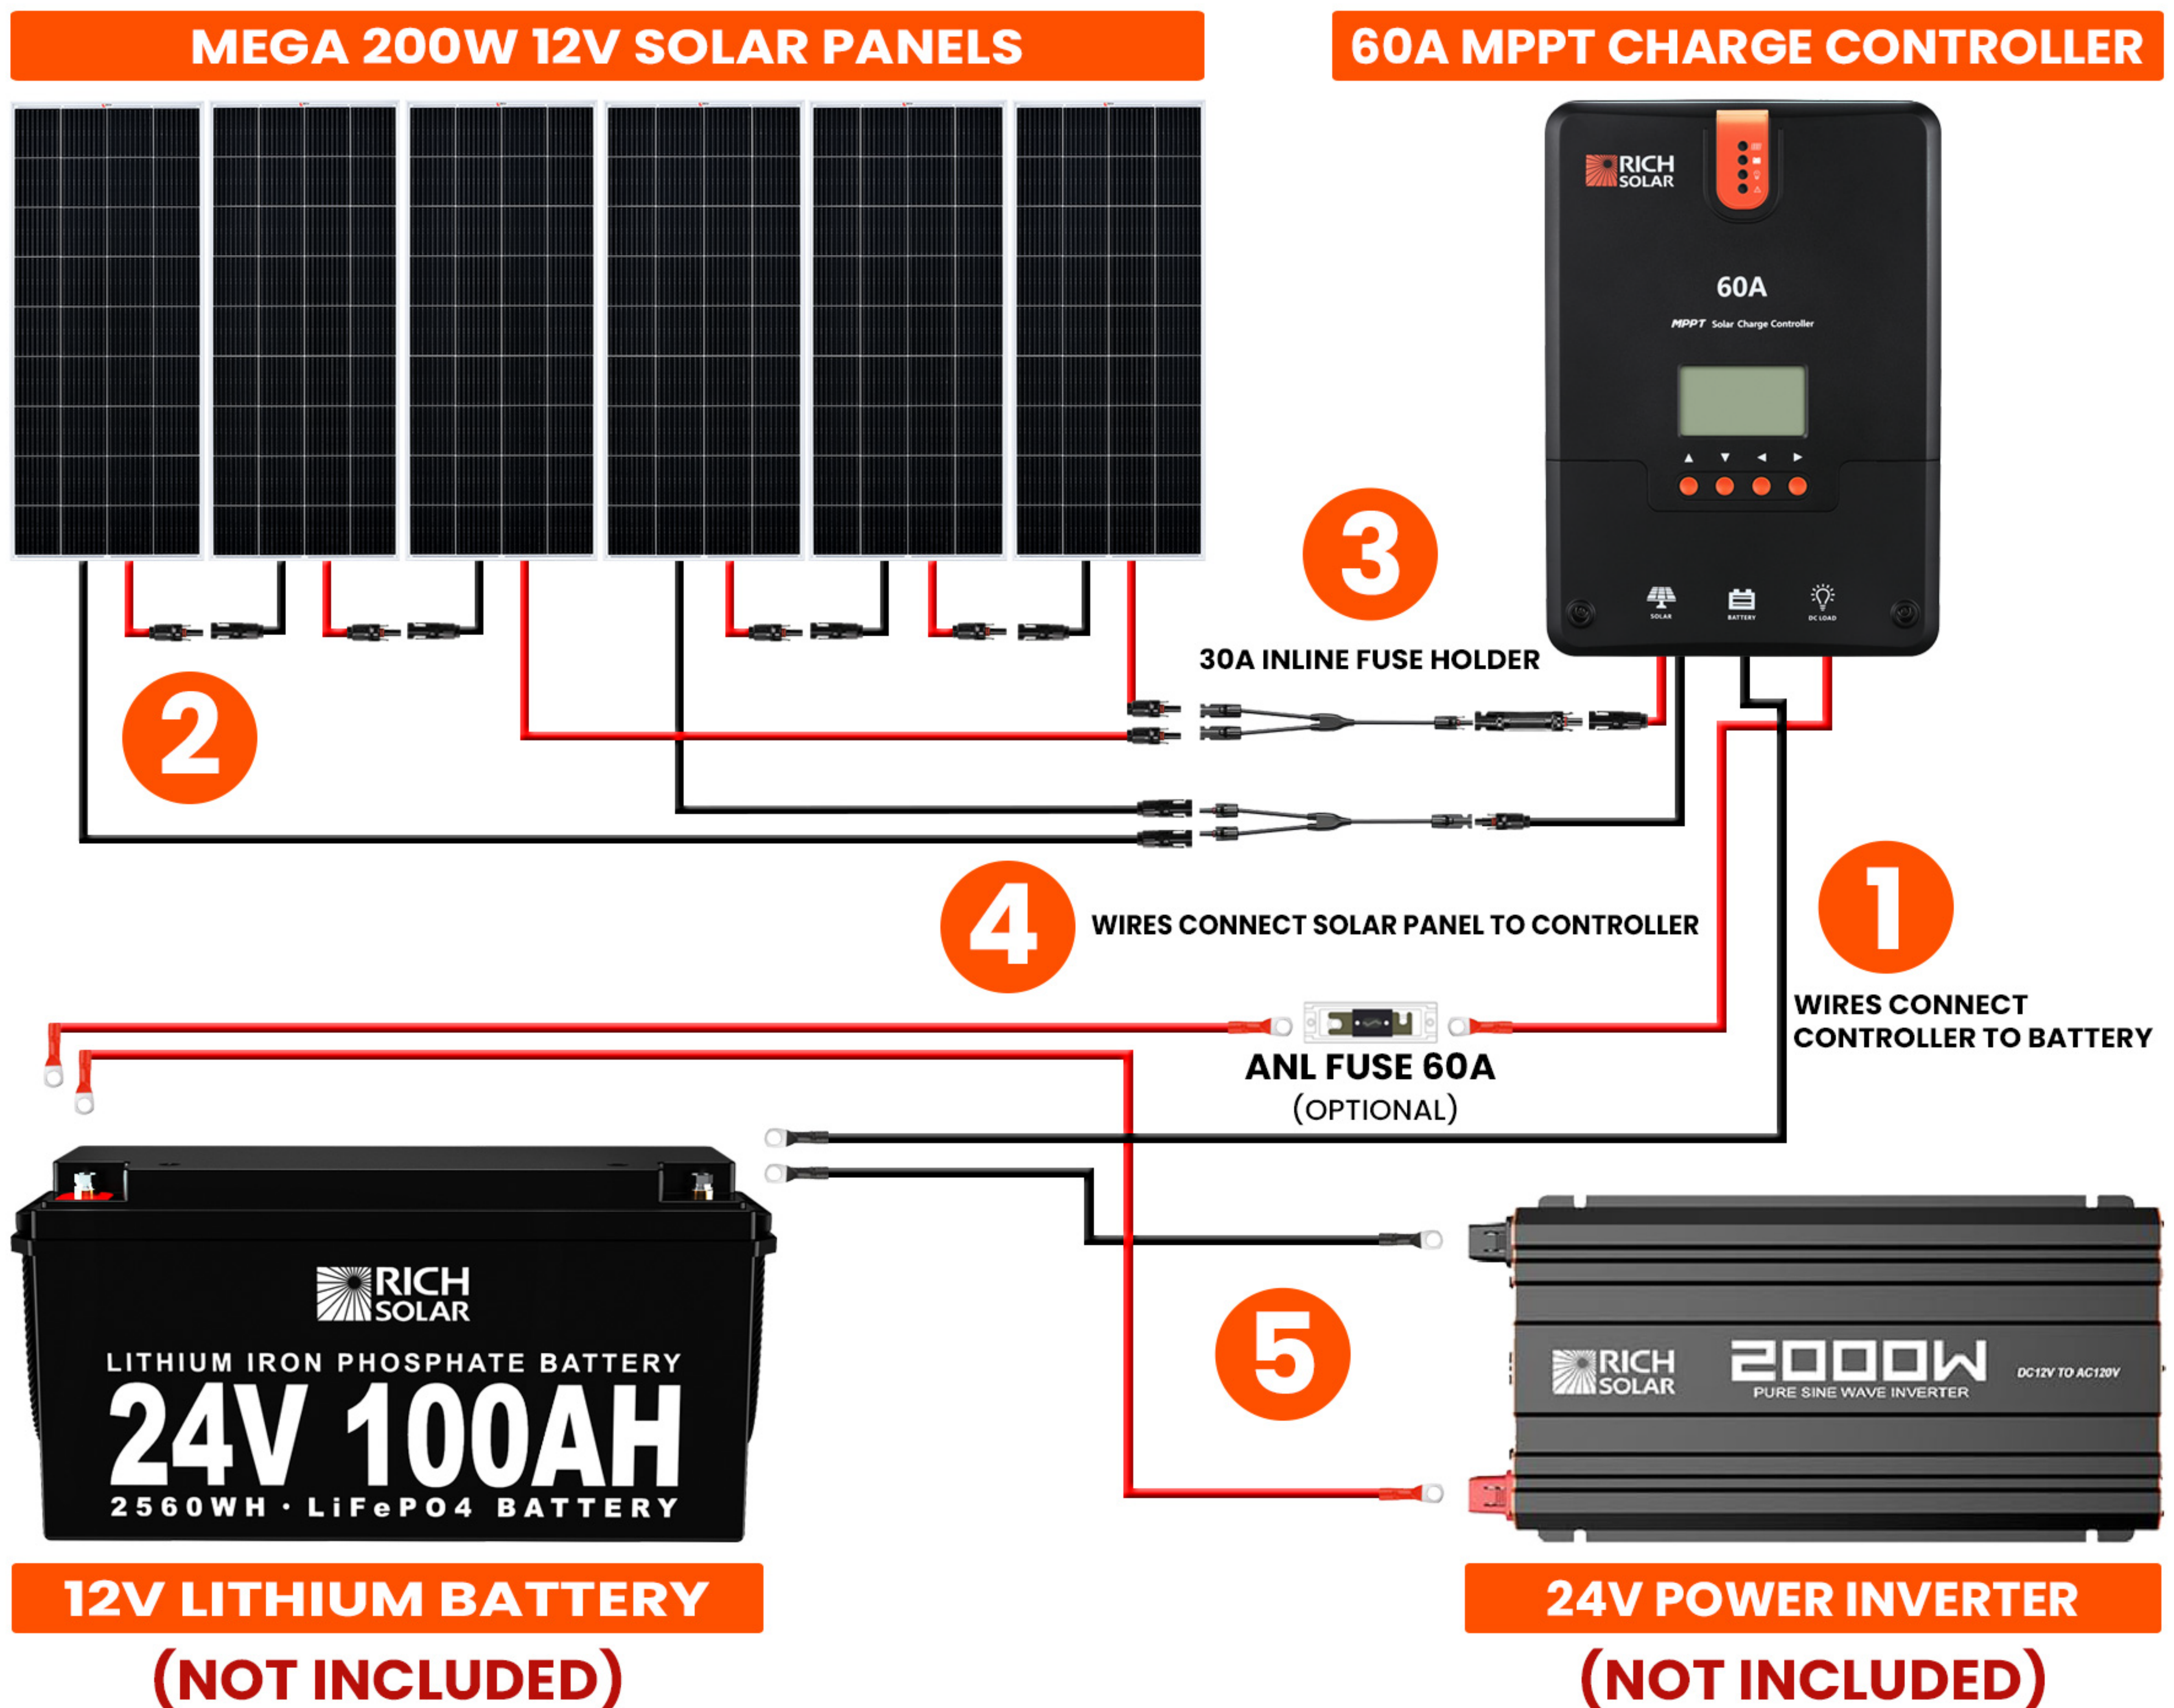

## Wiring Instructions

- 1** Connect Battery Cables to 60A MPPT Charge Controller then to a 24V battery bank (not included).
- 2** Wire the 6, 200W panels in series/parallel using the Y branch parallel connectors.
- 3** Connect 30A Inline Fuse to the positive lead of the combined panels.
- 4** Use the provided extension cables to connect solar panels to 60A MPPT Charge Controller.
- 5** Connect 24V inverter (not included) to 24V battery (not included).