
600W12WKIT

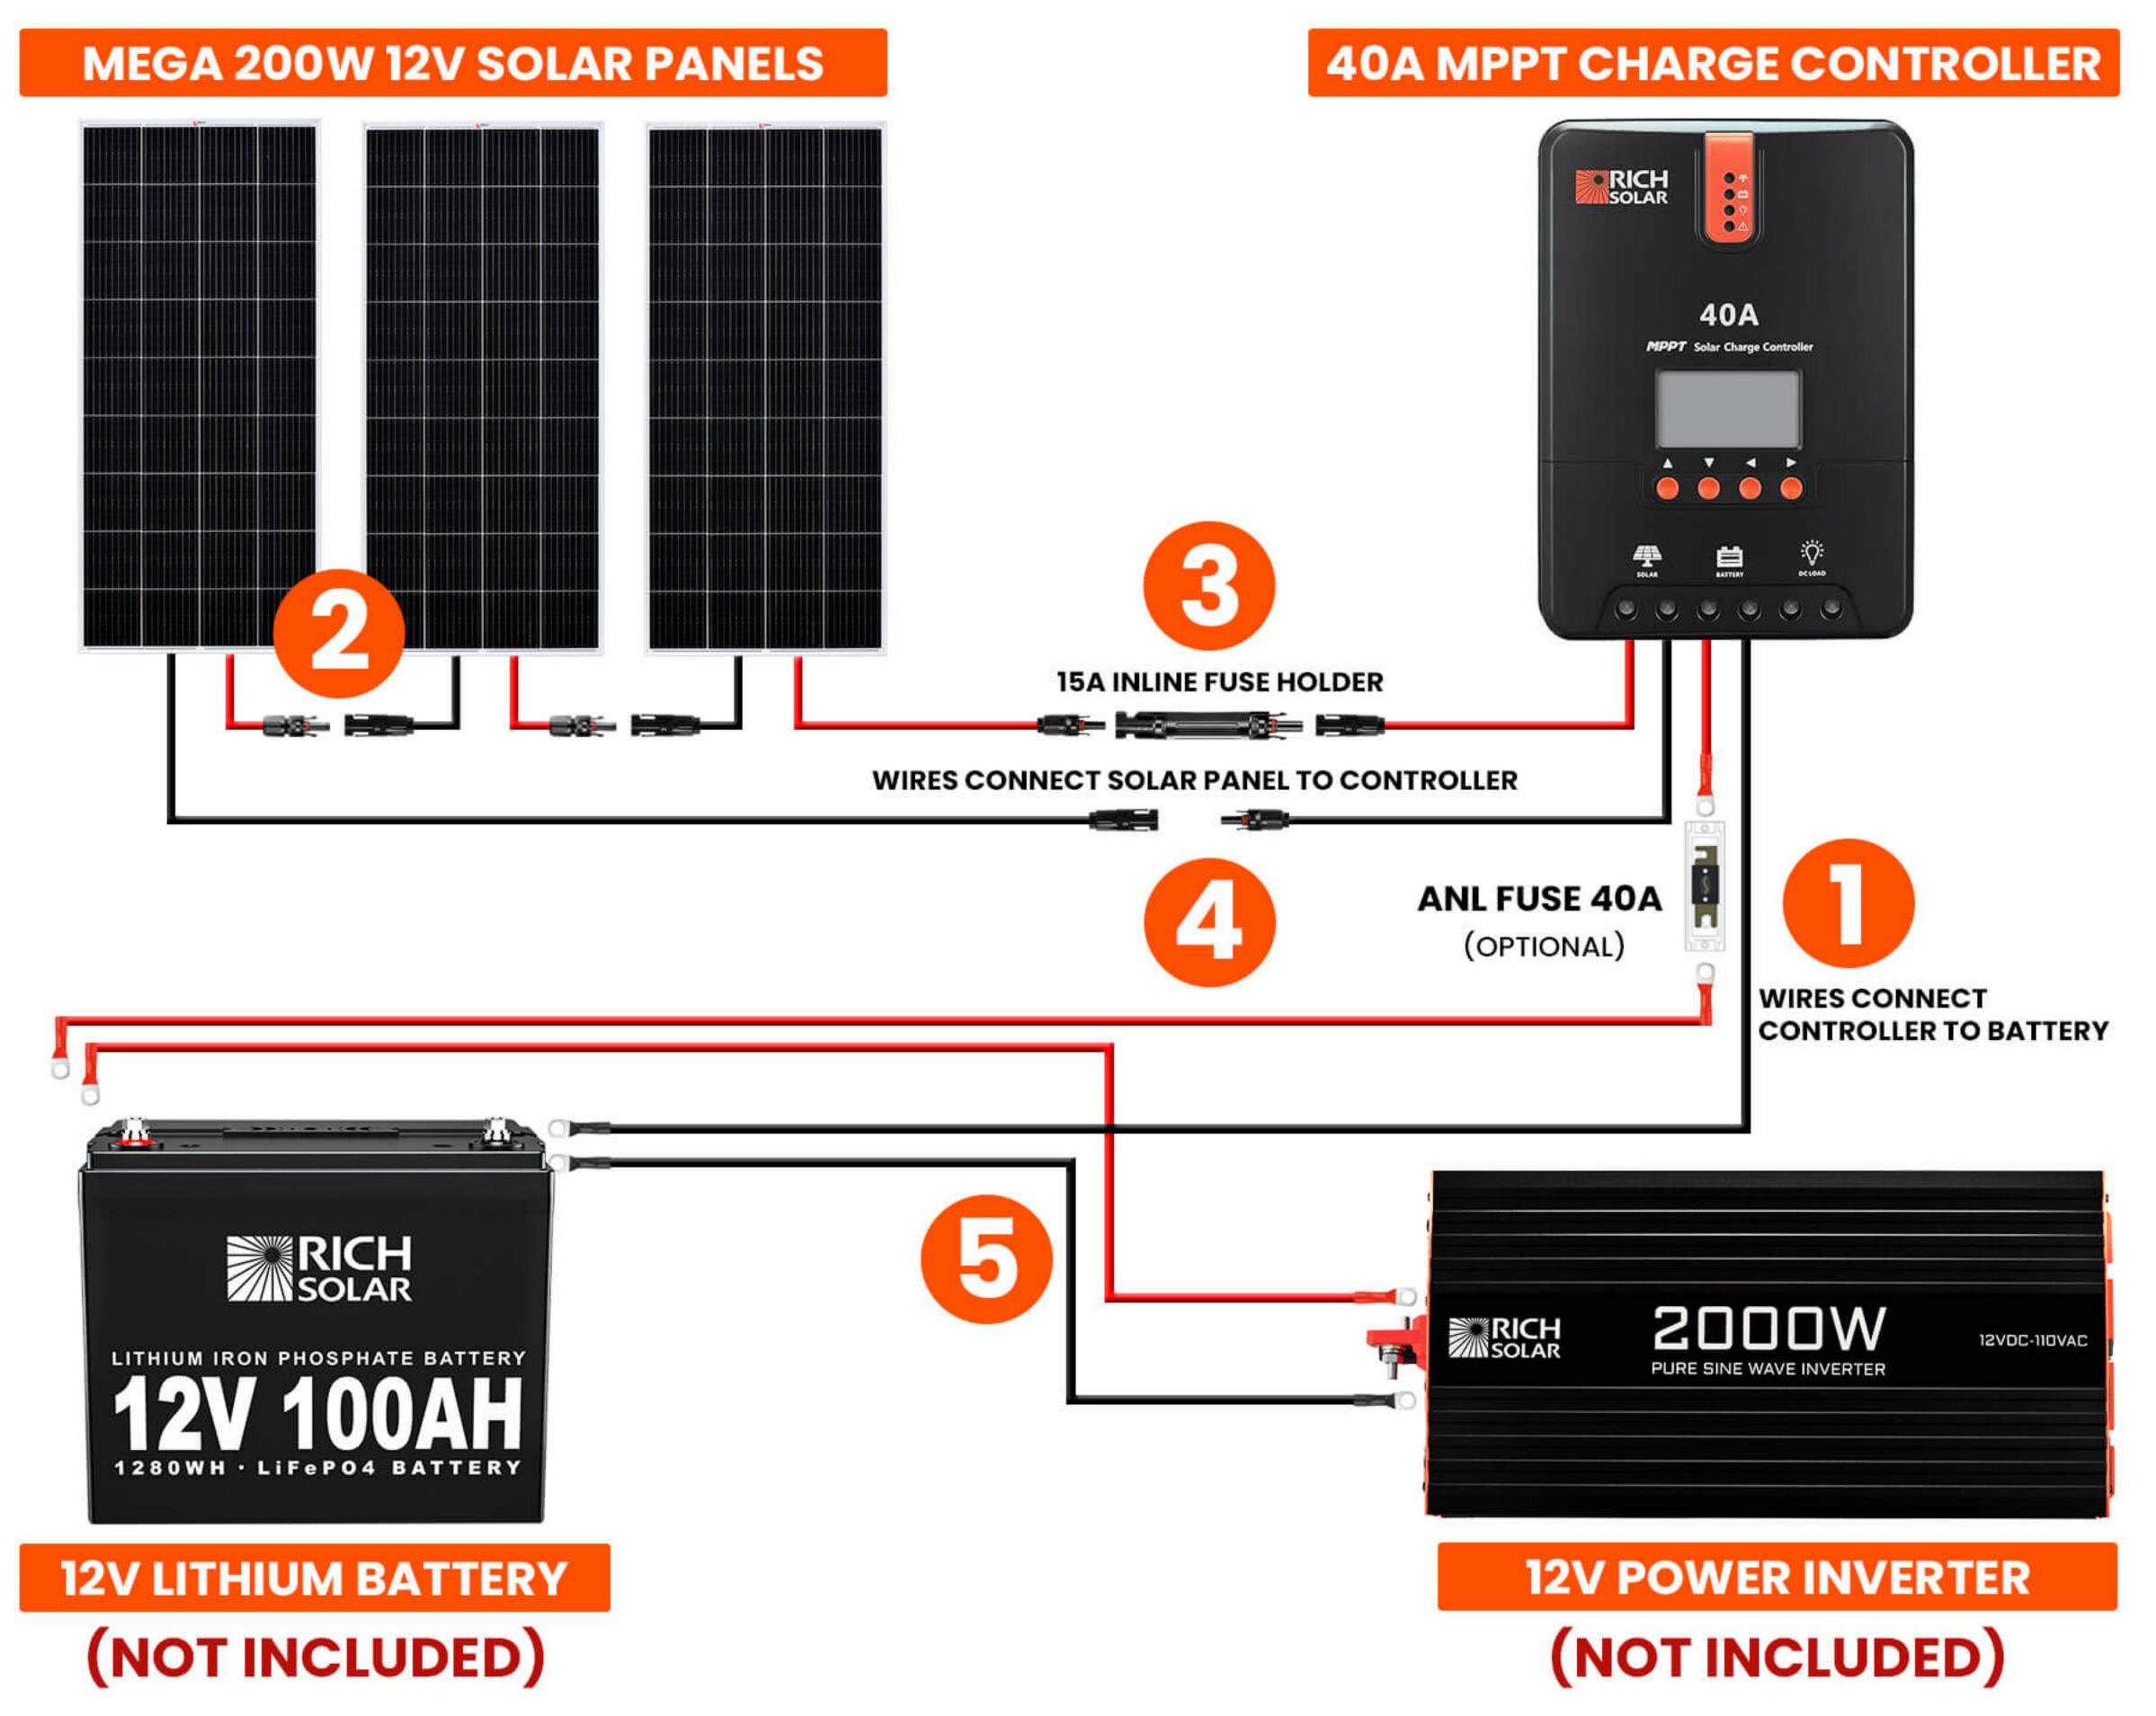

Wiring Instructions

- Connect Battery Cables to 40A MPPT Charge Controller then to a 12V battery (not included).
- Wire the 3, 200W panels in series (positive to negative).
- Connect 15A Inline Fuse to the positive lead of the combined panels.
- Use the provided extension cables to connect solar panels to 40A MPPT Charge Controller.
- (not included).

