


800W 12V KIT

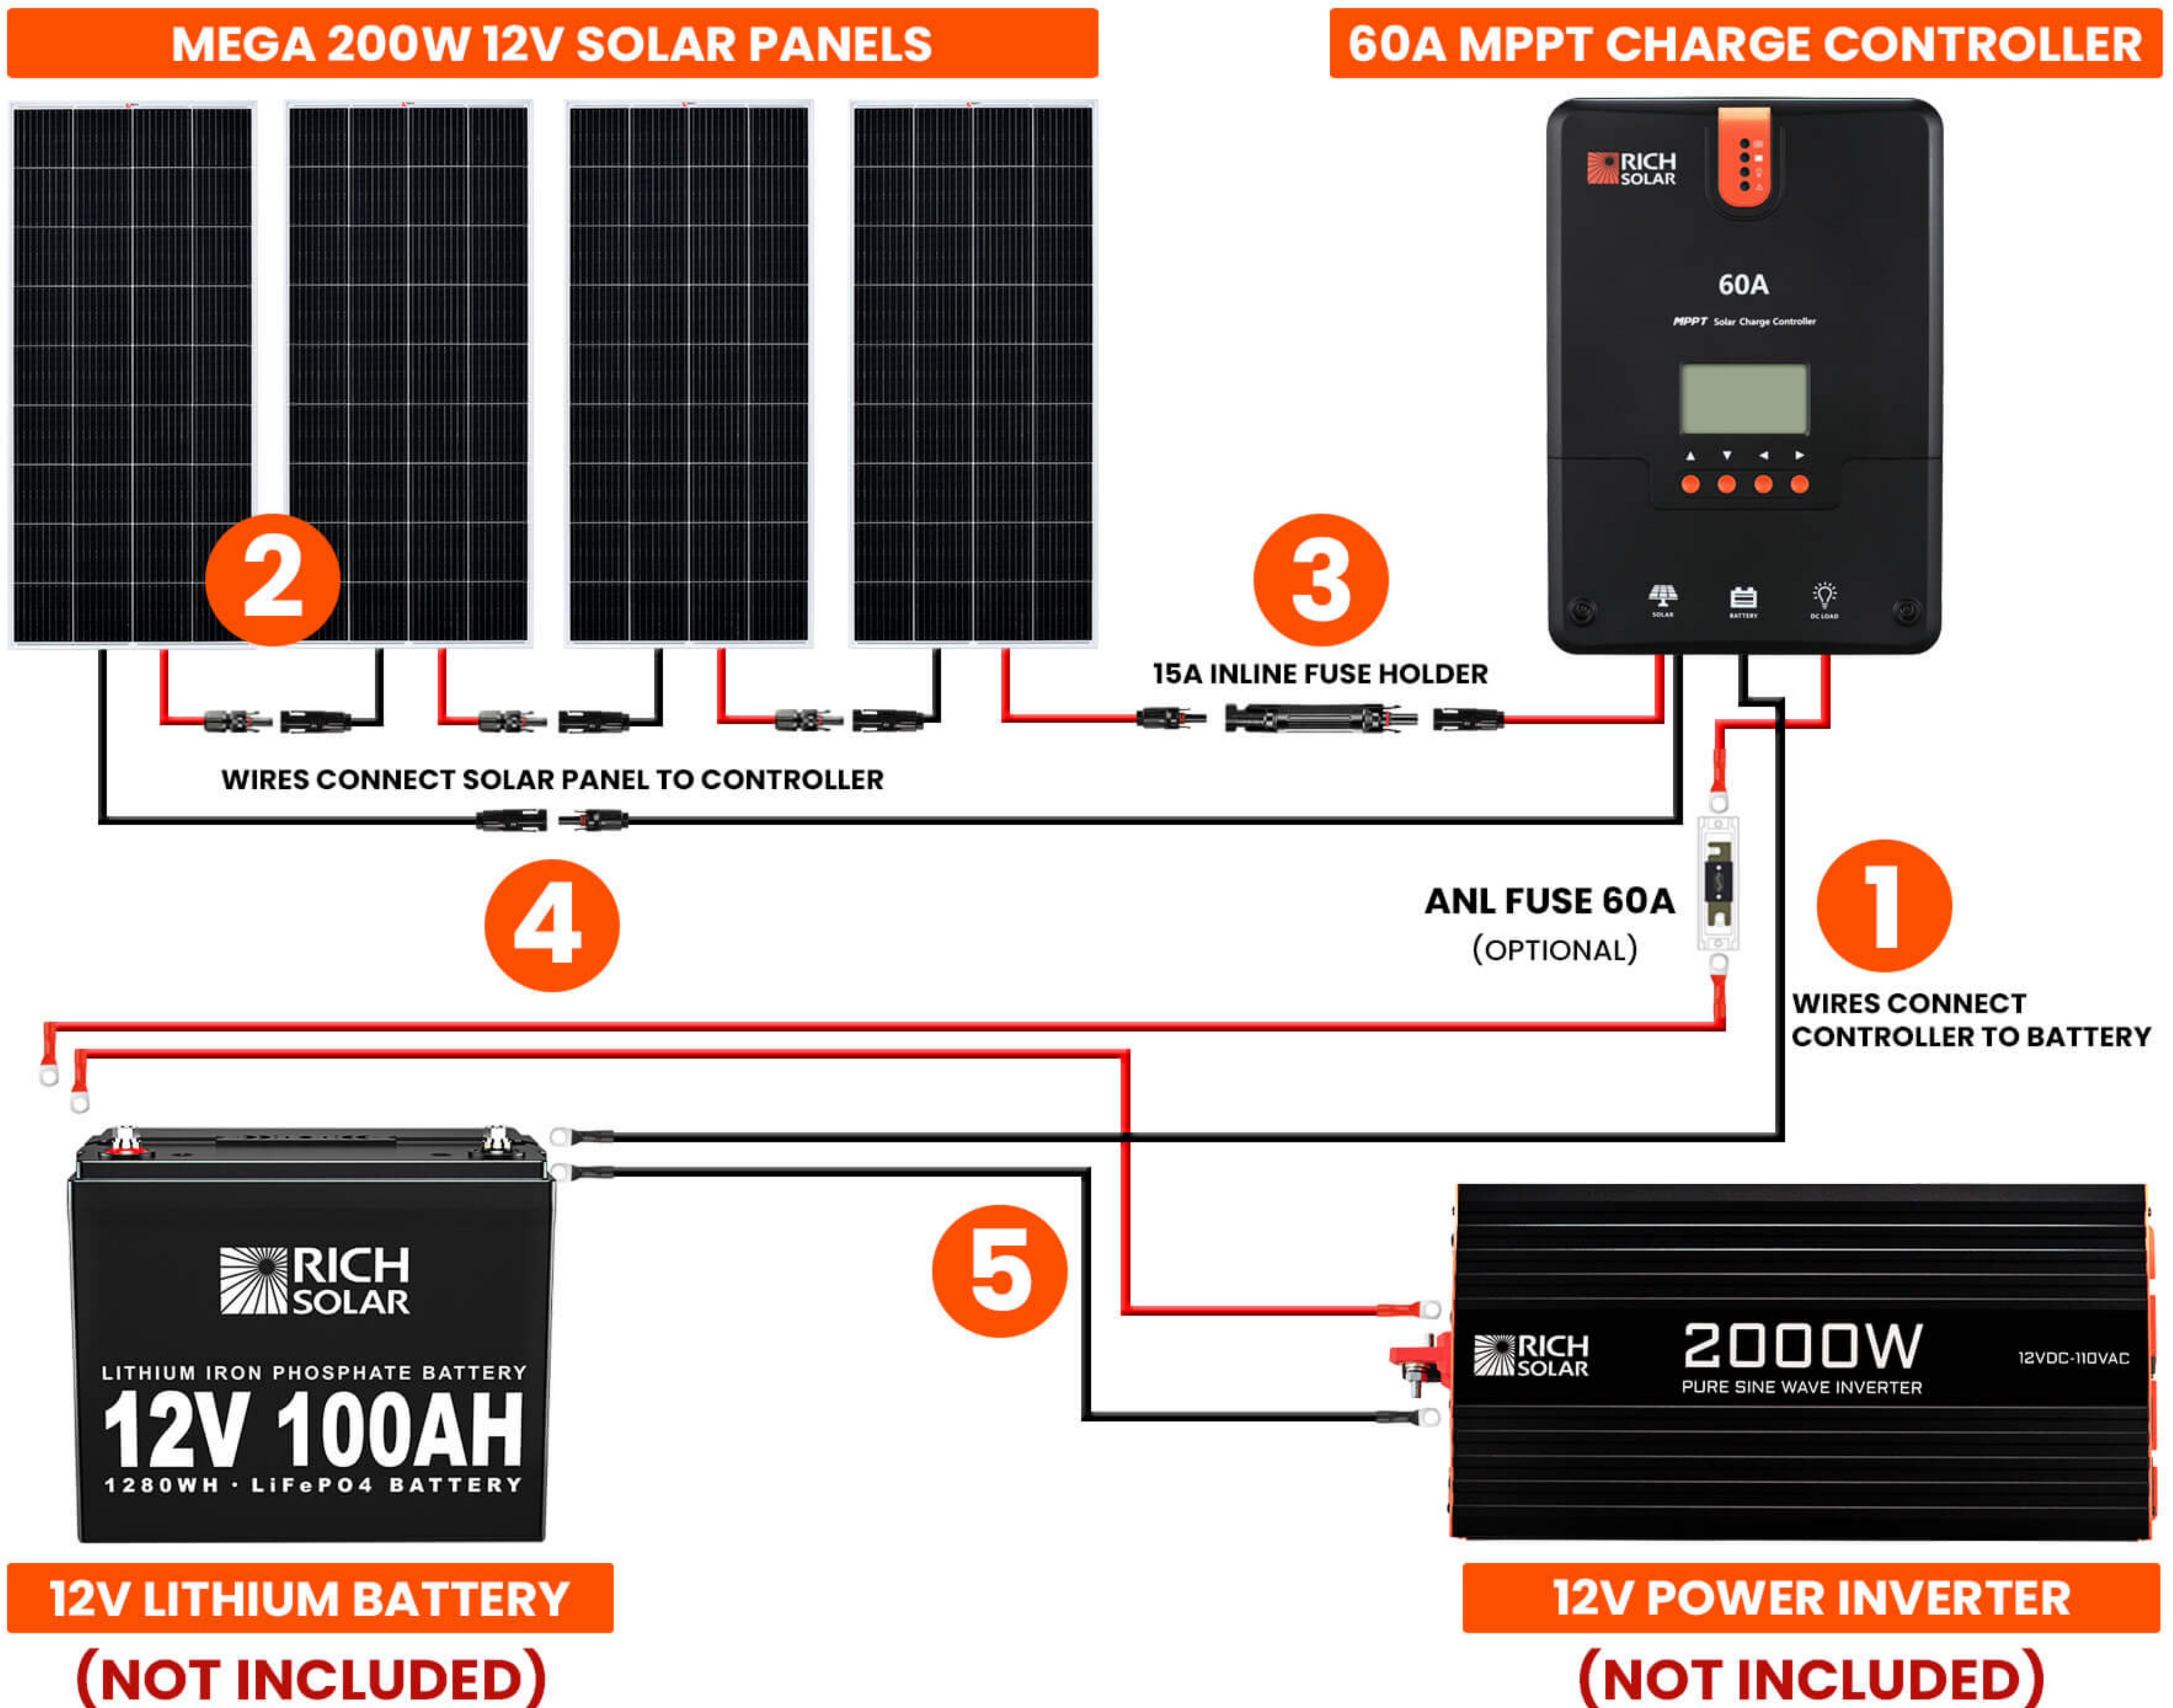

Wiring Instructions

- 1 Connect Battery Cables to 60A MPPT Charge Controller then to a 12V battery (not included).
- 2 Wire the 4, 200W panels in series (positive to negative).
- 3 Connect 15A Inline Fuse to the positive lead of the combined panels.
- 4 Use the provided extension cables to connect solar panels to 60A MPPT Charge Controller.
- 5 Connect 12V inverter (not included) to 12V battery (not included).