

BEFORE YOU START

- Only apply to a clean dry vehicle. DO NOT install in wet weather conditions. (check your local weather forecast)
- The most effective temperature range to fit is between 20 - 40°C (68 - 104°F). To achieve this in a colder climate, we recommend keeping this product in your home overnight prior to installation.
- DO NOT move your vehicle within 12 hours after installation, this is to ensure a strong lasting bond.
- After the 12 Hours have elapsed, pull on the Wind Deflectors to test they have fitted securely.
- Within the first 48 hours of installation DO NOT allow the Wind Deflectors to come into contact with water or exceed speeds 60 MPH (100 KM/H). After this initial 48 hours, continue to use your vehicle as normal.

PREPARING THE SURFACE

It is VERY important to correctly prepare the surface ready for installation. Start by identifying where the Wind Deflectors will fit by holding them against the vehicle.

Do NOT peel off the adhesive tape backing at this stage.

1. Clean your vehicle using water only, Do NOT use detergent, polish or waxes. Allow to dry



2. Use sachet A to clean the attachment area, we have provided two, one for each side of the vehicle. Allow 10 minutes to dry.

Surface Cleaning Sachet A x 2

3. Now use sachet B to degrease the attachment area, we have provided two, one for each side of the vehicle. Allow 5 minutes to dry.

Surface Cleaning Sachet B x 2

INSTALLATION

After you have prepared the surface you are ready for installation.

Make sure you are confident of where the Wind Deflectors will attach in the final position.



Once you are satisfied with the alignment, carefully peel off the backing from the tape and install....IMPORTANT: it's essential to get this correct first time as reattempting this will make the tape ineffective.



Now your Wind Deflectors are installed, apply firm pressure along where the tape is located to ensure a good bond between the Wind Deflector and the door frame.



AFTER INSTALLATION


DO NOT move your vehicle within 12 hours after installation, this is to ensure a strong lasting bond.

After the 12 Hours have elapsed, pull on the Wind Deflectors to test they have fitted securely.


Within the first 48 hours of installation DO NOT allow the Wind Deflectors to come into contact with water or exceed speeds 60 MPH (100 KM/H).

After this initial 48 hours, continue to use your vehicle as normal.

To keep your Wind Deflectors looking great, we recommend cleaning them with water and a lint free cloth only.

 **AUTO CLOVER**

Important Product Information

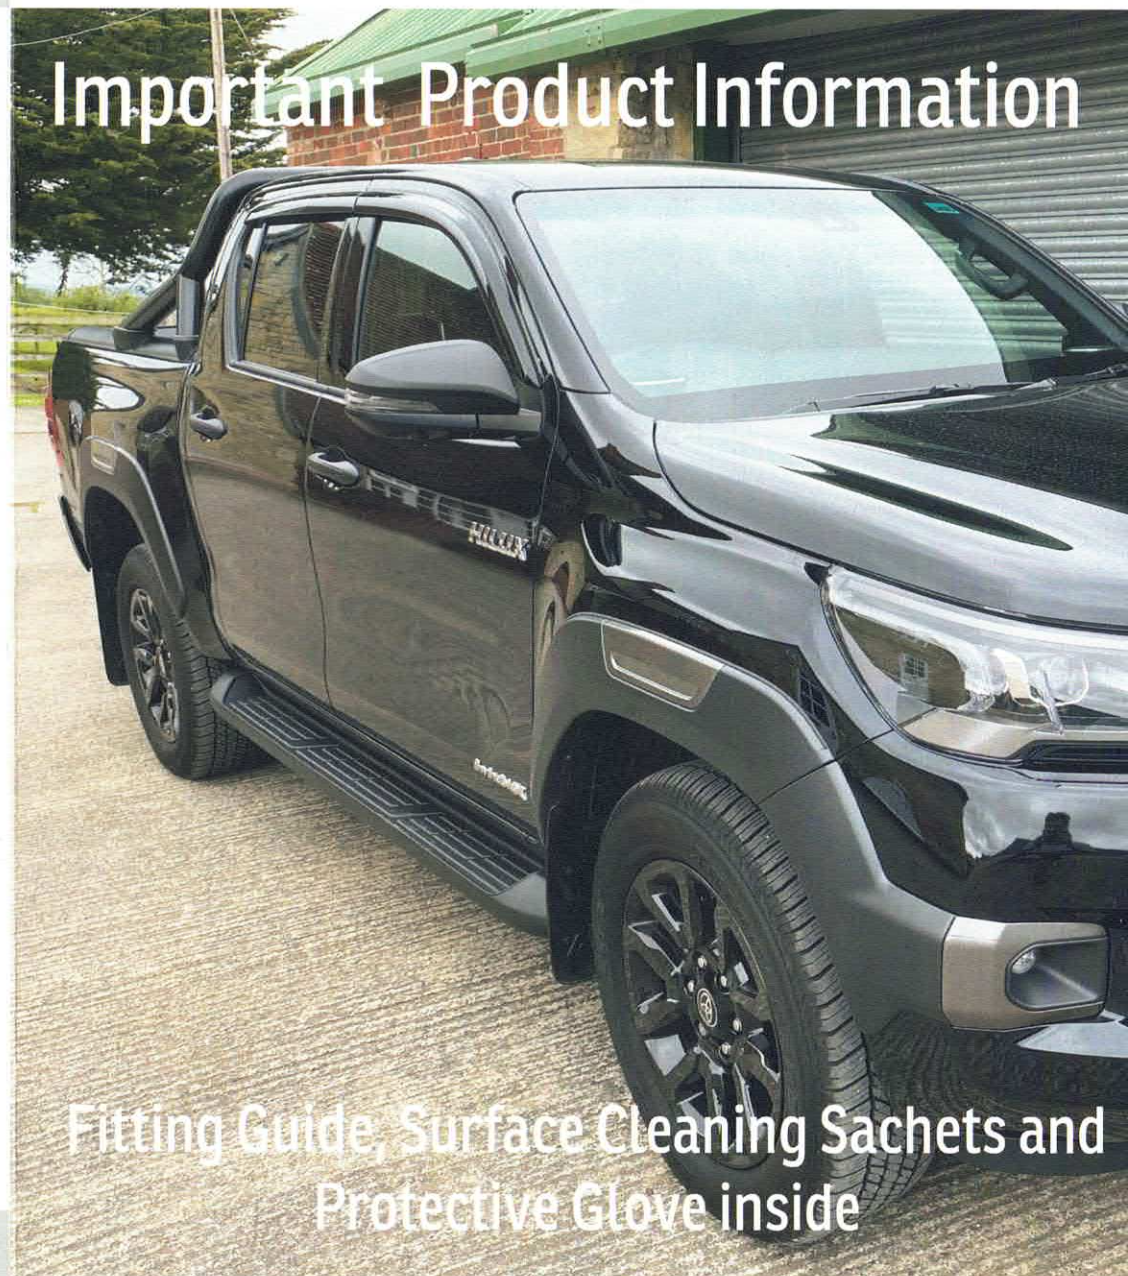

Fitting Guide, Surface Cleaning Sachets and Protective Glove inside

www.autoclover-store.co.uk

YOUR NEW WIND DELLECTORS

Thank you for purchasing your new set of Auto Clover Wind Deflectors. These high quality adhesive fit Wind Deflectors attach to the outside of the door frame using automotive grade adhesive tape, unlike some other wind deflectors which fit directly into the window channel.

Auto Clover care about quality and this is why Auto Clover products are certified to the latest IATF 16949 and ISO 9001 standards by UTAC CERAM.

Auto Clover also care about the environment and are proudly ISO 14001 certified, meaning it is certified by the most recognised international standard for environmental management systems.



TROUBLESHOOTING and FAQs

The Wind Deflectors appear to be too big for the vehicle

Please read these fitting instructions carefully, do not attempt to fit this item into the window channel. They only attach to the door frame.

I've followed the fitting instructions, but the Wind Deflectors have not stuck

Please email; customerservices@autoclover-store.co.uk so that we can assist you further.

The back of the Wind Deflectors appear to be chipped

These indentations are part of the manufacturing process and are completely normal, they should not be visible once they are installed.

Can I still use my vehicle in Car Washes?

Yes, after 48 hours you will be able to use the vehicle as normal.

Once I've installed the Wind Deflectors, can I relocate them?

No, the adhesive tape will only stick once, creating a strong, long lasting bond.

If you have any further questions or would like to contact us, please send us an email:

customerservices@autoclover-store.co.uk

Safety Data Sheets (SDS) for the Surface Cleaning Sachets available to view at : <https://autoclover-store.co.uk/pages/sds>

Scan this QR for an instructional fitting video on YouTube



Imported and Distributed by MRCH LTD
Unit 6 Black Venn Farm, Hartgrove, Dorset SP7 0AS UK

MRCH