

If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.

Quick Start Guide

1 Switch To The Right System

Please make sure the system toggle on the top left corner has been switched to the same system as your computer's operating system.



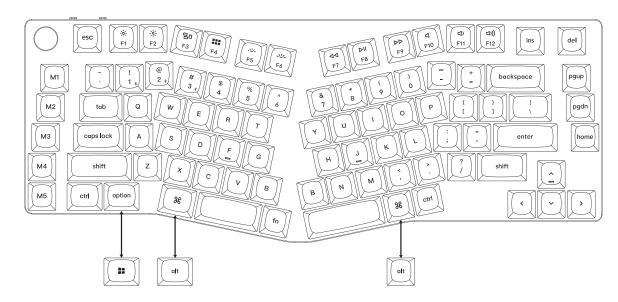



3 Connect Cable





Bluetooth C Cable

5 The Layers

There are four layers of key settings on the keyboard. The layer 0 and layer 1 are for the Mac system. The layer 2 and layer 3 are for the Windows system.

If your system toggle is switched to Mac, then the laver 0 will be activated.

Mac ● Win

LAYER 0 1 2

If your system toggle is switched to Windows, then the layer 2 will be activated. Remember that if you are using it in Windows mode, please make changes to the layer 2 instead of the top layer (the layer 0). This is a common mistake people are making.





7 Adjust The Backlight Brightness

Press fn + W to increase the backlight brightness



Press fn + S to decrease the backlight brightness



9 Watch The Building Tutorial On Our Website

If you are building the keyboard for the first time, we highly recommend you watch the building tutorial video on our website first, then start building the keyboard yourself.





4 The VIA Key Remapping Software

Please visit usevia.app to use the online VIA software to remap the keys. If the VIA cannot recognize your keyboard, please reach our support to get the instruction.




- * The online VIA software can only run on the latest version of Chrome, Edge, and Opera browsers yet.
- * VIA only works when the keyboard is connected by wire to the computer.

6 The Backlight

Press fn + O to change the lighting effect




8 Adjust The Backlight Speed







10 Factory Reset



- Troubleshooting? Don't know what's going on with the keyboard? 1) Plug in the power cable and switch the keyboard to Cable mode.
- (2) Factory reset the keyboard by pressing fn + J + Z (for 4 seconds). (3) Download the right firmware and QMK Toolbox from our website (4) Switch the keyboard to OFF mode and remove the space bar keycap
- to find the reset button on the PCB. (5) Hold the reset key first, then switch the keyboard to Cable mode.
- Release the reset key, and the keyboard will now enter DFU mode. (6) Flash the firmware with the QMK Toolbox.
- (7) Factory reset the keyboard again by pressing fn + J + Z (for 4 seconds).
- * Step by step guide can be found on our website.