

Deck Storage Box



1) Place Front Panel on Flat Surface With Inside of Panel Facing Up. Insert the Dowels in the Side Panels into the Holes on the Front Panel and Fasten with (4) "A" Bolts Thru Holes in Legs. Repeat for the Back Panel.

HARDWARE

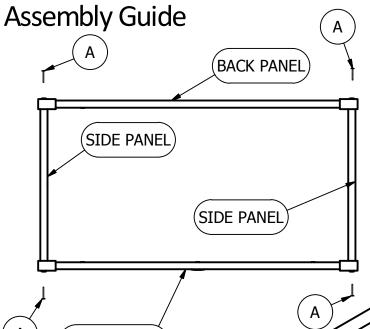





No.14 x 1" WOOD SCREW

IMPORTANT!

DO NOT fully tighten the bolts until all bolts are started. Once all bolts are inserted, go back & tighten all the bolts.

Retain these instructions for future reference

INCLUDED TOOLS

5/32" HEX KEY



#3 PHILLIPS BIT



Fasten with (8) "B" Bolts

3) Tighten all Bolts.

FRONT PANEL


FLOOR PANEL

2) With the Box on it's Side, Insert the Floor Panel into the Box and

For information on Care and Cleaning or to register your *highwood*® product, please visit www.highwood-usa.com.

AD-DBXL1 07.23.18

PAGE 1 OF 2

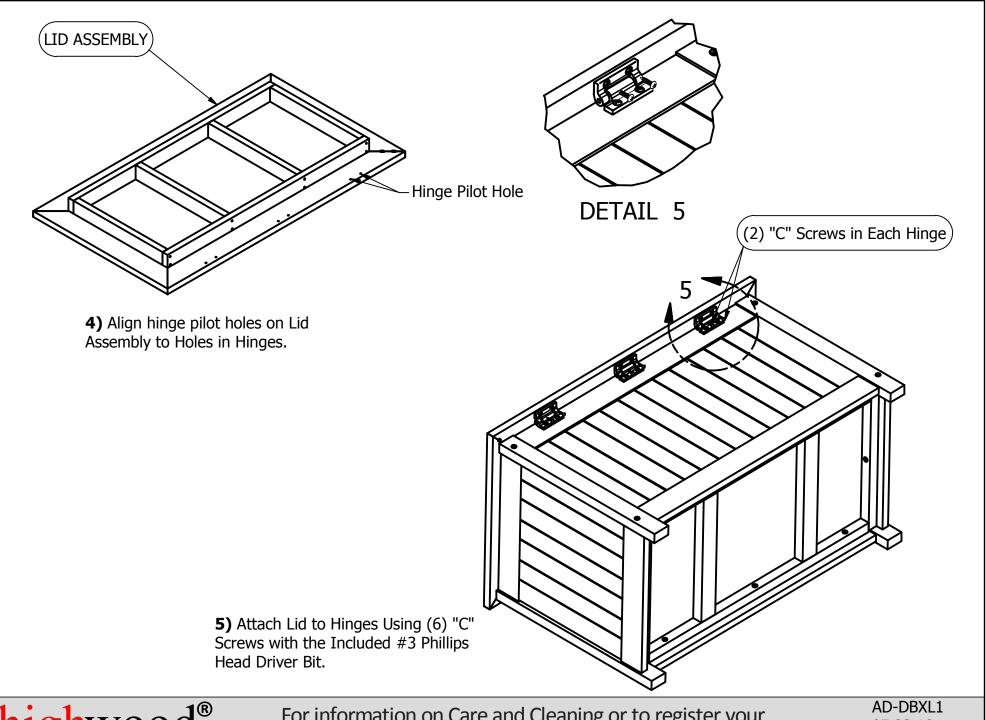



For information on Care and Cleaning or to register your *highwood*® product, please visit www.highwood-usa.com.

AD-DBXL1 07.23.18 PAGE 2 OF 2