


Bar Height Surfboard Table



Assembly Guide

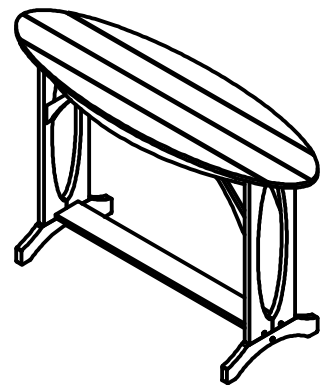


*Actual Style May Vary from
the One Pictured in this Guide

TBL-SB3

HARDWARE INCLUDED

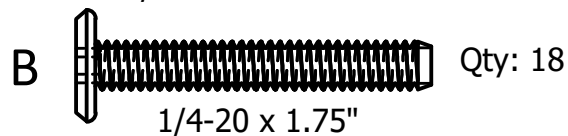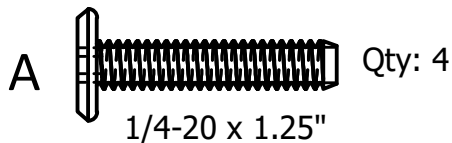

TOOLS INCLUDED

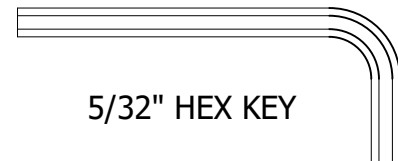

5/32" HEX KEY

IMPORTANT!

DO NOT fully tighten bolts until all bolts are started.

STEP 1


Lay the Leg Assembly on its side and attach the Foot Rest Assembly using (3) B Bolts as shown.

Repeat this Step on the other side.

STEP 2

Lay the Top Assembly on the ground and attach the Legs Assembly using (4) B Bolts as shown.

Repeat this Step on the other side.

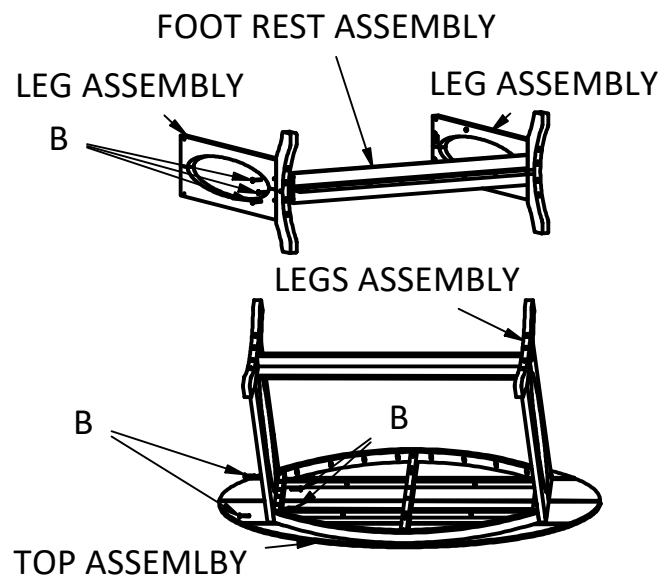

STEP 3

Attach the Gusset 1 & 2 To the over all Assembly using (2) A Bolts & (2) B Bolts as Shown

As shown in view 1 the Gussets get attached on the outside of the metal

Repeat this Step on the other side.

