## USER GUIDE AND INSTALLATION MANUAL

## ELECTRIC FUEL PUMP HIGH AMP RELAY WIRING KIT

Our Electric Fuel Pump wire kits are ideal for wiring up OEM factory or aftermarket Fuel Pumps.

Ideal for any vehicle who wants to increase current output of their High Amp Fuel Pump.


## IMPORTANT INFORMATION!

Part No: BWMSHARNFUEL-1 / Part No: BWMSHARNFUEL-2

Disconnect the battery before fitting.

Always best fitted by a professional auto electrician.

## **Unit Installation**

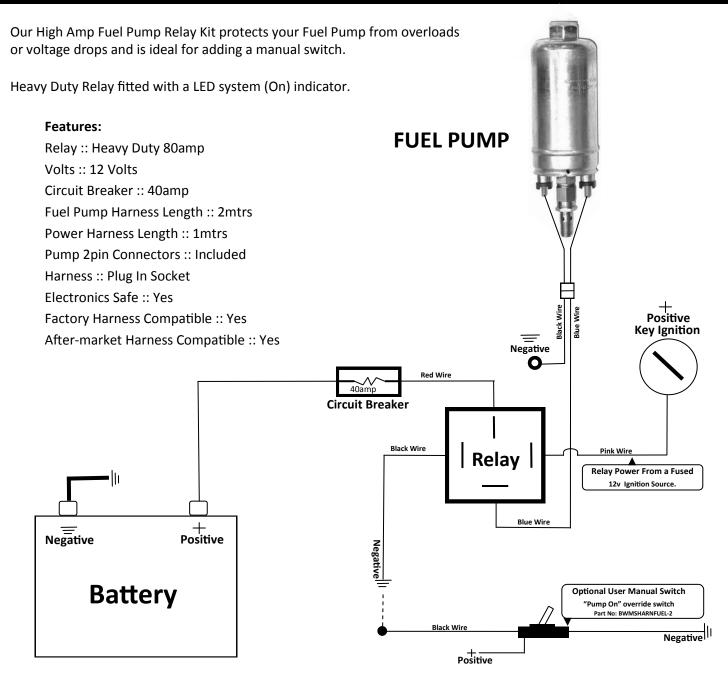

2016 Bluewire Automotive Page 1 of 1 Revised 29/9/2016 The above instructions are for reference only. Bluewire Automotive is not responsible for any inaccuracies in the above instructions. Bluewire Automotive is also not responsible for any property damage or personal injuries resulting from the above instructions. Installation by qualified automotive professionals is highly recommended.