



USER GUIDE AND INSTALLATION MANUAL

HOLDEN COMMODORE 2D VY POWER WINDOW SWITCH KIT & HARNESS

Our Holden Commodore stand alone series of power window wiring conversion kits allow you to convert your standard manual windows to power operated windows not using a GM BCM.




IMPORTANT INFORMATION!

Disconnect the battery before fitting.

Always best fitted by a professional auto electrician.

Unit Installation

HOLDEN COMMODORE 2 DOOR VY POWER WINDOW SWITCH KIT & HARNESS

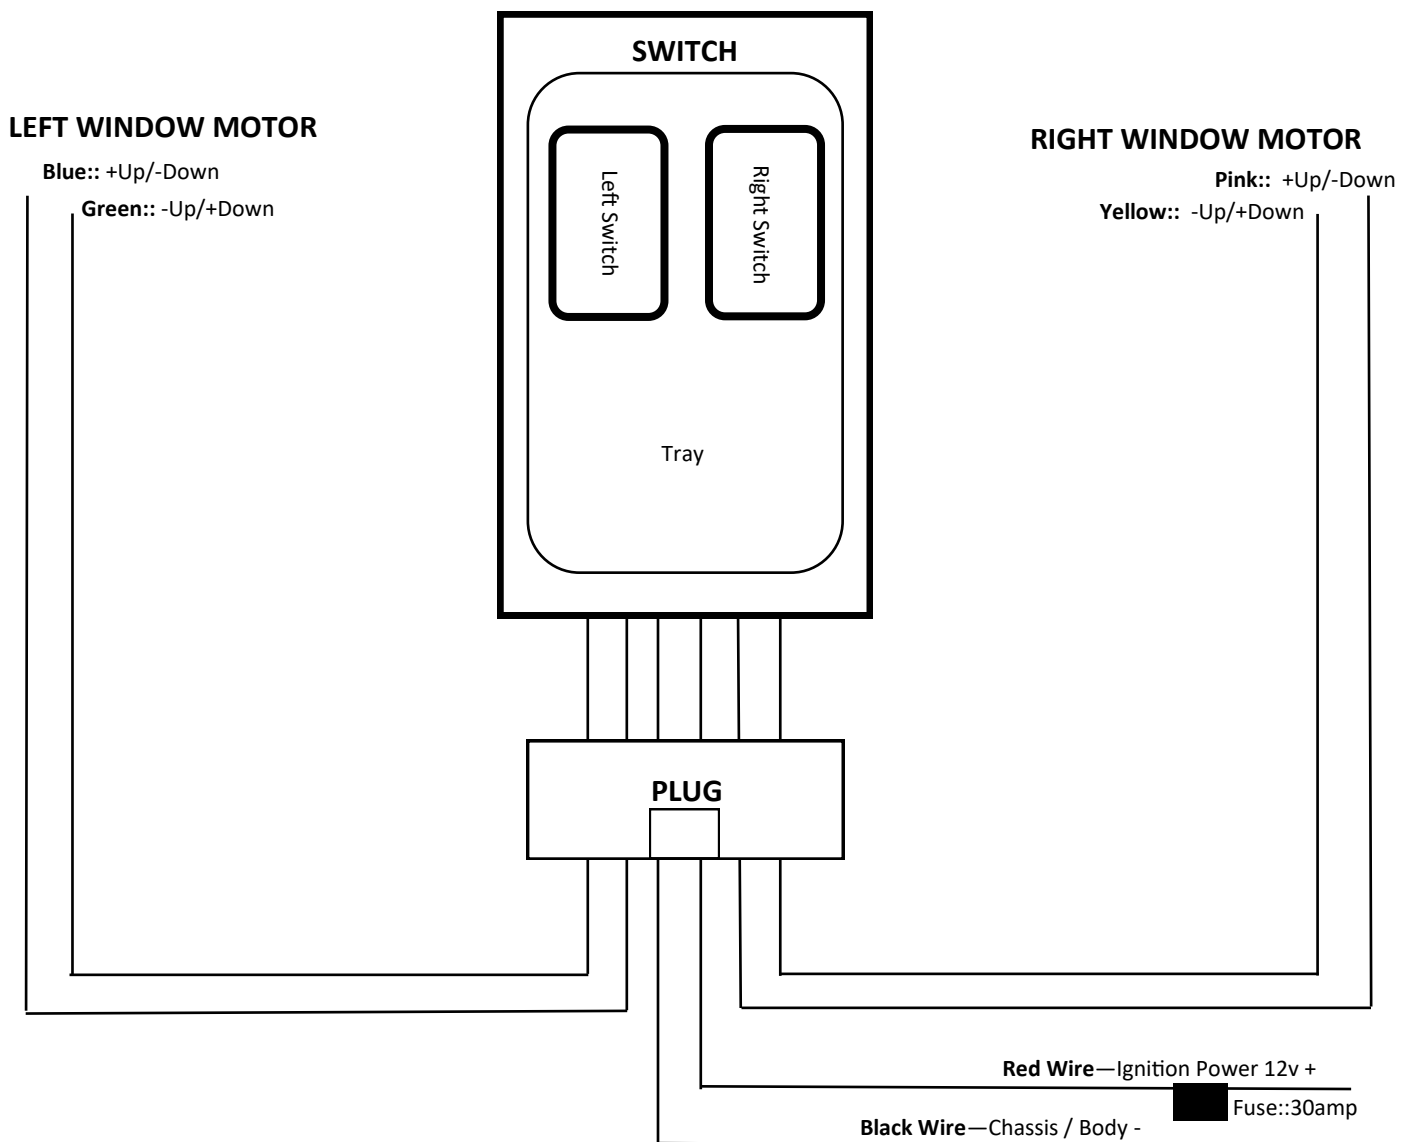

(ATT:: When fitting to Holden Commodore, connect the Red power wire to thick Pink wire at Commodore Key Wiring)