
















# UNIVERSAL POWER WINDOW SWITCH INSTALLATION GUIDE




## IMPORTANT INFORMATION!

Disconnect the battery before fitting.  
Always best fitted by a professional auto electrician.

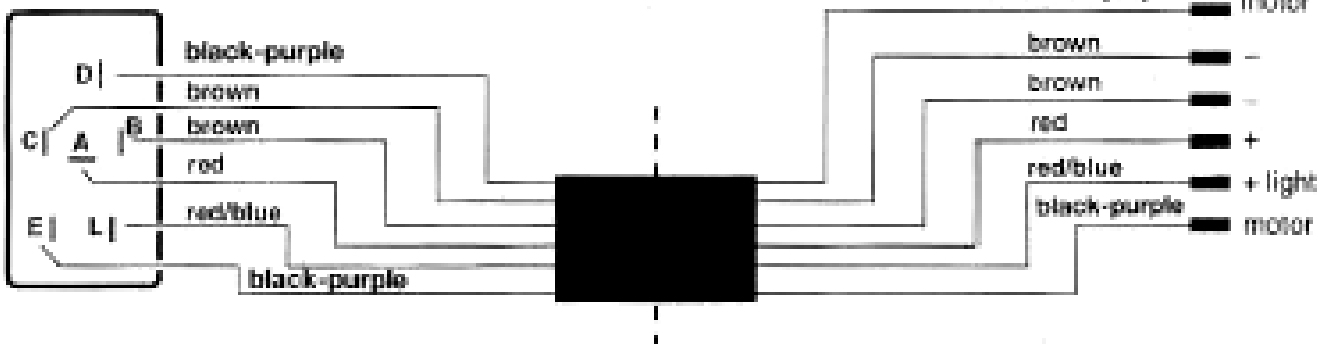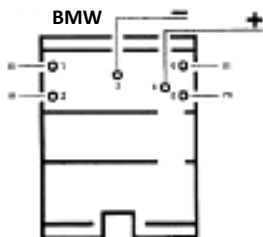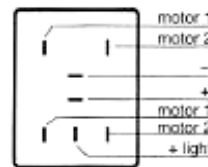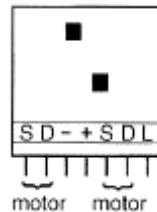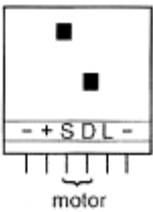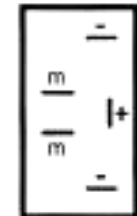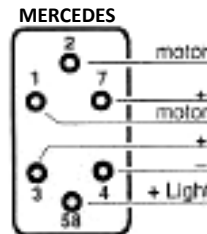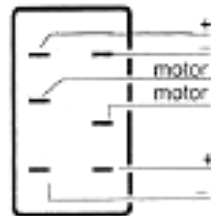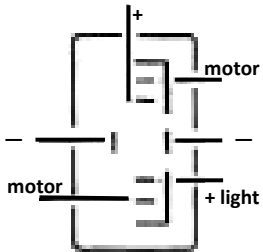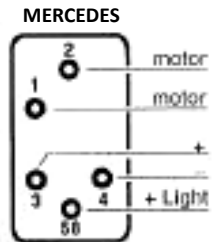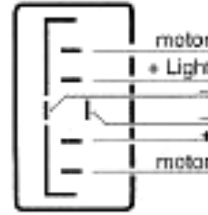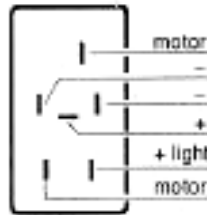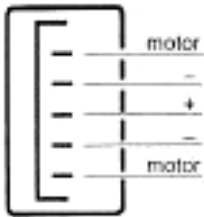




# UNIVERSAL POWER WINDOW SWITCH INSTALLATION GUIDE

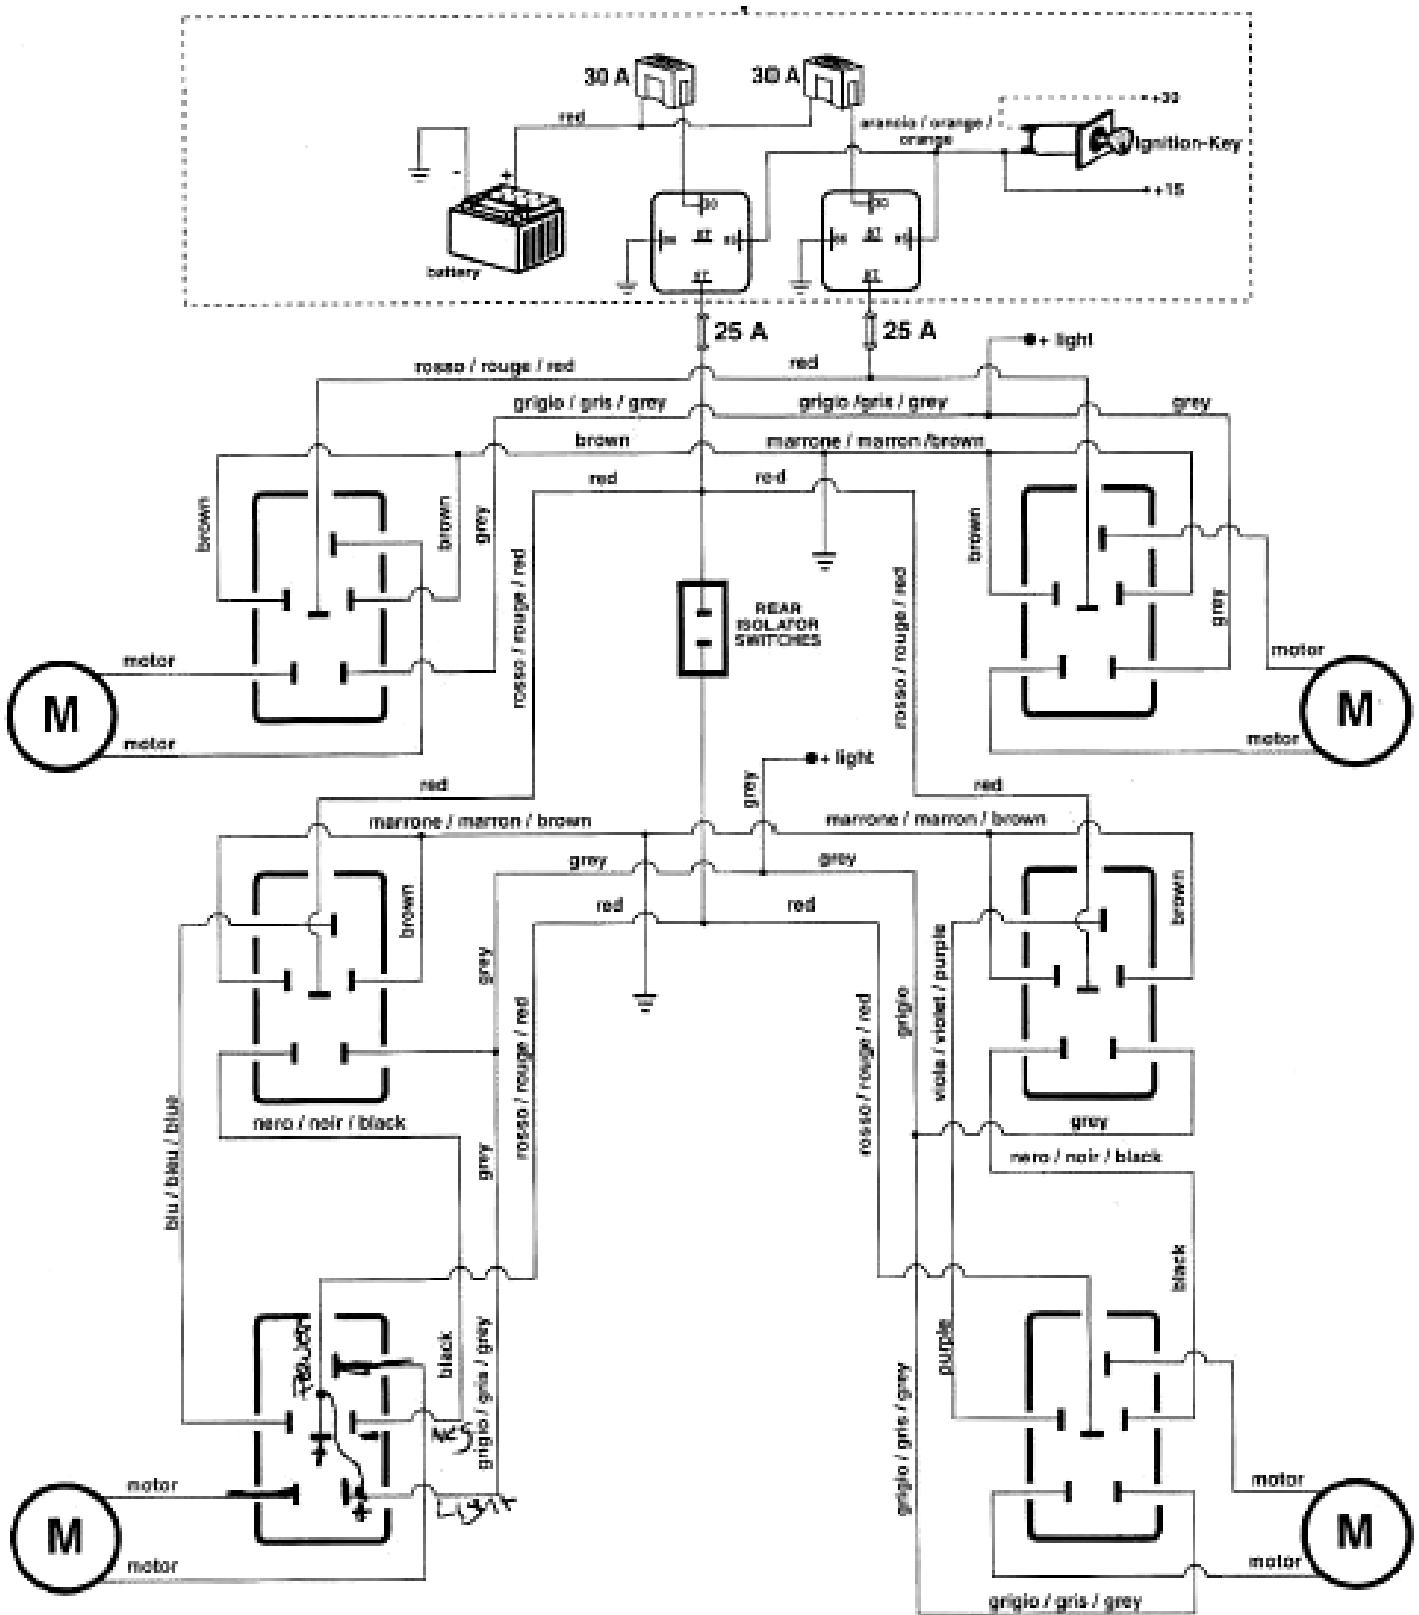




## UNIVERSAL POWER WINDOW SWITCH INSTALLATION GUIDE

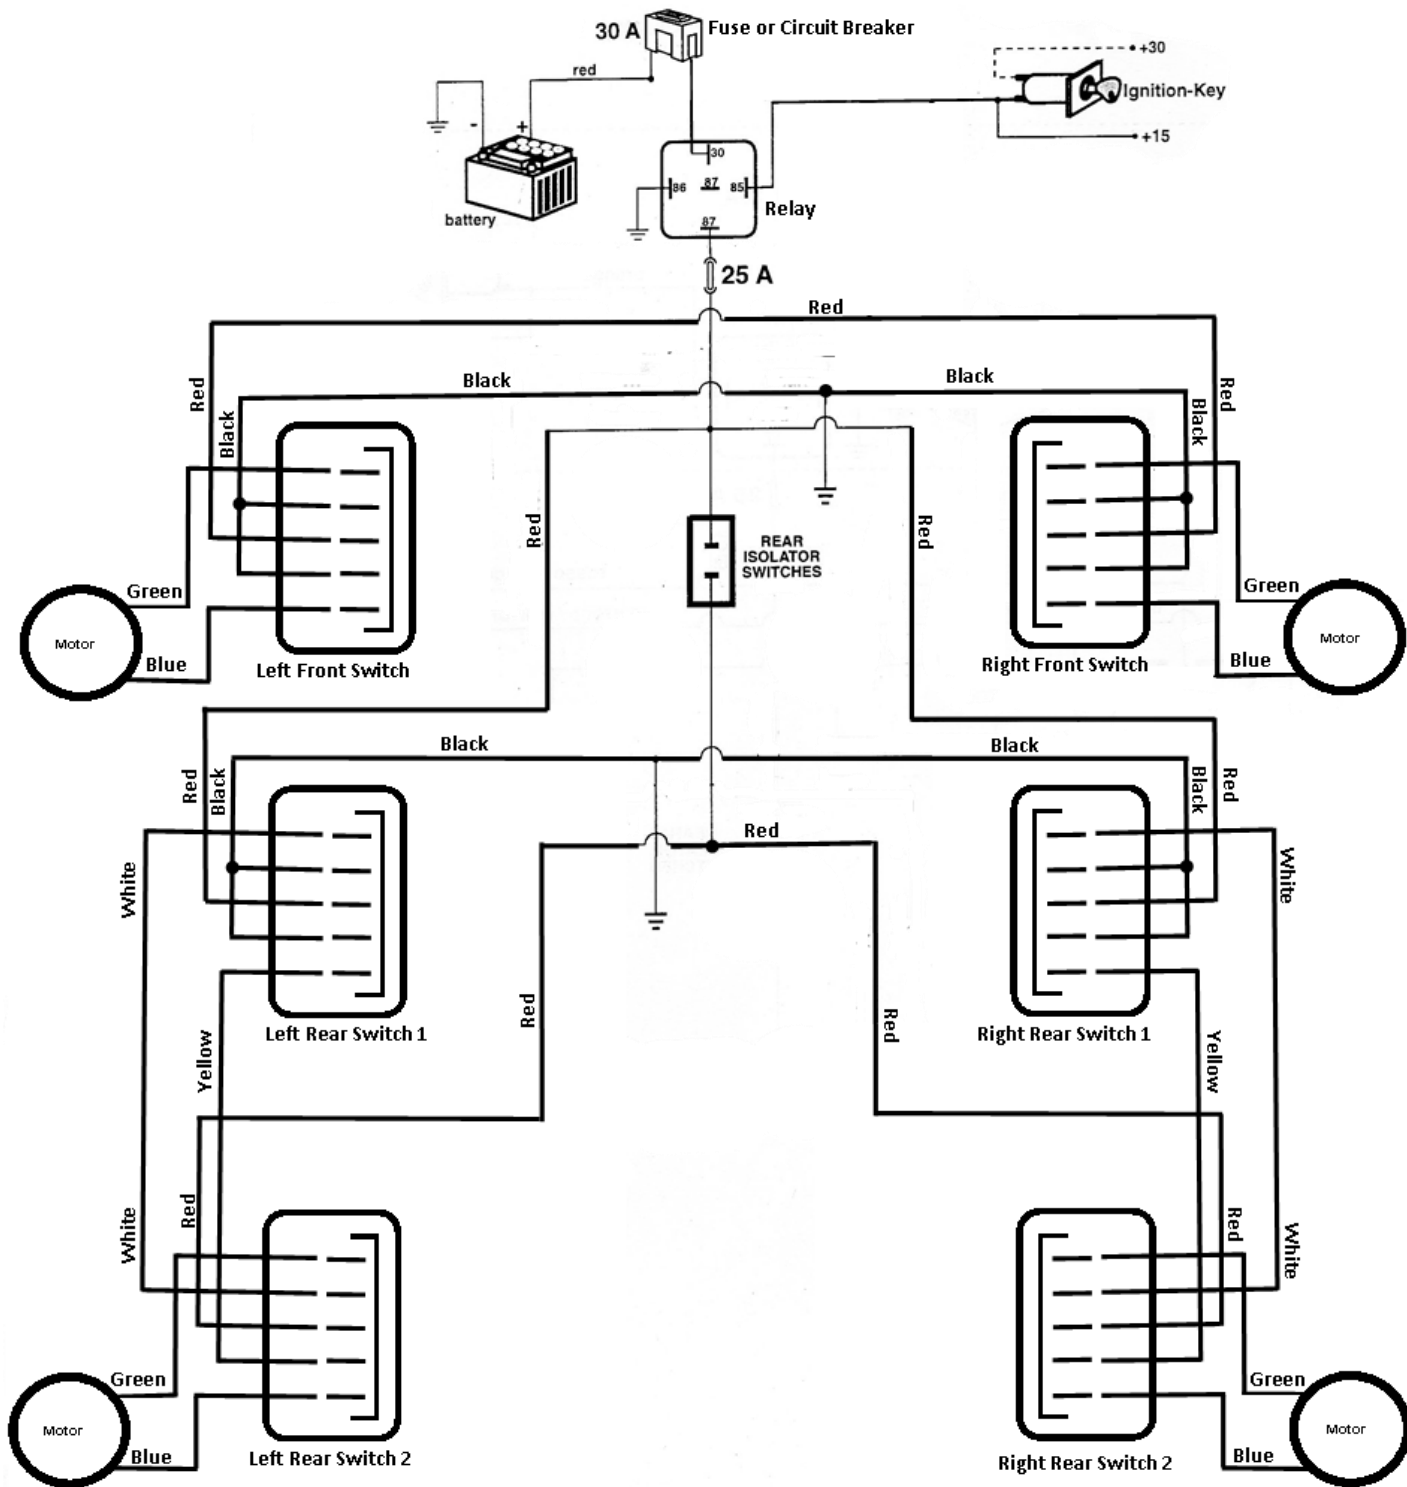



# UNIVERSAL POWER WINDOW SWITCH INSTALLATION GUIDE

This Power Window Wiring Harness Kit has now got 40amp wiring that can take more current than the old system.

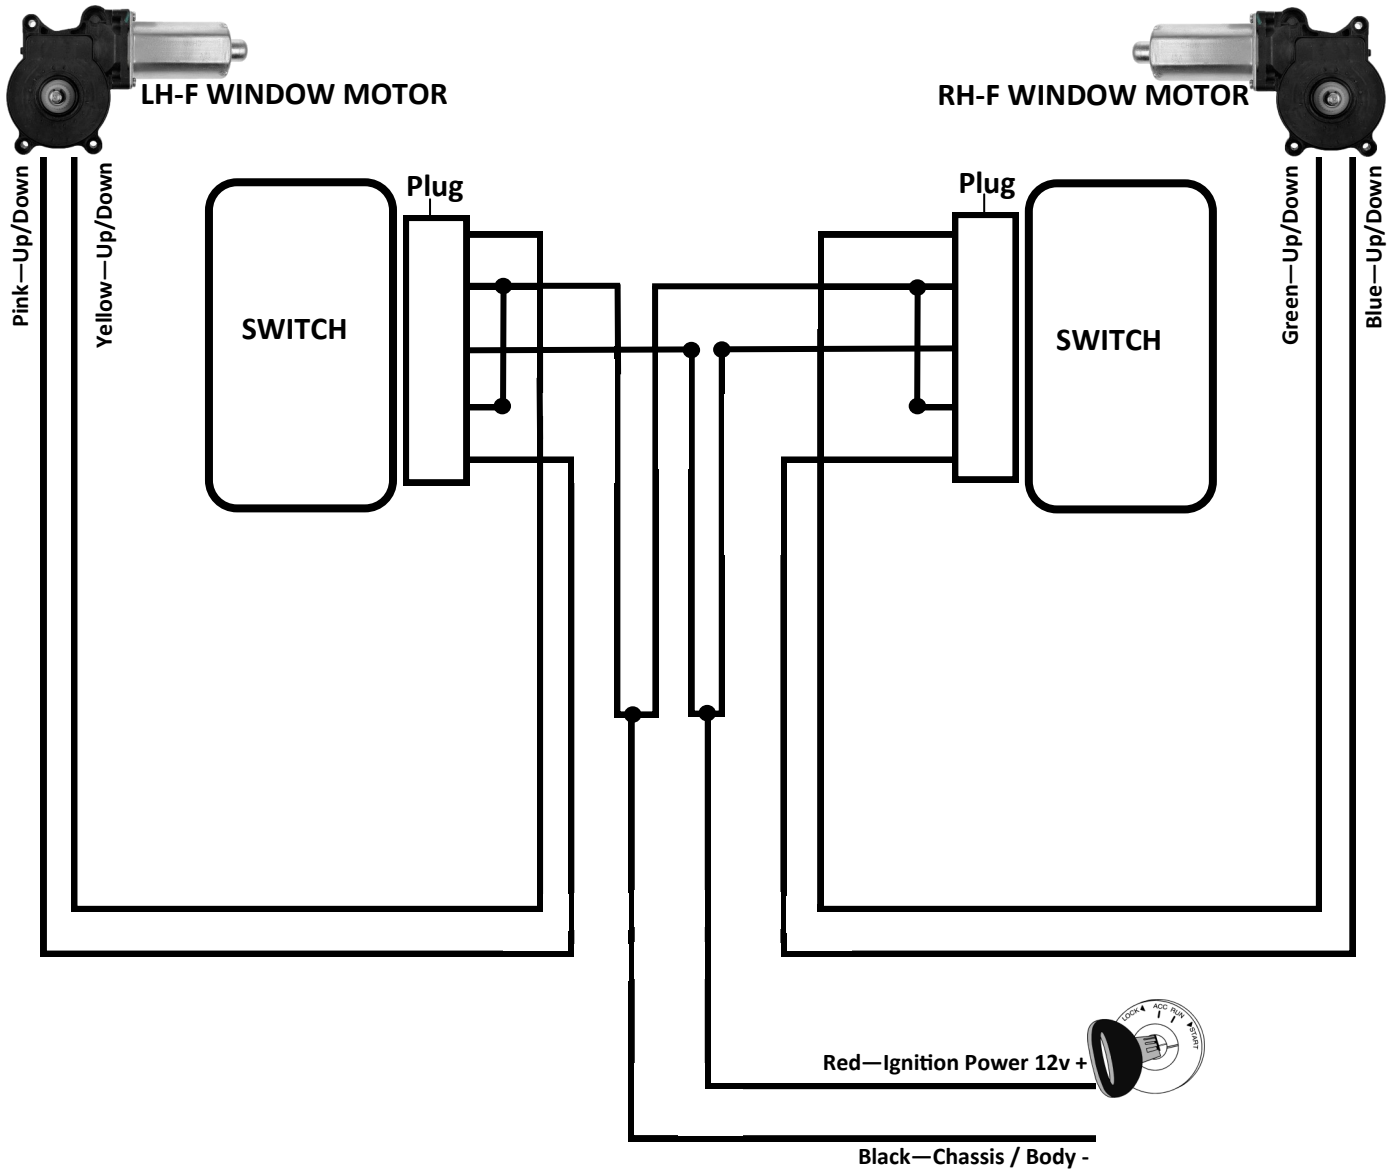



# UNIVERSAL POWER WINDOW SWITCH INSTALLATION GUIDE

