
XTREME GHILLIE LAYOUT BLIND ASSEMBLY INSTRUCTIONS

QTFP

To assemble the frame, Join the headrest portion of the frame to the bottom portion of the frame by inserting C into D as shown below. Be sure to insert completely until the pins (E) spring into place. Once this step is complete, you should never have to disassemble the frame again.

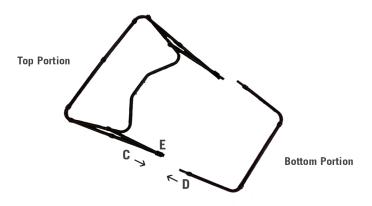

STEP 2

Lay the cover out flat and fold backrest all the way back. Place the assembled frame inside the cover. Slide the frame, with the flat side on the bottom, all the way to the head of the blind. Do not raise the headrest portion at this time.



Note: Due to the thickness of the top material, and the bulky nature of the seam connecting the camo material to the top material, it is important to work the seam with your hands until it is completely turned out to the correct position. You can do this by reaching into the blind with your arm and working the frame out towards the top of the blind until you are able to secure the top frame portion under the flap shown in Step 3.

STEP 3


Insert the bottom portion of the frame underneath the 4" flap of fabric on the floor as shown below.



STEP 4

To raise the headrest, lift up on the cam lever (F) to unlock the slide fitting (G). Then, lift up on the backrest until that portion (H) is in the vertical position and the slide fitting (G) is at the stopper (I). To lock the cam lever, push it down until tight.



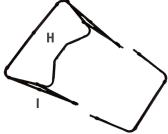

STEP 5

Fold backrest member over. Attach with buckles and velcro on 4" fabric as shown below.



GENERAL NOTES AND PRECAUTIONS

- $\cdot \ \text{It is advisable to create a nice flat surface completely free of rocks, debris, or agricultural stalks to prevent puncture of the bottom.}$
- · Clean out blind before storing to reduce risk of mold and mildew, or from mice making the blind their home in the off season.
- · Store in a cool dry place when not in use.





Additional covers sold seperately Field Green Snow Cover