


# MODEL TW208P THRUWALL TEMPLATE

3/16" MOUNTING HOLE  
HUECO PARA MONTAR DE 3/16"  
3/16" TROUS POUR SUPPORT

CUT LINE  
LINEA DE CORTE  
COUPEZ ICI

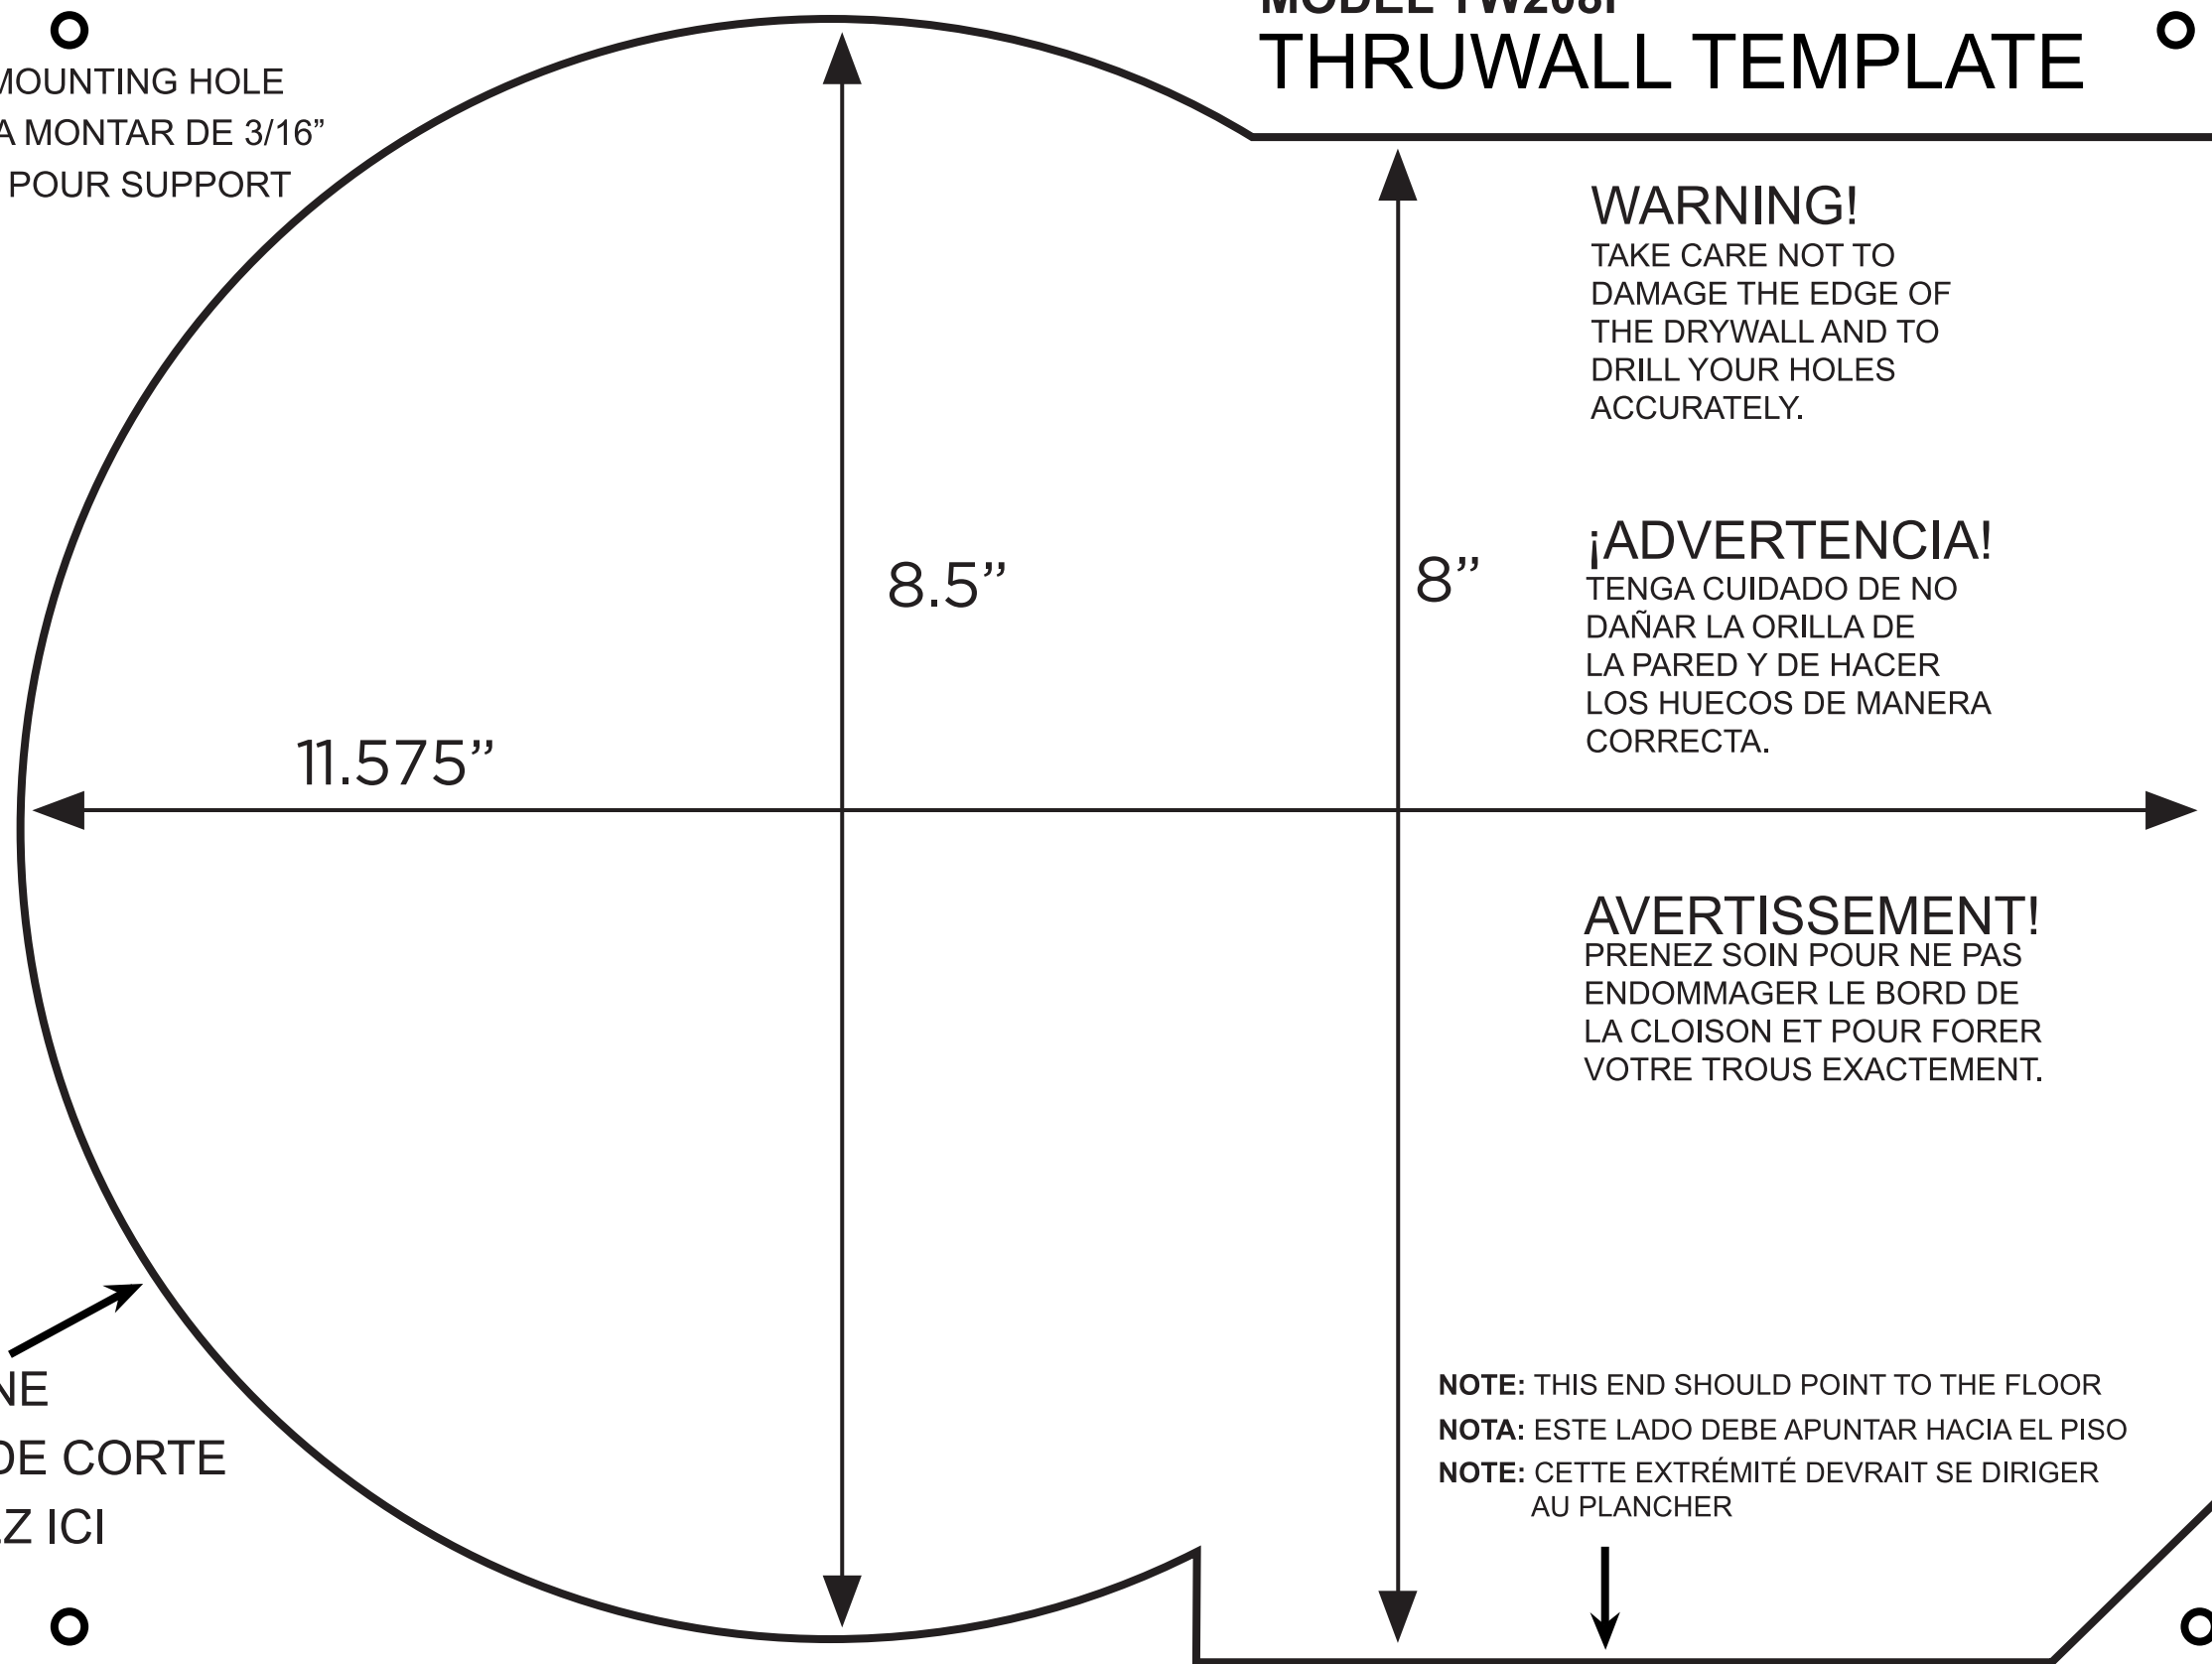

## WARNING!

TAKE CARE NOT TO  
DAMAGE THE EDGE OF  
THE DRYWALL AND TO  
DRILL YOUR HOLES  
ACCURATELY.

## ¡ADVERTENCIA!

TENGA CUIDADO DE NO  
DAÑAR LA ORILLA DE  
LA PARED Y DE HACER  
LOS HUECOS DE MANERA  
CORRECTA.

## AVERTISSEMENT!

PRENEZ SOIN POUR NE PAS  
ENDOMMAGER LE BORD DE  
LA CLOISON ET POUR FORER  
VOTRE TROUS EXACTEMENT.

NOTE: THIS END SHOULD POINT TO THE FLOOR  
NOTA: ESTE LADO DEBE APUNTAR HACIA EL PISO  
NOTE: CETTE EXTRÉMITÉ DEVRAIT SE DIRIGER  
AU PLANCHER

### TEMPLATE INSTRUCTIONS:

1. PLACE TEMPLATE FLUSH AGAINST THE WALL.
2. CHECK FOR LEVEL AND TAPE IN PLACE.
3. THE WALL THAT THE TEMPLATE IS TAPED TO WILL BE THE FAN OUTPUT SIDE.
4. DRILL MOUNTING HOLES WITH 3/16" DRILL BIT.
5. INSERT THE PROVIDED WALL ANCHORS IN MOUNTING HOLES.
6. CUT OUT OPENINGS AS FURTHER DESCRIBED IN THE INSTALLATION INSTRUCTIONS.

### INSTRUCTIONS DE CALIBRE :

1. PLACEZ LE CALIBRE CONTRE LE MUR.
2. VÉRIFIEZ LE NIVEAU ET ATTACHEZ AVEC RUBAN ADHÉSIF.
3. LE MUR QUE LE CALIBRE EST ATTACHÉ SOIT LE CÔTÉ DE RENDEMENT DE VENTILATEUR.
4. FOREZ LES QUATRE TROUS AVEC UN FORET POINTU.
5. INSÉREZ LES ANCRÉS DE MUR DANS LES TROUS.
6. OUVERTURES COUPÉES COMME ENCORE DÉCRITES DANS LES INSTRUCTIONS D'INSTALLATION.

### INSTRUCCIONES DE LA PLANTILLA:

1. PONGA EL PATRÓN PAREJO A LA PARED
2. REVISE EL NIVEL Y ASEGURE CON CINTA ADHESIVA
3. LA PARED DONDE SE ADHIERE EL PATRÓN SERÁ EL LADO DE SALIDA DEL VENTILADOR
4. HAGA LOS AGUJEROS PARA EL MONTAJE CON UNA BROCA DE 3/16"
5. INSERTE LAS ANCLAS DE PARED PROVISTAS DENTRO DE LOS HUECOS DE MONTAJE
6. CORTE LAS ABERTURAS SEGÚN COMO SE DESCRIBE MÁS ADELANTE EN LAS INSTRUCCIONES DE INSTALACIÓN