



## INSTALLING ON CLEAT


**STEP 1:** PREDRILL HOOK MOUNTING LOCATIONS ON CLEAT AS SHOWN

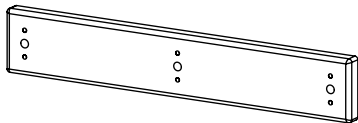

**STEP 2:** PRESS HOOKS INTO MOUNTING LOCATIONS ON CLEAT

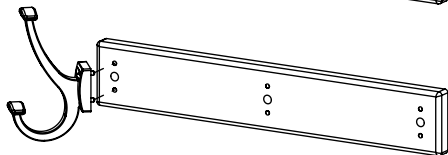


**STEP 3:** FIX HOOKS WITH TWO WOOD SCREWS AND FINISH WITH COVER CAP

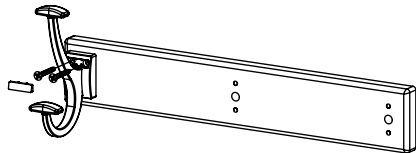

## INSTALLING ON PANEL

**STEP 1:** PRESS HOOKS INTO SYSTEM HOLES ON PANEL

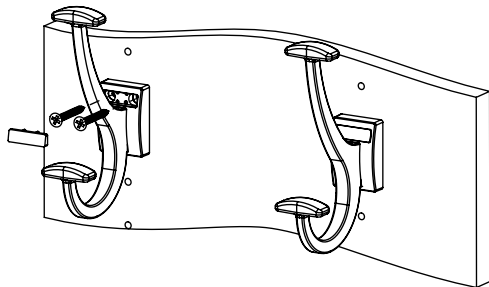

**STEP 2:** FIX HOOKS WITH TWO WOOD SCREWS AND FINISH WITH COVER CAP